

Smart Doorbell X9 User manual	Product instruction Doorbell: reset microphone camera sensor doorbell button charging port indicator speaker rear mount DingDong:	Product functions visualizable talking: when someone press the doorbell, cellphone that combined to it will receive a notification, and will be able to talk to visitor. motion sensor: device will auto detect movements within infrared detective range, automatically take a picture and send to combined cellphone. (Note: a Plus version function, refer to specific real item.) share doorbell: you can shall your visitor records to other users. other user needs to download app and log in. low power& Charging cellphone will receive a notification when device is low power. red indicator lights on while charging, and lights off after fully charged.	How to use - scan the QR code below and download app - open app and log in with your phone number - click “+” button on upper right corner, follow app instructions to add device and combine with your cellphone. Warnings : • please turn on Bluetooth, Wi Fi and allow all permissions of the app. • please use this product in an environment with good Wi Fi signal and try not to stick it on the metal door. • this product does not support 5g Wifi. • before installing the doorbell, please conduct normal function test at the position to be installed to ensure that the product works properly. Remove the lens protective film after installation.	Pair Doorbell&Dingdong - Plug Dingdong in power souce. - Long press Dingdong match button for 2 seconds, indicator light on suggesting enters pairing mode. - Press doorbell button once, 2 devices will pair with each other, after paired successfully, indicator lights off. Warnings: - During pairing, 2 devices should be as close as possible. - Make sure the doorbell is fully charged. - After pairing, the indicator light will automatically turn off. - If you don't ring the doorbell within ten seconds, the dingdong indicator will go out automatically. - If pairing fails or re pairing is required, please repeat the pairing process.	Reset&Restore factory settings Reset: press and hold the doorbell key for ten seconds until the doorbell sounds "reset succeeded". Restore factory settings: in case of equipment crash or other factors, remove the doorbell and press the black button in the doorbell reset pin hole. backside of doorbell	Operating environment • do not use the equipment in dusty, wet, dirty or close to the magnetic field, so as not to cause internal circuit failure of the equipment. • do not use this equipment in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard. • please use the equipment within the temperature range of 0 ~ 35 ° C and store the equipment and its accessories within the temperature range of - 40 ° C ~ 70 ° C. When the ambient temperature is too high or too low, it may cause equipment failure. • do not place the equipment in direct sunlight, such as windowsill. • please avoid rain or moisture on the equipment and its accessories, otherwise it may cause fire or electric shock. • do not place the equipment near heat sources or exposed fire sources, such as electric heaters, microwave ovens, ovens, water heaters, stoves, candles or other places that may produce high temperatures. • do not place sharp metal objects such as pins on the earpiece or speaker of the device Nearby to prevent metal objects from adhering and causing injury to you. • after the equipment has been running for a period of time, the equipment temperature will rise. If the temperature of the equipment is too high, do not touch it for a long time, otherwise it may cause scald, skin redness and swelling or pigment precipitation. • do not let children or pets swallow the equipment or its accessories to avoid injury or equipment failure or explosion.	Children health • the equipment and its accessories may contain some small parts. Please place the equipment and its accessories out of the reach of children. Children may inadvertently damage the equipment and its accessories, or swallow small parts, resulting in suffocation or other hazards. • this device is not a toy and should be used by children under adult supervision. Charger safety • when the equipment is used, it is necessary to connect the charger, and the power socket shall be installed near the equipment and easy to reach. • when the device is not used for charging, please disconnect the charger from the device and unplug the charger from the power socket. • do not drop or collide the charger. If the charger shell is damaged, please contact the customer service center for replacement.
--	---	--	--	---	--	---	---

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.