

This Quick Reference Guide provides information for using the C5 Mobile Clinical Assistant.

NOTE: For additional reference information, see the Quick Setup included with your C5.

Logging on

After turning on your C5, perform the following steps:

1. Press the power button.
2. When prompted, press the Windows Security button.
3. Using the pen and the on-screen keyboard, tap in your password.



Getting started

Familiarize yourself with the following reference materials:

1. Complete the interactive *Get Going with Tablet PC* tutorial. (Start > All Programs > Tablet PC > Get Going with Tablet PC)
2. Complete the other useful *Tablet PC Tutorials*. (Start > All Programs > Tablet PC > Tablet PC Tutorials)
3. Open and review the Motion Dashboard. (Start > All Programs > Motion Computing > Motion Dashboard or see "Using the Tablet PC Buttons" below)
4. Refer to the *Motion User Guide* if you have any questions. (Start > All Programs > Motion Computing > Motion User Guide)

Using the pen

Using the C5 pen on the screen is similar to using a mouse to make selections and open files.

The following table explains the similarities between a C5 pen and a mouse.

| Function | Mouse action | Pen action |
|---|----------------------|--|
| Select | Point and click | Point and tap the display |
| Open a file or application | Double-click | Double-tap or double-touch on the display |
| Select and drag | Click and drag | Tap or touch and drag on the display |
| Display properties or edit functions (cut, copy, paste) | Right-click and hold | Hold the pen on the display until the mouse icon appears, and then remove the pen tip from the display |

Helpful pen tips


- Hold the pen like a regular pen.
- You can rest your hand on the screen.
- Calibrate the digitizer and pen for better pointer alignment through the Pen & Tablet panel.
- For more information, see the *Motion C5 User Guide*.



Helpful bar code scanner tips

- The bar code button is located on the top right-edge of the C5.
- Hold the C5 by the handle to scan. Ensure the scan beam covers the entire bar code.
- Press the button once to trigger the scanner. Do not hold the button down when scanning.
- The C5 beeps when the barcode successfully scans.

Using the C5 buttons and LEDs

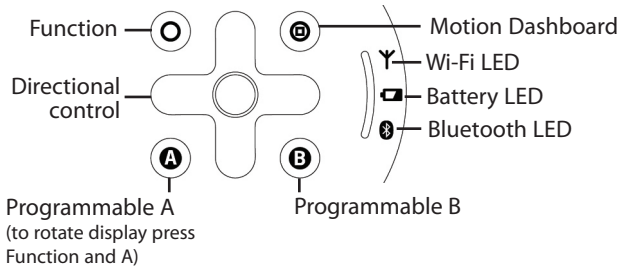

Helpful tip:


Use the Function button to activate the secondary functions of the Directional Control, Motion Dashboard, and Rotate buttons. For more information, see the *Motion C5 User Guide* on your Tablet PC desktop.

Optimizing battery life

- Use AC power when available. When the C5 is connected to AC power, the battery will continue to charge while using the C5.
- In the Display panel of the Motion Dashboard, adjust the brightness to the dimmest comfortable brightness level.
- In the Motion Dashboard, set the power button to Stand By or Hibernate to conserve battery power, to quickly power on and off, or when not using the C5.
- When not in use, turn off wireless adapters in Motion Dashboard.
- For advanced tips about extending the battery life, go to www.motioncomputing.com/tips.

Using the Motion™ Dashboard to adjust C5 settings

Open the **Motion Dashboard** by pressing this button on the front of the C5.

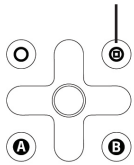

Control audio playback —
Configure microphones and Speak Anywhere® —

Click here to change views —

Set display to Off —
Adjust brightness —
Select the default display scheme for the external monitor —



Classic View

Access information for using the Motion Dashboard

— Set Bluetooth® on or off

— Set 802.11 on or off

— Adjust power settings

— Configure power button for off, Hibernate, or Stand By mode

— Calibrate and customize the pen and buttons

— Configure security settings

Set to Stand By Mode



Category View


Entering text and data

- To open the Input Panel, tap inside a text field, and then tap the floating Input Panel icon. Or, tap the Input Panel icon to the right of the Start button to open the Input Panel.
- Select one of the three Input Panel input modes to enter data.




Mode 1: Handwriting input

 Enter handwriting (use cursive or block letters).




Mode 2: Character input

 Enter characters one at a time.



Mode 3: Keyboard input

 Tap the on-screen keyboard.




Using the digital camera

The C5 includes a 2.0 megapixel digital camera. The camera lens is located on the back of the C5, at the top near the handle.

- Hold the camera steady when pointing the lens at the object you want to photograph.
- Press the Camera button once to activate the viewfinder.
- Press the button again to take the picture.
- The C5 will prompt you to enter a name and location to save the image.

The figure below shows the location of the camera button.

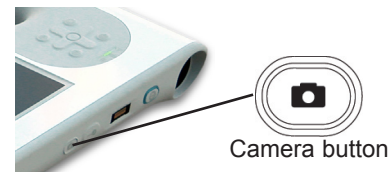

IMPORTANT: The *Motion C5 User Guide*, located on your C5 desktop, contains information about the following topics.

Setting wireless devices

- To set up and use your Bluetooth wireless devices, see "Using Bluetooth" in the *Motion C5 User Guide*.
- To set up the built-in Wi-Fi adapter, see "Using Wi-Fi (802.11 a/b/g)" in the *Motion C5 User Guide*.

Using the ports and card slots

For information about the locations and uses for the ports and card slots, see "Features" in the *Motion C5 User Guide*.

Note: The C5 must be powered by AC power to use USB ports.

Setting up the Fingerprint Reader

You can use the Fingerprint Reader for user authentication, password replacement, and four-way directional scrolling.

To set up the Fingerprint Reader, see "Using Motion OmniPass™ and Fingerprint Reader" in the *Motion C5 User Guide*.

Using speech recognition

1. For information about configuring speech recognition, see "Using Speech Recognition" in the *Motion C5 User Guide*.
2. Complete the *Using Speech Recognition* tutorial. (Start > All Programs > Tablet PC > Tablet PC Tutorials > Speech)