

Using the Set-up Menu

Tone signal settings

Setting the squelch tone frequency (CTCSS)

The tone frequency can be set. Refer to “Setting the tone frequency” (P.102) for details.

Setting the DCS code

The DCS code can be set. Refer to “Setting the DCS code” (P.104) for details.

Setting the transmission method of the DTMF code

The transmission method of the registered DTMF code can be set. Refer to “Transmitting registered DTMF code” (P.113) for details.

Registering the DTMF code

Telephone numbers used when connecting to a public line from a phone patch can be registered using a DTMF code up to a maximum of 16 digits. Refer to “Registering the DTMF code” (P.112) for details.

Recalling only specified stations

The function for calling only specified stations using the pager code can be set. Refer to “Using the pager function” (P.106) for details.

Setting the user programmed reverse CTCSS tone

The frequency of the user programmed reverse CTCSS tone squelch can be set at 100 Hz intervals between 300 Hz and 3000 Hz

1 Press **[DISP]** for one second or longer
 The set-up menu will be displayed.

2 Touch **[SIGNALING]**

3 Select and touch **[6 PRG REV TONE]**

The characters of the set value will turn orange in color.



Using the Set-up Menu

4 Turn  to select the frequency

Tip Factory default value: 1500 Hz

5 Touch **[6 PRG REV TONE]**

The characters of the set value will turn green in color.



6 Press  for one second or longer

The frequency will be set and the display will return to the previous screen.

Using the bell Notification of an incoming call from a partner station using the bell

Notification of an incoming call from a partner station can be provided by a bell sound. Refer to “Using the bell to notify an incoming call by a partner” (P.110) for details.


Setting the squelch type separately for transmit and receive

Different squelch types can be used for transmit and receive.

1 Press  for one second or longer

The set-up menu will be displayed.

2 Touch **[SIGNALING]**

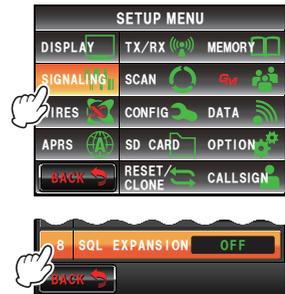

3 Touch **[8 SQL EXPANSION]** to select OFF/ON

The setting will switch between “OFF” and “ON” each time it is touched.

OFF: Use the same squelch for transmit and receive.

ON: Use different squelch for transmit and receive.

Refer to “Other squelch functions”(P.110) for details.

Tip Factory default value: OFF

4 Press  for one second or longer


The squelch type when transmitting and receiving will be set and the display will return to the previous screen.

Using the Set-up Menu

Setting the weather alert operation (USA Version Only)

The reception of the weather alert can be disabled.

- 1 Press  for one second or longer
 The set-up menu will be displayed.
- 2 Touch **[SIGNALING]**

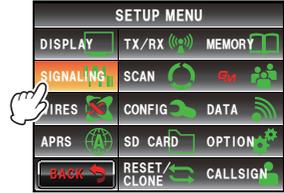

- 3 Touch **[9 WX ALERT]** to select OFF/ON
 The setting will switch between “OFF” and “ON” each time it is touched.



OFF: The weather alert will not be received.

ON: The weather alert will be received.

Tip Factory default value: OFF

- 4 Press  for one second or longer
 The weather alert operation will be set and the display will return to the previous screen.

Scan settings


Setting the signal reception method

The reception method when a signal is picked up in the home channel can be set. Refer to “Setting the signal reception method” (P.82) for details.

Setting the scanning direction

The scanning direction can be set to scan for increasing or decreasing frequencies or memory channel numbers.

- 1 Press  for one second or longer
 The set-up menu will be displayed.
- 2 Touch **[SCAN]**

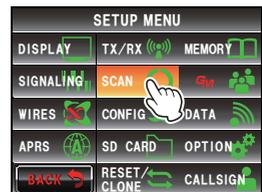

Using the Set-up Menu

- 3 Touch **[2 SCAN DIRECTION]** to select the scanning direction

The setting will switch between “UP” and “DOWN” each time it is touched.

UP: Scan for increasing frequencies or memory channel numbers.

DOWN: Scan for decreasing frequencies or memory channel numbers.

Tip Factory default value: UP

- 4 Press **[MSP]** for one second or longer

The scanning direction will be set and the display will return to the previous screen.



Setting the receive operation when the scanning stops

The reception method when the scanning stops can be set.

Refer to “Setting the receive operation when the scanning stops” (P.73) for details.

Group monitor function settings

The GM (group monitor) function automatically checks to find if there are any registered group members within communication range.

Refer to the separate Operating Manual GM Edition for further details (download the operating manual from the YAESU website).

Settings on the functions and configuration

Setting the date and time

The date and time of the radio can be set.

Refer to “Adjusting the data and time” (P.56) for details.


Using the Set-up Menu

Setting the display format for the date and time

The display format of the clock inside the radio can be changed as follows.

- Date format: Month/Day/Year format, Year/Month/Day format, Day/Month/Year format, Year/Day/Month format
- Time format: 24 hours format, 12 hours format

- 1 Press **[DMSF/RECALL]** for one second or longer
 The set-up menu will be displayed.
- 2 Touch **[CONFIG]**

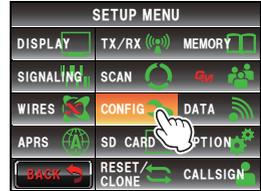

- 3 Touch **[2 DATE & TIME FORMAT]**
 The display setting screen for the date and time will be displayed.



- 4 Touch **[DATE]**
 The display setting screen for the date will be displayed.



- 5 Touch the format to be displayed
 Touch and select the date format to be displayed.
 mmm/dd/yyyy: Display in Month/Day/Year format.
 yyyy/mmm/dd: Display in Year/Month/Day format.
 dd/mmm/yyyy: Display in Day/Month/Year format.
 yyyy/dd/mmm: Display in Year/Day/Month format.



Tip Factory default value: mmm/dd/yyyy

- 6 Touch **[BACK]**



- 7 Touch **[TIME]** to select the display format for the time
 The setting will switch between “24 hour” and “12 hour” each time it is touched.

Tip Factory default value: 24 hour



Using the Set-up Menu

- 8 Press  for one second or longer
 The display format for the date and time will be set and the display will return to the previous screen.

Setting the time zone

The time of the clock inside the radio can be synchronized with the time in the time data (Coordinated Universal Time) from the GPS.

The time zone can be set at 0.5 hour intervals up to ± 14 hours.

- 1 Press  for one second or longer
 The set-up menu will be displayed.

- 2 Touch **[CONFIG]**



- 3 Select and touch **[3 TIME ZONE]**
 The characters of the set value will turn orange in color.



- 4 Turn  to select the time zone
 The time zone can be set at 0.5 hour intervals up to ± 14 hours.

Tip Factory default value: UTC+0:00

- 5 Touch **[3 TIME ZONE]**
 The characters of the set value will turn green in color.



- 6 Press  for one second or longer
 The time zone will be set and the display will return to the previous screen.