

Quick Operation Guide

While holding down the [DEMO], [METRONOME], or [VOICE] button, press the highlighted keys shown below to select voice demos etc, or set parameters.

Voice Demo **Preset Song (50 greats for the Piano)**

MASTER VOLUME (MIN/MAX) | DEMO (highlighted) | METRONOME | VOICE
 A#-1 B-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C#7
 A-1 B-1 C#0 D#0 F#0 G#0 A#0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

Voice (including the dual voice) **Reverb Type** **Reverb Depth** **Dual Octave Setting** **Dual Balance**

MASTER VOLUME (MIN/MAX) | DEMO | METRONOME | VOICE (highlighted)
 A#-1 B-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C#7
 A-1 B-1 C#0 D#0 F#0 G#0 A#0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7


Metronome Volume **Metronome Time Signature** **Metronome / Preset Song Tempo**

MASTER VOLUME (MIN/MAX) | DEMO | METRONOME (highlighted) | VOICE
 A#-1 B-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C#7
 A-1 B-1 C#0 D#0 F#0 G#0 A#0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7


Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters.


Tune Up: in about 0.2Hz steps (Press any highlighted key)

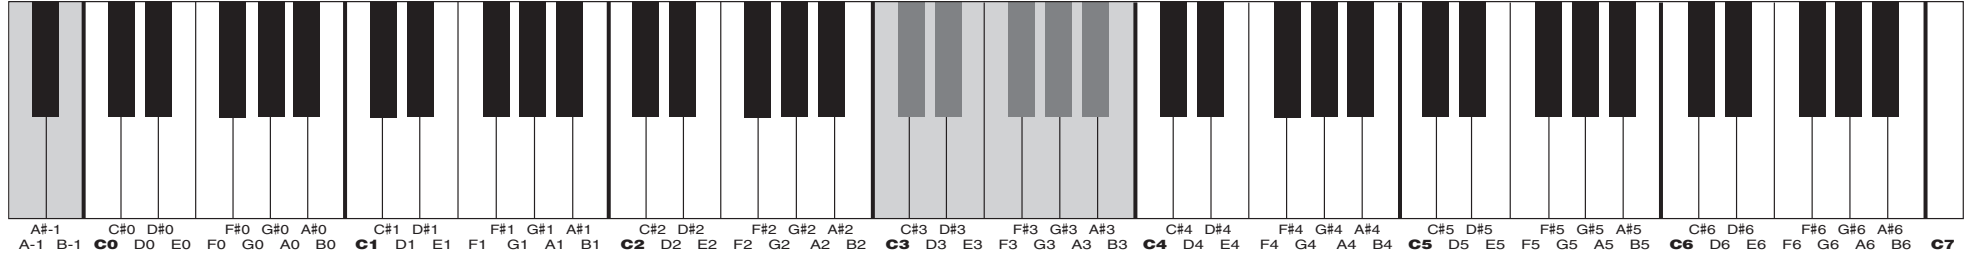

Tune Down: in about 0.2Hz steps (Press any highlighted key)

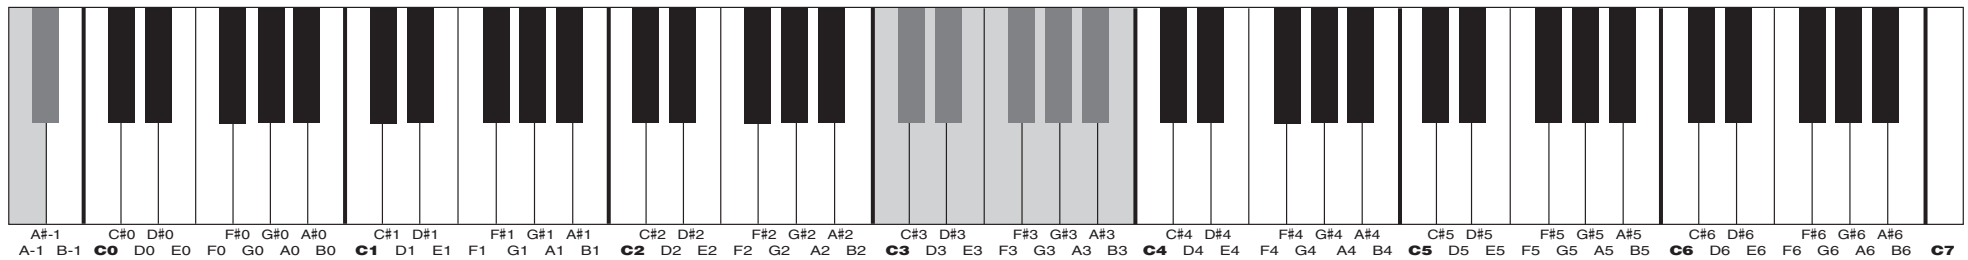

Standard pitch : 440.0 Hz (Press any highlighted key)

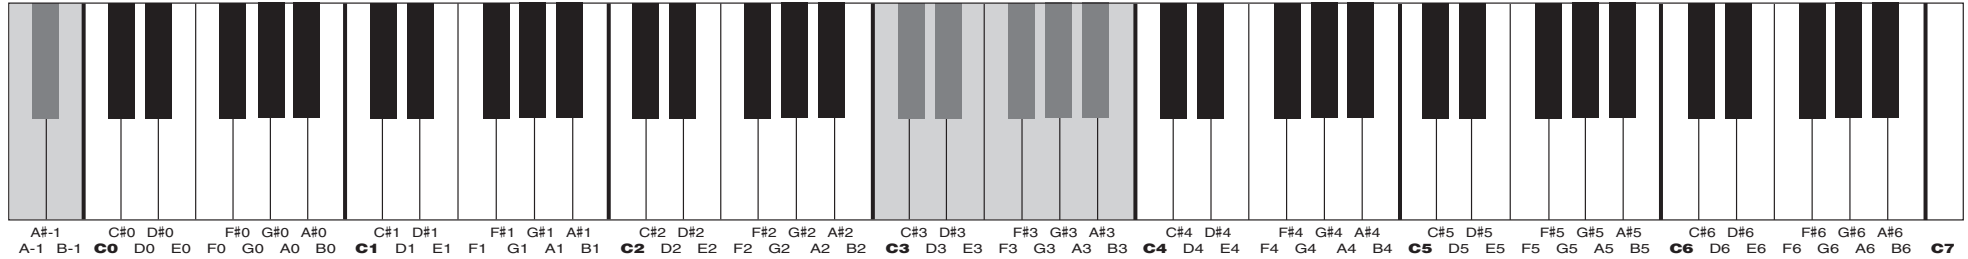

Program Change

