

# RX-V467/HTR-4063 How to program remote control codes For TV Control Key Operations



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

- 1 Use the remote codes listed in this document to find your TV manufacturer code.
- 2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



- 3 Press the TV Power button on the bottom of the remote.



- 4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

# List of remote control codes

<b>TV</b>		Axion	0156	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elin	0277, 0320, 0323, 0342, 0349, 0350
A.R. Systems	0320	Baird	0282	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elite	0320, 0340, 0350
Acme	0342	Bang & Olufsen	0180, 0339	Contec/Cony	0012, 0058	Elman	0341
Acura	0323, 0343	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Continental Edison		Elta	0277, 0323, 0343
ADC	0337	Bastide	0282, 0342			Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Baur	0320, 0349	Cosmel	0323, 0343	Emprex	0154
Advent	0158	Bazin	0282	Craig	0058, 0179	Envision	0008, 0026, 0050
Adventura	0057	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Crosley	0010, 0037, 0171, 0339	Epson	0155, 0206, 0359
Adyson	0277, 0282, 0342	Belcor	0008	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Erres	0320, 0349, 0350
Agashi	0277, 0282	Bell & Howell	0019, 0054	CS Electronics	0277, 0340, 0342	ESA	0051
Agazi	0337	Benq	0097, 0242, 0361	CTC Clatronic	0341	ESC	0282
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Beon	0320, 0349, 0350	CTX	0205	Etron	0343
Aim	0320	Best	0161	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Eurofeel	0282
Aiwa	0078, 0379	Bestar	0161, 0320, 0350			Euro-Feel	0337
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Binatone	0282, 0342	CXC	0058, 0179	Euroline	0349
Akiba	0320, 0340	Blue Sky	0320, 0340	Cybertron	0340	Euroman	0161, 0277, 0282, 0320, 0337, 0342, 0350
Akura	0320, 0323, 0337, 0340	Blue Star	0348	Cytron	0152	Europhon	0277, 0282, 0320, 0341, 0342, 0350
Alaron	0277	Boots	0282, 0342	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Expert	0321
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	BPL	0320, 0348			Exquisit	0320
Albatron	0140	Bradford	0058, 0179	Dainichi	0277, 0340	Fenner	0323, 0343
Alcyon	0171	Brandt	0322, 0345	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Ferguson	0322, 0345, 0349
Alleron	0059	Brilliant	0182	Dantax	0161, 0349	Fidelity	0277, 0320, 0342, 0346
Allorgan	0282	Brinkmann	0320	Dawa	0320	Filetai	0282
Allstar	0320, 0350	Brionvega	0320, 0339, 0349, 0350	Daytron	0007, 0008, 0026, 0323, 0343	Finlandia	0346
America Action	0179	Britannia	0277, 0282, 0342	De Graaf	0346	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
AMOi	0276	Brockwood	0008	Decca	0282, 0320, 0342, 0349, 0350	FIRST LINE	0342, 0343, 0350
Amplivision	0161, 0282, 0321, 0342	Broksonic	0109, 0179	Dell	0145, 0245	Firstline	0277, 0282, 0320, 0323
Amstrad	0320, 0323, 0337, 0340, 0343	Bruno	0339	Denver	0358, 0362	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Amtron	0058	BTC	0340	Desmet	0320, 0349, 0350	Flint	0320, 0350
Anam	0179, 0343	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Diamant	0320	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Anam National	0052, 0058	Capsonic	0337	Diamond	0277	Formenti/Phoenix	0277
Anglo	0323, 0343	Carena	0320	DiamondVision	0135, 0143	Fortress	0336, 0339
Anitech	0171, 0320, 0323, 0337, 0343	Carnivale	0050	Dimensia	0049	Fraba	0161, 0320
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	Carrefour	0344	Disney	0219	Friac	0161
AOC	0008, 0026, 0050, 0053	Carver	0010	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Apex	0039, 0111, 0217	Cascade	0320, 0323, 0343	Dream Vision	0461, 0498	Fujitsu	0059, 0069, 0074, 0075, 0282
Arcam	0277, 0282	Casio	0367	DTS	0323, 0343	Fujitsu General	0282
Arcam Delta	0342	Cathay	0320, 0349, 0350	Dual	0282, 0320, 0342	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
Aristona	0320, 0349, 0350	CCE	0183, 0282	Dual-Tec	0342, 0343	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
Arthur Martin	0321	Celebrity	0055, 0107	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342		
ASA	0339, 0347	Celera	0039	Durabrand	0031, 0051, 0179, 0215	Futuretech	0058, 0179
Asberg	0171, 0320, 0350	Centurion	0320, 0349, 0350	Dux	0349	Galaxi	0320, 0351
Astra	0343	Century	0339	Dwin	0178	Galaxis	0161, 0320
Asuka	0277, 0282, 0337, 0340, 0342	CGE	0161, 0171	Dynatron	0320, 0349, 0350	Gateway	0176, 0177, 0241
Atlantic	0277, 0320, 0342, 0349, 0350	Changhong	0039	Dynex	0228, 0231	GBC	0323, 0343, 0344
Atori	0323, 0343	Chimei	0273	Elbe	0161, 0168, 0282, 0320	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209
Auchan	0321	Cimline	0323, 0343	Elcit	0339	Geant Casino	0321
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Citizen	0007, 0008, 0026, 0050, 0058	Electa	0348	GEC	0282, 0320, 0342, 0347, 0349, 0350
AudioTon	0161, 0282, 0342	City	0323, 0343	ELECTRO TECH	0343	Geloso	0323, 0343, 0346
Audiovox	0058, 0179, 0194	Clarion	0179	Electroband	0055, 0107	General Technic	0323, 0343
Ausind	0171	Clarivox	0349	Electrograph	0176		
Autovox	0171, 0282, 0337, 0339, 0342	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Electrohome	0008, 0026, 0052, 0055		
Aventura	0051	CMS	0277	Element	0230		
Awa	0277, 0282	CMS Hightec	0282				
		Coby	0197				
		Colortyme	0008, 0026				
		Commercial Solutions	0021				
		Concerto	0008, 0026				
		Concorde	0323, 0343				

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxor	0282, 0342, 0346		
		Interactive	0161	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	NEI	0320, 0349, 0350
		Interbuy	0323, 0343			Net-TV	0176
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Neufunk	0320, 0323
		International	0277			New Tech	0343, 0350
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New World	0340
Gorenje	0161, 0351			Magnadyne	0339, 0341, 0349	NewTech	0282, 0320, 0323
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnafon	0171, 0277, 0341, 0342	Nicamagic	0277, 0342
GPX	0129					Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Gradiente	0240	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Graetz	0347	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITS	0277, 0320, 0340, 0348, 0350	Magnum	0337, 0343	Nokia	0347
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347	Majestic	0054	Norcent	0201
Gronic	0282	ITV	0320, 0343, 0349	Mandor	0337	Nordic	0282
Grundig	0160, 0161, 0171, 0310, 0320	Janeil	0057	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordmende	0339, 0345, 0347, 0350
Grunpy	0058, 0059, 0179	JBL	0010	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Nordvision	0349
Haier	0157, 0233	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056			Novatronic	0320
Halifax	0277, 0282, 0337, 0342	JCB	0055, 0107	Marelli	0339	Oceanic	0321, 0347
Hallmark	0008, 0026, 0031	Jensen	0008, 0026	Mark	0277, 0282, 0320, 0323, 0349, 0350	Okano	0161, 0320, 0351
Hampton	0277, 0282, 0342	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Matsuda	0282	Olevia	0102, 0199, 0200, 0207, 0222
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	ONCEAS	0342
Hantarex	0320, 0323, 0343			Matsushita	0017	Onwa	0058, 0179
Hantor	0320	Kamosonic	0342	Maxent	0147, 0176	Opera	0320
Harman/Kardon	0010	Kamp	0277, 0342	Mediator	0320, 0349, 0350	Oppo	0130
Harvard	0058, 0179	Kapsch	0347	Medion	0320, 0337, 0343	Optimus	0017, 0019
Harwood	0320, 0323	Karcher	0161, 0320, 0342, 0343, 0349	Megapower	0140	Optoma	0144
Havermy	0178	Kawasho	0008, 0026, 0055, 0277	Megatron	0026, 0031	Optonica	0178
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	KEC	0179	MElectronic	0277, 0282, 0320, 0323	Orbit	0320, 0350
Hema	0282, 0323	Kendo	0161, 0320, 0341, 0346	Melvox	0321	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hewlett Packard	0192	Kenwood	0008, 0026, 0050	Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Orline	0320
Higashi	0277	KIC	0282			Osaki	0282, 0320, 0337, 0340, 0342
HiLine	0320	Kingsley	0277, 0342	Memphis	0323, 0343	Oso	0340
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KLH	0039	Mercury	0320, 0323	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Hisawa	0321, 0340, 0348	Kloss Novabeam	0057, 0058	Metz	0339	Pael	0277, 0342
Hisense	0247	Kneissel	0161, 0168, 0320	MGA	0008, 0026, 0031, 0050, 0053	Palladium	0161, 0282, 0320, 0342, 0351
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kolster	0320, 0350	Micromaxx	0337, 0343	Palsonic	0282
		Konka	0340	Microrstar	0337, 0343	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
		Korpel	0320, 0349, 0350	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Korting	0161, 0339	Minerva	0171		
		Kosmos	0320	Minoka	0320, 0350		
		Koyoda	0343	Mintek	0153		
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376		
Hornlyphon	0320, 0350	Kyoto	0277, 0282	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Hoshai	0340	Lasat	0161	Monivision	0140		
Huanyu	0277, 0342	Lenco	0323, 0343	Montgomery Ward	0054		
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343	Motion	0171		
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350	Motorola	0052, 0178		
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	MTC	0008, 0026, 0050, 0053, 0161, 0277		
Hyundai	0141			Multi System	0349		
Iberia	0320	LG/GoldStar	0164				
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Liesenk	0349				
ICeS	0277	Liesenkotter	0320				
Ilo	0148, 0153	Life	0337, 0343				
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350						

	0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460		0339	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Tesmet	0350
		Robotron	0339	Sonolor	0321, 0347	Tevion	0337, 0343
		Rowa	0277, 0282	Sontec	0161, 0320, 0349, 0350	Texet	0277, 0282, 0323, 0342
		Royal Lux	0161	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
		RTF	0339	Sound & Vision	0340, 0341	Thorn	0320, 0349
		Runco	0030, 0050, 0062	Soundesign	0008, 0026, 0031, 0058, 0059, 0179	TMK	0008, 0026, 0031
		Saba	0298, 0322, 0339, 0345, 0347	Soundwave	0320, 0349, 0350	TNCi	0030
		Saisho	0282, 0323, 0337, 0342, 0343	Squareview	0051	Tokai	0282, 0320, 0350
		Salora	0346, 0347	SSS	0008, 0058, 0179	Tokyo	0277, 0342
		Sambers	0171, 0341	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Tomashi	0348
Philips Magnavox	0011, 0032, 0033	Sampo	0007, 0008, 0026, 0050, 0176	Starlite	0058, 0179, 0320, 0323, 0349	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Stenway	0348	Totevision	0007
Phonola	0277, 0320, 0339, 0349, 0350	Sandra	0277, 0282, 0342	Stern	0346, 0347	Towada	0282, 0347
Pilot	0007, 0008, 0050	Sansui	0043, 0109, 0320, 0350	Strato	0320, 0323	Trakton	0282
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Stylandia	0282	Trans Continen	0282, 0320
Plantron	0320, 0323, 0337, 0350	Sansui	0043, 0109, 0320, 0350	Sunkai	0343	Transtec	0277
Playsonic	0282	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Sunstar	0320, 0323	Trident	0282
Polaroid	0039, 0142, 0202, 0234	SBR	0320, 0349	Sunwood	0320, 0323, 0343, 0350	Triumph	0320
Poppy	0323, 0343	Sceptre	0235, 0244	Superla	0277, 0282, 0342	Uher	0161, 0171, 0320, 0347, 0350
Portland	0007, 0008, 0026, 0053	Schaub Lorenz	0347	Superscan	0013, 0178	Ultravox	0277, 0320, 0339, 0341, 0342
Prandoni-Prince	0171, 0346	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	SuperTech	0277, 0320, 0323	Unic Line	0320
Precision	0282, 0342	Scotch	0026, 0031	Supra	0323, 0343	United	0349
Prima	0157, 0243, 0323, 0343, 0347	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Supre-Macy	0057	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Princeton	0140	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Supreme	0055, 0107	Univox	0320
Prism	0023, 0056	SEI	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Susumu	0340	Vector Research	0050
Profex	0323, 0343	SEI-Sinudyne	0339, 0341, 0347	Sutron	0323, 0343	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Profi-Tronic	0320, 0350	Selec	0344, 0346, 0347	SVA	0151	Vexa	0320, 0323, 0343, 0349
Proline	0320, 0350	Sencora	0323, 0343	Sydney	0277, 0282, 0342	Victor	0015, 0344, 0350
Proscan	0021, 0027, 0049	Sentra	0323	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	VIDEOLOGIC	0277
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Serino	0277	Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Videologique	0277, 0282, 0340, 0342
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Syntax	0199	VideoSystem	0320, 0350
Proton	0008, 0012, 0026, 0031	SEI	0339, 0341, 0347	Syntax-Brilliant	0199	Videotechnic	0277, 0282
Protron	0196	SEI-Sinudyne	0339, 0341, 0347	Sysline	0349	Vidikron	0010
PROVIEW	0096, 0246	Selec	0344, 0346, 0347	Sytong	0277	Vidtech	0008, 0026, 0031, 0053
Provision	0320, 0349	Sencora	0323, 0343	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Viewsonic	0176, 0203, 0232, 0364
Pulsar	0008, 0030, 0062	Sentra	0323	Tashiko	0277, 0282, 0342, 0344, 0346	Viking	0057
Pye	0256, 0320, 0349, 0350, 0378	Serino	0277	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Viore	0148
Pymi	0323, 0343	Sheng Chia	0178	TCM	0337, 0343	Visiola	0277, 0342
Quandra Vision	0321	Shogun	0008	Teac	0282, 0320	Vision	0282, 0320, 0350
Quasar	0017, 0023, 0052, 0056	Siarem	0320, 0339, 0341	Tec	0282, 0323, 0342, 0343	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Quelle	0282, 0320, 0337, 0342, 0349, 0350	Sierra	0320, 0350	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
Questa	0344	Siesta	0161	TechniSat	0274, 0496, 0497, 0499	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Radialva	0320	Signature	0054	Techwood	0008, 0023, 0026, 0056	Waltham	0282, 0320, 0342
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Silva	0277	TEDELEX	0282	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Silver	0344	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Watson	0320, 0349, 0350
Radiola	0282, 0320, 0349, 0350	Singer	0321, 0339, 0341	Teleavia	0345	Watt Radio	0277, 0341, 0342
Radiomarelli	0320, 0339	Sinudyne	0320, 0339, 0341, 0349	Telecor	0282, 0320	Waycon	0111
Radiotone	0161, 0320, 0323, 0350	Skantec	0347	Telefunken	0320, 0322, 0345, 0350	Wega	0320, 0339, 0344
Rank	0344	Solavox	0347	Telegazi	0320	Wegavox	0323
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Sonitron	0161, 0282	Telemeister	0320	Weltblick	0282, 0320, 0349, 0350
Realistic	0019, 0031, 0050, 0179			Telestec	0320	Westinghouse	0107, 0216, 0220
Recor	0320			Teletech	0320, 0323, 0343, 0349	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
Redstar	0320			Teleton	0282, 0342	Wincom	0101, 0106
Reflex	0320			Televideon	0277	Xrypton	0320
Revovox	0161, 0320, 0349, 0350			Televiso	0321		
Rex	0337, 0346, 0347			Tensai	0282, 0320, 0323, 0340, 0343, 0350		
RFT	0161, 0168, 0339						
Rhapsody	0277						
R-Line	0320, 0349, 0350						
Roadstar	0323, 0337, 0340, 0343						

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

## **Note:**

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.