

musicCast

Setup Manual

English (USA)

Introduction

1. The difference between the MusicCast Smart Home skill and the MusicCast skill

MusicCast Smart Home skill

The *MusicCast Smart Home skill* supports the most common, everyday voice commands you would use to control a single MusicCast AV receiver, sound bar, wireless speaker or Hi-Fi receiver. These basic commands include power on/off, volume control, play/pause/skip/previous, mute/unmute and input selection. This skill supports simple, Alexa-standardized commands such as “Alexa, volume up in the Kitchen.”

MusicCast skill

The *MusicCast skill* goes beyond the basics, giving you enhanced control of unique MusicCast functions such as room linking, multiple room control, playback of MusicCast Favorites/Playlists and more. The commands are customized for MusicCast, for example “Alexa, ask MusicCast to link the Kitchen with the Living Room.”

2. About Connect ID

Connect ID is the user registration system for Yamaha. All users are required to create a new Connect ID account in order to use MusicCast skills with Alexa.

* To edit or delete your user information, please visit <https://www.idp.yamaha.com/login>

Introduction


3. System Requirements

- Wi-Fi network
- Smart device (iOS 9.0 or later/Android 4.4 or later)
- Amazon Alexa-enabled device
- MusicCast-enabled device (latest firmware version)
- MusicCast Controller app (latest version)
- Alexa app (latest version)
- Connect ID

Step 1

MusicCast Controller App


Open the MusicCast Controller app.

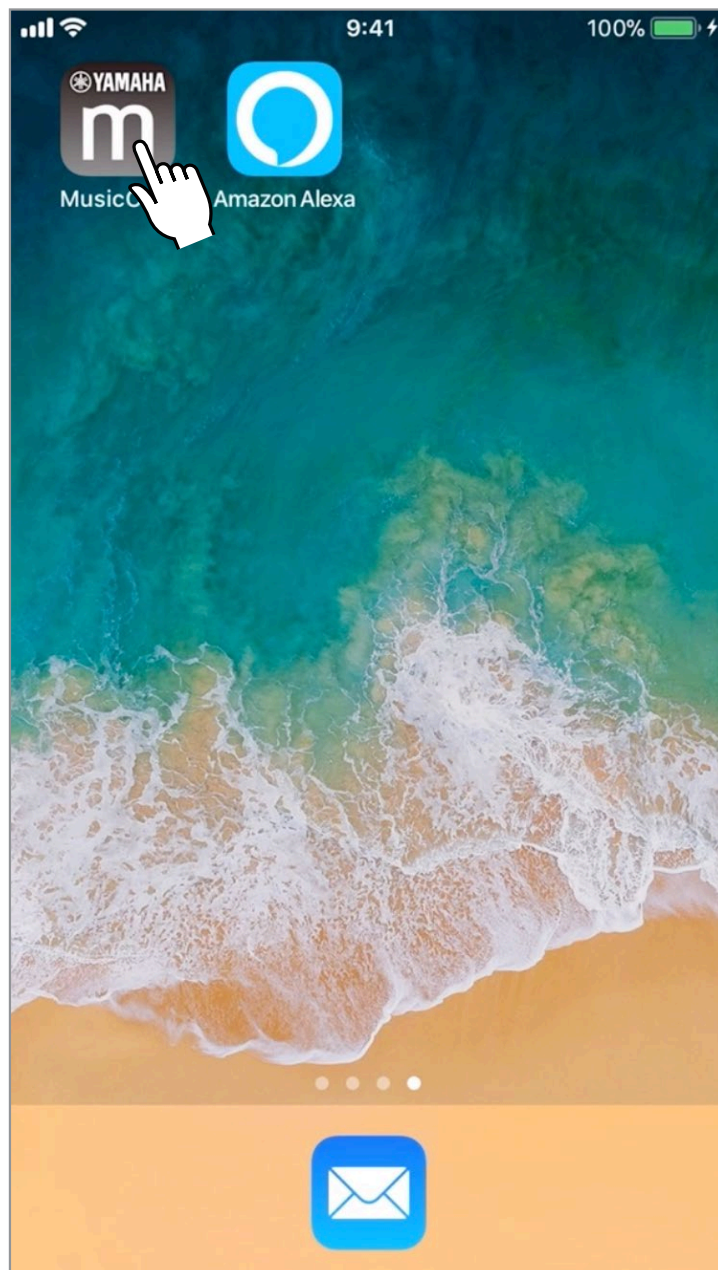

Step 2

MusicCast Controller App


Tap the settings icon on the home page to open settings.

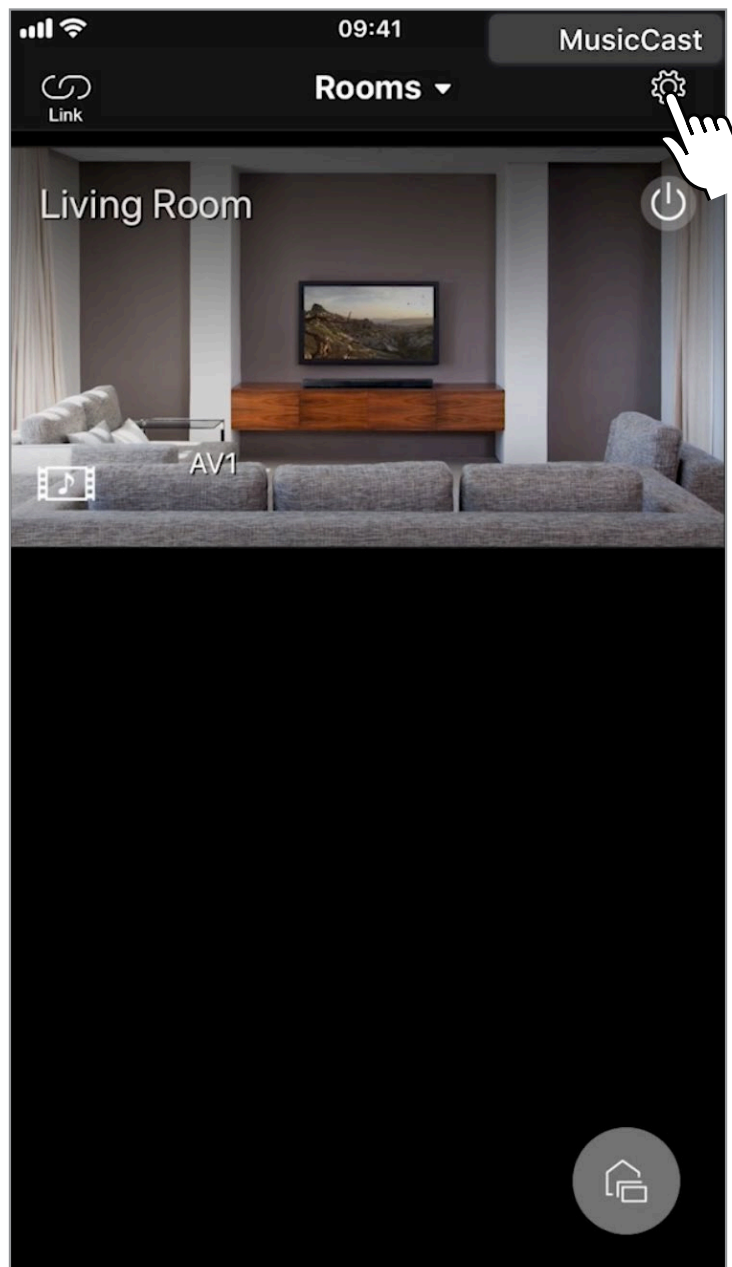

Step 3

MusicCast Controller App


Tap “Amazon Alexa set up.”

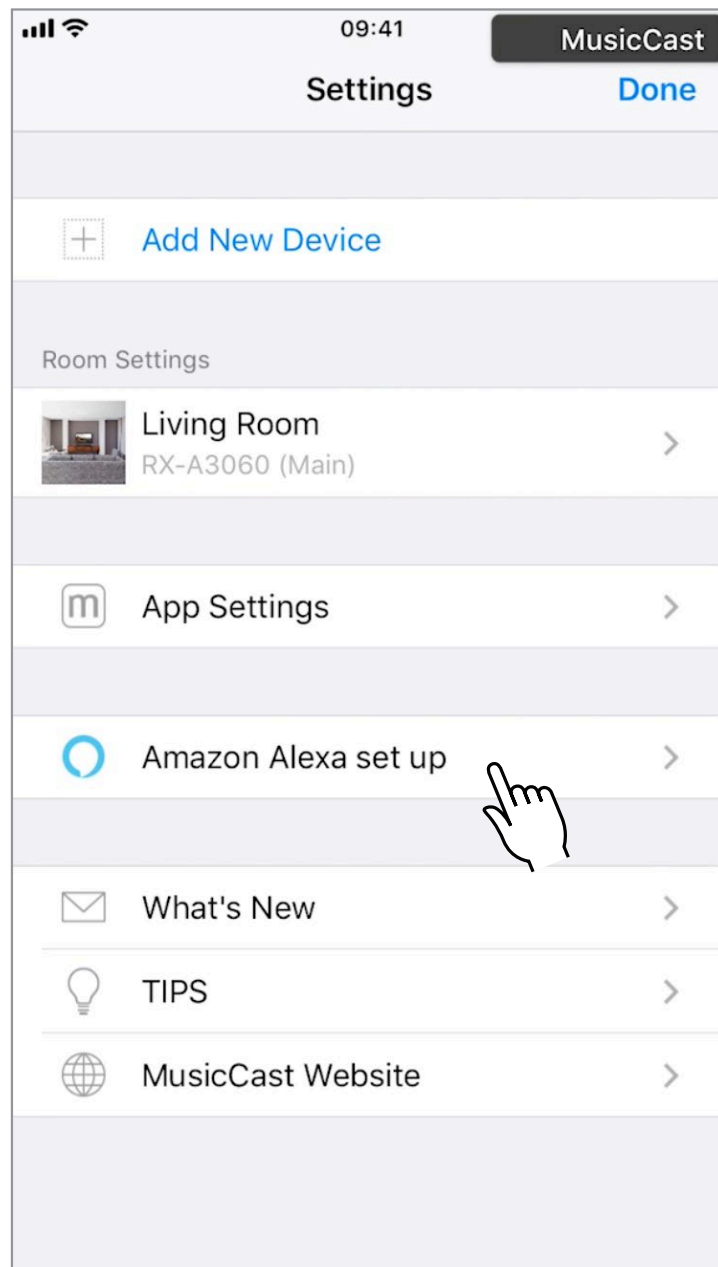

Step 4

MusicCast Controller App

Tap “Start setup.”

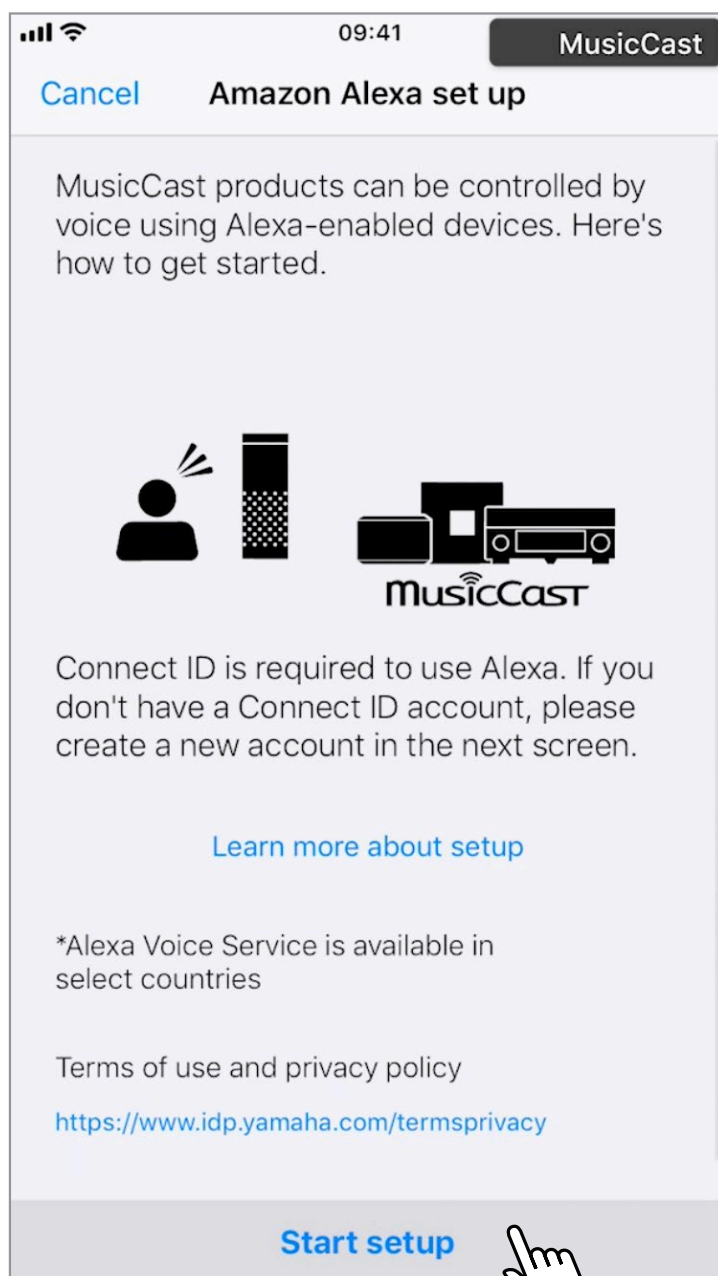

Step 5


MusicCast Controller App

If you already have a Connect ID

Fill in the required information, tap “SIGN IN” and proceed to Step 13.

If you don't have a Connect ID

Tap “or Create an Account” and proceed to Step 6.

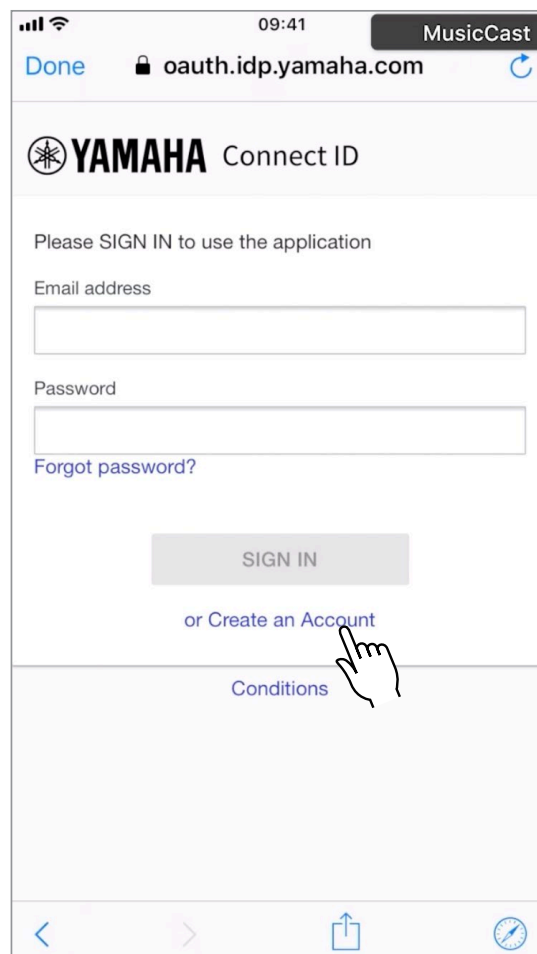

Step 6

MusicCast Controller App

Enter the required information, and confirm the Terms and Privacy Policy by ticking the check boxes. Tap “SEND EMAIL.”

English (USA)

09:41
idp.yamaha.com MusicCast

Create new account

Please submit your email address below. You will receive an email.

Click a link in the email and activate your account within the next one hour.

Email address

Country of residence *

United States

☒ I am 18 years or older.

☒ I agree to the [Connect ID License Terms](#).

☒ I agree to the [Connect ID Privacy Policy](#).


SEND EMAIL

[Conditions](#)

Step 7

Mail


Open your email app.

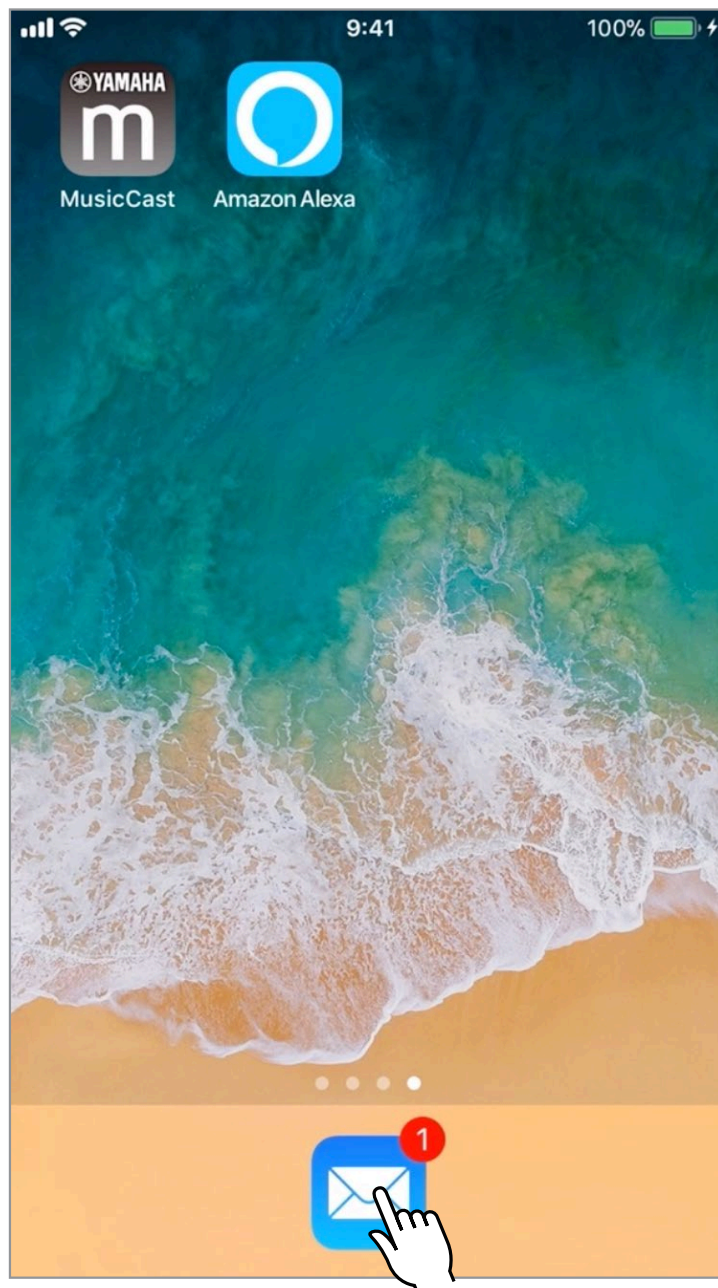

Step 8

Mail

Open the email you've received.

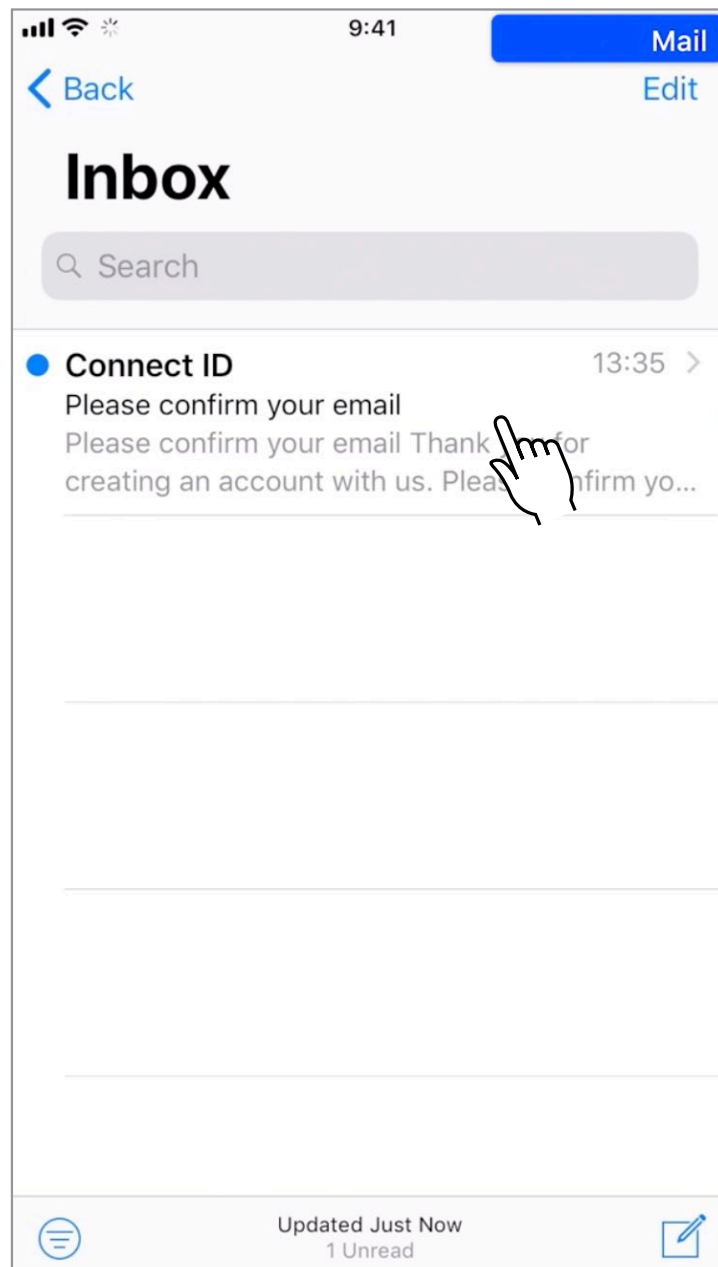


English (USA)

Step 9

Mail

After opening the email,
tap “Confirm my email address.”

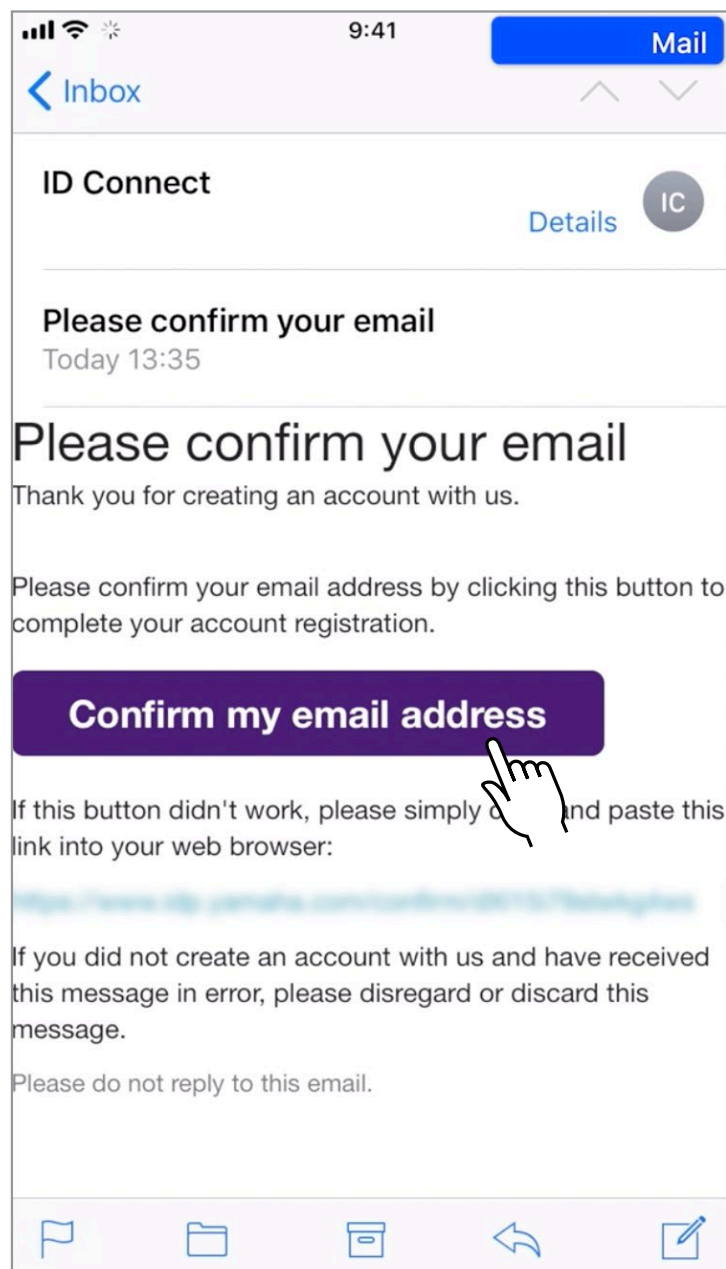

Step 10

Mail

Fill in the required information and tap “SAVE.”

Mail 9:41 idp.yamaha.com Mail

Thank you for creating an account.

Email address: musiccast.alexa@gmail.com
Country of residence: United States

There is one more step to start using the service.

User name

Password

strong

Re-enter password


SAVE

[Terms and Privacy](#)

Step 11

MusicCast Controller App


Tap “Start setup.”

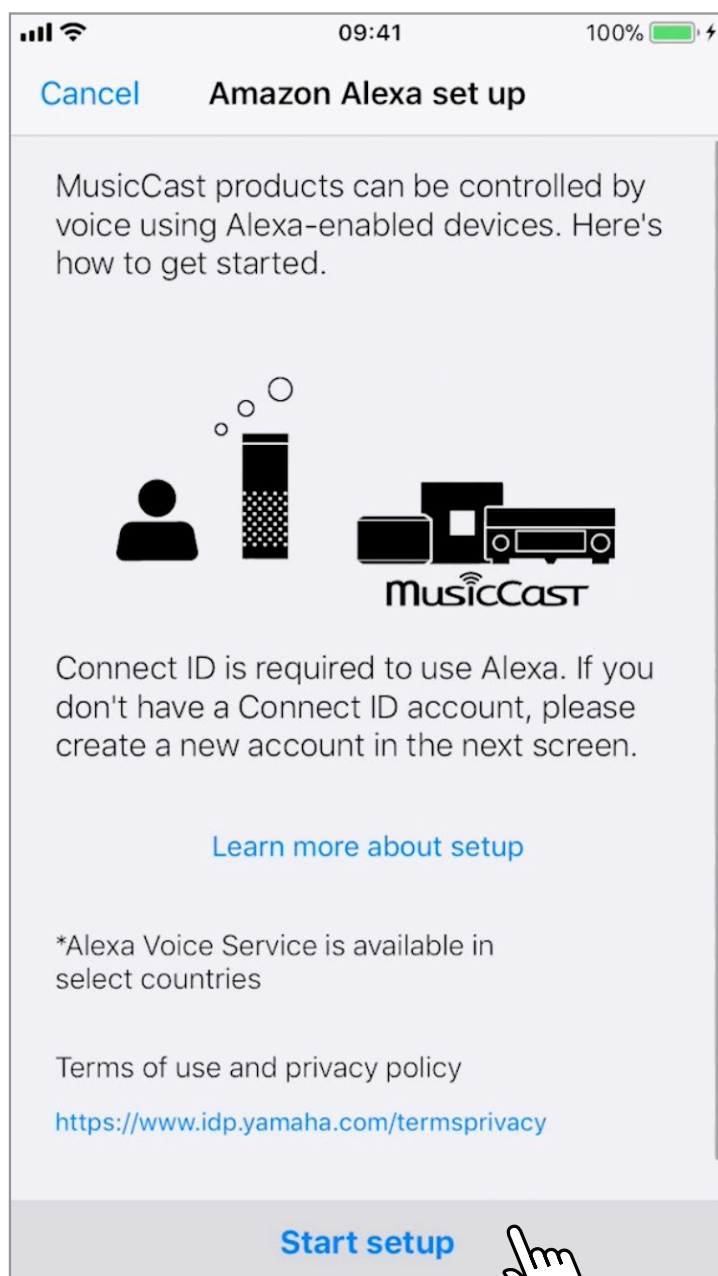

Step 12

MusicCast Controller App

Fill in the required information and tap “SIGN IN.”

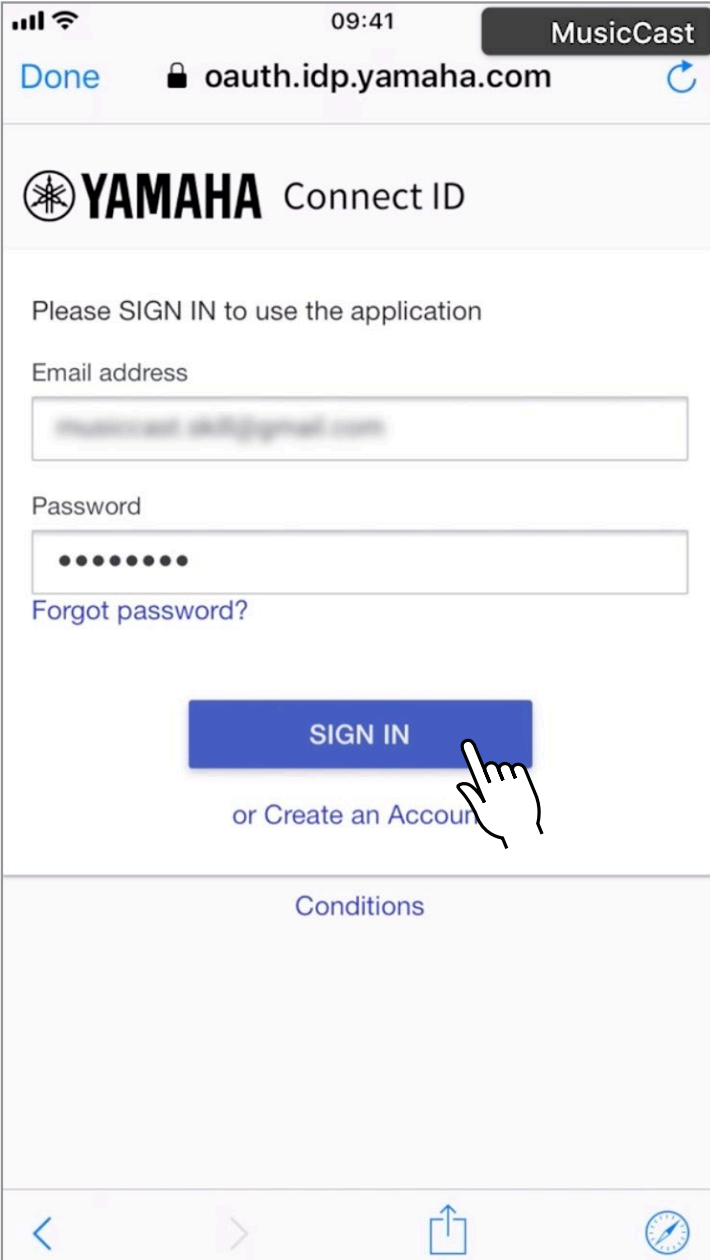


The screenshot shows the Yamaha Connect ID sign-in screen within the MusicCast app. The status bar at the top indicates signal strength, Wi-Fi, the time 09:41, and the app name MusicCast. The browser address bar shows 'oauth.idp.yamaha.com'. The page features the Yamaha logo and the text 'Connect ID'. Below this, it says 'Please SIGN IN to use the application'. There are two input fields: 'Email address' with a blurred email address and 'Password' with masked characters. A link for 'Forgot password?' is below the password field. A large blue 'SIGN IN' button is centered, with a hand icon pointing to it. Below the button is the text 'or Create an Account'. At the bottom, there is a 'Conditions' link. The bottom of the screen shows standard mobile navigation icons: back, forward, share, and search.

Step 13

MusicCast Controller App


Tap “ACCEPT.”

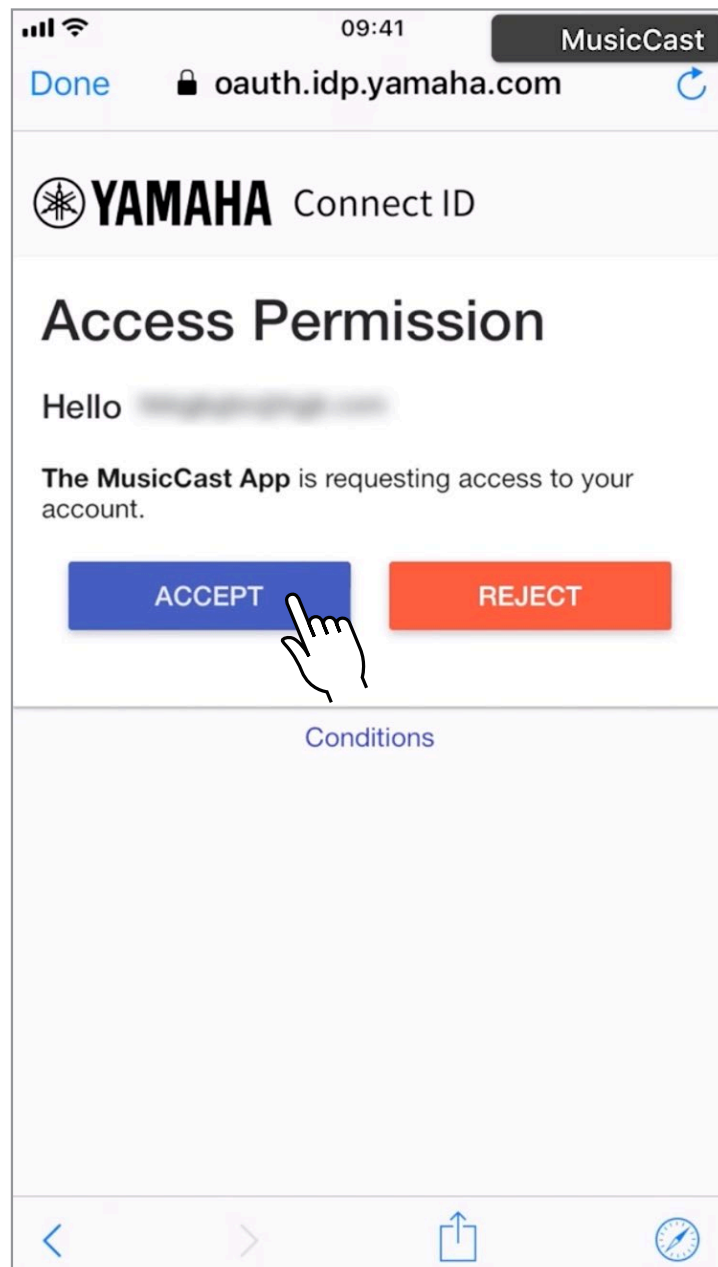

Step 14

MusicCast Controller App


Tap “Start.”

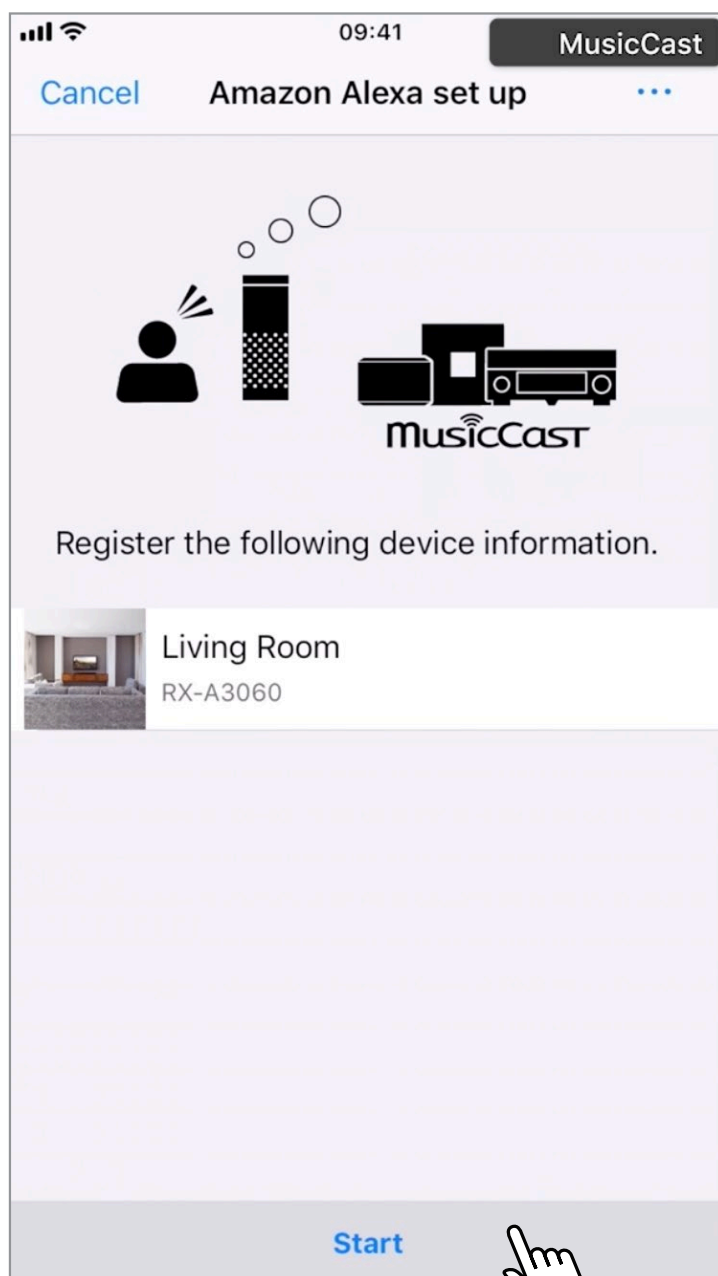

Step 15

MusicCast Controller App


Tap “Go to Amazon Alexa App.”

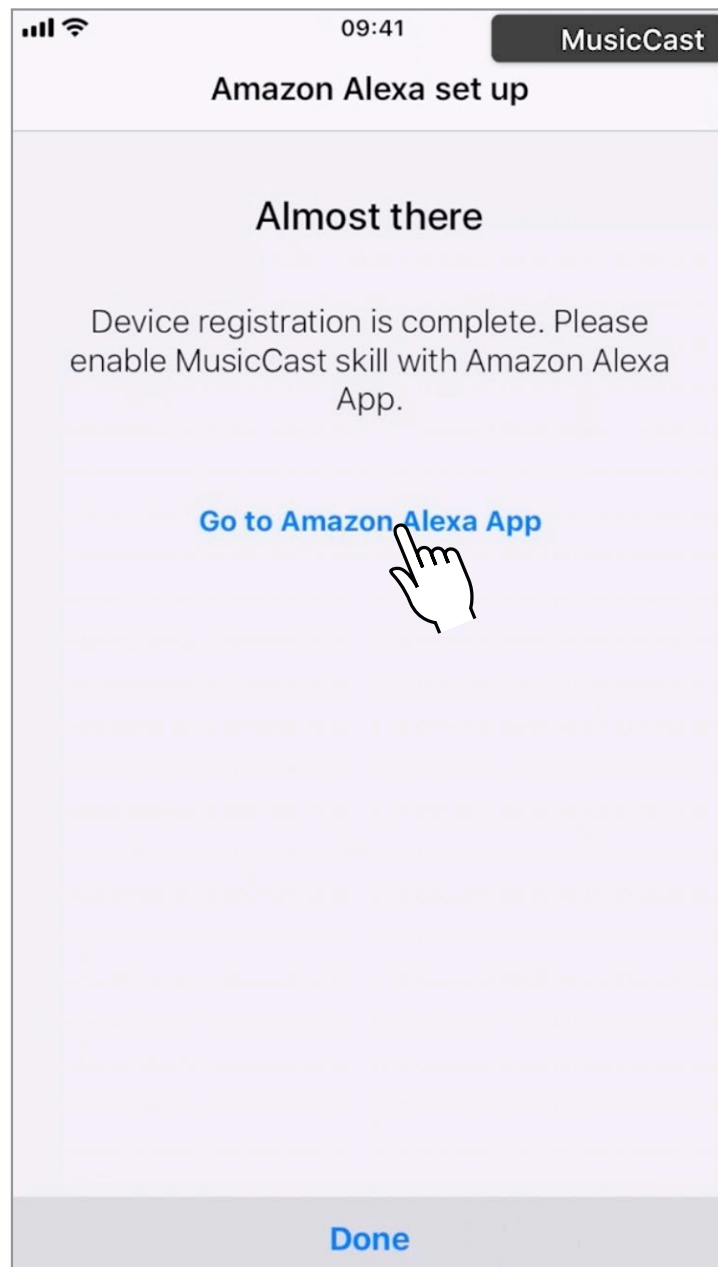

Step 16

Amazon Alexa App


The Amazon Alexa app will open.

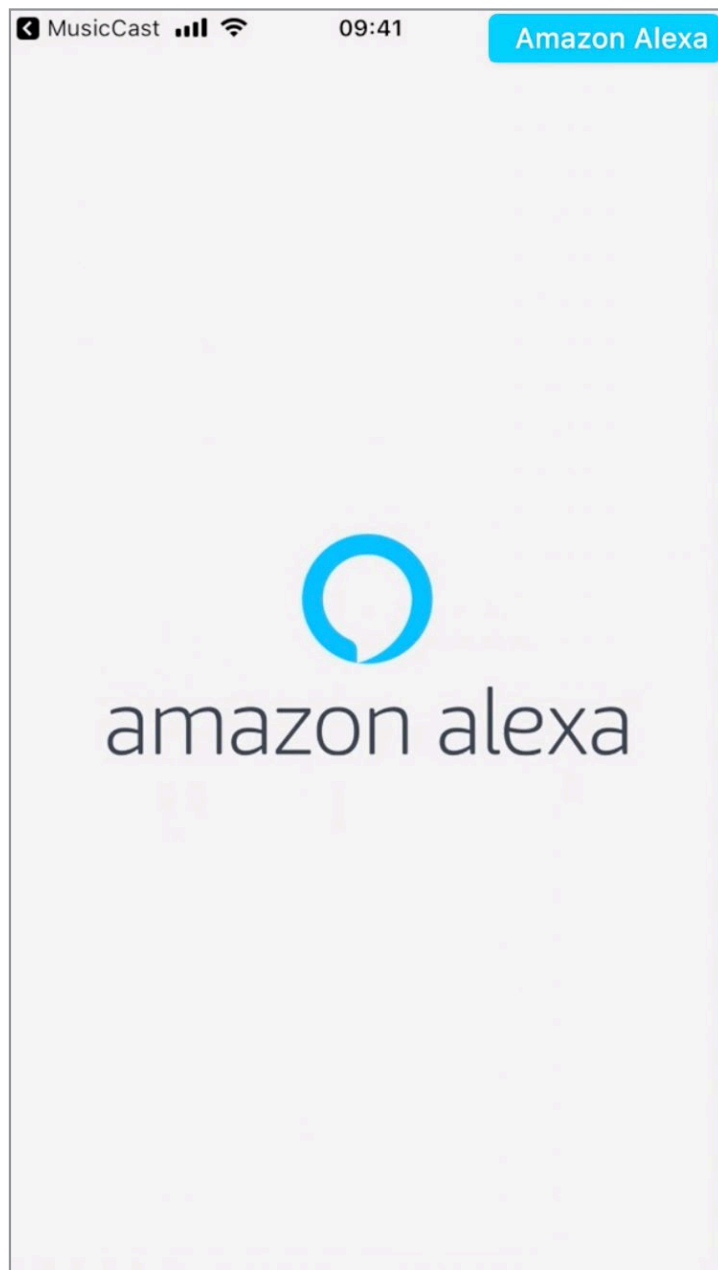

Step 17

Amazon Alexa App


Open the drop-down menu in the upper left.

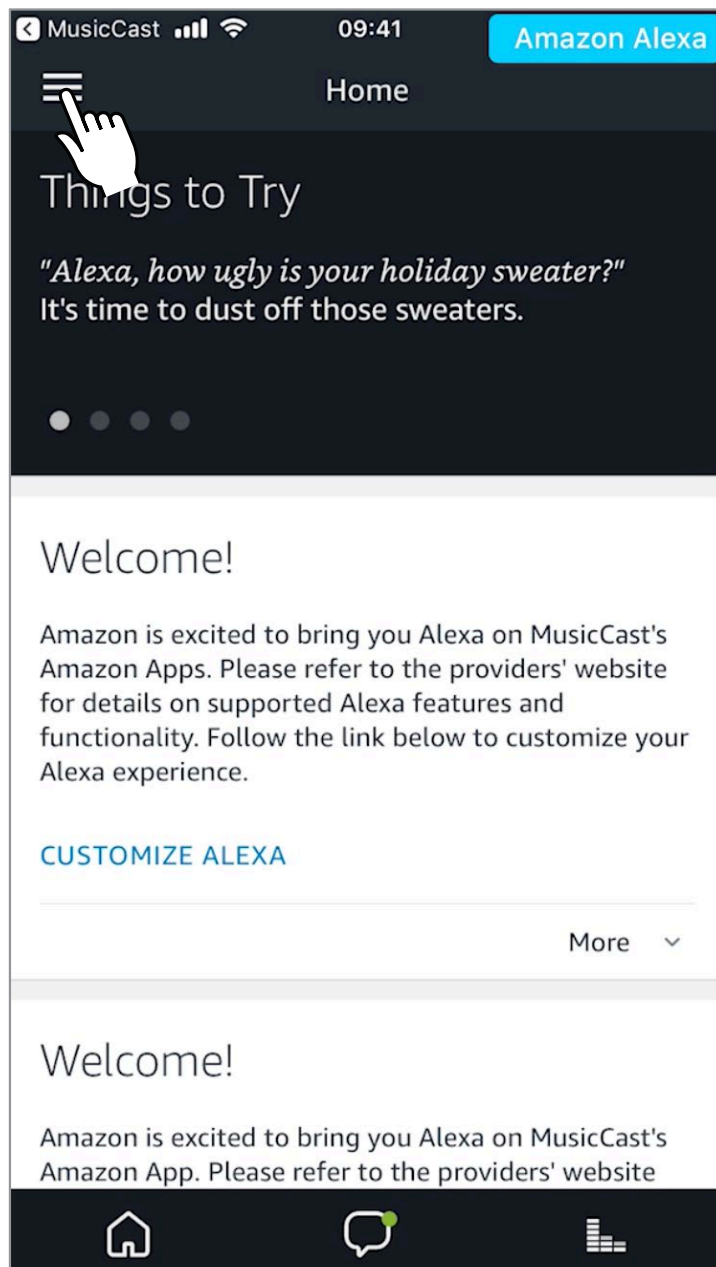

Step 18

Amazon Alexa App


Tap “Skills.”

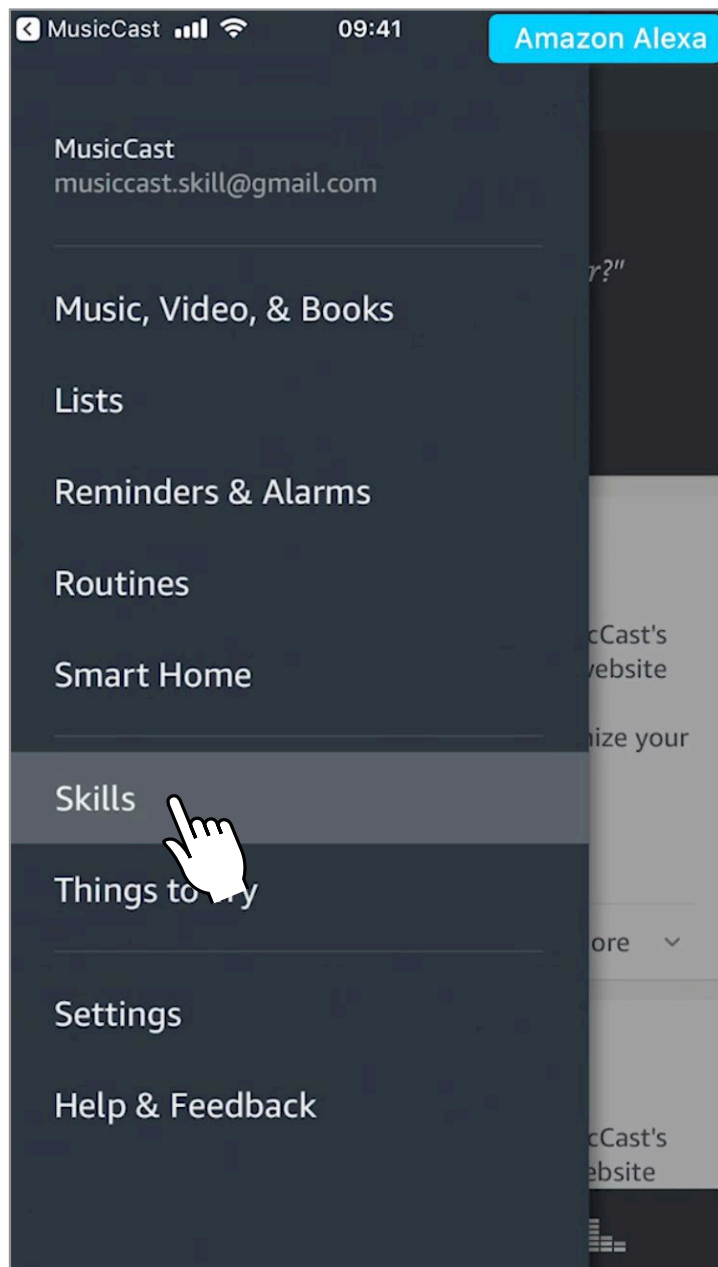

Step 19

Amazon Alexa App

Search for MusicCast.

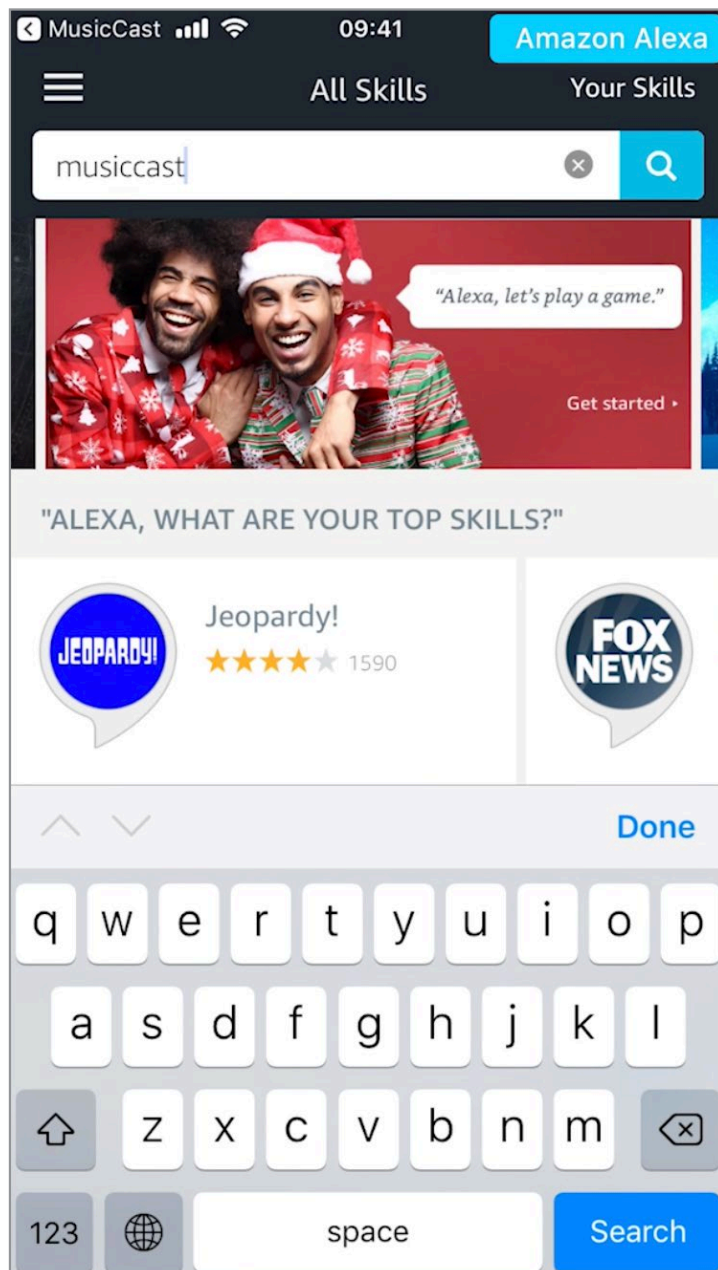

English (USA)


Step 20

Amazon Alexa App


Select the skill you want to set up from the search results, then tap “ENABLE.”

English (USA)

MusicCast Smart Home skill

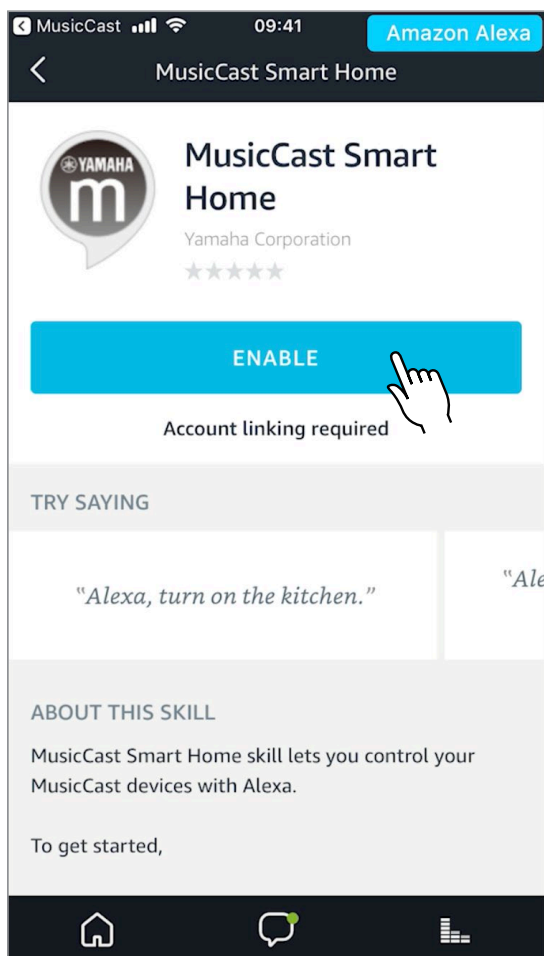

MusicCast skill

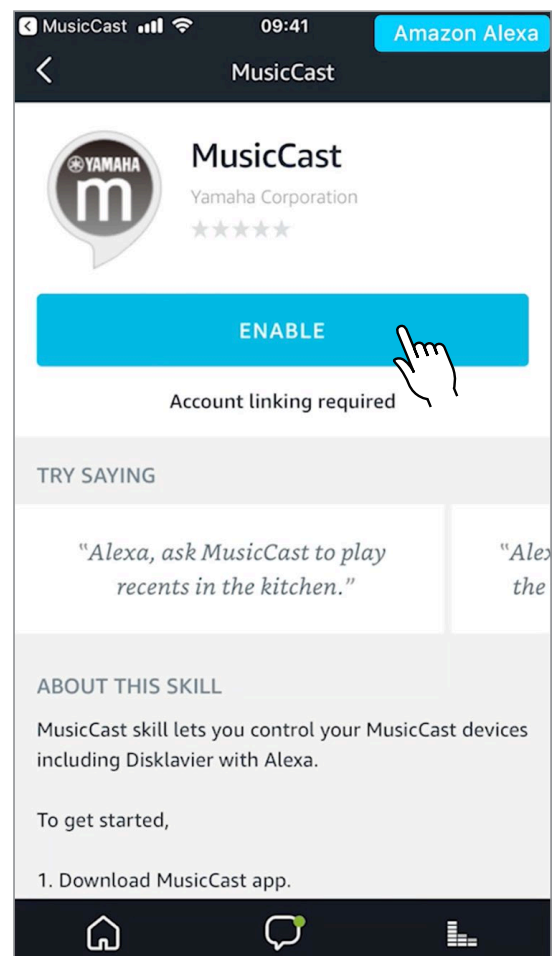


Step 21

Amazon Alexa App


Tap “CONTINUE.”

English (USA)

MusicCast Smart Home skill

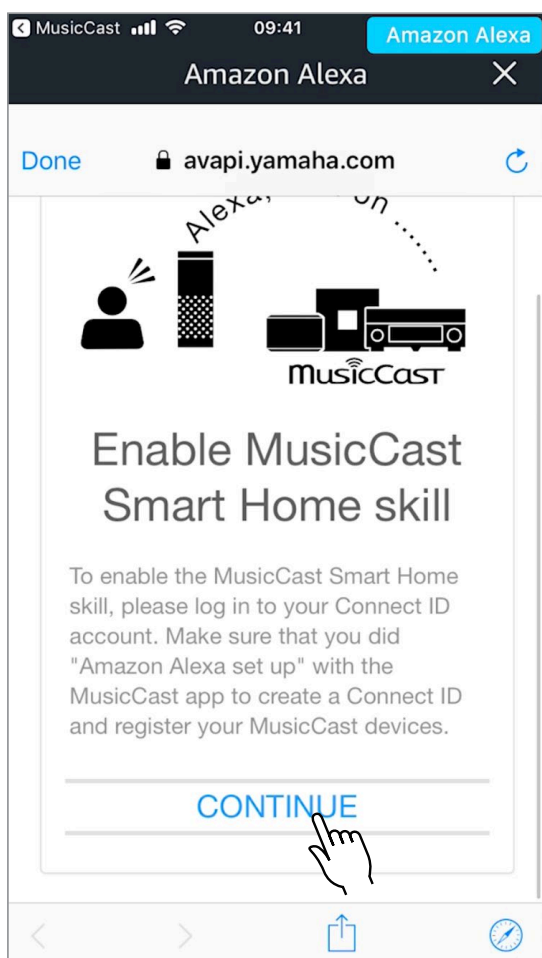


MusicCast skill

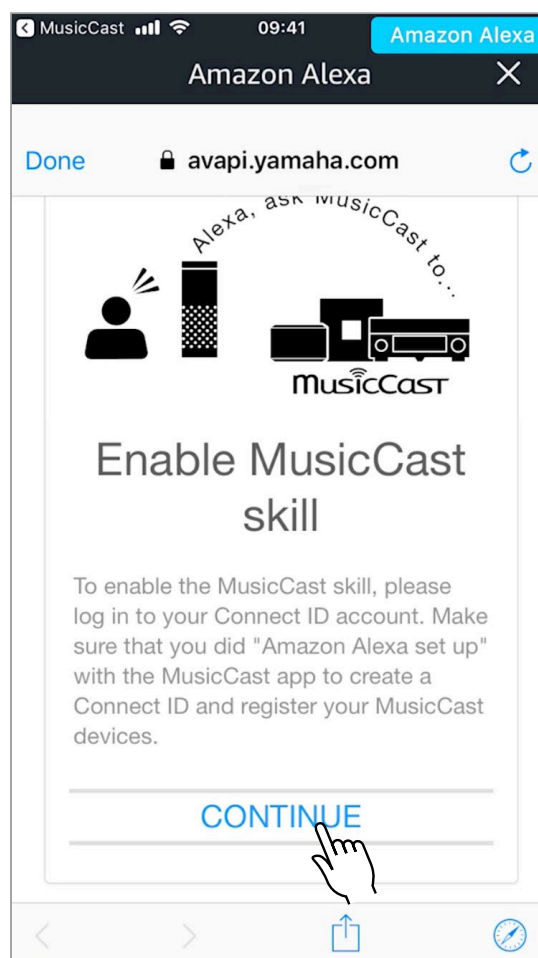

Step 22

Amazon Alexa App

Fill in the required information and tap “SIGN IN.”

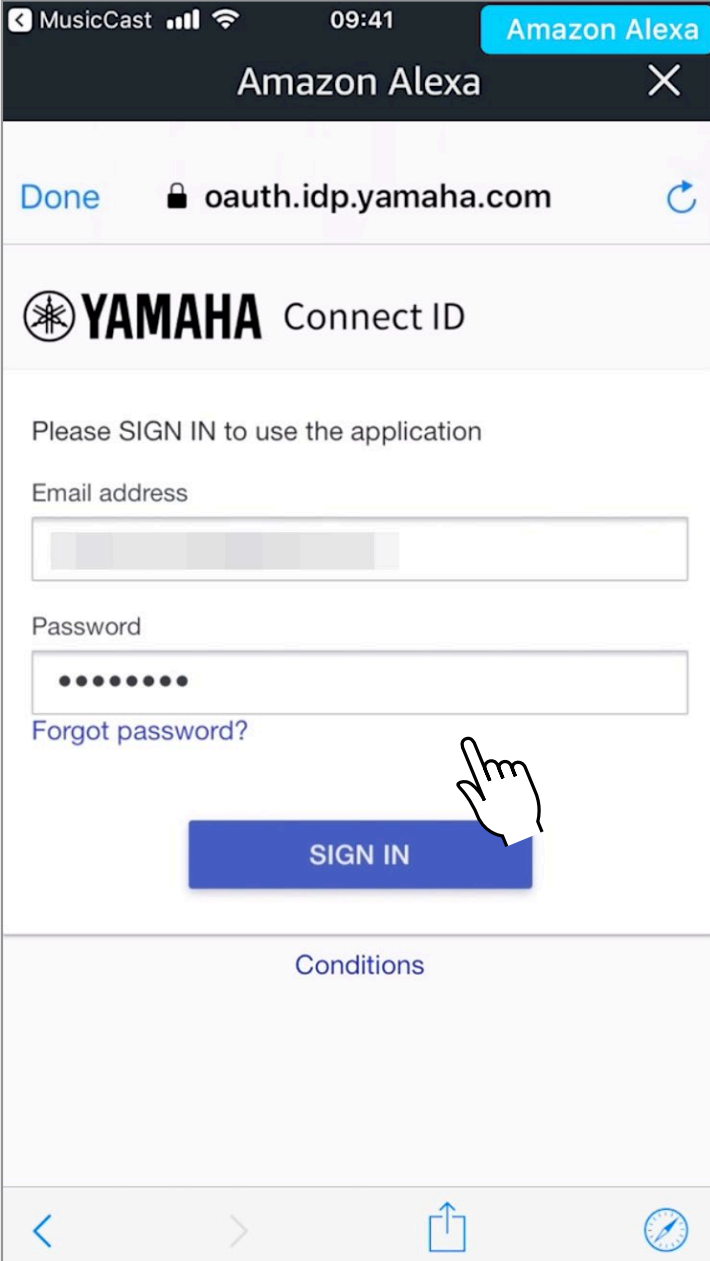

The screenshot shows the Yamaha Connect ID sign-in screen within the Amazon Alexa app. The status bar at the top indicates 'MusicCast', signal strength, Wi-Fi, and the time '09:41'. The app's header bar is blue with 'Amazon Alexa' and a close button. Below the header, the URL 'oauth.idp.yamaha.com' is displayed. The main content area features the Yamaha logo and 'Connect ID' text. A message states 'Please SIGN IN to use the application'. There are two input fields: 'Email address' and 'Password'. The 'Email address' field contains a blurred email address. The 'Password' field contains a series of dots. A link for 'Forgot password?' is located below the password field. A blue 'SIGN IN' button is positioned below the password field, with a hand icon pointing to it. At the bottom of the sign-in section, there is a link for 'Conditions'. The bottom of the screen shows the standard iOS navigation bar with back, forward, share, and search icons.


Step 23

Amazon Alexa App


Tap “ACCEPT.”

English (USA)

MusicCast Smart Home skill

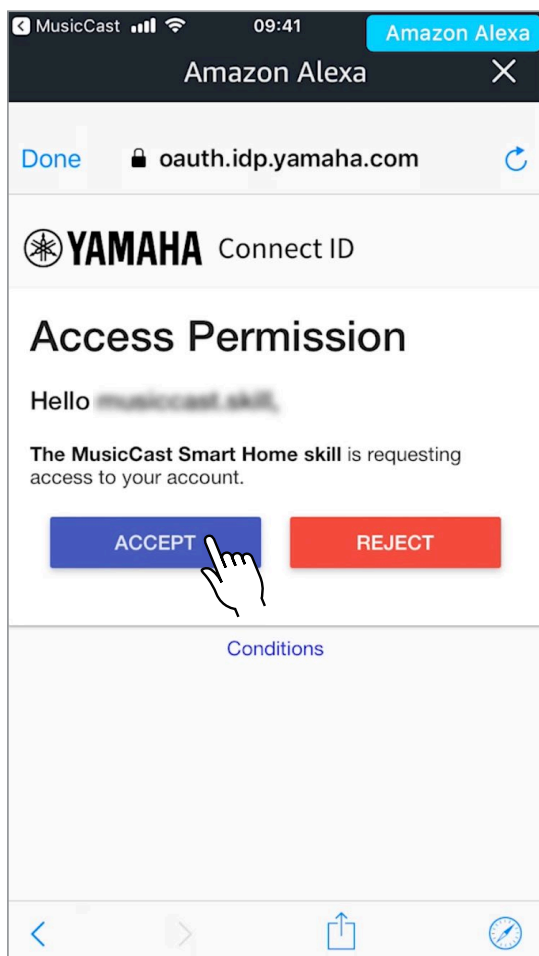

MusicCast skill

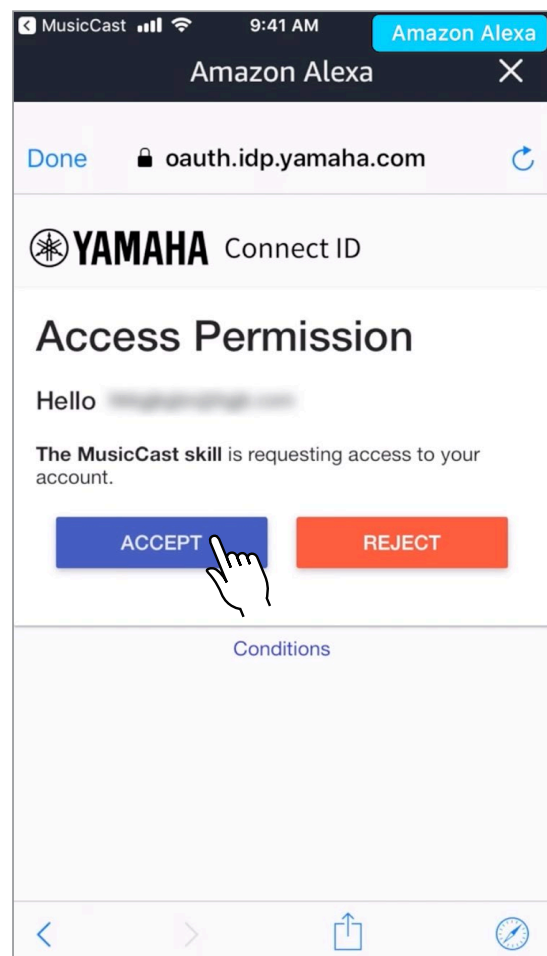

Step 24

Amazon Alexa App

MusicCast Smart Home skill


Close the window and follow the Alexa app instructions to complete setup.

MusicCast skill

Setup is complete

English (USA)

MusicCast Smart Home skill

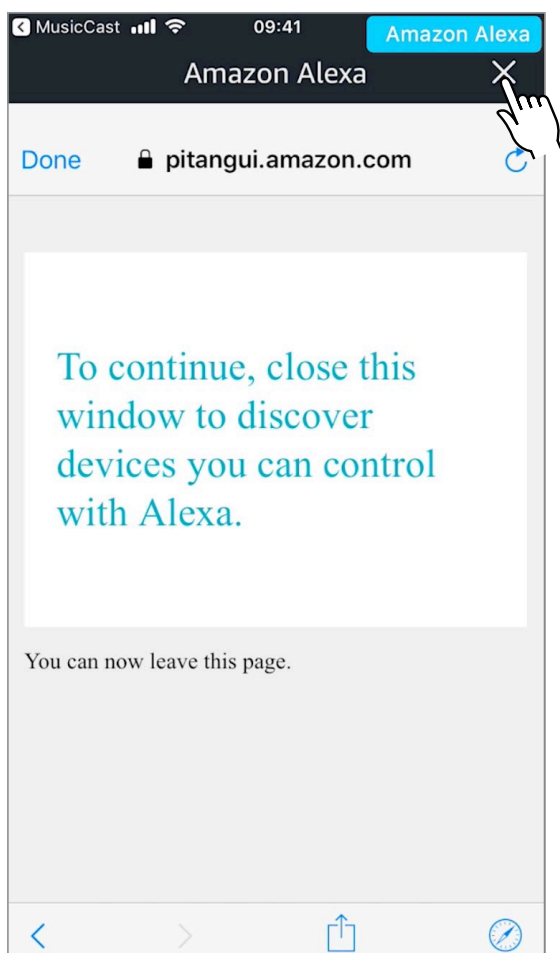

MusicCast skill

