

RX-V367/HTR-3063 How to program remote control codes For TV Control Key Operations

TRANSMIT LIGHT



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

1 Use the remote codes listed in this document to find your TV manufacturer code.

2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



 
3 Press the TV Power button on the remote.



4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

List of remote control codes

TV

A.R. Systems	0320	Baird	0282	Condor	0161, 0277, 0320, 0323, 0342, 0350, 0351	Elite	0320, 0340, 0350
Acme	0342	Bang & Olufsen	0180, 0339			Elman	0341
Acura	0323, 0343	Basic Line	0282, 0320, 0323, 0340, 0343, 0350	Contec	0179, 0277, 0323, 0342, 0343, 0344	Elta	0277, 0323, 0343
ADC	0337	Bastide	0282, 0342	Contec/Cony	0012, 0058	Emerson	0000, 0007, 0008, 0012, 0013, 0019, 0026, 0031, 0037, 0051, 0058, 0059, 0161, 0179, 0320, 0339
Admiral	0054, 0178, 0336, 0337, 0339, 0346, 0347	Baur	0320, 0349	Continental Edison	0345		
Advent	0158	Bazin	0282	Cosmel	0323, 0343	Emprex	0154
Adventura	0057	Beko	0161, 0269, 0294, 0302, 0311, 0320, 0328, 0351	Craig	0058, 0179	Envision	0008, 0026, 0050
Adyson	0277, 0282, 0342	Belcor	0008	Crosley	0010, 0037, 0171, 0339	Epson	0155, 0206, 0359
Agashi	0277, 0282	Bell & Howell	0019, 0054	Crown	0058, 0161, 0171, 0179, 0320, 0323, 0343, 0349, 0350, 0351	Erres	0320, 0349, 0350
Agazi	0337	Benq	0097, 0242, 0361			ESA	0051
Aiko	0277, 0282, 0320, 0323, 0342, 0343	Beon	0320, 0349, 0350	CS Electronics	0277, 0340, 0342	ESC	0282
Aim	0320	Best	0161	CTC Clatronic	0341	Etron	0343
Aiwa	0078, 0379	Bestar	0161, 0320, 0350	CTX	0205	Eurofeel	0282
Akai	0050, 0055, 0109, 0159, 0181, 0277, 0282, 0320, 0323, 0340, 0343, 0349, 0350	Binatone	0282, 0342	Curtis Mathes	0007, 0008, 0010, 0019, 0021, 0026, 0049, 0050, 0178	Euro-Feel	0337
Akiba	0320, 0340	Blue Sky	0320, 0340			Euroline	0349
Akura	0320, 0323, 0337, 0340	Blue Star	0348	CXC	0058, 0179	Euroman	0161, 0277, 0282
Alaron	0277	Boots	0282, 0342	Cybertron	0340	Euromann	0320, 0337, 0342, 0350
Alba	0161, 0277, 0320, 0323, 0340, 0342, 0343, 0344, 0349, 0351, 0372, 0382	BPL	0320, 0348	Cytron	0152		
Albatron	0140	Bradford	0058, 0179	Daewoo	0007, 0008, 0026, 0037, 0053, 0167, 0266, 0275, 0277, 0282, 0315, 0320, 0323, 0331, 0335, 0342, 0343, 0350, 0381, 0465	Expert	0321
Alcyon	0171	Brandt	0322, 0345			Exquisit	0320
Alleron	0059	Brilliant	0182	Dainichi	0277, 0340	Fenner	0323, 0343
Allorgan	0282	Brinkmann	0320	Dansai	0277, 0282, 0320, 0337, 0349, 0350	Ferguson	0322, 0345, 0349
Allstar	0320, 0350	Brionvega	0320, 0339, 0349, 0350	Dantax	0161, 0349	Fidelity	0277, 0320, 0342, 0346
America Action	0179	Britannia	0277, 0282, 0342	Dawa	0320	Filsai	0282
AMOi	0276	Brockwood	0008	Daytron	0007, 0008, 0026, 0323, 0343	Finlandia	0346
Amplivision	0161, 0282, 0321, 0342	Broksonic	0109, 0179	De Graaf	0346	Finlux	0171, 0282, 0320, 0339, 0341, 0342, 0349, 0350
Amstrad	0320, 0323, 0337, 0340, 0343	Bruns	0339	Decca	0282, 0320, 0342, 0349, 0350	FIRST LINE	0342, 0343, 0350
Amtron	0058	BTC	0340	Dell	0145, 0245	Firstline	0277, 0282, 0320, 0323
Anam	0179, 0343	Bush	0269, 0282, 0283, 0304, 0320, 0323, 0328, 0332, 0340, 0343, 0344, 0346, 0348, 0349, 0350, 0372, 0382, 0463, 0470, 0472	Denver	0358, 0362	Fisher	0019, 0161, 0282, 0339, 0342, 0344, 0351
Anam National	0052, 0058	Capsonic	0337	Desmet	0320, 0349, 0350	Flint	0320, 0350
Anglo	0323, 0343	Carena	0320	Diamant	0320	Formenti	0171, 0277, 0336, 0339, 0342, 0349
Anitech	0171, 0320, 0323, 0337, 0343	Carnivale	0050	Diamond	0277	Formenti/Phoenix	0277
Ansonic	0161, 0168, 0320, 0323, 0341, 0343	Carrefour	0344	DiamondVision	0135, 0143	Fortress	0336, 0339
AOC	0008, 0026, 0050, 0053	Carver	0010	Dimensia	0049	Fraba	0161, 0320
Apex	0039, 0111, 0217	Cascade	0320, 0323, 0343	Disney	0219	Friac	0161
Arcam	0277, 0282	Casio	0367	Dixi	0282, 0320, 0323, 0343, 0349, 0350	Frontech	0282, 0323, 0337, 0343, 0346, 0347
Arcam Delta	0342	Cathay	0320, 0349, 0350	Dream Vision	0461, 0498	Fujitsu	0059, 0069, 0074, 0075, 0282
Aristona	0320, 0349, 0350	CCE	0183, 0282	DTS	0323, 0343	Fujitsu General	0282
Arthur Martin	0321	Celebrity	0055, 0107	Dual	0282, 0320, 0342	Fujitsu Siemens	0504, 0505, 0507, 0510, 0511
ASA	0339, 0347	Celera	0039	Dual-Tec	0342, 0343	Funai	0051, 0058, 0059, 0112, 0113, 0115, 0118, 0119, 0179, 0337
Asberg	0171, 0320, 0350	Centurion	0320, 0349, 0350	Dumont	0008, 0030, 0062, 0282, 0339, 0341, 0342		
Astra	0343	Century	0339	Durabrand	0031, 0051, 0179, 0215	Futuretech	0058, 0179
Asuka	0277, 0282, 0337, 0340, 0342	CGE	0161, 0171	Dux	0349	Galaxi	0320, 0351
Atlantic	0277, 0320, 0342, 0349, 0350	Changhong	0039	Dwin	0178	Galaxis	0161, 0320
Atori	0323, 0343	Chimei	0273	Dynatron	0320, 0349, 0350	Gateway	0176, 0177, 0241
Auchan	0321	Cimline	0323, 0343	Dynex	0228, 0231	GBC	0323, 0343, 0344
Audiosonic	0161, 0282, 0320, 0340, 0342, 0343, 0349, 0350	Citizen	0007, 0008, 0026, 0050, 0058	Elbe	0161, 0168, 0282, 0320	GE	0008, 0021, 0023, 0026, 0027, 0031, 0034, 0049, 0052, 0056, 0209
AudioTon	0161, 0282, 0342	City	0323, 0343			Geant Casino	0321
Audiovox	0058, 0179, 0194	Clarion	0179	Electro TECH	0343	GEC	0282, 0320, 0342, 0347, 0349, 0350
Ausind	0171	Clarivox	0349	Electroband	0055, 0107	Geloso	0323, 0343, 0346
Autovox	0171, 0282, 0337, 0339, 0342	Clatronic	0161, 0171, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350, 0351	Electrograph	0176	General Technic	0323, 0343
Aventura	0051			Electrohome	0008, 0026, 0052, 0055	Genexxa	0320, 0340, 0347, 0350
Awa	0277, 0282	CMS	0277	Element	0230		
Axon	0156	CMS Hightec	0282	Elin	0277, 0320, 0323, 0342, 0349, 0350	GFM	0128, 0227
		Coby	0197			Giant	0282
		Colortyme	0008, 0026				
		Commercial Solutions	0021				
		Concerto	0008, 0026				
		Concorde	0323, 0343				

Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe	0161, 0168, 0265, 0320, 0330, 0352	Naonis	0346
GoldHand	0277	Initial	0153	Loewe Opta	0339, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Logik	0054	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Luma	0320, 0323, 0346, 0349	NEI	0320, 0349, 0350
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lumatron	0282, 0320, 0346, 0349, 0350	Net-TV	0176
Gorenje	0161, 0351	Inteq	0030	Lux May	0350	Neufunk	0320, 0323
GPM	0340	Interactive	0161	Luxman	0008, 0026	New Tech	0343, 0350
GPX	0129	Interbuy	0323, 0343	Luxor	0282, 0342, 0346	New World	0340
Gradiente	0240	Interfunk	0161, 0320, 0339, 0347, 0349, 0350	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	NewTech	0282, 0320, 0323
Graetz	0347	International	0277	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Nicamagic	0277, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Grandin	0340, 0343, 0348, 0349	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnadyne	0339, 0341, 0349	Nikko	0026, 0031, 0050
Gronic	0282	ITC	0282, 0342	Magnafon	0171, 0277, 0341, 0342	Noblisko	0171, 0277, 0341, 0342
Grundig	0160, 0161, 0171, 0310, 0320	ITS	0277, 0320, 0340, 0348, 0350	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nokia	0347
Grumpy	0058, 0059, 0179	ITT	0343, 0347	Magnum	0337, 0343	Norcent	0201
Haier	0157, 0233	ITV	0320, 0343, 0349	Majestic	0054	Nordic	0282
Halifax	0277, 0282, 0337, 0342	Janeil	0057	Mandor	0337	Nordmende	0339, 0345, 0347, 0350
Hallmark	0008, 0026, 0031	JBL	0010	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordvision	0349
Hampton	0277, 0282, 0342	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Novatronic	0320
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Jensen	0008, 0026	Marelli	0339	Oceanic	0321, 0347
Hantarex	0320, 0323, 0343	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Mark	0277, 0282, 0320, 0323, 0349, 0350	Okano	0161, 0320, 0351
Hantor	0320	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Masuda	0282	Olevia	0102, 0199, 0200, 0207, 0222
Harman/Kardon	0010	Kamosonic	0342	Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	ONCEAS	0342
Harvard	0058, 0179	Kamp	0277, 0342	Matsushita	0017	Onwa	0058, 0179
Harwood	0320, 0323	Kapsch	0347	Maxent	0147, 0176	Opera	0320
Havermy	0178	Karcher	0161, 0320, 0342, 0343, 0349	Mediator	0320, 0349, 0350	Oppo	0130
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	Medion	0320, 0337, 0343	Optimus	0017, 0019
Hema	0282, 0323	KEC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Megapower	0140	Optoma	0144
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	Megatron	0026, 0031	Optonica	0178
Higashi	0277	Kenwood	0008, 0026, 0050	MElectronic	0277, 0282, 0320, 0323	Orbit	0320, 0350
HiLine	0320	KIC	0282	Melvox	0321	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	Kingsley	0277, 0342	Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Online	0320
Hisawa	0321, 0340, 0348	KLH	0039	Memphis	0323, 0343	Osaki	0282, 0320, 0337, 0340, 0342
Hisense	0247	Kloss Novabeam	0057, 0058	Mercury	0320, 0323	Oso	0340
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kneissel	0161, 0168, 0320	Metz	0339	Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Hornymphon	0320, 0350	Kolster	0320, 0350	MGA	0008, 0026, 0031, 0050, 0053	Pael	0277, 0342
Hoshai	0340	Konka	0340	Micromaxx	0337, 0343	Palladium	0161, 0282, 0320, 0342, 0351
Huanyu	0277, 0342	Korpel	0320, 0349, 0350	Microrstar	0337, 0343	Palsonic	0282
Hygashi	0277, 0282, 0342	Korting	0161, 0339	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Panama	0277, 0282, 0320, 0323, 0337, 0342, 0343
Hyper	0277, 0282, 0323, 0342, 0343	Kosmos	0320	Minerva	0171	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	Koyoda	0343	Minoka	0320, 0350	Panavision	0320
Hyundai	0141	KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Mintek	0153	Pathe Cinema	0161, 0168, 0277, 0321, 0342
Iberia	0320	Kyoto	0277, 0282	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376	Pausa	0323, 0343
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Lasat	0161	Mivar	0161, 0168, 0171, 0277, 0282, 0342	Penney	0021, 0023, 0031, 0050, 0111
ICeS	0277	Lenco	0323, 0343	Monivision	0140	Perdio	0277, 0320
Ilo	0148, 0153	Lenoir	0323, 0342, 0343	Montgomery Ward	0054	Perfekt	0320
IMA	0058	Leyco	0320, 0337, 0349, 0350	Motion	0171	Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
Imperial	0161, 0171, 0320, 0347, 0350, 0351	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Motorola	0052, 0178	Philharmonic	0282, 0342
Indiana	0320, 0349, 0350	LG/GoldStar	0164	MTC	0008, 0026, 0050, 0053, 0161, 0277	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226, 0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339,
Infinity	0010	Liesenk	0349	Multi System	0349		
InFocus	0250, 0327, 0363, 0479, 0508	Liesenkotter	0320	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349		
Ingelen	0347	Life	0337, 0343	Murphy	0277, 0342		
		Lifetec	0320, 0323, 0337, 0343	NAD	0026, 0031, 0111		
		Lloyds	0323				

	0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460	Saisho	0282, 0323, 0337, 0342, 0343	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
Philips Magnavox	0011, 0032, 0033	Salora	0346, 0347			Thorn	0320, 0349
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Sambers	0171, 0341			TMK	0008, 0026, 0031
Phonola	0277, 0320, 0339, 0349, 0350	Sampo	0007, 0008, 0026, 0050, 0176			TNCi	0030
Pilot	0007, 0008, 0050	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Sound & Vision	0340, 0341	Tokai	0282, 0320, 0350
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458			Soundesign	0008, 0026, 0031, 0058, 0059, 0179	Tokyo	0277, 0342
Plantron	0320, 0323, 0337, 0350			Squareview	0051	Tomashi	0348
Playsonic	0282			SSS	0008, 0058, 0179	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Polaroid	0039, 0142, 0202, 0234			Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Totevision	0007
Poppy	0323, 0343	Sandra	0277, 0282, 0342	Starlite	0058, 0179, 0320, 0323, 0349	Towada	0282, 0347
Portland	0007, 0008, 0026, 0053	Sansui	0043, 0109, 0320, 0350	Stenway	0348	Trakton	0282
Prandoni-Prince	0171, 0346			Stern	0346, 0347	Trans Continens	0282, 0320
Precision	0282, 0342	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Stylandia	0282	Transtec	0277
Prima	0157, 0243, 0323, 0343, 0347			Sunkai	0343	Trident	0282
Princeton	0140			Sunstar	0320, 0323	Triumph	0320
Prism	0023, 0056			Sunwood	0320, 0323, 0343, 0350	Uher	0161, 0171, 0320, 0347, 0350
Profex	0323, 0343			Superla	0277, 0282, 0342	Ultravox	0277, 0320, 0339, 0341, 0342
Profi-Tronic	0320, 0350			Superscan	0013, 0178	Unic Line	0320
Proline	0320, 0350	SBR	0320, 0349	SuperTech	0277, 0320, 0323	United	0349
Proscan	0021, 0027, 0049	Sceptre	0235, 0244	Supra	0323, 0343	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Schaub Lorenz	0347	Supre-Macy	0057	Univox	0320
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	Susumu	0340	Vector Research	0050
Proton	0008, 0012, 0026, 0031	Scotch	0026, 0031	Sutron	0323, 0343	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Protron	0196	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	SVA	0151	Vexa	0320, 0323, 0343, 0349
PROVIEW	0096, 0246			Sydney	0277, 0282, 0342	Victor	0015, 0344, 0350
Provision	0320, 0349	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	VIDEOLOGIC	0277
Pulsar	0008, 0030, 0062			Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Videologique	0277, 0282, 0340, 0342
Pye	0256, 0320, 0349, 0350, 0378			Syntax	0199	VideoSystem	0320, 0350
Pymi	0323, 0343	SEG	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Syntax-Brilliant	0199	Videotechnic	0277, 0282
Quandra Vision	0321			Sysline	0349	Vidikron	0010
Quasar	0017, 0023, 0052, 0056	SEI	0320	Sytong	0277	Vidtech	0008, 0026, 0031, 0053
Quelle	0282, 0320, 0337, 0342, 0349, 0350	SEI-Sinudyne	0339, 0341, 0347	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Viewsonic	0176, 0203, 0232, 0364
Questa	0344	Seleco	0344, 0346, 0347	Tashiko	0277, 0282, 0342, 0344, 0346	Viking	0057
Radialva	0320	Sencora	0323, 0343	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Viore	0148
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Sentra	0323	TCM	0337, 0343	Visiola	0277, 0342
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Serino	0277	Teac	0282, 0320	Vision	0282, 0320, 0350
Radiola	0282, 0320, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Tec	0282, 0323, 0342, 0343	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Radiomarelli	0320, 0339	Sheng Chia	0178	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
Radiotone	0161, 0320, 0323, 0350	Shogun	0008	TechniSat	0274, 0496, 0497, 0499	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Rank	0344	Siarem	0320, 0339, 0341	Techwood	0008, 0023, 0026, 0056	Waltham	0282, 0320, 0342
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Sierra	0320, 0350	TEDELEX	0282	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
Realistic	0019, 0031, 0050, 0179	Siesta	0161	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Watson	0320, 0349, 0350
Recor	0320	Signature	0054	Teleavia	0345	Watt Radio	0277, 0341, 0342
Redstar	0320	Silver	0277	Telecor	0282, 0320	Waycon	0111
Reflex	0320	Singer	0321, 0339, 0341	Telefunken	0320, 0322, 0345, 0350	Wega	0320, 0339, 0344
Revovox	0161, 0320, 0349, 0350	Sinudyne	0320, 0339, 0341, 0349	Telegazi	0320	Wegavox	0323
Rex	0337, 0346, 0347	Skantic	0347	Telemeister	0320	Weltblick	0282, 0320, 0349, 0350
RFT	0161, 0168, 0339	Solavox	0347	Telesonic	0320	Westinghouse	0107, 0216, 0220
Rhapsody	0277	Sonitron	0161, 0282	Telestar	0320	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
R-Line	0320, 0349, 0350	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Teletech	0320, 0323, 0343, 0349	Wincom	0101, 0106
Roadstar	0343	Sonolor	0321, 0347	Televideo	0277	Xrypton	0320
Robotron	0339	Sontec	0161, 0320, 0349, 0350	Televideo	0277	Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Rowa	0277, 0282			Televideo	0321	Yamishi	0282, 0320
Royal Lux	0161			Tensai	0282, 0320, 0323, 0340, 0343, 0350	Yokan	0320
RTF	0339			Tesmet	0350		
Runco	0030, 0050, 0062			Tevion	0337, 0343		
Saba	0298, 0322, 0339, 0345, 0347			Texet	0277, 0282, 0323, 0342		

Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.