

Updating the firmware

When a new firmware for the unit is released, a message to update your current firmware will be shown on the front panel display (when the unit is connected to the Internet only). In this page, an updating method via a network using the option setting is shown.

1 Press .

- The option menu is shown on the front panel display.

2 Select [Firmware Update] with ▲/▼, and press .

3 Select [Update] with ▲/▼ and press .

4 Select [Network] with ▲/▼, and press .

- Press **ENTER** again, then update starts.




S1-4:55%...

- When update finishes, messages are shown in the following order: "UPDATE SUCCESS", "PLEASE ...", and "POWER OFF!"

5 Press on the front panel.

- Update is applied.

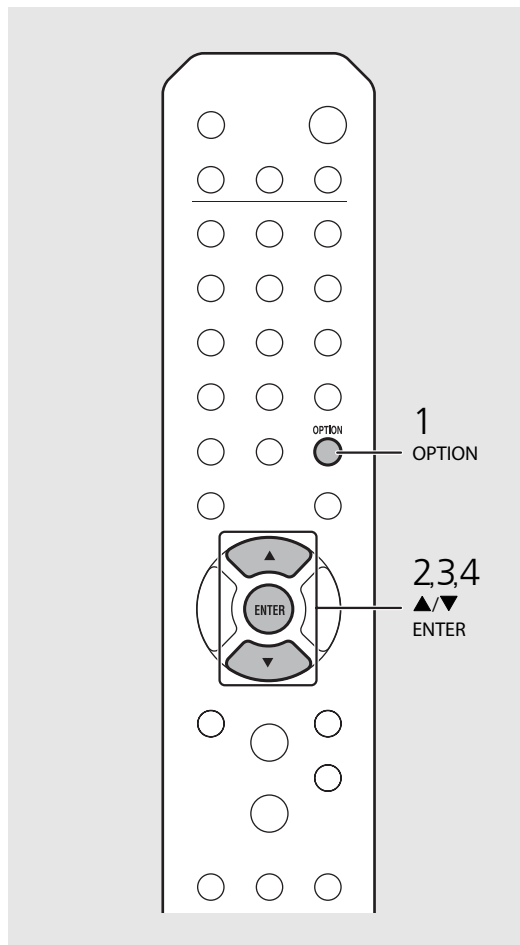

- Do not operate the unit or disconnect the power cable and network cables while updating.



- When Internet speed is not fast enough or the unit is connected to the wireless network via a wireless network adapter, network update may not be possible depending on the condition of the wireless connection. In this case, try again or update the firmware using a USB memory device. The firmware can be downloaded from the Yamaha Website.

To update the firmware using a USB memory device

You can download the firmware to the USB memory device, and connect that USB memory device to the USB jack on the unit.

- Select [USB] in step 4 to start the update.