

正面:

**1. Package contents**

- YI 180 VR Camera
- USB Type-C Cable
- Storage Bag
- Use Manual
- Battery
- Mini Tripod
- Warning Card

**2. Getting to know the camera**

- LED Screen
- Shutter
- Microphone
- Screen Light
- Power/Back/OK Button
- Battery Cover
- Shutter Stick
- HDMI Port
- Wide View/Tripod Mount
- MicroSD Card Slot
- Speaker
- USB Type-C Port

**3. Insert/Remove MicroSD Card (Sold Separately)**

Open the slide battery cover.

**1) To insert microSD card:**  
Slide open the cover and push the battery to the front of the battery. The card will slide into place when fully inserted.

**2) To remove microSD card:**  
Press on the right edge of the card and slightly pull the battery. The card will pop up to be removed.

**4. Insert/Remove Battery**

**1) To insert the battery:**

- Open the slide battery cover.
- Insert the battery for the battery slot, following the direction of the arrow.
- Close the battery cover. Make sure it is fully closed.

**2) To remove the battery:**

- Open the slide battery cover.
- Use the card to push the battery from the slot.

**5. Battery Charging**

Connect the camera to a power source via the USB Type-C cable.

- The red status light on the OK button indicates the battery is charging.
- The red status light will turn OFF when the battery is fully charged.

**6. How to Use the Camera**

**1) Handling the Back OK Button**

**By power on:**  
Press and hold the Power/Back/OK Button with the screen on to access the menu.

**By power off:**  
Press and hold the Power/Back/OK Button with the screen on to access the menu.

**2) Camera Operation**

Press the Back/OK Button to adjust the menu. Select the camera mode and settings. Press the Power/Back/OK Button to confirm the selection or confirm.

背面:

**3) General the camera to the APP**

YI 180 VR can be used via the YI 180 VR Camera. The camera can be used via the YI 180 VR Camera. You can also search for it on the App Store or Google Play Store.

Open the YI 180 VR app, click "Scan QR code" button on the bottom and scan the camera to connect to the camera.

After connecting to the camera, you can use the app to control camera shooting, download and playback of videos, etc. in advance.

**4) Firmware Update**

To ensure your camera is working optimally, please update the firmware of the camera in time.

To update from the app, click the camera icon to connect to a power source and then select the camera to be updated.

**5) View Settings**

The camera has a wide field of view (FOV) of 170° and a 2.0x optical zoom. You can adjust the FOV and zoom in the app. Other functions are supported during the shooting and can be adjusted in the app.

**6) View Release, Photos and Share**

You can use YI 180 VR App to view and share videos/photos. The YI 180 VR Camera supports playback operation to view or share.

**7. Advanced Features**

**Live Streaming**

Use YI 180 VR App to start live streaming. Open the App, select the Live Streaming icon to start live streaming. Check the App, select the Live Streaming icon to start live streaming. Check the App, select the Live Streaming icon to start live streaming.

**8. Troubleshooting**

**1) Camera Charging**

When charging is slow, please check if a high temperature (such as 50°C) or the camera is not fully charged. Check the power source and the connection of the cable. Check the power source and the connection of the cable.

**2) View Playback**

When playback is slow, please check if the camera is not fully charged. Check the power source and the connection of the cable. Check the power source and the connection of the cable.

**9. Key Accessories (Selfie Stick and Bluetooth Remote Need Sold Separately)**

**10. Customer support**

**IMPORTANT SAFETY INSTRUCTIONS**

1. Read the manual before using the camera.

2. Do not use the camera in wet or rainy conditions.

3. Do not use the camera in high temperatures.

4. Do not use the camera in low temperatures.

5. Do not use the camera in high altitudes.

6. Do not use the camera in low altitudes.

7. Do not use the camera in high altitudes.

8. Do not use the camera in low altitudes.

9. Do not use the camera in high altitudes.

10. Do not use the camera in low altitudes.

折叠图:



印刷公差 ≤ 0.5mm  
SCALE 1:1

- 切刀
- 压线
- 齿刀
- 开槽
- 半穿
- 粘合

审核人员

- 设计主管 ▶
- 产品经理 ▶
- 质量工程 ▶
- 认证工程 ▶
- 软件测试 ▶
- 部门总监 ▶

通知人员

- 项目经理 ▶
- 采购经理 ▶

项目号 ▶ V10	项目名称 ▶ 小蚁VR全景相机	印刷颜色 ▶ PANTONE 1925C+ K PANTONE Cool Gray 11C	物料材质 ▶ 105g 无光铜	图号 ▶ Z18A6099AAAP
设计于 ▶ 王伟	物料名称 ▶ 说明书(中文版)	成品尺寸 ▶ 79 × 79mm	特种工艺 ▶ 风琴折	料号 ▶ 6099Z18A00AR1A