 
 



## Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
  - a) The battery level icon displays  (An empty battery)
  - b) The device powers off automatically when restarted.
  - c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.

- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:

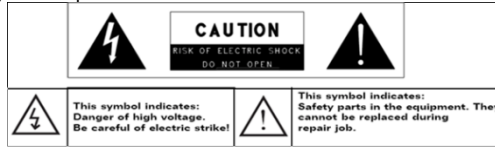

- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
-  Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland.

## Listening Cautions

- This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels. (At full power, the prolonged listening of the walkman can damage the ear of the use)
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.  
To establish a safe volume level:
  - a. Start your volume control at a low setting.
  - b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

*This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.*

## Table of Content

Safety Precautions.....	1
Listening Cautions .....	3
Feature Summary .....	5
Accessories .....	5
Buttons & Ports .....	5
Basic Connections .....	6
Charging the Battery .....	6
Turning On/ Off the Tablet .....	6
Installing the Memory Card (MicroSD card) .....	6
Connecting to PC for transferring files .....	6
Basic Operation .....	7
Home Screen.....	7
The Extended Home Screen .....	7
Unlock the Screen .....	7
Customizing Home Screen Items.....	8
General Touch Actions.....	8
Using the Virtual Keyboard.....	9
Accessing Internet.....	9
Managing 3rd Party Applications.....	9
Close Recent Applications.....	10
Major Applications.....	11
Launch Web Browser .....	11
Playing Music .....	11
Playing Videos.....	11
Viewing Photos.....	12
Using the Webcam .....	13
Sending/Receiving E-mails .....	14
Frequently Asked Questions.....	15
Specifications.....	18
FCC Statement.....	19

 
## Feature Summary

- Wi-Fi network
- Built-in G-sensor
- Media Entertainment
- 7.85" Touch Screen
- 3rd-party Apps
- Front & Rear Webcam

## Accessories

- Main Unit
- USB cable
- AC Adaptor

## Buttons & Ports

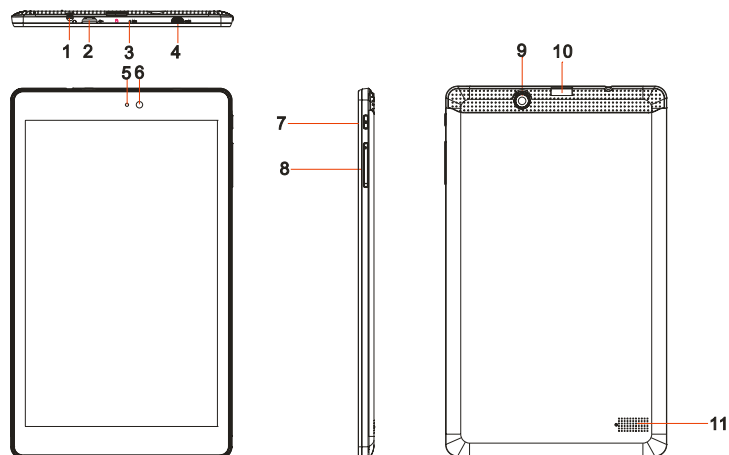

1. **Earphone socket** – connects to stereo earphones.
2. **Micro USB port**– connects to PC or power adaptor.
3. **Built-in microphone**
4. **HDMI interface**
5. **Charge indicator**
6. **Front webcam**
7. **Power** –Briefly press to lock or unlock the screen; press and hold to turn on or off the unit or reset it.
8. **VOL+/- button** – Increase /Decrease the volume.
9. **Rear webcam**
10. **MicroSD Card Slot**
11. **Built-in speakers**

## Basic Connections

### Charging the Battery

*Note: When using the tablet for the first time, or after it has been idle for a long time, user should charge the battery for over half an hour before turning it on, to guarantee the stability of its system. The device has a built-in rechargeable battery. Charge the device when the battery level is low.*

To charge the battery, connect the device to a power adaptor via the USB port. It takes about 4 hours to fully charge the battery.

The charge indicator lights in red during charging and in orange when charge is full.

**Note:**

- a. You are prompted to charge the battery when the device warns that the battery is lower than 15%!
- b. In the event that the device shuts down automatically because of battery exhaustion, charge the battery for at least 5 minutes before you can turn on the device.
- c. Since charging by USB connection with computer is extremely slow, you are NOT suggested to charge the battery with computer.

### Turning On/ Off the Tablet

To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen. It may take about one minutes to start up the system.



To turn off the device, press and hold the Power button until you see the option "Power Off", tap on "Power Off" and then tap on "OK".

**Tip:** The device may fall asleep with the screen display locked when there is no touch action for a while. You can briefly press the Power button to wake it up.

### Installing the Memory Card (MicroSD card)

This device can read files directly from a memory card (Micro SD card).

Also, you can install a card into the slot on the top edge of the device for the purpose of reading data from the memory card.

To install a memory card, find the card slot on the top edge of device and then insert the card into the slot in the correct orientation.



MicroSD Card

To access the files stored in the memory card, enter the FileManager mode and select the "Home> SD card" directory.

### Connecting to PC for transferring files

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.

- (2) Tap "Turn on USB storage" to connect the device to computer.
- (3) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the memory card inserted into the device. Now you can copy files from or to these disk drives just as you do on your hard drive.
- (4) As you complete file transfer, choose "Turn off USB storage" to disconnect the device.
- (5) Remove the device from the computer safely.

Note:

- a. As you connect the tablet to the PC, you need to install the Windows Media Player (the latest version) and the USB drive first.
- b. There is no audio prompt for USB connection.
- c. If the device is power-off or in sleep while you connect it to PC, there will be no response of connection appearing on your PC. You have to turn it on or wake it up to continue.

## Basic Operation

### Home Screen




- a. Battery level
- b. Time
- c. Google Search bar
- d. Application tab
- e. Application kits
- f. Return button
- g. Home button
- h. Recent opened apps

 
### The Extended Home Screen

The Home Screen consists five separate screens for positioning the shortcuts, widgets etc.. Slide your finger left or right on the screen to go to the extended screens.




### Unlock the Screen


The screen will be locked after the device is idle for a few seconds. You need to unlock the screen by dragging the lock icon  rightwards.



## Customizing Home Screen Items

- To add a Home Screen item (shortcut, widget etc.), you can tap the application icon  to display all applications and widgets, then hold your tap on an item to place it on the home page.

  
*Note: If current page of Home Screen has no enough room for a shortcut or widget, you will be prompted that there is no more room.*

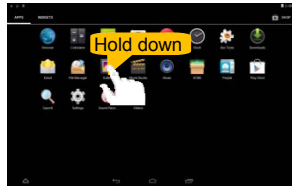




 

- To move a Home Screen item, hold your finger onto it to highlight it, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it to highlight it, drag it to the recycle bin symbol "X" and then release your finger.

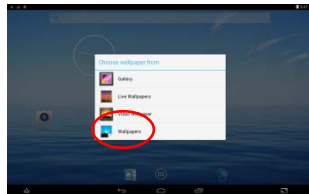

- To change the wallpaper, hold your tap on the Home screen until a menu appear. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.




## General Touch Actions

 - Tap  button to get back to previous screen page; tap  button to go to the Home screen; tap  button to bring up the context menu options; and tap the  button to check the recent opened apps.
- When watching a video or listening to music, you can tap on the progress bar to play any designated section of the file. You can drag the cursor of the progress bar to change the playback progress. 



- In some apps, you can slide your finger on the screen up and down to scroll the file list; and sometimes you may hold your finger on an item to display options (if available).

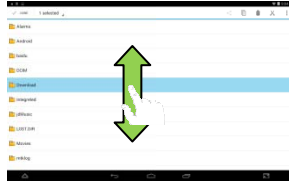

### Using the Virtual Keyboard

Whenever you need to input something, tap on any text input box to open the virtual keyboard, with which you can enter a website address or any text required.


**Caps Lock:** quickly tap twice to input all letters in capital; briefly tap once to input the first letter in capital.



### Accessing Internet

You can access to the Internet easily with Wi-Fi networks.

#### 1) Make WI-FI Connection

- Tap the Setting icon  on the Home Screen to open the settings menu.
- Select "WIFI" and slide the toggle switch to "ON" to turn on WIFI.
- Tap "Wi-Fi" to select a router, the device will scan automatically for available WiFi networks and display them in the right panel. The list of available networks shows all the wireless networks in range of your device.
- Choose a network from the list and then tap "Connect" to connect. Some network may be secured with password, enter the password before connecting. If the connection is successful, the message Connected to...(WiFi Network Name) will appear under the WIFI Setting.



### Managing 3rd Party Applications

Your device provides support to many useful third-party applications. You can

purchase the applications to add more functions to your device. They are available online at the Internet or directly on your product.

 
### **Install Applications**

You can install applications manually by the following methods:

- (1) Download and install the installation file directly from the built-in application library. Make sure the file is in format of .apk which is supported by your Internet Tablet system.
- (2) Copy the installation file to your Internet Tablet by USB connection. Turn on the Internet Tablet, locate the installation file with the FileManager and then tap it to install.
- (3) Once the application is installed successfully, you can find it in the application page.

### **Uninstall Applications**

- (1) Tap the Settings shortcut in the Home Screen to display all system settings.
- (2) Select "Apps".
- (3) Tap on the application that you want to uninstall.
- (4) Tap on "Uninstall" to uninstall the application.

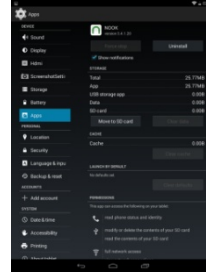


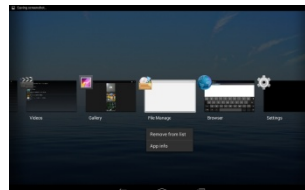 
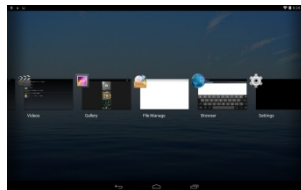 
#### **Note:**

- You cannot uninstall the pre-installed applications.
- Some of the applications developed for Android mobile might not run properly in the Device. Please consult the respective software developer for further information.

### **Close Recent Applications**

Your device can remember applications that you used recently. That's very useful when you want to go back to a window you opened recently. Also, you can close these applications to enhance system performance.


- (1) Tap  to display applications that you used recently.
- (2) Hold your tap on the application that you want to stop, and then select "Remove from list".



# Major Applications

## Launch Web Browser

You can tap icon of the Web Browser to launch it. During surfing the internet, you can tap menu button to bring up the context menu at any time.

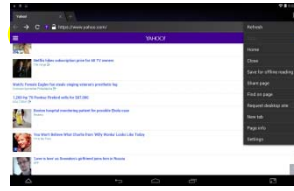 

## Playing Music

Tap the Music icon in the application page to launch the music player.

### Music Library

You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, etc.) if your music files contain these song information tags. If some of your music files do not contain information tags, they will be classified as (Unknown) in the Music Library. When new music is copied to the device, the Music Library will be updated automatically.


- You can drag your finger up and down on the file list to scroll through it.
- Tap a song to play.

### Playback Screen



- Now Playing List
- Shuffle songs
- Repeat songs
- Artist Name
- Album Name
- Title
- Previous song/Rewind
- Play/Pause
- Next song/Fast Forward
- Progress bar

### Playback menu

During playback of a music file, tap on the **MENU** icon  to bring up a context menu:

## Playing Videos

Tap the icon of Vortex player in the Apps page to launch the video player. You should see the folders when you enter the video player.

- Tap a folder to view the file thumbnails and select one to start playing.



**Note:** Some video files may not be played correctly with the device. Refer to the *Technical Specifications* at the end of the manual, and make sure the video resolution, encoding format or file type is supported.

### Viewing Photos

- (1) Photos should be listed in thumbnail. You can slide your finger on the screen left or right to browse photos.



 
- (2) Tap a photo thumbnail to view the photo in full screen.




- (3) To display the previous/next picture, slide your finger on the screen horizontally.



(4) To zoom in or out the picture, pinch your finger on the picture.

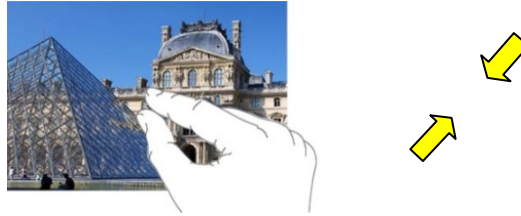

### Display Menu


When you are viewing the picture, you can tap on the screen or the Menu icon  to show a menu.



### Using the Webcam

Tap the Camera in the apps page to launch the Camera.

Viewfinder



Front/back camera


Photography mode

VCR mode


A screenshot of a camera's viewfinder. A white rectangular box highlights the area where the user can select between front and back cameras and choose a photography mode. To the right of the screenshot, there are three labels: 'Front/back camera', 'Photography mode', and 'VCR mode'. Red lines connect these labels to three empty rectangular boxes on the right side of the page.

### Managing Files and Folders

 You can explore files and folders with the FileManager application. In the Home Screen, tap the Applications shortcut to display all applications and then tap the FileManager icon to enter the file exploration mode.

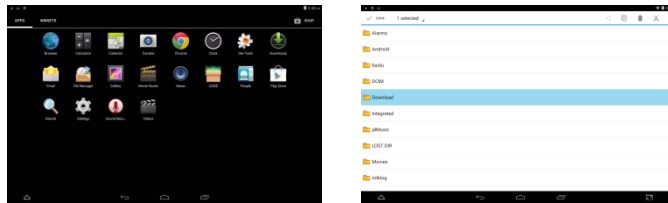

 When you select some folders or files by holding your tap on the target for a few seconds, a context menu will emerge for you.

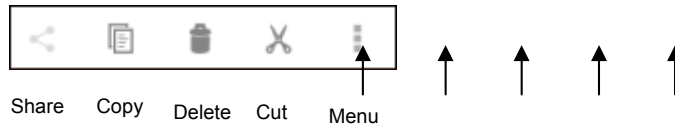

Share- Share the selected folders or files with friends by email or other tools;  
Copy- Copy the selected folders or files;  
Deleted- Delete the selected folder or files;  
Cut- Cut the selected folder or files and paste them somewhere else.  
Menu-There are two options here: Rename/Details, meaning that you can rename current folder or file, and check the relevant information about the folder or file.

### **Sending/Receiving E-mails**

In the Home or Apps Screen, tap the Email icon to launch the application.

#### **Setup Email Account**

First you need to setup an E-mail account for receiving or sending emails.

- (1) Start up the email application by tapping the **Email** application icon and you are prompted to setup an account.
- (2) Input your email address and login password.  
You can set the account as default by selecting the option "Send email from this account by default".
- (3) Tap "Manual Setup" to set the email server information if necessary.
- (4) Choose the server type from POP3, IMAP or Exchange for incoming emails. To know what type of your email server is, you can consult the service provider, network administrator or search for information in the Internet.
- (5) Input required information (server, port etc.). You can obtain the information from the service provider, network administrator or the Internet.
- (6) Choose the server type for outgoing emails, and input required server information.
- (7) Click "Next" to continue. Your tablet will check the server settings. When it prompts you that "Your account is set up, and email is on its way", your account is set up successfully.
- (8) Input your name and then tap on "Done" to finish.

**Note:** If you have more than one account, every time when you start up the email application, you enter the default email account.

#### **Manage Accounts**

You can setup more than one account and manage these accounts by checking information about the account, adding another account or deleting an account.




#### Add an Account

Follow these steps to add another account if you want.

- (1) Enter Settings menu, then go to Accounts option;
- (2) Under the accounts list, you can see the button "+ Add account" and tap to enter it.
- (3) Under the menu of "Add an account", you will see list of account types available currently, such as Corporate/ Google/ IMAP/ POP3 etc.. For ordinary email account, you can choose the type IMAP.
- (4) The system will shift to the screen of "Account setup", where you should follow the steps of "Setup Email Account" to add an account.

#### Delete an Account

To delete an account, follow these steps:

- (1) Enter Settings menu, then go to Accounts option
- (2) Tap on your email type IMAP to find your accounts that already exist.
- (3) Select the account you want to delete, it will be highlighted;
- (4) Tap the Menu icon  on the top right, and select "Remove account".
- (5) Tap the button "Remove account" to confirm.

#### View Emails

You should enter your mailbox when you start up the email application.

- In the mailbox, you can slide your finger up and down to scroll through the email list.
- Tap on an email to open it.
- Holding your tap on the email can display a menu. With the menu, you can open, reply, forward or delete the email.

## Frequently Asked Questions

### GENERAL/

**Q: Can I connect an external hard drive, USB stick or MP3 player to copy files to the device?**

A: Yes, you can. The device supports USB HOST function, which can read USB stick or MP3 player. Just connect the device to USB stick or player through OTG cable.

**Q: When I plug the device into my computer, the Windows Hardware installation window asks me to install a driver. What should I do?**

A: When you connect the device to PC for the first time or has just restored the factory default settings, you may come across such prompt. Just click on Next button to finish the automatic installation. Normally, Windows should not do this because it should see the device as an external hard drive.

**Q: The device doesn't have full internal storage as it says. For example, it says it has 16GB total space, while only 12.32GB available space is left, why?**

A: Part of the total space is used for installing applications. Pre-installed applications occupied some spaces, so that you see huge difference between total space and

available space.

**Q: My device freezes, what should I do?**

A: Try holding down the **Power** button until the device is reset and then restart the device.

**Q: I downloaded an application, but I cannot install it in my device. Why?**

A: Some applications developed for Android mobile might not run properly in the Device. Please consult the respective software developer for further information. You are NOT suggested to enable Unknown Sources under "Settings Security".

**Q: When charging, my device shows it is charging but will not power on. What's the problem?**

A: Please try charging for about 20 minutes, and then restart the device. If the problem still remains, try pressing and holding down the Power button for about 15 seconds until the device is reset.

**Q: The device cannot enter Android system after power-on, what should I do?**

A: Make sure the device has enough battery charge before power-on. If you failed to enter Android system after many tries, please try the Recovery mode to restore factory default settings (referring to the problem of forgetting password below), or contact your vendor for technical help or support.

**Q: The device is unable to be charged, what should I do?**

A: Make sure you use dedicated power adaptor provided for the device. If the problem still exists, contact the vendor.

**Q: The display is empty or blurred, what should I do?**

A: Please try to restart the device. If the problem still exists, there may be something wrong with the display physically, just contact your vendor.

**Q: The device runs slowly, how to speed it up?**

A: The more applications you have installed, the slower the device is. Please uninstall some applications that you don't use often to speed it up.

**Q: I forget my power-on password or graphic, how to start up the device?**

A: If you forget your password, you have to enter the Recovery mode to load default factory settings:

- 1) Power off the device first. Press and hold down the VOL+ button first, and in the mean time press the Power button to drive the device to Recovery mode.
- 2) Use VOL+ button to select Recovery Mode, and use the VOL- button to confirm.
- 3) Press Power button to enter the Recovery mode, where you can use VOL+ to select "Wipe data /factory reset" and VOL- button to confirm. Your device will be reset and the password will be deactivated.

**Q: The device prompts me lack of space, how to release some space?**

A: Applications are installed in internal memory of the device by default. Space gets less if you install more and more applications. Please uninstall some applications or move some to expanded space as SD card to release space.



## **CONNECTIVITY**

### **Q: How to access Internet via Wi-Fi?**

A: The device features WiFi module. Make sure there is a WiFi router nearby, and then go to "Settings" "Wireless & Network". Turn on Wi-Fi, the device should search for Wi-Fi routers around you and list them. Click the router that you want to connect, enter password if required. When connected successfully, you can surf on the Internet then. Please get closer to the Wi-Fi router as possible as you can to avoid weak signal.

### **Q: How to access Internet through 3G network?**

A: This device does not support connection of 3G Dongle, therefore you will be unable to access the Internet through 3G network.

### **Q: How to connect to a USB flash disk?**

A: The device can read USB flash disk with its USB HOST feature. Connect a USB flash disk to the device with a dedicated OTG cable (not provided with the device) and then manage files in the USB disk with explorer.

### **Q: How do I know if my WiFi network is connected successfully with the device?**

A: To make sure that the device is connected to WiFi access point successfully, go to Settings -> Wireless&Network -> WiFi, and then you should see the small text "Connected" under the network name in the right window.

### **Q: I have problems making a WiFi connection. What can I do?**

A: - Check your WiFi router/modem by using another WiFi device (ex: friend's laptop) to verify that your router/modem is functioning properly. - Check your WiFi router/modem documentation to see if it has a pairing button that needs to be pressed. Some modems have such a button that must be pressed the very first time you try to make a WiFi connection with a new device. - Make sure that you are relatively close to the modem/router to make your first connection. Then later you can test to see how far away you can make a connection. - Try connecting to a friend's WiFi access point to see if reacts the same way. If it connects, then you know that you'll have to set your WiFi router/modem with similar parameters. - Turn off the WiFi, then turn it back on again. Go to Settings -> Wireless Network -> WiFi. - Make sure you have entered the correct password if required.

## **PLAY**

### **Q: Can I play music and surf the web at the same time?**

A: Yes, you can. Just start your music playing, then go back to the Home screen and tap Browser to start surfing.

### **Q: My device cannot play a video file that I have copied to it. What can I do?**

A: Video files are created in many different formats as well as sizes (resolution). See Technical Specification in User Manual for detail information.

## Specifications

Item	Description
CPU	MT8127A/X.Quad-core ARM Cortex-A7 /1.3GHz
LPDDR	LPDDRIII 512MB(default),1GB(optional)
Display	7.85-inch TFT LCD, Touchpad (capacitive touch pad), 1024X768 pixels
Built-in operating system	Android OS 4.4
Hardware	IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory	EMMC: 4GB/8GB/16GB(Optional)
Memory Card type	Micro-SD card: 2GB, 4GB (SDHC), 8GB (SDHC), 16GB(SDHC,) 32GB (SDHC, optional) 64GB (SDHC, optional)
Operation System	Windows2000/XP/Vista/windows7/Linux2.4/ MAC OS 10.6.7 above
Camera	Front 0.3 mega pixels, rear 2.0 mega pixels
Interface	Mini-USB 2.0 High speed
	Micro-SD card slot
	3.5mm Earphone
Wi-Fi	WiFi (802.11 b/g/n), Wi-Fi hot spot
G-sensor	Support 360 rotation
Bluetooth	Support V2.1
Image Format	JPEG(baseline), BMP, PNG
Audio Format	MP3/FLC/WAV/OGG/AAC/M4A
Video Format	AVI/3GP/MP4/MKV/FLV/MOV
Battery Charge Time	About 3.5 Hours
Battery Life	About 9 hours of music playback;- About 8 hours of video playback; About 8.5 hours of web browsing.
SNR	>=80dB
Frequency Response Range	20Hz—20KHz
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V~50/60Hz, DC Output 5V/1.5A
Storage Temp.	-20℃ ~ +65℃
Ambient Temp.	0℃ ~ +40℃
Operation Relative Humidity	20% ~ 90% (40℃)
Storage Relative Humidity	20% ~ 93% (40℃)

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### Canada:

This device complies with Industry Canada licence-exempt RSS standards(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and 2) this device must accept any interference, including interference and that may cause undesired operation of the device.

### FCC RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The ™ and ® marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of E Fun. Any unauthorized distribution of this manual is expressly forbidden.

E Fun may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals, updated drivers or other information, be sure to visit our website at:

[www.nextbookusa.com](http://www.nextbookusa.com)

Or write to us at:

E Fun

West Covina, CA 91791

USA

Copyright © 2014

# CE 2200