


This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Feature Summary

 
- Wi-Fi network
- Built-in G-sensor
- Media Entertainment
- 11.6" Touch Screen
- 3rd-party Apps
- Dual Webcams

Accessories

- Main Unit
- USB cable
- AC/DC Adaptor
- Keyboard
- User Manual

Note : Pressing and holding  down the Ctrl + Browser button can turn on/off the keyboard backlight.

Buttons & Ports

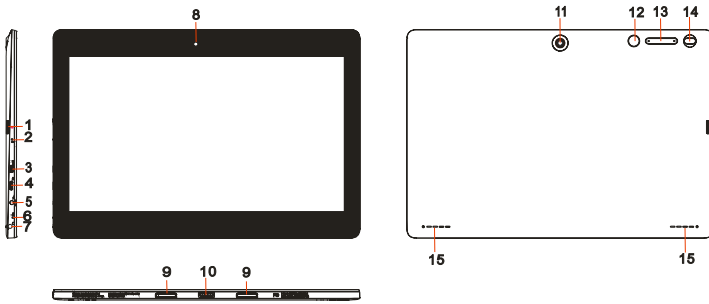

1. **Micro-SD Card Slot**
2. **Charge indicator**
3. **HDMI interface**
4. **Micro USB port**— connects to PC via USB cable.
5. **DC-In Socket**— connects to AC/DC power adapter.
6. **Built-in microphone**
7. **Earphone socket** — connects to stereo earphones.
8. **Front webcam**
9. **Sustaining port (female)** — fix and sustain connection to external keyboard
10. **Pogo pin connector (female)** —connect external keyboard
11. **Rear webcam**
12. **Home button** — go to the Home screen.
13. **VOL+/- button** — increase/decrease the volume.
14. **Power** —briefly press to lock or unlock the screen; press and hold to turn on or off the unit or reset it.
15. **Built-in speaker**

Basic Connections

Charging the Battery

The device has a built-in rechargeable battery. Charge the device when the battery level is low.

To charge the battery, connect the device to the provided power adapter via the DC-In socket. It takes about 4.5 hours to fully charge the battery.

The charge indicator lights in red during charging and in orange when charge is full.

Note:

- a. You are prompted to charge the battery when the device warns that the battery is lower than 15%!
- b. In the event that the device shuts down automatically because of battery exhaustion, charge the battery for at least 30 minutes before you can turn on the device.

Turning On/ Off the Tablet

To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen. It may take a few minutes to start up the system.



To turn off the device, press and hold the Power button until you see the option "Power Off", and tap on "Power Off".

Tip: The device may fall asleep with the screen display locked when there is no touch action for a while. You can briefly press the Power button to wake it up.

Installing the Memory Card (Micro-SD card)

This device can read files directly from a memory card (Micro-SD card). Also, you can install a card into the slot on the top edge of the device for the purpose of reading data from the memory card.

To install a memory card, find the card slot on the back of device and then insert the card into the slot in correct orientation.



To access the files stored in the memory card, enter the File Manager mode and select "Directory" to find the right directory. Tap on the SD card icon or Return button to get to the root directory, where you can easily find the SD card you connected.

Note: In the case that you connect both Micro SD card and USB discs to this device at the same time, you will find the following disc symbols under the root directory:

- Emulated: the local disc.
- SD 0 : the local disc, i.e. the internal memory of the device.
- SD 1: the Micro SD card you insert.
- USB card1/2/3: the USB memory connected.

Connecting to PC for transferring files

Before reading or playing files, you need to transfer media files from a computer to the device.

- (1) Connect the device to a computer with the supplied USB cable.
- (2) Once connected, the tablet will be identified as a MTP device with a mobile phone icon. Open the phone icon and copy files to it just as you do on your hard drive.
- (3) Disconnect the USB cable to remove the device from the computer.

Using the Physical Keyboard

For the sake of using convenience, this device is designed to be equipped with a dedicated keyboard. Follow these steps to connect the keyboard to your tablet:

1. Place the dedicated keyboard on an even and stable plane (e.g. desk);
2. Hold your tablet with two hands, align the connector and the two magnetic contacts on the keyboard to the jack and positioning slots at the bottom of the tablet.
3. As soon as the keyboard is connected to the tablet, it is ready for use.
4. You can rotate the tablet to overlap the keyboard as you do with a laptop.



Basic Operation

Home Screen



- a. Battery level
- b. Time
- c. Google Search bar
- d. Application tab
- e. Return button
- f. Home button
- g. Recent opened apps




Unlock the Screen

The screen will be locked after the device is idle for a while. You need to unlock the screen by swiping your tap upwards.



General Touch Actions

- **General:** Tap on the Return button  to get back to previous screen page; tap

Home button  to go to the Home screen; tap Menu button  to bring up the context menu options; and tap the Recent Apps button  to check the recently opened apps.

- **Click:** Click briefly on an item to open a file, a link, an application or page.

- **Drag:** When watching a video or listening to music, you can drag the slider of the progress bar at any point of time elapsed from the file.



- **Slide your finger:** In the different browsers (File, Music, Video, Photo, etc.), you can keep your finger on the screen and slide up and down to scroll the file list



- **Move your fingers closer/ wider:** When viewing a photo or webpage, you put your fingers (at least two) on the screen, and move them closer to zoom out it, or open your fingers wider to zoom in it for better visual effect.



Using the Virtual Keyboard

Whenever you need to input something, tap on any text input box to open the virtual keyboard, with which you can enter a website address or any text required.

Caps Lock: quickly tap twice to input all letters in capital; briefly tap once to input the first letter in capital.




Backspace
Enter

Space

Accessing Internet

You can access to the Internet easily with Wi-Fi networks.

Make WI-FI Connection

a. Tap the Setting icon  on the apps screen to open the settings menu.

b. Select "WIFI" and slide the toggle switch to "ON" to turn on WIFI.

c. Tap "Wi-Fi" to select a router, the device will scan automatically for available WiFi networks in your range and display them on a list.


d. Choose a network from the list and then tap "Connect" to connect. Some network may be secured with password, so you will have to enter the password before connecting. If the connection is successful, the message 'Connected to...(WiFi

 


Network Name)' will appear under the WIFI Setting.

Major Applications

Launch Web Browser-Chrome

To launch the web browser Chrome, tap on the Chrome icon  on the apps screen.

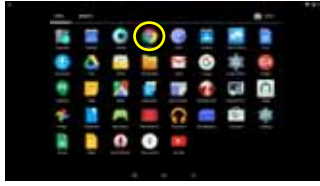

Playing Music

Tap the Play Music icon in the application page to launch the music player.

Enter the music library once you start the music player. All music files will be displayed in the library in thumbnails.

 


Playing Videos

Tap the Photos icon in the apps page to launch it.

You should see all the picture and video files/ folders if there are some.

- Tap a video file and start playing it.

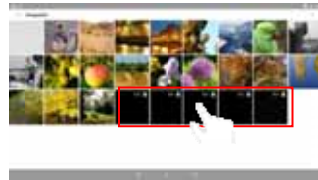

Note: Some video files may not be played correctly with the device. Refer to the Technical Specifications at the end of the manual, and make sure the video resolution, encoding format or file type is supported.

Viewing Photos

Launch the application Photos to view pictures or photos.

 
- (1) Photos should be listed in thumbnail. You can slide your finger on the screen left or right to browse photos.
- (2) Tap a photo thumbnail to view the photo in



full screen, and slide your finger on the screen horizontally to view next or previous picture

Using the Webcam

Tap the Camera in the apps page to launch the Camera application.

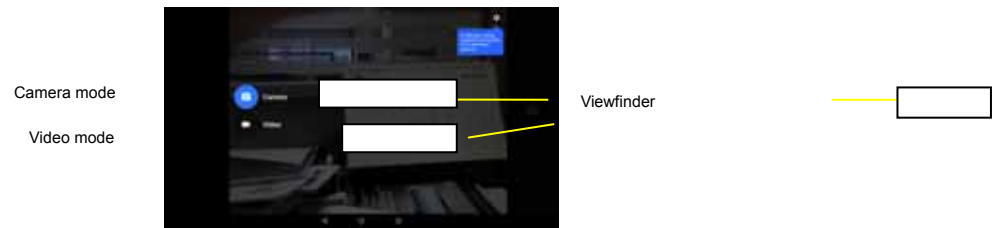


After entering the application, you will be ready to take photo or video recording. Swipe rightward to bring up the work mode option menu with which you can switch between Camera or Video mode, To check the pictures you have taken and the video clips you have recorded, launch the File Manager application.

Managing Files and Folders

You can explore files and folders with the File Manager application.

In the Home Screen, tap the Applications shortcut to display all applications and then tap the File Manager icon to enter the file exploration mode.

 When you select a file or folder by holding your tap on the target for a few seconds, a context menu will emerge

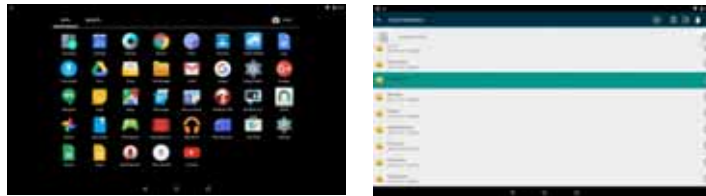

Sending/Receiving E-mails

In the Home or Apps Screen, tap the Email icon to launch the application.

Setup Email Account

First you need to setup an E-mail account for receiving or sending emails.



- (1) Start up the email application by tapping the **Email** application icon and you are prompted to setup an account.
- (2) Input your email address and login password. You can set the account as default by selecting the option "Send email from this account by default".
- (3) Tap "Manual Setup" to set the email server information if necessary.
- (4) Choose the server type from POP3, IMAP or Exchange for incoming emails. To know what type of your email server is, you can consult the service provider, network administrator or search for information in the Internet.
- (5) Input required information (server, port etc.). You can obtain the information from the service provider, network administrator or the Internet.
- (6) Choose the server type for outgoing emails, and input required server information.
- (7) Click "Next" to continue. Your tablet will check the server settings. When it prompts you that "Your account is set up, and email is on its way", your account is set up successfully.
- (8) Input your name and then tap on "Done" to finish.

Note: If you have more than one account, every time when you start up the email application, you enter the default email account.

Specifications	
Item	Description
CPU	Intel Atom x5, quad core, CPU@1.84GHz
LPDDR3	2GB
Display	11.6-inch IPS LCD, Touchpad (capacitive touch pad), 1366X768 pixels
Built-in operating system	Android OS 5.1
Hardware	IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory	EMMC :64 GB
Memory Card type	Micro-SD card: 2GB, 4GB (SDHC), 8GB (SDHC), 16GB, 32GB, 64GB (SDHC)
Operation System	Windows2000/XP/Vista/windows7/Linux2.4/ MAC OS 10.6.7 above
Camera	Front, 2.0 mega pixels; rear 2.0 mega pixels
Interface	Micro-USB 2.0 High speed
	Micro-SD card slot
	3.5mm Earphone
Wi-Fi	WiFi (802.11 b/g/n), Wi-Fi hot spot
G-sensor	Support 360 degrees rotation
Bluetooth	Support(V4.0)
Audio Format	MP3/FLC/WAV/OGG/AAC/M4A
Video Format	AVI/3GP/MP4/MKV/TS
Image Format	JPEG/BMP/PNG/GIF
Battery Charge Time	About 4.5 Hours
Battery Life	About 10 hours of music playback; About 8 hours of video playback; About 8 hours of web browsing.
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V ~ 50/60Hz, DC Output 5V/3 A

FCC Statement

IC Caution.

RSS-Gen Issue 4 November 2014"&"CNR-Gen 4e edition Novembre 2014:

- English:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of E Fun. Any unauthorized distribution of this manual is expressly forbidden.

E Fun may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All

specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals, updated drivers or other information, be sure to visit our website at:

www.nextbookusa.com
Or write to us at:
E Fun
West Covina, CA 91791
USA
Copyright © 2016

Frequently Asked Questions(FAQ)

Q: Can I connect an external hard drive, USB stick to copy files to the device?

A: Yes, you can. The device supports USB HOST function, which can read USB stick Just connect the device to USB stick or player through OTG cable.

Q: When I plug the device into my computer, the Windows Hardware installation window asks me to install a driver. What should I do?

A: When you connect the device to PC for the first time or has just restored the factory default settings, you may come across such prompt. Just click on Next button to finish the automatic installation. Normally, Windows should not do this because it should see the device as an external hard drive.

Q: My device freezes, what should I do?

A: Try holding down the **Power** button until the device is reset and then restart the device.

Q: I downloaded an application, but I cannot install it in my device. Why? A: Some applications developed for Android mobile might not run properly in the Device. Please consult the respective software developer for further information. You are NOT suggested to enable Unknown Sources under "Settings → Security".

Q: When charging, my device shows it is charging but will not power on. What's the problem?

A: Please try charging for about 30 minutes, and then restart the device. If the problem still remains, try pressing and holding down the Power button for about 15 seconds the until device is reset.

Q: The device cannot enter Android system after power-on, what should I do?

A: Make sure the device has enough battery charge before power-on. If you fail to enter Android system after many tries, please try the Recovery mode to restore factory default settings (referring to the problem of forgetting password below), or contact your vendor for technical help or support.

Q: The device is unable to be charged, what should I do?

A: Make sure you use a dedicated power adaptor provided for the device. If the problem still exists, contact the vendor.

Q: The display is empty or blurred, what should I do?

A: Please try to restart the device. If the problem still exists, there may be something wrong with the display physically, just contact your vendor.

Q: The device runs slowly, how to speed it up?

A: The more applications you have installed, the slower the device is. Please uninstall some applications that you don't use often to speed it up.

Q: I forget my power-on password or graphic, how to start up the device?

A: If you forget your password, you have to enter the Recovery mode to load default factory settings: Press Power button to confirm entering the Recovery mode.

(1) Power off the device first. Press and hold down the VOL+ button and Power button to enter Recovery mode.

(2) Use VOL+/- button to move the cursor up/down and select 'Wipe data/ factory reset'.

(3) Press Power button to confirm entering the Recovery mode.

(4) Use Vol+/- button to select " Yes-- delete all user data" and confirm with Power button.

(5) Select " Reboot system now" before pressing Power button to confirm.

When your device is restarted, the preset password will be deactivated.

Q: The device prompts me lack of space, how to release some space?

A: Applications are installed in internal memory of the device by default. Space gets less if you install more and more applications. Please uninstall some applications or move some to expandable memory like Micro SD card to release space.

Q: How to access Internet via Wi-Fi?

A: The device features WiFi module. Make sure there is a WiFi router nearby, and then go to "Settings" -> "Wireless & Network". Turn on Wi-Fi, the device should search for Wi-Fi routers around you and list them. Click the router that you want to connect, enter password if required. When connected successfully, you can surf on the Internet then. Please get closer to the Wi-Fi router as possible as you can to avoid weak signal.

Q: How to connect to a USB flash disk ?

A: The device can read USB flash disk with its USB HOST feature. Connect a USB flash disk to the device with a dedicated OTG cable (not provided with the device) and then manage files in the USB disk with File Manager.

Q: How do I know if my WiFi network is connected successfully with the device ?

A: To make sure that the device is connected to WiFi access point successfully, go to Settings -> Wireless & Network -> WiFi, and then you should see the small text "Connected" under the network name in the right window.

Q: I have problems making a WiFi connection. What can I do?

A:

- Check your WiFi router/modem by using another WiFi device (ex: friend's laptop) to verify that your router/modem is functioning properly.
- Check your WiFi router/modem documentation to see if it has a pairing button that needs to be pressed. Some modems have such a button that must be pressed the very first time you try to make a WiFi connection with a new device.
- Make sure that you are relatively close to the modem/router to make your first connection. Then later you can test to see how far away you can make a connection. - Try connecting to a friend's WiFi access point to see if reacts the same way. If it connects, then you know that you'll have to set your WiFi router/modem with similar parameters.
- Turn off the WiFi, then turn it back on again. Go to Settings -> Wireless Network -> WiFi.
- Make sure you have entered the correct password if required.

Q: My device cannot play a video file that I have copied to it. What can I do?

A: Video files are created in many different formats as well as sizes (resolution). See Technical Specification in User Manual for detail information.

ONE YEAR LIMITED WARRANTY

The Company hereby warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within one year parts and 90 days labor from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) for parts and repair labor. This limited Warranty is the purchaser's exclusive remedy for any such defect(s).

To obtain repairs or replacement within the terms of this warranty, please visit www.Nextbookusa.com or contact us West Covina, CA 91791, USA. Proof of warranty coverage (i.e.- dated bill of sale) is required.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). The opinion of the Company with respect to this matter shall be final. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES OR LIABILITIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN A PERIOD OF 12 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY EXPRESS OR IMPLIED WHATSOEVER.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from jurisdiction to jurisdiction.