



Warnings!

1. How to use charger
- ▶ In case of smoke, strange smell or noise, operation shall be stopped in order to avoid fire or electric shock. Pull the plug and get ready for repair after confirming that there is no more smoke.
 - ▶ Do not touch the plug or socket with wet hand to avoid electric shock.
 - ▶ After finish charging (charge duration normally is 4~6 hours) pull the charger off the socket. Strictly prohibit keeping plug into the socket for a long time. Otherwise it may lead to overheating, fire, electric shock and other unsafe hidden trouble.

Caution!

2. How to use the rechargeable battery
- ▶ please strictly observe the methods and cautions of the operation manual.
 - ▶ Avoid short circuit when using or placing as it may lead to great dangers, such as fire, explosion. Meanwhile, do not store the battery in high-temperature room or places next to fire.
 - ▶ Do not use the breakage or/and leakage battery.
 - ▶ Do not drop the battery into fire or water or even dissolve the battery

⚠ Cautions!

- ▲ Non-rechargeable batteries are not to be recharged;
- ▲ Rechargeable batteries are to be removed from the toy before charged;
- ▲ Rechargeable batteries are only to be charged under adult supervision;
- ▲ Different types of batteries or new and used batteries are not to be mixed;
- ▲ Only batteries of the same or equivalent type as recommended are to be used;
- ▲ Batteries are to be inserted with the correct polarity;
- ▲ Exhausted batteries are to be removed from the toy;
- ▲ The supply terminals are not to be short-circuited;
- ▲ The antenna is not to be inserted into socket outlets;
- ▲ Transformers used with the toy are to be regularly examined for damage to cord, plug enclosure and other parts; and in the event of such damage, toy must not be used with the transformer until such damage has been repaired;
- ▲ The toy is not to be connected to more than recommended number of power supplies;
- ▲ The toy is not intended for children under 3 years old;
- ▲ The toy must only be used with the recommended transformer;
- ▲ The transformer is not a toy.

⚠ Cautions!

3. Rules for play:
- ▲ The car is for 8 ages up group only.
 - ▲ Do not play the car outdoors when thundering.
 - ▲ Do not run the toy car on rainy day or wet surface.
 - ▲ Do not play near some wireless transmitting facilities.
 - ▲ Do not play near some radio control car which is of the same frequency so as to avoid being interfered.

Material used: Plastic, hardware, Electronics.

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

 
Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and;
2. This device must accept any interference received, including interference that may cause undesired operation.


Cautions in operation:



⚠ Caution: Avoid the risk of finger being involved when the wheel is in operation. Don't insert finger into the car body and touch the wheels when the car turn "ON" or in work. In case of danger.

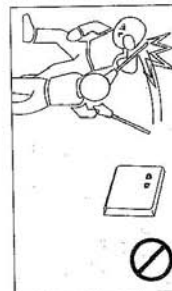


 ⚠ Caution: Do not brandish the Antenna or closed your face to Antenna, or it may injure eyes. Please replace the broken off Antenna.

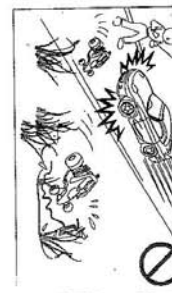

⚠ Caution: Do not play on roads with crowded places, soil or fine sand.

 Method of Charging the Battery:

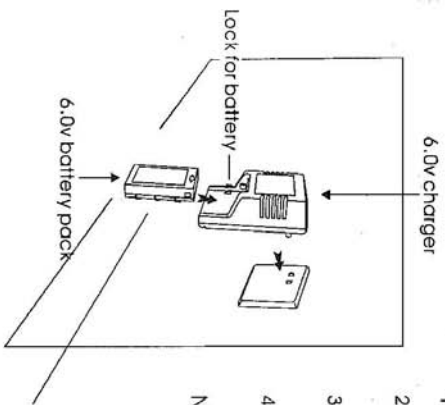

Method of charging the battery:

1. The battery should be installed correctly on the charger (see the illustration)
2. Install the 6.0V battery pack in the direction of arrow into the charger; then plug into household socket appropriately.
3. Charge duration normally is 4~6 hours. No charge is allowed after this. (About 8 hours required for the first time charge).
4. Pull the charger off the socket after finish charging. Press the lock button in the charger and take out the battery pack.

 
Notes: 1. The attached battery is not charged yet.

Make sure to charge it prior to use. In the course of charging it is normal that temperature of the charger and battery will be on the rise.

2. Termly check if the plug, crust and other parts are in good condition. If breakage found, they should be stopped using until be repaired into good condition.
3. The charger and battery are not toys. They should be charged and used under adult supervision.


Loading & unloading of the battery for remote controller:

1. Push the battery cover on the back of the remote controller in the direction of "OPEN" and remove the cover. (Keep the switch in "OFF" position)
2. See the following illustration. Install 9V / Alkaline battery after checking the positive and negative poles and cover the battery case.
3. Switch on the transmitter. If the battery installed correctly, the indicator light on.
4. The duration for continuous operation of the remote controller is 8 hours.

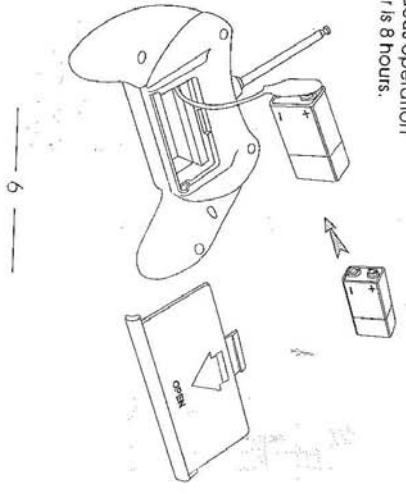

Loading & unloading the battery pack of the toy car:

 1. Put the switch in the "OFF" position.
2. As per the illustration, put the fully charged 6.0V battery pack into the battery case, then close the battery cover and fasten the lock to fix the battery.
3. If re-charge for the battery required, put the switch in "OFF" position. Unlock the battery cover and take out the battery for recharging.

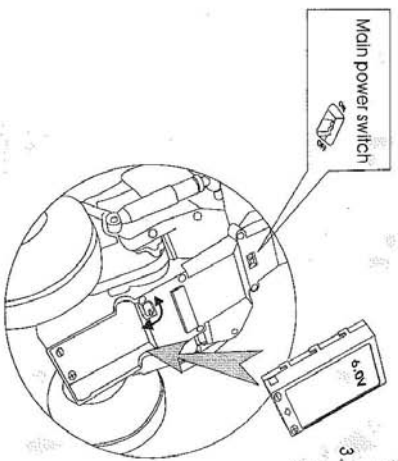

Operation for remote controller:



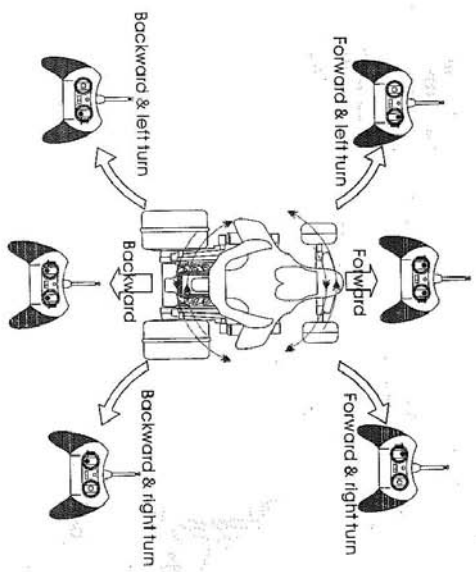 


Illustration 1
While the controller sticker are in the status as the illustration 1, the car makes 360° rotate action.

 

Illustration 2
While making turns or rotate action, the car makes sideways stunt action (See illustration 2).

 Operation for remote controller:

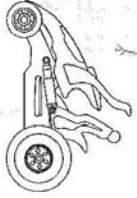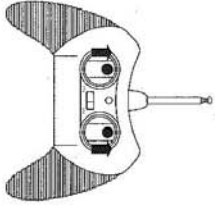

Skills of operation:
The car will vertically go forward with high speed if suddenly forward when it is in backward motion.

Analysis of Breakdowns

Before sending out for repair, readjust the car because most of the breakdowns have been caused by low battery.

Conditions of the Car	Possible Reasons	Ways for Inspections & Adjustments	Relevant Pages
Stop Working or slowly working	1. No battery in the remote controller of the car	Reloading the battery	6, 7
	2. Incorrect installation of the battery of remote controller	Reinstalling the battery	6
	3. Low battery of the remote controller	Changing for new battery	6
	4. Low battery of the car	Recharging	7
	5. Low battery of the remote controller	Changing for new battery	6
	6. Hindered by the electric wave	Changing for new place or wait for a few seconds	
	7. Interference by same frequency car used nearby	Changing for new place or wait for a few seconds	
Out of Control			

Note: Except the reasons mentioned above, please send out for repair.

Maintenance:

1. During its playing the toy should be avoid any man-made destroy of hitting, pressing, pricking, dropping etc.
2. Out of using the battery should be taken out. The toy should be placed in dry or toy cabinet after wiping.