

NON-ZONING USER'S INFORMATION MANUAL

PREMIUM HIGH DEFINITION TOUCH
SCREEN COMMUNICATING CONTROL

MODELS: S1-TTSCC



Energy Saver



TABLE OF CONTENTS

ABOUT YOUR COMMUNICATING CONTROL	2	HUMIDITY SETTINGS	12
FEATURES	2	SMART RECOVERY	13
QUICK REFERENCE	3	ENERGY SAVER SETTINGS	13
PROGRAMMING & OPERATION	5	USING PROGRAM SCHEDULES	13
DATE & TIME SETTINGS	5	TEMPERATURE OVERRIDE	19
WIRELESS SETUP	6	SCHEDULE OVERRIDE	20
SYSTEM SETTINGS	11	SPECIAL FEATURES	21
FAN SETTINGS	11	APPENDIX	26

Need Assistance?

For assistance with this product please visit <http://www.yorkupg.com>

Read and Save This Manual

IMPORTANT

Never use sharp instruments, such as a pencil or pen, to press touch screen keys. To prevent damage to the thermostat, always press keys with your fingertip.

CAUTION

Your brightness default settings are preset to maximize the life of your Communicating Control. Increasing the brightness levels could potentially decrease the life of the product. Brightness default settings for your Communicating Control are set: Active Mode Brightness 80% and Sleep Mode Brightness 25%.

ABOUT YOUR COMMUNICATING CONTROL

FEATURES

- **Large, Clear Display with Backlighting** – current temperature and temperature setpoint are easy-to-read and are displayed on the home screen.
- **Intuitive Programming** – guides you through the scheduling process .
- **Ability to Copy Multiple Days** – allows you to easily customize the Communicating Control for your unique schedule.
- **Real-Time Clock** – keeps time during power failure; automatically updates for daylight savings.
- **Precise Temperature Control (+/- 1°F) (+/- .5°C)** – reliable, consistent comfort.
- **Multiple Schedule Hold/Override options** – allow you to modify schedule indefinitely or for a specific time.
- **Change Reminders** – reminds you to replace and maintain air filters, humidifier pad, UV bulbs, and/or Electronic Air Cleaner filters.
- **Outdoor Temperature Indication** – shows current outdoor temperature on the display to help you plan outdoor activities.

NOTICE

The Home and Menu screen may differ slightly, depending on your heating and/or cooling system and the Communicating Control's display settings.

QUICK REFERENCE

Your new Communicating Control is preset to Non-Programmable View/Mode.

To change the View Mode:



Step 1 - Press **Menu** in the bottom right corner of your screen.

Step 2 - Press **Settings** icon.

Step 3 - Press **View/Mode** icon.

Step 4 - Select **Non-Programmable**, **Programmable** or **Advanced Programmable**.

The quick reference guide for each View/Mode is detailed in Figures 1-3.

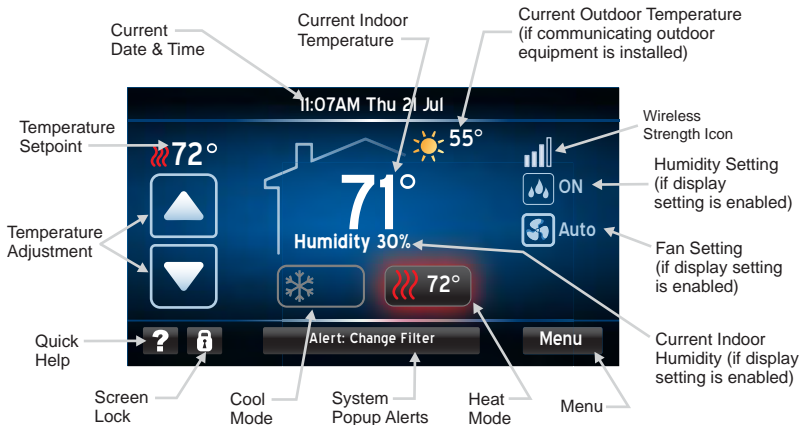


FIGURE 1: Non-Programmable Mode

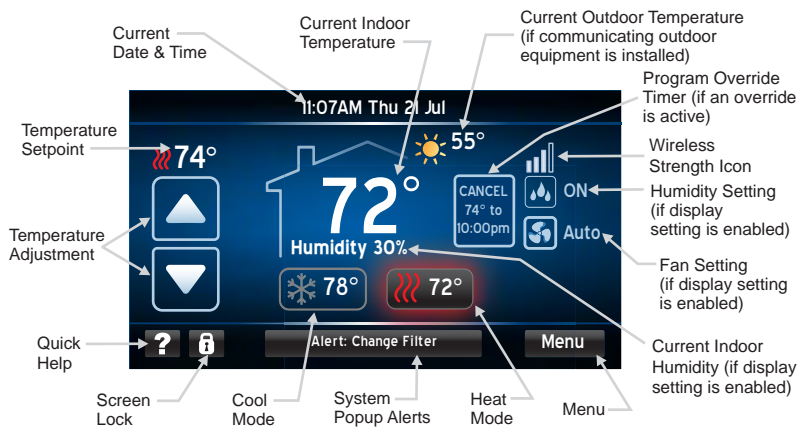


FIGURE 2: Programmable Mode

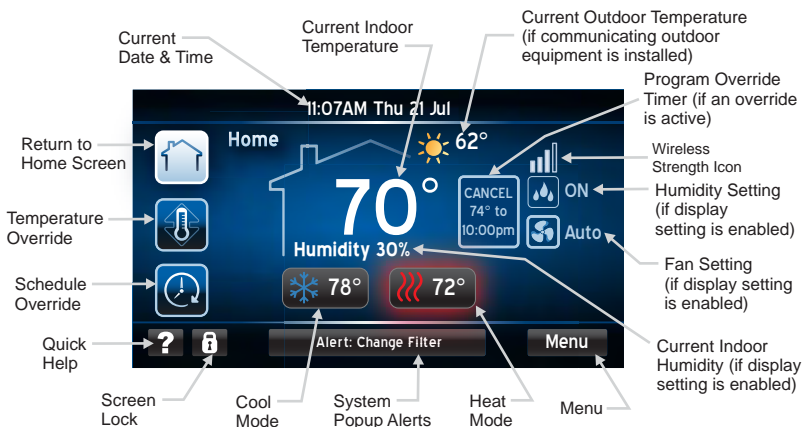


FIGURE 3: Advanced Programmable

PROGRAMMING & OPERATION


DATE & TIME SETTINGS




Step 1 - Press **Menu** in the bottom right corner of your screen.



Step 2 - Press **Settings** icon.

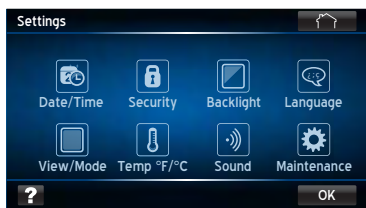

Step 3 - Press **Date/Time** icon.

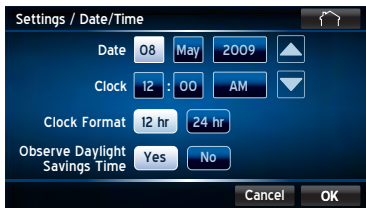

Step 4 - Select Date - current **month**, **day** and **year**.

Step 5 - Select Clock - current **hour**, **minutes** and **AM** or **PM**.

Step 6 - Select Clock Format (**12hr** or **24hr**).


Step 7 - Select Daylight Saving Time (**Yes** or **No**).

NOTE: 2007 and beyond, for areas that use the new 2007 DST calendar.

Step 8 - Press **OK** when you are done.

WIRELESS SETUP


From main screen select Menu/Tools/Wireless

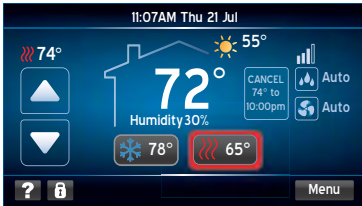

Step 1 - Press **Menu** in the bottom right corner of your screen.




Step 2 - Press **Tools** icon.

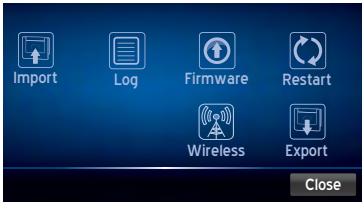

Step 3 - Press **Wireless** icon.

Touch Screen must be connected to router before you can register the device.

- For secured networks requiring a password a lock will be present.
- Router signal strength will be shown once connected.

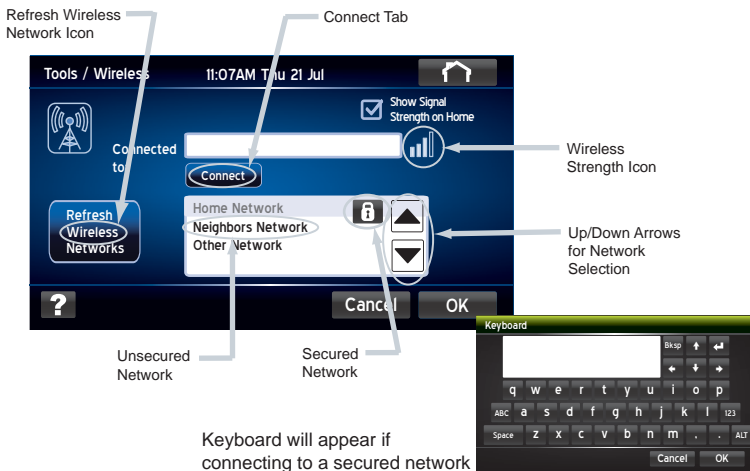

IMPORTANT

You must have Router SSID Enabled to Connect with the Touch Screen Communicating Control.

Step 1 - Press select Menu, select **Tools**, select **Wireless**.


Step 2 - Press **Refresh Wireless Network** icon.

Step 3 - Select wireless network with **Up/Down** arrows.

Step 4 - Select **Connect**.

Step 5 - If network is secure, type in password.

Step 6 - Connected to network.

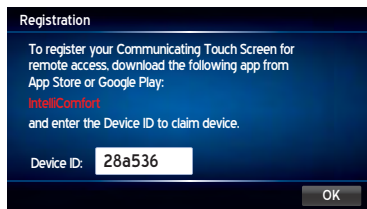

Step 7 - The Registration screen will appear with the populated Touch Screen Communicating Control's unique Device ID.



Step 8 - Download IntelliComfort app from App Store or Google Play.

Step 9 - Claiming mobile device with Touch Screen Communicating Control.

- **SIGNUP, LOGIN**, pair thermostat with mobile device.



Step 10 - Press SIGNUP tab.

Step 11 - Enter in Name, Email, & Password.

Step 12 - Press SIGNUP tab (check registered email to verify account).

Step 13 - Press Accept tab.

Step 14 - Press LOGIN.

Step 15 - Enter in Email, & Password.

Step 16 - Press LOGIN.


Step 17 - Type in UUID from thermostat.

Step 18 - Press Save Tab.

Step 19 - Press OK on the Thermostat.




Step 20 - If you need to re-register the thermostat, press **Register** tab.

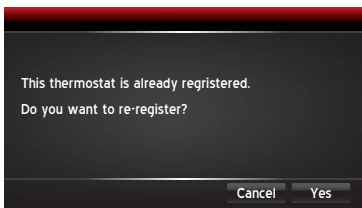

Step 21 - The re-register screen will appear.

- Selecting **No** will take you back to the Wireless Screen
- Selecting **Yes** will display a **New Device ID**

Step 22 - Touch Screen and App are connected to router.

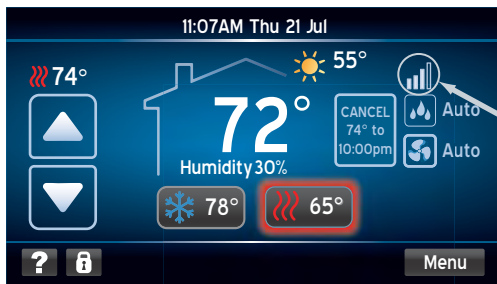

Verify that the wireless is connected on the Home Screen and Wireless Screen

Home Screen



Wireless Screen

SYSTEM SETTINGS

Your Communicating Control is preset to OFF mode (neither heating or cooling modes are selected).

In Non-Programmable mode, Auto mode cannot be activated. If Auto mode is desired, change the View/Mode to either Programmable or Advanced Programmable (see page 5 for details).



- **Off mode:** Neither Heating or Cooling icons are illuminated.
- **Heat mode:** Heating icon is illuminated (red glow ring indicates heat equipment operation).
- **Cool mode:** Cooling icon is illuminated (blue glow ring indicates cool equipment operation).
- **Auto mode:** Both Heating and Cooling icons are illuminated (red/blue glow ring indicates heat/cool equipment operation).
- **Emergency Heat:** Emergency Heat button is selected via the Menu screen (only for heat pumps with electric heat strips or heat pumps with furnace).

FAN SETTINGS

In non-programmable mode, the fan setting defaults to the schedule currently active in the calendar. In programmable mode, the fan setting defaults to schedule mode.

Step 1 - Press Menu at the bottom right side of your screen.

NOTICE

Or press the quick access Fan icon on the right side of your screen.



Step 2 - Press **Fan** icon.

Step 3 - Select the Fan function.

- Auto** – runs only with equipment.
- Manual** – runs intermittently to circulate air.

NOTE: Manual mode is not available for all systems.

- Adjust the speed of your fan motor.

NOTE: The lower the speed the less electricity consumed.

- Select the fan run time. Choices are **15**, **30**, and **45 minutes** per hour or **Always**.
- Schedule** – follows program schedule fan settings (see Page 9 for more information).

NOTE: Schedule option is only available in programmable modes.

Step 4 - Select check box to display fan icon on home screen.

Step 5 - Press **OK** when you are done.

HUMIDITY SETTINGS

In non-programmable mode, your Communicating Control humidity setting defaults to auto mode. In programmable mode, the humidity setting defaults to schedule mode.

Step 1 - Press **Menu**.

NOTE: Or press the quick access **Humidity** icon on the right side of your screen.

Step 2 - Press **Humidity** icon.

Step 3 - Select the Humidity mode.

- Humidification** – Select the **Heat** mode symbol.
- Dehumidification** – Select the **Cool** mode symbol.

Step 4 - Select Humidity function.

- Auto** – Automatically sets the humidity setpoint based on indoor temperature.

NOTE: Auto mode requires an outdoor sensor.

- Manual** – Manually set the humidity setpoint.
 - Select your desired indoor humidity percentage level.


NOTE: If you start seeing condensation building up on your windows, lower the humidity setpoint or switch to auto mode.

- Schedule** – Follows program schedule humidity settings (See Page 9 for more information).

NOTE: Schedule option is only available in programmable modes.

Step 5 - Select check box to display humidity information on home screen.

Step 6 - Press **OK** when you are done.

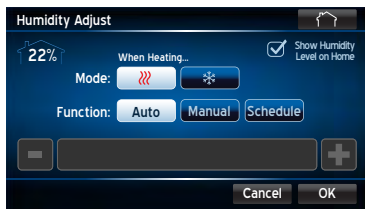

SMART RECOVERY

Your Communicating Control comes with a feature called Smart Recovery, which eliminates all guesswork when setting your program schedule.

How long does it take the furnace to warm your house in the morning before you get out of bed or how long does it take the air conditioner to cool your house in the afternoon before you return from work? The Communicating Control determines the equipment start time to satisfy your desired temperature setpoint.

Simply set your program schedule to the time you want the house to be at your comfort temperature. The Communicating Control then turns on the heating or cooling at just the right time to have your home reach your comfort temperature at your scheduled time.

For example: you get out of bed at 6:00 AM and want the temperature to be 70°F. Set the Awake period for 6:00 AM and 70°F. The Communicating Control will turn on the heat before 6:00 AM to raise the temperature to 70°F by 6:00 AM.

ENERGY SAVER SETTINGS

Energy Saver feature allows you to program your system for maximum energy savings. You can choose from two, three or four time periods each day, with different settings for each day.


This Communicating Control is preset to use Energy Saver program settings. These settings would help reduce your heating/cooling expenses.

	Setpoints		Fan Setting	Setpoints	
	Heat	Cool		Hum	Dehum
Awake (6:00 AM)	70°	78°	Auto	Auto	Auto
Day (8:00 AM)	62°	85°	Auto		
Return (5:00 PM)	70°	78°	Auto		
Sleep (10:00 PM)	62°	82°	Auto		

USING PROGRAM SCHEDULES

In a Non-Programmable mode, adjusting program schedule cannot be done.

NOTICE
<i>In order to edit or run a program schedule, change the View/Mode to either Programmable or Advanced Programmable (see page 3 for details).</i>

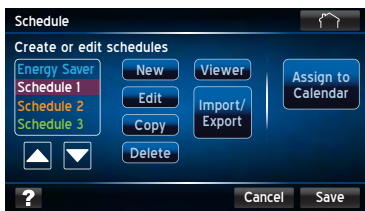

Step 1 - Press Menu.

Step 2 - Press Schedule icon.


Program Schedule Options

Step 3 - Press:

- The **New**, **Edit** or **Copy** icons to create a new or edit an existing schedule. Refer Page 9.
- The **Delete** icon to delete an existing schedule. Refer Page 12.
- The **Viewer** icon to view existing schedule summaries. Refer Page 12.
- The **import/export** icon to import or export a program schedule. Refer to Page 12.
- The **Assign to Calendar** icon to assign an existing schedule to the calendar. Refer Page 12.

Creating New or Editing/Copying an Existing Schedule

Name

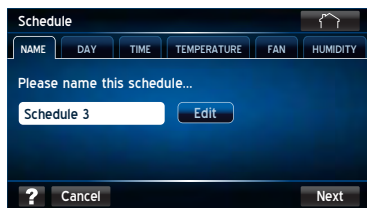


Step 1 - Press **Edit** icon.

- Use the keyboard to name the schedule.
- Press **OK**.

Step 2 - Press **Next**.

Day

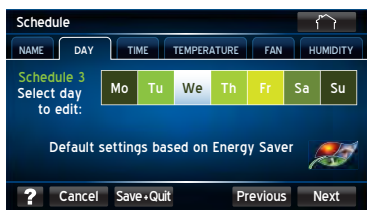


Step 3 - Select **Day** to set schedule.

Step 4 - Press **Next**.

Step 5 - Each program schedule is identified by a color. Color shades represent unique program schedule settings.

Time

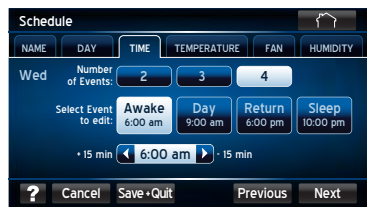

Step 6 - Select **Number of Events** (**2**, **3** or **4** events per day).


Step 7 - Select **Event** to set start time.

Step 8 - Adjust time that corresponds to the event.

Step 9 - Repeat steps 6-7 to select start time for other events.

Step 10 - Press **Next**.

Temperature

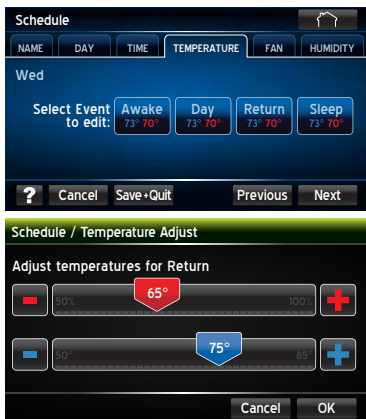

Step 11 - Select **Event** to edit temperature set-points.


Step 12 - Adjust your **Heating** and **Cooling** set-points.

Step 13 - Select **OK**.

Step 14 - Repeat steps 10-12 to program temperature for other events.

Step 15 - Press **Next**.

Fan

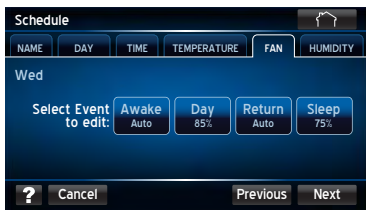

Step 16 - Select **Event** to edit fan settings.

Step 17 - Select the Fan function.

a. **Auto**

b. **Manual**

NOTE: Manual mode is not available for all systems.

i. Adjust the speed of your fan motor.

NOTE: The lower the speed the less electricity consumed.

ii. Select the fan run time. Choices are **15, 30, and 45 minutes** per hour or **Always**.

Step 18 - Select **OK**.

Step 19 - Repeat steps 15-17 to select fan mode for other events.

Step 20 - Press **Next**.



Humidity

Step 21 - Select the Humidity mode.

- Humidification** – select the Heat mode symbol.
- Dehumidification** – select the Cool mode symbol.

Step 22 - Select the Humidity function.

- Auto** – automatically sets the humidity setpoint based on indoor temperature.


NOTE: Auto mode requires an outdoor sensor.

- Manual** – manually set the humidity setpoint.
 - Select your desired indoor humidity percentage level.

Step 23 - Press **Next**.

NOTE: Steps 3-22 illustrate how to set a single day's program schedule. You can copy this day to subsequent days (see **Copy Day** section below), or set another day by repeating steps 3-22.

Copy Day

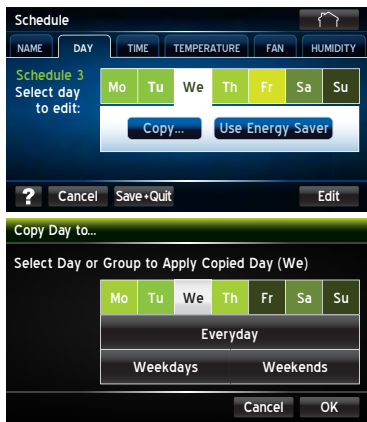

Step 24 - Press **Copy**.

Step 25 - Select individual **days**, **Weekdays**, **Weekend** or **Everyday**.

Step 26 - Press **OK**.


Step 27 - Repeat steps 23-25 to copy settings to other days.

Saving a Program Schedule

Step 28 - Select **Save + Quit**.




Deleting an Existing Program Schedule

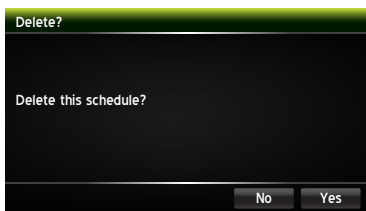

Step 1 - Press **Yes**.

Viewing an Existing Program Schedule

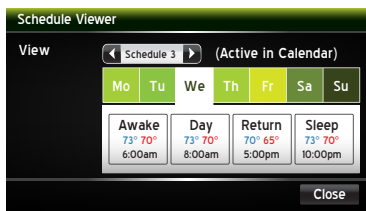

Step 1 - Select Schedule to view by pressing **left** or **right** arrows.

Step 2 - Select **Day** to view.

Step 3 - Press **Close**.

Importing / Exporting Program Schedules

Step 1 - Select **Import** or **Export** functionality.

For Import

Step 2 - Insert the USB into the bottom of the thermostat when prompted.

Step 3 - When prompted that import is complete, remove USB from drive.

Step 4 - Select **OK** after import is complete.


For Export

Step 2 - Insert the USB into the bottom of the thermostat when prompted.

Step 3 - When prompted that export is complete, remove USB from drive.

Step 4 - Select **OK** after export is complete.

Assigning Program Schedules to Calendar

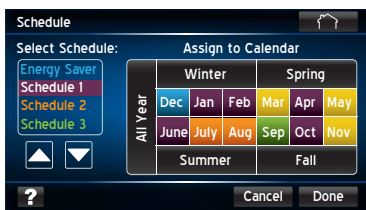

Step 1 - Select Schedule to assign to calendar by pressing **up** or **down** arrows.

Step 2 - Select individual **months**, **Seasons**, or **All Year**.

Step 3 - Repeat steps 1-2 for each schedule's calendar assignment.

Step 4 - Press **Done**.

NOTE: In order to run a program schedule, it must be assigned to the calendar.

TEMPERATURE OVERRIDE

Programmable Mode



1. Press **temperature adjustment arrows** either up or down until the desired override temperature setpoint is shown.
2. Press **Pick Duration**.
3. Select the duration for running the temperature override.
 - a. Until **Cancelled** – holds temperature until cancelled.
 - b. Until specific **Date & Time** – holds temperature until specified date and time.
 - c. Until program schedule **Next Event** – hold temperature until next schedule event.

Advanced Programmable Mode



1. Press **Thermometer** icon.
2. Use the **slider** to set the desired override temperature.
3. Press **Pick Duration** button.
4. Select the duration for running the temperature override.
 - a. Until **Cancelled** – holds temperature until cancelled.
 - b. Until specific **Date & Time** – holds temperature until specified date and time.
 - c. Until program schedule **Next Event** – hold temperature until next schedule event.

Quick Heat / Quick Cool


1. Press **Thermometer** icon.
2. Select **Quick Heat / Quick Cool** icon – runs heat/cool equipment at maximum capacity for 10 minutes.

SCHEDULE OVERRIDE

Advanced Programmable Mode

1. Press **Schedule** icon.
2. Select:
 - a. The current program schedule (**NOW**) event to extend the duration.
 - b. The desired program schedule (**OVERRIDE**) event to override with a future event.
 - c. The Set Vacation to setup a Vacation Override.

Extend Current Program Schedule Event

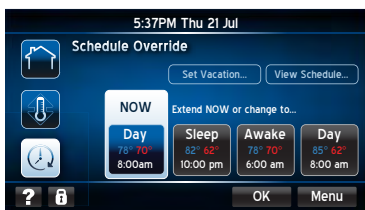

To extend the current program schedule event's settings (temperature, fan, and humidity) beyond the scheduled event time, perform the following:

Step 1 - Select current program schedule event (NOW shown in highlighted box).


Step 2 - Press **OK**.

Step 3 - Select the duration for running the schedule override.

Step 4 - Until **Cancelled** – permanent hold.

- a. Until specific **Date & Time**.
- b. Until program schedule **Next Event**.

Change to Future Program Schedule Event

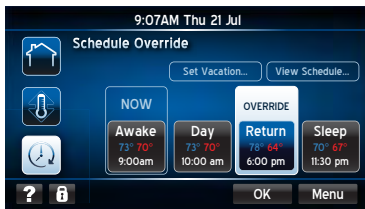

Arrive home from work early? To initiate a future program schedule event's settings (temperature, fan, and humidity) prior to the scheduled event time, perform the following:

Step 1 - Select desired program schedule event (OVERRIDE shown in highlighted box).

Step 2 - Press **OK**.

Vacation Override

The screenshots show the following steps in the Vacation Override process:

- Screenshot 1:** 'Vacation' screen. 'For how long?' section. Leave: 08 May 2009 10 AM. Return: 10 May 2009 10 AM. Days: 2. Buttons: ? Cancel, Next.
- Screenshot 2:** 'Vacation' screen. 'Set Temperatures' section. Heating slider at 65°. Cooling slider at 76°. Buttons: ? Cancel, Previous, Next.
- Screenshot 3:** 'Vacation' screen. 'Set Fan' section. Function: Auto. Buttons: ? Cancel, Previous, Next.
- Screenshot 4:** 'Vacation' screen. 'Set Humidity' section. Mode: Humidity icon. Function: Auto. Humidity slider at 45%. Buttons: ? Cancel, Previous, Done.

Step 1 - Select number of **Days** or

Step 2 - Select Vacation Dates:

- Leave Date - current **month**, **day** and **year**.
- Return Date - current **month**, **day** and **year**.
- Press **Next**.

Step 3 - Adjust your **Heating** and **Cooling** set-points.

Step 4 - Press **Next**.

Step 5 - Adjust your **Fan** setting.

Step 6 - Press **Next**.

Step 7 - Adjust your **Humidity** settings.

Step 8 - Press **Done**.

Step 9 - Press **OK**.

SPECIAL FEATURES

Equipment Status

Equipment Status feature is used to help you understand your heating and cooling system better. Here are some of the highlights of this feature.

Equipment Conditions



1. Press **Menu**.
2. Press **Status** icon.

Using the system map, you can determine your equipment conditions. The color **GREEN** means your equipment is performing as expected without any concerns. **YELLOW**, that particular piece of equipment requires some attention but not urgently. When equipment status is highlighted in **RED**, it needs immediate attention. Equipment marked in a **GRAY** color is not installed and is offered to maximize your comfort and indoor air quality. For more information on equipment highlighted in **GRAY** color, contact your installing dealer for more details.

Equipment Operational State

For detailed information on the current operational state of your heating or cooling equipment, you can refer to the Equipment Status screen. It displays status information about your indoor unit (air handler or furnace) and your outdoor unit (heat pump or air conditioner) at any given time.

NOTICE

Not all equipment information is shown for all systems.

Equipment Service Reminders

This feature displays an alert to remind you to change the air filter, humidifier pad, UV lamps or service your electronic air cleaner. To activate, follow these steps.




1. Press **Menu**.
2. Press **Settings** icon.
3. Press **Maintenance** icon.
4. **Air Filter**, select either **Cumulative Hours** or **Months**. Adjust the period per the manufacturer recommendation.




5. **Humidifier Pad**, select either **Cumulative Hours** or **Months**. Adjust the period per the manufacturer recommendation.
6. Using the bar to the right of the screen, scroll down to view other equipment.
7. **UV Lamps**, select either **Cumulative Hours** or **Months**. Adjust the period per the manufacturer recommendation.
8. **Electronic Air Cleaner**, select either **Cumulative Hours** or **Months**. Adjust the period per the manufacturer recommendation.
9. Press **OK** when you are done.

Expired Service Reminders

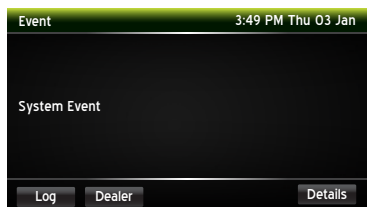

1. Select **Details**.

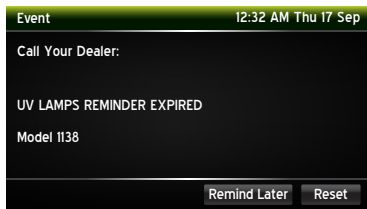


1. Select action for expired Service reminder.
 - a. **Reset** – reset service alert timer.
 - b. **Remind Later** – specify days to notify later.



A. Reset

Step 1 - After replacing consumable, select **YES** to reset the reminder timer.

Step 2 - Press **OK**.

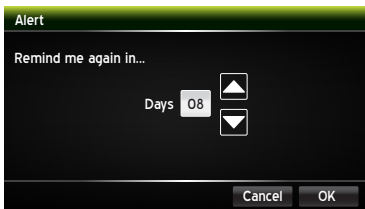


B. Remind Later

Step 1 - To be reminded at a later date, set duration of days using **up** and **down** arrows.

Step 2 - Press **OK**.

Trilingual Communicating Control

Your Communicating Control's language is preset to English. It comes equipped with 2 other languages to choose from. To switch to a different language, follow these steps.

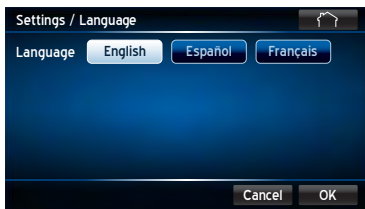

1. Press **Menu**.
2. Press **Settings** icon.
3. Press **Language** icon.
4. Make your language selection.
5. Press **OK**.

Temperature Format

Your Communicating Control's temperature format is preset to Fahrenheit. To switch to Celsius temperature format, follow these steps.



1. Press **Menu**.
2. Press **Settings** icon.
3. Press **Temp F/C** icon.
4. Make your temperature format selection.
5. Press **OK**.

Dealer Contact Information

Your installer dealer/contractor contact information can be stored in your Communicating Control. To view your dealer/contractor contact information, follow these steps.

1. Press **Menu**.
2. Press **Dealer** icon.

Screen Lock



To prevent tampering with your Communicating Control, the screen can be fully locked. To activate the screen security setting, follow these steps:


1. Press Screen Lock button on the Home screen or
2. Press **Menu**, Press **Settings** icon, and Press **Security** icon.
3. Press **ON** icon to activate screen lock settings.
4. Press **OK**.
 - a. You will be prompted to enter your new **PIN** number if you have not already done so.
5. Press **OK**.

Your screen security is now activated. Make sure you remember your pin number.

Screen Cleaning



1. Press **Menu**.

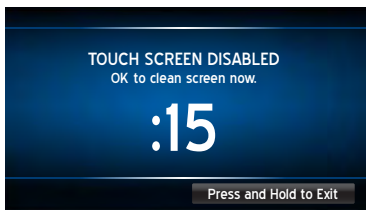

2. Press **Clean** icon to lock the screen for cleaning. The screen will remain locked for 15 seconds to allow you to clean the screen without changing any settings. After 15 seconds, normal screen operation will resume. If more time is needed for cleaning, repeat steps 1 and 2 above.

NOTICE

Do not spray any liquid directly on the thermostat. Spray liquids onto a cloth, and then use the damp cloth to clean the screen. Use water or household glass cleaner. Do not use abrasive cleansers.

APPENDIX

Frequently Asked Questions and Answers.

Q: Next to Fan on the Home screen, Auto or On is shown. What does this mean?

A: The Fan is set for Auto (to run with equipment) or On (to circulate air in your home). See "Fan Settings" on page 9 for more information.

Q: Why doesn't the Communicating Control respond when I touch the keys?

A: Check to determine if the screen is in the Locked or Clean mode. See "Screen Lock" on page 28 or "Screen Cleaning" on page 29.