

AUTO SECURITY
COMPUSTAR



2W907R Two-Way FM Remote

USER'S GUIDE

FCC ID : O44J2W907R

FCC ID : O44J2W907A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION : Changes or modifications not expressly approved by Firsttech, LLC, could void the user's authority to operate this device.

USER'S GUIDE

2W907R

FCC ID : O44J2W907R
FCC ID : O44J2W907A

By Firsttech, LLC.
Website: www.compustar.org

By Firsttech, LLC.

Website: www.compustar.org

TABLE OF CONTENTS

1. Safety Information	Page 4
2. Remote-Pager: 2W/907R w/LCD	Page 4
3. Description of Remote Appearance	Page 5
4. CompuGLO color LCD	Page 5
5. LCD Icons	Page 6
6. Remote-Pager Button Functions	Page 7
7. More Button Functions	Page 8
5. (I) Door Lock	Page 9
6. (I) Door Unlock	Page 9
7. (I-) Auto Arming	Page 9
8. (II-) Auto-Start Function	Page 10
9. (III-) Trunk Release	Page 10
10. (IV) Query Function	Page 11
11. (IV-) Panic Mode	Page 11
12. (I+II) Siren Chirp Delete for Arm/Disarm ON/OFF	Page 11
13. (I+III) Valet Mode	Page 12
14. (I+III-) Dual Stage Shock Sensor	Page 12
15. (I+IV) Ignition Lock	Page 12
16. (II+III) Passive Arming/Active Arming	Page 13
17. (II+IV) Timer(24 Hours) Reservation	Page 13
18. (III+IV) Turbo Mode	Page 14
19. (III+IV-) Recording & Play on Voice Module (Optional)	Page 14
20. (II) Aux1	Page 14
21. (II) Aux2	Page 14
22. Real Time Remote Paging Functions	Page 15
23. R.P.S(Remote Paging System)	Page 15
24. Keyless Entry with R.P.S Sensor	Page 15
25. Paging for Shock Sensing	Page 16
26. Paging for Theft	Page 16
27. Low Car Battery Alert	Page 17
28. Starter-Kill Function	Page 17
29. Reporting Door Opening	Page 17
30. Propane gas powered vehicles	Page 17
31. FM Antennas	Page 18
32. Remote-Pager Learn Routine	Page 19
33. Adjustable by Magicar Users	Page 19

Safety Information

Please take these safety precautions under the following conditions:

1. Servicing the vehicle

When servicing (i.e. changing the oil, washing your car) your automobile, the CompuStar system should be in Valet Mode. There is a safety shutdown switch under the hood that deactivates the remote starter function if the hood is open. However, if the switch has been damaged or the switch has been installed improperly, the vehicle may start when Button II is pressed for 2 seconds even if the hood is open.

2. Lending your vehicle to others

Whenever you loan your vehicle to an individual who is not familiar with CompuStar, please put the vehicle in Valet mode. This will prevent the vehicle loaner from accidentally activating the CompuStar auto-security system.

3. For manual transmission vehicles

If the CompuStar 2W907R is installed in a manual transmission vehicle, extra precautions are required because the CompuStar does not monitor the gear shift:


Important! Under normal circumstances, Reservation Mode is cancelled when a door or hatchback opens. Please verify if the opening of any door or hatchback cancels Reservation Mode. If any of the doors or hatchback is not monitored by CompuStar because of improper installation or a faulty dome light switch, do not use the CompuStar and take your vehicle to the dealer immediately for repair. Do not set Reservation Mode when the window(s) are open or if there is anyone inside of the vehicle including animals.

Remote-Pager : 2W907R w/LCD

The model name, 2W907R, stands for **Two Way Frequency Modulation Remote with Liquid Crystal Display**. This transmitter that allows you to activate multiple functions by pressing a combination of 4 buttons on the unit in order to transmit signals.

Description of Remote Appearance

The model name, 2W907R, stands for **2 Way FM 4 Button Remote**.

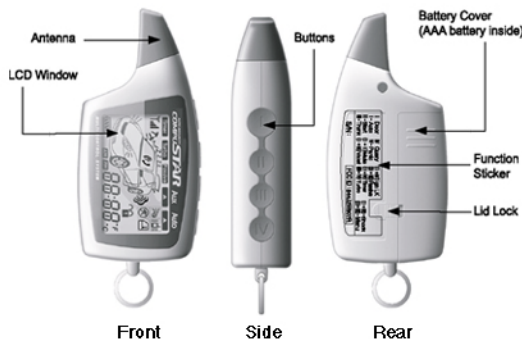

CompuGLO color LCD

The remote-pager comes with CompuGLO which is a unique color LCD display that visually tells the vehicle owner the security status of your car at all times. There are differing icons that will appear on your CompuGLO LCD indicating what your vehicle is currently doing.



LCD Icons

Icon	Explanation
	Indicates if Recording & Play on Voice Module (Optional) are on or off.
	Indicates if Timer Mode is on or off.
	Indicates if Turbo Start Mode is on or off.
	Indicates if Passive Arming Mode is on or off.
	Indicates that the Shock Sensor has been triggered.
	Indicates that Shock sensor is turned on or off.
	Indicates if you are in Valet Mode.
	Indicates if your car parking lights are flashing.
	Indicates that your car siren is turned on or off when you lock or unlock the vehicle.
	Indicates if RPS is on or off.
	Indicates that someone is paging you from your vehicle.
	Indicates that your remote-pager is transmitting signals to the controller unit.
	Indicates if Vibrator is on or off.
	Display if your car is lock or unlock
	Displays remaining battery life.
	1. Time Clock. 2. Inside Temperature of the vehicle. (°F °C) 3. Remainder of the engine running time. 4. Remainder of the battery power.
	Indicates if Ignition Lock/Unlock is on or off.

Icon	Explanation
	Displays if your door is open.
	Displays if your vehicle has auto-started properly or ignition on.
	Displays if your trunk is open.

Remote-Pager Button Functions

	Button	Pressed For	Function
1	I	1/2 sec	Alarm Mode - on/off, RPS - on/off, Siren Off, Starter Kill (Anti-Grind) - on/off
2	I - ①	2 sec	Auto Arming turned On.(Auto icon will be turned on).
3	I - ②	2 sec	Longer range Auto Arming On.(Auto icon Flashes.)
4	I - ③	2 sec	Auto Arming turned Off.
5	(III+IV) -	1/2 sec	Recording & Play on Voice Module(Optional)
6	II	1/2 sec	AUX1
7	III	1/2 sec	AUX2
8	IV	1/2 sec	Query Function
9	II -	2 sec	Auto-start Function - on/off
10	III -	2 sec	Trunk Release
11	IV -	2 sec	Panic, Press I to shut off Siren.
12	(I + II)	1/2 sec	Siren Chirps for Lock/Unlock-on/off
13	(I + III)	1/2 sec	Valet Mode - on/off
14	(I + IV)	1/2 sec	Ignition Lock - on/off.
15	(II + III)	1/2 sec	Passive Arming - on/off.
16	(II + IV)	1/2 sec	Timer Start Mode - on/off
17	(III + IV)	1/2 sec	Turbo Mode - on/off

	Button	PressedFor	Function
18	(I + III) -	2 sec	Shock Sensor - on/off
19	(I + II) -	2 sec	Programming Menu 1 - Installer Only
20	(I + IV) -	2 sec	Programming Menu 2 - Installer Only

Note : I button Proceeds in (1) → (2) → (3) → (1)..... repeatedly.

Note : " — " Represents pressing the button for 2 seconds.

" () " Represents simultaneously pressing the buttons.



" () - " Represents simultaneously pressing the buttons for 2 seconds.

More Button Functions

(1) Time Setting

	Button	PressedFor	Function
STEP 1	(II + III) -	2 sec	Pr o g Beep sound for confirmation
STEP 2	(I)	1/2 sec	Time setting is on. The numbers flash. Beep Sound.
STEP 3	(I)	1/2 sec	Change time.
	(II)	1/2 sec	Change minutes.
STEP 4	(II + III) -	2 sec	Time setting is off. Beep sound. You may continue for motion option.

(2) RPS & Vibrator on or off select between *C and *F for temp.

	Button	PressedFor	Function
STEP 1	(II + III) -	2 sec	Pr o g Beep sound for confirmation
STEP 2	(III)	1/2 sec	 ON/OFF RPS on or off, beep sound for confirmation.
	(IV)	1/2 sec	 ON/OFF Vibrator on or off, beep sound for confirmation.
	(I + IV)	1/2 sec	Select between *F and *C

Note : The step 2 has to be completed within 15 seconds.

(I) Door Lock



If the doors are closed and unlocked, you can lock and arm the vehicle by pressing Button (I) for a 1/2 second. The siren chirps and the parking lights flash once to confirm the lock and arming.

(I) Door Unlock



If the doors are closed and locked, you can unlock and disarm the vehicle by pressing Button (I) for a 1/2 second. The siren chirps and the parking lights flash twice to confirm the unlock and disarm.

If you hear four chirps and 4 flash of the parking lights, that means the alarm went off while the vehicle was armed.

(I -) Auto Arming



You can turn this function on or off by pressing Button (I) for 2 seconds. When set to Auto arming, your security system will arm automatically after all the car doors are closed, your remote is away

from the vehicle by more than 50 to 100 ft **and 15 seconds have passed since the last Auto Disarm**. Your system will disarm automatically if your remote comes within 50 to 100 ft radius from the vehicle.

▲ Setting Auto Arming Function.

The range varies significantly depending on the radio signal environment.

Each time you press **I** button for 2 seconds :

- ① First time : Auto icon is turned on.
- ② Second time : Auto icon flashes - for longer range.
- ③ Third time : Auto icon is turned off.

(II-) Auto-Start Function

Press Button **(III)** for 2 seconds to auto-start an automatic transmission engine. Upon receipt of the signal from the remote, the system will confirm the receipt by a chirp. A manual key in the ignition is required to drive the car.

Insert your key in the ignition and turn the key to On position within 20 second after you open the door of vehicle. The engine will shut off in 20 seconds after opening the door if you do not insert the key and turn to On position. Do not crank the starter while the vehicle is running.

The engine will run 15/25/45/5 minutes and then shut off.

If your remote-pager has a problem starting the vehicle, Magicar will try 2 additional times. If the engine does not start after the third attempt, please call your authorized Magicar dealer.

▲ **88:88** shows the remainder of the engine running time.

(III-) Trunk Release

Press Button **(III)** for 2 seconds in order to unlock and release your trunk door. The installation of this mode is available only if your vehicle has a trunk actuator.

Note that the trunk release function will not only release the trunk but will unlock all the doors as well. If the trunk sensing wire has been connected, the reservation will be cancelled when you open the trunk in the manual transmission mode.

(IV) Query Function

Query Function allows the owner to visually monitor the status of your car by looking at the remote-pager MagiGLO LCD icons.

Press Button **(IV)** for a $\frac{1}{2}$ second to activate the Query Function.

You will receive one of the following

response if you are within the transmitting distance:

	LCD	Siren in the vehicle
Armed, engine not running	Beep, Beep, Beep	chirp
Disarmed, engine not running	Beep, Beep	chirp, chirp
Armed, engine running	Beep/Beep, Beep/Beep, Beep/Beep	chirp, chirp, chirp
Disarmed, engine running	Beep/Beep, Beep/Beep	chirp, chirp, chirp, chirp

▲ Query tells you the inside temperature of the vehicle.

It tells you the temperature with either **°F** or **°C**

▲ Query tells you the battery voltage also.

Press **IV** for Query. Press one more time within 6 seconds, it will tell you the battery's voltage.

(EX) For example, if the battery voltage is 12.6 V, it will show **12_6**

(IV-) Panic Mode

Press Button **(IV)** for 2 seconds to enter Panic Mode. In this mode, the car will arm if not armed already and the siren will activate and the parking lights will flash for 90 seconds. Panic mode will stop the remote start.

In order to disengage Panic Mode, press Button **(II)** for a $\frac{1}{2}$ second.

Then, press Button **(I)** for a $\frac{1}{2}$ second to unlock/disarm your vehicle.

(I+II) Siren Chirp Delete for Arm/ Disarm ON/OFF

With this programming, the speaker icon in the LCD will disappear and siren chirp is deleted. Note: Siren will go off if door sensor, shock sensor, or panic mode is activated.

(I+III) Valet Mode

The only feature operating in valet mode is the keyless entry function and optional auxiliary functions. Valet Mode is very useful when washing your vehicle or having it serviced.

((I+III)-) Dual Stage Shock Sensor

Press Buttons (I+III) for 2 seconds to activate or deactivate the dual stage shock sensor. The dual stage shock sensor will activate in 30 seconds after the Magicar alarm mode is armed. When the dual shock sensor is engaged, the remote-pager security alerts will be triggered by the following:

- ▶ Light impact to your vehicle will activate the **first stage shock sensor** and the car siren will chirp 4 times in addition to the parking lights flashing 4 times. The remote pager unit will beep and the hammer icon shows up a couple of times
- ▶ Heavy impact to your vehicle will activate the **second stage shock sensor** and the car siren will chirp for 30 to 60 seconds and the parking lights will flash for 30 to 60 seconds. The remote-pager will be notified audibly and a hammer icon will blink in the LCD.
Press Button I for a 1/2 second to turn off the second stage shock sensor sirens and flashing lights.

(I+IV) Ignition Lock

This programmable option enables your vehicle to automatically lock the doors in 30 seconds after the vehicle has been started with a key while all the doors are closed.

In addition, the vehicle will automatically unlock the doors upon pulling the key out from the ignition.

(II+III) Passive Arming/ Active Arming



1. You can turn this function on or off by pressing Buttons (II+III) for a 1/2 second. **Passive Icon will be highlighted in the LCD.** When set to passive arming, your security system will arm automatically 30 seconds after all the car doors are closed.

Passive locking means the door will lock when the system is passively armed. In the default factory setting, the system is armed and locked actively, which means the system will only arm/lock when the remote-pager is utilized.

2. If you select both Auto Arming and Passive Arming, Auto Arming takes priority over Passive Arming.
3. Under the Manual mode, the Passive arming will lock the doors upon reservation. Under the Turbo mode, the Passive arming will lock the doors upon closing the doors after the ignition has been turned off.

(II+IV) Timer (24 Hours) Reservation

You may reserve the remote starting time by 1) setting up the starting time and 2) turning on Timer icon.

▲ Procedure

1. Time icon should be turned off.
2. Set up the starting time. Make sure the current time is correct.
3. Turn on Time icon.

	Button	Pressed For	Function
STEP 1	(II+III)-	2 sec	Pr o9 Beep sound for confirmation.
STEP 2	(II)	1/2 sec	Time setting is on. The numbers flash. Beep sound.
STEP 3	(I)	1/2 sec	Change time.
	(II)	1/2 sec	Change minutes.
STEP 4	(II+III)-	2 sec	Set up completed. Beep sound.

(III+IV) Turbo Mode



You can turn this feature on and off by pressing Buttons (III+IV) for a ½ second. Under this mode, engine continues running for 2 minutes after key has been taken out from the ignition.

This mode is useful with Turbo vehicles that need to be cooled down after long drive.

(III+IV)- Recording & Play on Voice Module (Optional)

The icon located on the left of Auto is On when pressed III & IV buttons simultaneously for 2 sec and converted to Recording & Play mode of Voice Module. And it can be recorded & played when pressed II and III for 0.5 sec. But, in case of not pressing within 60 sec, the Recording & Play mode is off automatically.

(II) Aux1

Aux 1 will go out if the button II is pressed for 1/2 second.

There are four different types of outputs (Consult your installer) that are used to operate a sunroof, a mirror or any other auto accessories.

(II) Aux2

Aux 2 will go out if the button III is pressed for 1/2 second. Likewise, it has 4 different types of outputs.

Note :

1. The duration of the Aux output should be vary depending on the equipments that these outputs operate.
2. These Aux outputs are 250 mA outputs. Therefore, please use relays if you connect these outputs to equipment that uses more than 250 mA. Otherwise, you will damage these output circuitries.
3. These Aux functions will require extra installation fees. Please consult your installer.

Real Time Remote Paging Functions

Types : R.P.S(Remote Paging System), Theft and Shock Sensing Whenever one of these is triggered, it is reported to the remote with beeps and flashing icons in the LCD. In case when the owner has not been alerted, the remote continues making beeping sounds until turned off.

Theft - one beep every 2 seconds ;

Shock Sensing - one beep every 4 seconds ;

R.P.S - one beep every 6 seconds.

These functions will be availed while the vehicle is armed.

R.P.S(Remote Paging System)



R.P.S is a feature that allows an individual to page the owner of a vehicle by simply tapping the R.P.S sensor on the front windshield of the car.

This vibration is detected and your remote-pager will ring four times and a telephone icon will appear on the LCD indicating that someone is paging you from your vehicle.

Keyless Entry with R.P.S. sensor

With the new patented RPS system, you can open the door without a key or a remote.

Programming 4 number pass words (1111 - 9999)

Step 1: Key On

Step 2: Door Open

Step 3: Knock 10 times. Each time the green LED will flash once. It should be less than 1.5 seconds between the knocks.

Step 4: The red LED will flash rapidly. If it doesn't, go to the step 1.

Step 5: Enter your 4 number pass words by knocking - each number 1-9.

To enter the first number, knock the same number of times. The interval between the knocks should be less than 1.5 seconds. Then, wait to confirm by counting the number of flash of the red LED. If the red LED flashes a wrong number, go back to the step 1. If the red LED confirms a correct number, continue entering the other 3 numbers.

Step 6: Signal Lights will flash once to confirm the programming.

 
Keyless Entry with R.P.S sensor

- Step 1: Knock 10 times Each time the green LED will flash once. It should be less than 1.5 seconds between the knocks.
- Step 2: The red LED will flash rapidly.
- Step 3: Enter the pass words. To enter the first number, knock the same number of times. The interval between the knocks should be less than 1.5 seconds. Then, wait to confirm by counting the number of flash of the red LED. If the red LED confirms a correct number, continue entering the other 3 numbers. If a wrong number is entered, the RPS will send out signals to the remote. Therefore, you go back to the step 1.
- Step 4: The door will unlock and remote will show unlock with two beeps.

Note : You may try up to 5 times within 30 minutes. After that, the keyless function will not be available for the next 24 hours or until you unlock the door with the remote whichever comes first.



Paging for Shock Sensing



When the shock sensor is triggered by an impact in the vehicle, it is reported to the Remote that will beep and the hammer icon shows up for 7 seconds. Press Button  for a ½ second to turn off the shock sensor sirens and flashing lights.

Paging for Theft



When the vehicle is armed, unauthorized car door opening will activate the car siren the remote will be notified audibly and the door icon will appear in the LCD. The siren will go off even under the mute mode. Press Button  for a ½ second to turn off the car siren and flashing lights. Repeat this step (press Button ) for a ½ second) again to disarm alarm mode.

Low Car Battery Alert



When the driver exits the vehicle with the parking lights on, it is reported to the remote upon arming (active, passive or auto). The remote will make beeping sounds, Beep, Beep.

Starter-Kill Function

In alarm mode, the starter kill function is activated. This feature disengages the starter mechanism on your car, which prevents you from starting your car even with a manual key when your vehicle's alarm mode is activated.

Reporting Door Opening



The vehicle will indicate the door opening by flashing the signal lights. (This is the installer option)

Propane gas powered vehicles

In the case of propane gas powered vehicles, there is a risk of left over gas (anywhere between the gas tank and the engine cylinder) freezing during winter. Therefore, it needs to burn the left over gas completely before the engine is turned off.

▶ 25-1 How to burn the left over gas completely.

25-1-1 Automatic Transmission Vehicle Shuts off the Gas Valve switch before turn off the ignition so that the left over gas in the system burnt completely. Then, turn off the ignition and take the key out.


25-1-2 Manual transmission vehicle or turbo mode of the automatic transmission vehicle. In the case of the manual transmission vehicle or turbo mode of the automatic transmission vehicle, turn off the ignition first, shut off gas valve switch and then get out of the vehicle and close the door. The engine will shut off upon the left over gas has been completely burnt.

▶ 25-2 In the case of the manual transmission vehicle or turbo mode of the automatic transmission vehicle, if you do not shut off the gas valve switch there will be left over gas in the system after the engine is shut off 4 minutes running after door closing. And this left gas will be refrigerated at winter, so you have to shut off gas valve switch like above 25-1-2.

► 25-3 Driving in short distance after remote-start for a gas powered vehicle


After the remote-start, if you drive the vehicle for less than 4 minutes and 20 seconds, the engine will continue running for 4 minutes and 20 seconds, that is because of the gas option, that shuts off the gas valve in 20 seconds and shuts off the ignition in 4 minutes after the door opening after remote start.

So in the case of Manual Transmission Vehicle, the system can not be entered to reservation mode in this 4 minutes and 20 seconds period.

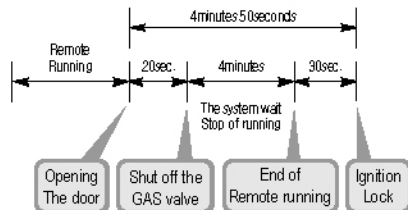

FM Antennas


Installation of FM or SS Antennas and RPS. The antennas have been calibrated for horizontal installation at the left-top corner of the windshield. Different installation may adversely affect the transmitting distance.

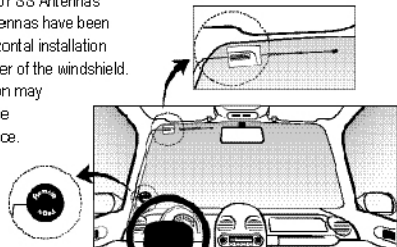

Remote-Pager Learn Routine

If you replace or add additional remotes, you can program up to three remotes, please perform the following procedure:

Step 1 : Activate ValeT/Programming mode by manually turning the ignition on and off five times (**between Acc and On**) with car key within a 10 second period. The parking light will flash once with successful completion of this step.

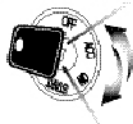


Step 2 : Within a 10 second period after cycling the ignition for the 5th time, press button I. The car parking lights will flash once to confirm that the transmitter has been programmed. Continue program the additional remotes. The parking lights will flash two times when the programming mode is expired.

Adjustable by Compustar Users

26-1 Adjusting the sensitivity of the shock sensor


It is advised that you may want to know where the shock sensor is located so that you can adjust the sensitivity of the volume depending on your need.

Warning: Please be careful not to turn the volume beyond its limit. The volume can be damaged.

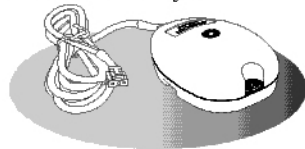


► 26-2 Adjusting the volume of the siren

The volume of the siren can be reduced by cutting off the jump wire attached to the siren.

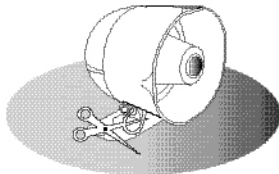

► 26-2 Adjusting the volume of the R.P.S Sensor

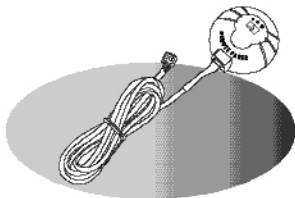

Limited Lifetime consumer Warranty

Firstech, LLC warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed ; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product.

When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to Firstech, LLC., 3415 S. 116th St Seattle, WA 98168, USA within the warranty period, and if the product is defective, Firstech, LLC, will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH.

THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD.

NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages.

This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

Firtech, LLC. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE that may or may not result from the operation of Compustar.

NOT WITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Your Warranty

The product's warranty is automatically void if its date code or serial number is defaced, missing or altered. This warranty will not be valid unless you have completed the registration card and mailed it to Firtech, LLC., within 10 days after the purchase to the address listed on the registration card.