

**I853W**

**User manual**



## I . Introduction

Congratulations on the purchase of the Tablet !

 
This device is built-in high performance Wifi receiver module, G-sensor, also can bring you into the portable media Tablet world and fulfilled your entertainment needs. It can support picture, video, music, E-book, games, online chat and other functions, moreover, various settings will fully show your individuality.

This manual contains important safety and operating information in order to prevent accidents, please read this manual thoroughly and keep it for future reference.

## II . Safety precautions

- To use this Tablet safely, please read and follow the instructions in this manual carefully before use.
- Never use the Tablet while driving or when operating any vehicle, as this could cause an accident. It is also against the law in many areas. Take care when using the Tablet outdoors, especially when crossing the street.
- Do not listen to music at very high volumes using the earphones as this can permanently damage your hearing.
- Keep the Tablet clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the Tablet in high temperature places (over 40°C), especially not in a car with the windows closed in summer.
- Keep the Tablet away from strong magnetic fields.
- Please don't turn on the device in where the wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Press the Tablet's buttons gently. Pressing them or the screen too hard can damage the Tablet.
- Do not use the Tablet in an electronics-prohibited area, such as in an airplane.
- Do not use the Tablet in an extremely dry environment, as this can lead to static discharge, which can damage the Tablet.
- Do not subject the product to harsh impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not attempt to dismantle or repair this unit yourself, Repairs should only be performed by qualified personnel only.
- We will not be responsible for any memory loss caused by product damage, repairs or other reasons.
- Disconnect the appliance from the power source when cleaning.
- In order to prevent program failure, never disconnect the Tablet suddenly from a PC during downloading, uploading or formatting to prevent program failure.
- Use a slightly damp, lint-free cloth to clean this appliance. Do not dismantle the Tablet or use alcohol, thinner or benzene to clean the surface of the Tablet .

### III. About device

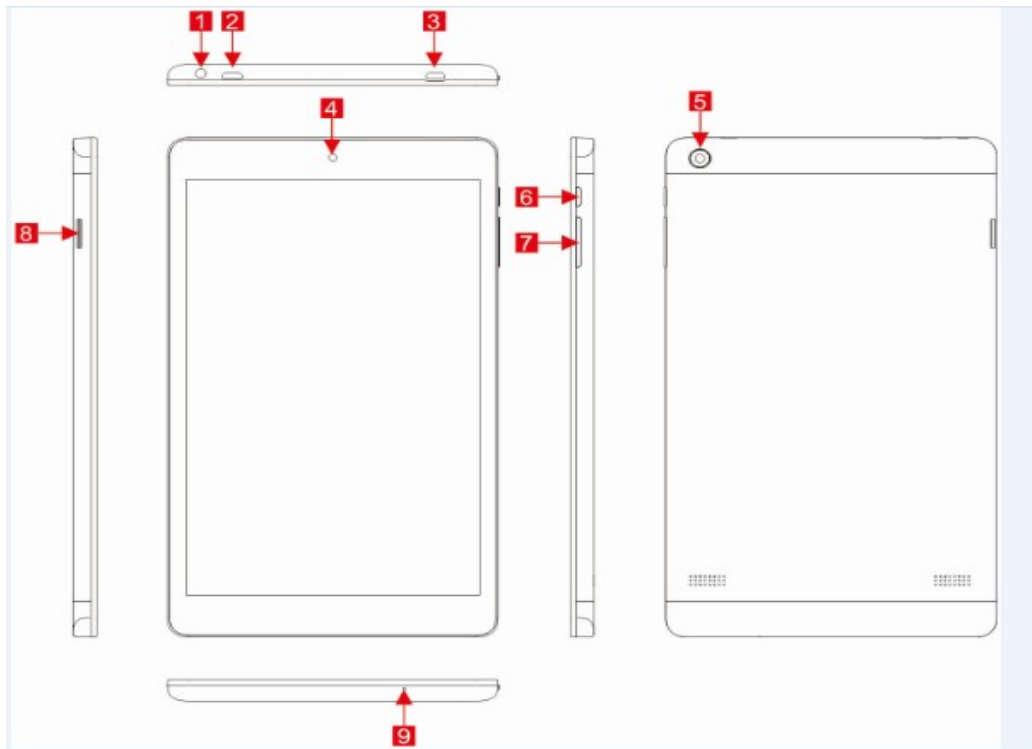


1. Headphone jack;
2. USB port;
- 3 HDMI port;
4. Front Camera;
5. Rear Camera;
6. Power key;
7. Volume +/- key;
8. TF/microSD card slot ;
9. MIC;

## IV. Introduction to Desktop

 1. Windows 8.1 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

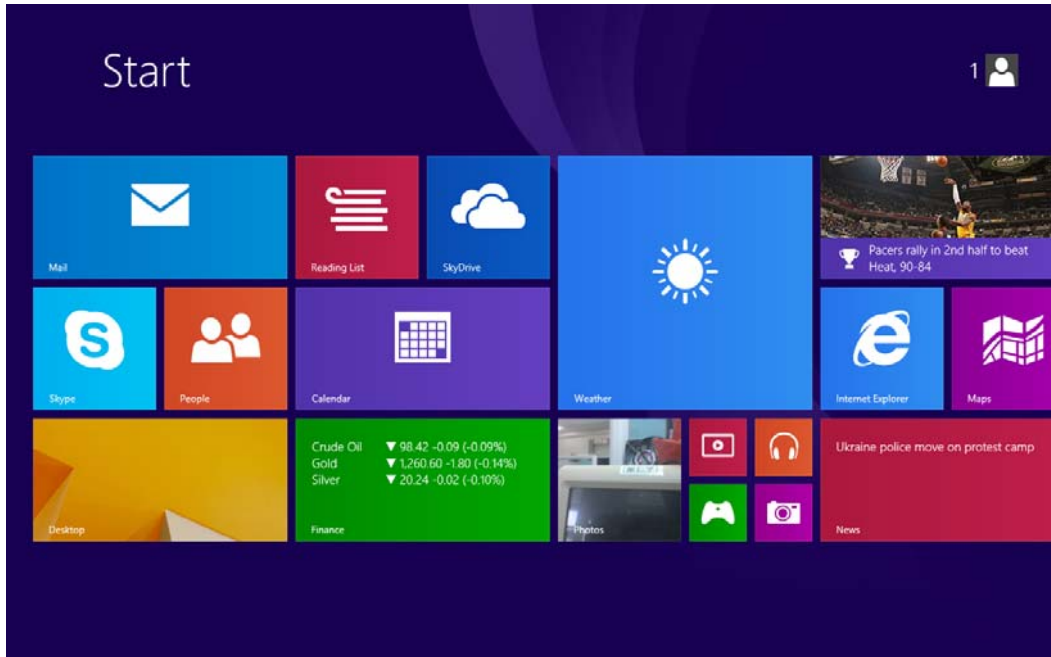

### 2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.

### Reduce



On the touch screen, narrow two fingers to reduce the image.

### Enlarge



On the touch screen, widen two fingers to enlarge the image.

### Slide downward



In start screen, slide from the top of the screen to view all application programs

### Slide with finger



In start screen, slide finger right and left to move the image.

 
### Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

## 3. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.

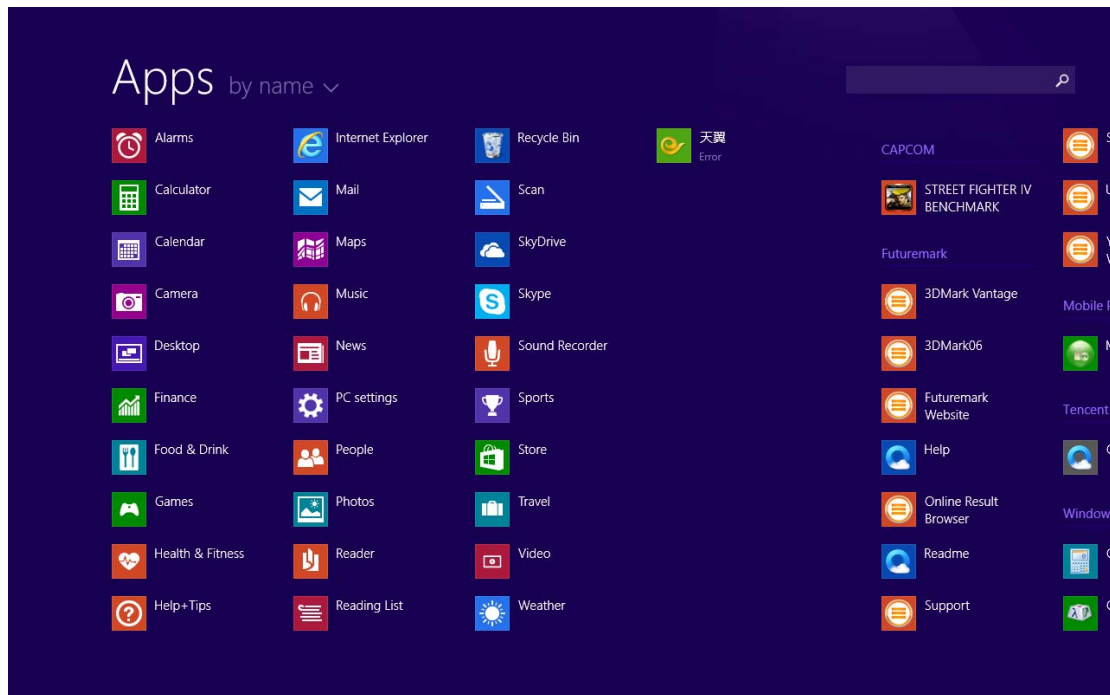

 If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

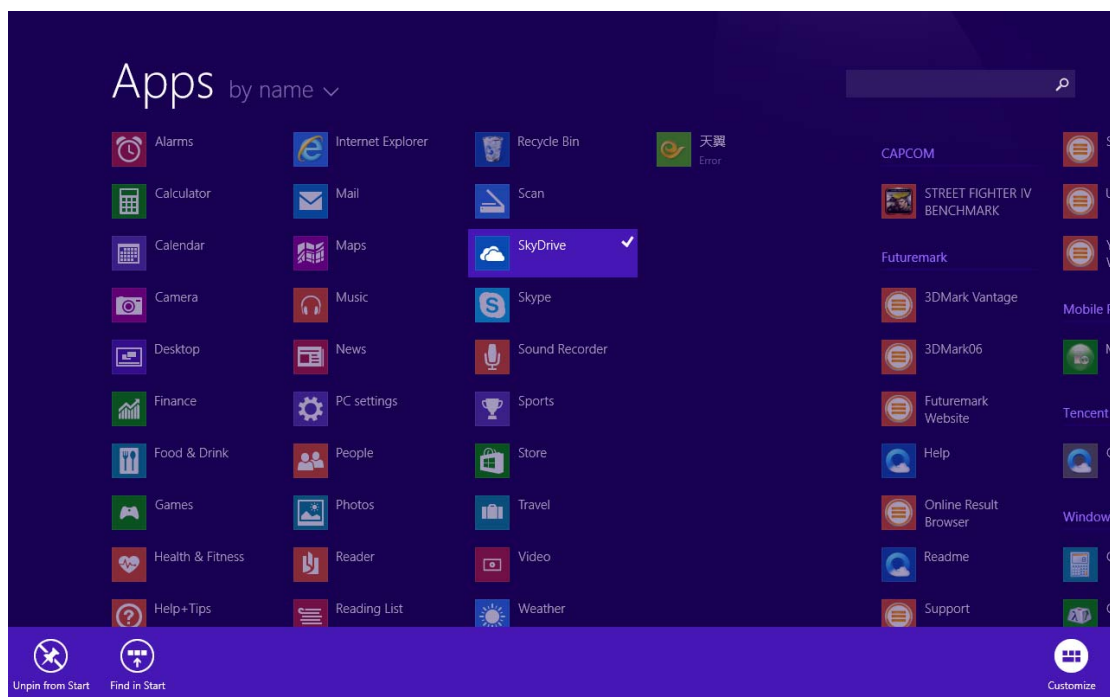


Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.



#### 4.Charm menu column

 Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.

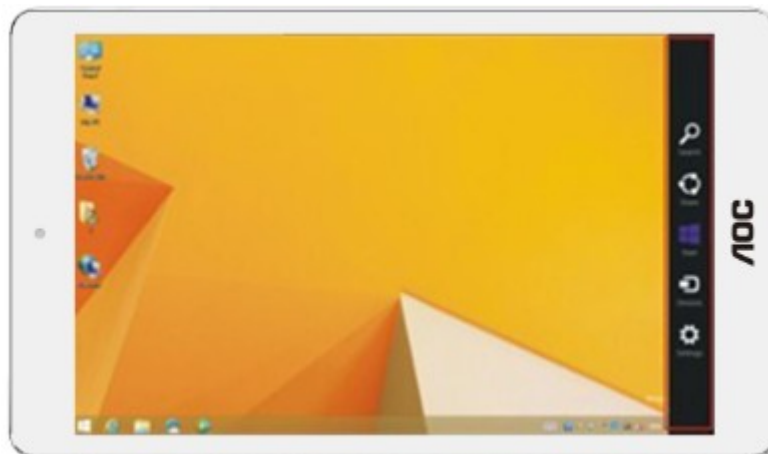

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Can let you search the files and application programs in the Tablet PC.



Can let you share the program through social exchange website or e-mail.



Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.

 


Can let you read, write and share files, connect external screen or printer with the device




Can let you set up the Table PC.


Search menu

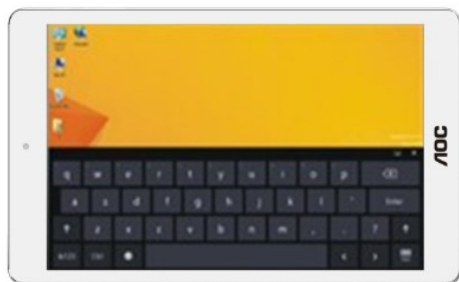


Share Menu

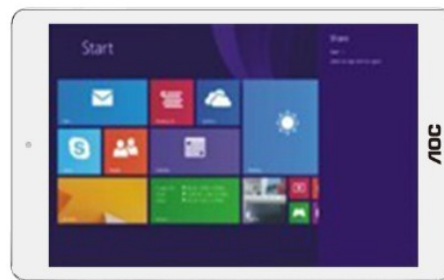 

Device Menu

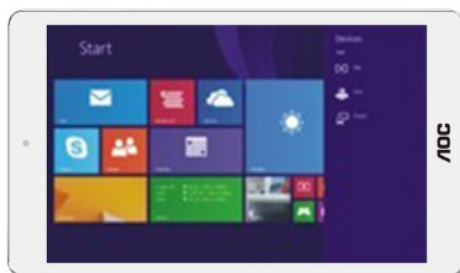 

Set up Menu

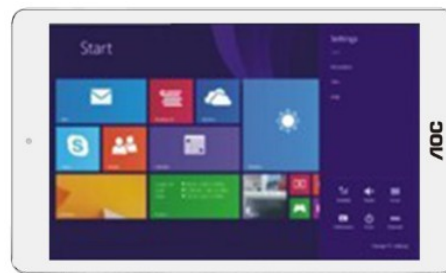 

## 5. Dual-Screen Application


On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.





 
(Figure 1)

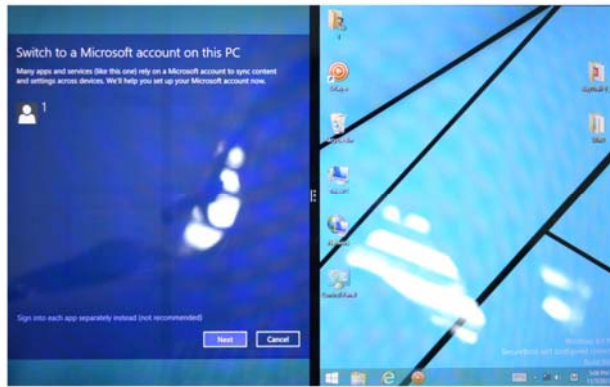

(Figure 2)


## V. Basic Operations
 
### 1. Dormancy, restart and power off

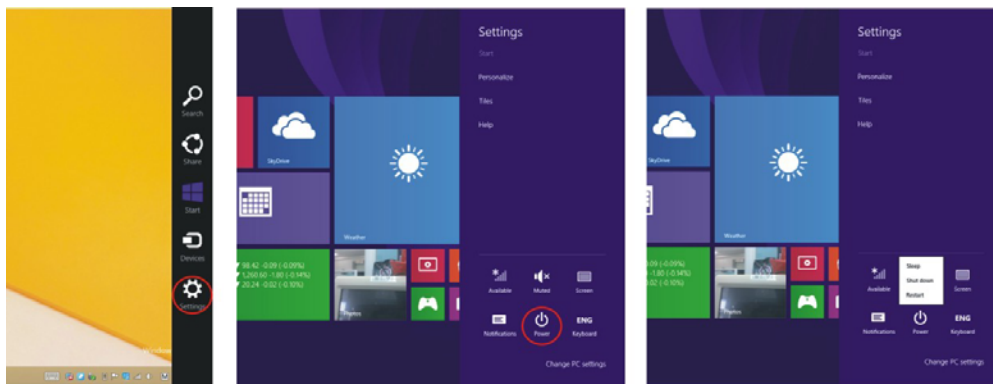

## 2. Security Management
 
### User and password setup

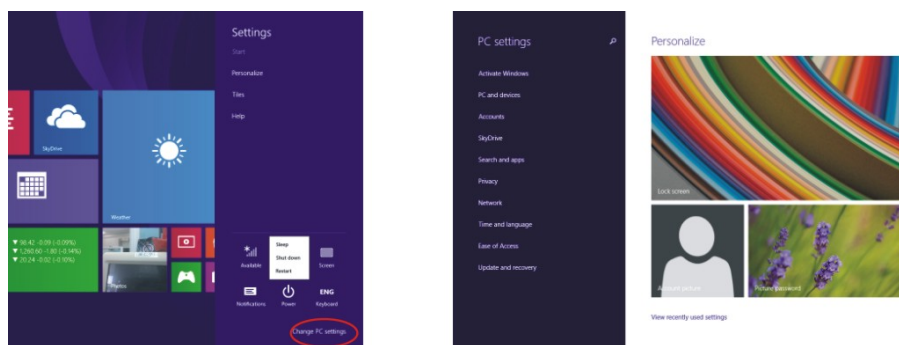

Method for quick setup:

Click the “Setup” button in “Charm” setup, and select “Change computer setup”. Select “User” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

## VI. Specifications

LCD Display	Size	8 Inch IPS Screen Capacitive Touch Screen
	Resolution	800*1280 pixels
OS	Windows 8.1	
CPU	Intel Baytrail / Z3735F, 1.33-1.83 GHz	
RAM	2GB DDR3	
Wifi	802.11b/g/n	
Camera	Front 0.3M,Back 5.0M	
Built-in Flash	16GB	
Capacity Expansion	Support Micro SD Slot (Max. 64GB)	
Power Supply	Built-in 4400mAH Lithium rechargeable battery, 5V@2.0A	
Working temperature	-4 ~ 40 °C	
Languages	Multiple languages	
Dimensions	208.26*122.40*8.8mm	
Accessories (Optional)	Manual, Adapter, USB cable, Gift box etc.	

## VII. Troubleshooting

Problem	Solution
The device will turn itself off after a few seconds	Check that the battery is charged.
No volume is heard	Adjust the volume level Check if audio file is broken
Screen is hard to see in bright light.	Adjust the screen brightness in the system menu. Avoid using the reader in direct sunlight.
Data on the screen is corrupted or a program is not responding properly	keep power button for long time to restart your Tablet PC
Can't copy file into the device	Check if the device is connected to the computer correctly. Check if the memory space is full. Check if the USB cable is broken

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.