

# ZAGG

## Bluetooth Keyboard

ZAGG Folio For LG G Pad 8.3 LTE

Keyboard Instructions

### **\*WARRANTY REGISTRATION**

Your Keyboard Case comes with a one-year manufacturer's warranty. In order to activate the warranty, you must register your Keyboard Case as well as keep your purchase receipt. If you purchased your Keyboard Case from ZAGG.com, ZAGG. has already registered it and has a copy of your proof of purchase.

NEED MORE HELP? PLEASE SEE OUR FAQ SECTION AT: [www.ZAGG.com/faq](http://www.ZAGG.com/faq)

### **INTRODUCTION**

Congratulations on being the proud new owner of the ZAGG Keyboard Case, made exclusively for the LG G Pad. The Keyboard Case has been designed to make your mobile typing needs fast and easy. Its spacious keyboard layout and island-style keys give you the room you need to type naturally, with fewer typos. And with its full-body protective case that doubles as a stand, you can go anywhere knowing your G Pad is safe and ready for work and play.

## Bluetooth Specification:

Bluetooth Spec.: 3.0

Bluetooth protocols: A2DP 1.2, AVRCP 1.0, HFPV1.5

Transmission range: 10m

Transmission speed: 1~3M/S

Receiving sensitivity: -80dBm

Bit error rate: 0.1%

## Products Specification:

Operating parameter: Voltage: DC 3.1V~4.2V; current: <3mA

Charging parameter: DC 5V

Li-ion battery: 3.7V/190mAh

Environmental parameters: -20~+70°C, Relative Humidity: 10%~80%

## INSERTING/REMOVING YOUR G Pad

To insert your G Pad into the Keyboard Case open the cover

 
and position the Keyboard Case so that its keyboard is facing you. Then, with your G Pad in landscape mode and the volume controls facing up, set the bottom half of your tablet in the cover. Ensure your G Pad is settled on the cover's bottom (you may need to apply light downward pressure on your tablet). Next, snap the top half of your tablet into the cover. You should be able to feel when your tablet is secured. Check all of your tablet's corners to make sure they have seated properly.

To easily remove your G Pad, simply open the cover and apply a light pressure to the back of it. This will unseat your G Pad enough for you to grab its edge. Grasp your tablet's exposed side and lift/pull it out of the cover.



## POWERING ON AND OFF


To turn your Keyboard Case on, press the POWER button located in the upper right corner of the keyboard. A blue LED will illuminate briefly while the keyboard powers up. To turn your Keyboard Case off, simply press the POWER button again.

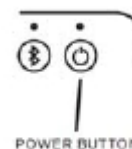

## PAIRING YOUR ZAGG Keyboard Case

Pairing the Keyboard Case with your G Pad is easy. The Keyboard Case should only need to be paired once, using the following directions. If the connection between your tablet and Keyboard Case is ever lost, simply repeat these steps.

 1. On your tablet select: SETTINGS > BLUETOOTH > ON.
2. Press the PAIR button on your Keyboard Case keyboard —

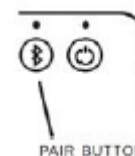

the PAIR button is located in the upper right corner next to the POWER button. A blue LED above the PAIR button will begin flashing and will continue to flash until your Keyboard Case and tablet are paired..

3. Your tablet's Bluetooth menu will display "ZAGG Folio" as an available device. Select it to complete pairing.

If your G Pad doesn't show "ZAGG Folio", select SCAN on your tablet's Bluetooth menu to search for it.

# CHARGING

Your Keyboard Case features a powerful lithium polymer battery that lasts for up to three months of normal use between charges\*. It comes with a charging cable you can use to charge it quickly and conveniently. To charge your Keyboard Case, simply follow these steps:

1. Plug the micro USB end of the charging cable into the charging port located on the side of the keyboard, just under the POWER button.
2. Plug the USB end of the cable into any USB outlet (including a ZAGGsparq, your computer, a wall outlet converter, etc.).
3. The LED above the POWER button will illuminate to indicate the Keyboard Case is charging. Wait until this light turns off, indicating a full charge. It usually takes 2-4 hours to completely charge your Keyboard Case.
4. When your Keyboard Case is fully charged, remove the micro USB connector and enjoy your Keyboard Case for up to three months before you need to charge it again\*.

\* Based on normal use of approximately 2-3 hours per day.



# BATTERY LIFE













As mentioned, the Keyboard Case features a powerful, rechargeable battery that lasts up to three months between charges\*. To check your Keyboard Case's remaining battery power, simply hold down the function (fn) key and press the battery key (also the alt key). The LED above the PAIR button will flash one of three ways.

1. Three green flashes indicate 50% or more battery life remaining.
2. Three yellow flashes indicate between 25%-49% battery life remaining.
3. Three red flashes indicate less than 25% battery life remaining. When your Keyboard Case reaches critical battery level, the red light will flash once every five minutes.

To help preserve battery life, your Keyboard Case will enter sleep mode if left on and not used for several minutes. To awaken your Keyboard Case, press any key. The Keyboard Case's battery has no memory and therefore may be charged whenever you wish. For optimal battery life, we recommend turning your Keyboard Case off when it will sit unused for a prolonged time.

 
# SPECIAL FUNCTION KEYS



Your Keyboard Case has been designed with the following special function keys to give you more control of your tablet.

-  HOME - Displays your tablet's home screen.
-  RETURN - Returns to the app or **program that was last open**.
-  LOCK – Activates and deactivates your tablet's sleep mode.
-  CUT – Cuts selected text and saves it to your clipboard.
-  COPY – Copies selected text to your clipboard.
-  PASTE – Pastes clipboard content in your selected field.
-  TRACK BACK – Skips to the previous track on your current playlist.
-  PLAY/PAUSE – Starts or pauses your current playlist.
-  TRACK FORWARD – Skips to the next track on your current playlist.
-  MUTE – Mutes your tablet's audio.
-  VOLUME DOWN – Decreases your tablet's volume.
-  VOLUME UP – Increases your tablet's volume.

# THE FUNCTION (fn) KEY

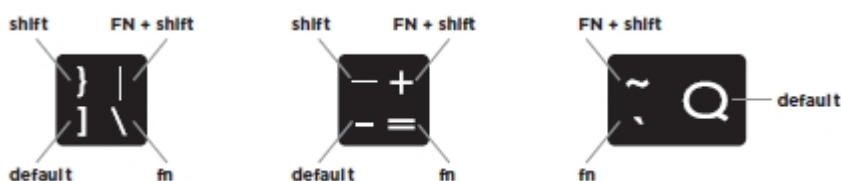The fn key operates many of the functions that appear at the top of a key that features two symbols. To activate these functions, hold the fn key down and press the desired key. A list of special fn keys and their operations is listed below.



- caps** CAPS – Activates the Caps Lock feature. To turn Caps Lock off, simply hold the fn key and press caps again.
-  VOICE – Activates your tablet's voice feature.
-  BATTERY SYMBOL – Indicates remaining battery life.
- Del** FN + DELETE – Forward Delete.

# TROUBLESHOOTING

If your G Pad does not respond to your Keyboard Case there may be a simple explanation such as a dead battery or an unsuccessful pairing. Please use the following to help troubleshoot your situation. If none of the following solve your issue, then please contact ZAGG's customer service and one of our trained professionals will be happy to assist you.

1. Restart your tablet and follow the Pairing instructions again.
2. Turn your Keyboard Case off and back on. You should see the LED above the POWER button illuminate briefly, if not, charge your Keyboard Case.
3. After charging, turn your Keyboard Case on. If the LED above the POWER button does not illuminate, and your keyboard doesn't operate correctly, please contact ZAGG's customer service.
4. Forget and re-pair your Keyboard Case. On your tablet select: SETTINGS > BLUETOOTH > ON. If you see "ZAGG Keyboard Case" listed as an available device, touch the arrow to the right of it and choose to have your tablet forget the device.
5. Press the PAIR button on your Keyboard Case and watch for the LED above it to flash blue.
6. Your tablet should display "ZAGG Keyboard Case" as an available device. Select it.
7. If your tablet gives you an error message, repeat the pairing process\*.

\* If you continually receive the same error message during pairing, or the above steps don't work, please contact ZAGG's customer service for assistance.

For more help please see our FAQ at: [www.ZAGG.com/faq](http://www.ZAGG.com/faq)

To reach a trained customer service representative, please use one of the following:

[ZAGG.com/support/contact.php](http://ZAGG.com/support/contact.php) | [questions@zagg.com](mailto:questions@zagg.com)

1-800-700-ZAGG [9244] | 00-1-801-839-3906 for international customers

For unparalleled scratch protection for your tablet, we recommend ZAGG's invisibleSHIELD?.

©2005 - 2014 ZAGG Inc. All Rights Reserved.

PATENT PENDING | NASDAQ: ZAGG | MADE IN CHINA

LG? and G Pad are registered trademarks of LG Electronics, Inc.

ZAGG?, invisibleSHIELD?, and ZAGG Keyboard Case are trademarks or registered trademarks of ZAGG Inc.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1: This device may not cause harmful interference, and 2: This device must accept any interference received, including interference that may cause undesired operation.

# Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.