

Acoustic

Quick Start

Getting Started

1. **Install:** Slide your phone into the protective case and press around the edges to ensure a proper fit.
2. **Enable Bluetooth:** Ensure your phone's Bluetooth is on.
3. **Power On/Off:** Press and hold the power button until you hear the power up tone. Hold the power button for three seconds to power off; an off tone will sound.
4. **Pair:** When powered on, the Acoustic Case automatically searches for devices to pair with. Select "iFrogz Acoustic Case" from your phone's Bluetooth menu to complete pairing. A tone will sound to indicate pairing is complete.
5. **Auto Pair:** After the Acoustic Case has paired to a device once it will automatically search for, and pair to, that same device again the next time the case is turned on. The Acoustic Case can remember up to eight devices for automatic pairing.
6. **Control** your music, calls, and volume from your phone and enjoy up to five hours of amped music and movies.

Charging

Connect the included micro USB charging cable here to charge your Acoustic Case.

LED Function

The LED next to the power button quickly shows the status of your Acoustic Case; refer to the following to understand its lighting.

Flashing Blue – Powered on and connected.

Flashing Blue Quickly – Pairing mode.

Flashing Red – Charging. The LED turns off when charging is complete.

Flashing Red – Low power.

For a full manual, including troubleshooting tips, visit iFrogz.com/manuals.



Acoustic

Instrucciones de Inicio Rápido

Primeros Pasos

1. **Instalación:** Insertar el teléfono dentro de la funda protectora y presionar por los lados, para asegurarse que encaje bien.
2. **Habilitar Bluetooth:** Asegurarse que el Bluetooth del teléfono está encendido.
3. **Encender / Apagar:** Presionar el botón de encendido hasta oír el tono de encendido. Presionar el botón de encendido durante 3 segundos para apagar; se oír un sonido de apagado.
4. **Emparejar:** Cuando se encienda, el Acoustic Case automáticamente buscare dispositivos para emparejarse. Seleccionar "iFrogz Acoustic Case" des del menú Bluetooth para acabar de completar el emparejado. Sonara un tono para indicar que el emparejado ha sido completado.
5. **Emparejado Automático:** Una vez el Acoustic Case se haya emparejado a un dispositivo, automáticamente lo buscare y se emparejara a este dispositivo cuando la funda este encendida.
6. **Controla** tu música, llamadas y volumen desde tu teléfono y disfruta de hasta cinco horas de música y películas amplificadas. El Acoustic Case puede recordar hasta ocho dispositivos para emparejarse automáticamente.

Cargar

Conectar el cable de carga incluido micro USB para cargar tu Acoustic Case.

Función LED

La LED al lado del botón de encendido muestra la situación de tu Acoustic Case, dirígete a lo siguiente para entender la iluminación.

Parpadeo Azul – Encendido y conectado.

Parpadeo Rápido Azul – Modo de emparejar.

Parpadeo Rojo – Cargando. La LED se apaga cuando la carga esta completa.

Parpadeo Rojo – Batería baja.

Para ver un manual completo con consejos para resolución de problemas, visite iFrogz.com/manuals.



Quick Start

Acoustic



Up to 5 hours
of Play Time



Protective



Case +
Speaker



Acoustic

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Acoustic

Caution

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Acoustic

Instrucciones de Démarrage Rapide

Pour Commencer

1. **Installer:** Glisser votre téléphone dans l'étui protective et presser les bords pour vous assurez qu'il est bien ajusté.
2. **Activer le Bluetooth:** Assurez-vous que le Bluetooth de votre téléphone est allumé.
3. **Allumer/Éteindre:** Presser et tenir le bouton power jusqu'à ce que vous entendiez une tonalité indiquant qu'il est allumé. Tenir le bouton power pendant trois secondes pour éteindre, vous entendrez une tonalité indiquant qu'il est éteint.
4. **Jumelage:** Une fois qu'il est allumé, l'Acoustic Case cherche automatiquement des dispositifs avec lesquels il pourra se jumeler. Sélectionnez "iFrogz Acoustic Case" à partir du menu Bluetooth de votre téléphone pour compléter le jumelage. Une tonalité se fera entendre pour indiquer que le jumelage est complet.
5. **Jumelage automatique:** Après que l'Acoustic Case aille été jumelé une fois à un dispositif, il commencera automatiquement à chercher le même dispositif, et à s'y jumeler, la prochaine fois que l'étui sera allumer. L'étui acoustique peut se rappeler de huit dispositifs pour un jumelage automatique.
6. **Contrôler** votre musique, vos appels, et le volume de votre téléphone et appréciez jusqu'à cinq heures de musique et de films amplifiés.

Chargement

Connecter le câble de chargement du micro USB inclut pour charger votre Acoustic Case.

Fonction LED

La LED à côté du bouton power affiche rapidement l'état de votre Acoustic Case, référez-vous à ce qui suit pour comprendre son éclairage.

Clignote Bleu – Allumer et connecter.

Clignote Bleu rapidement – Mode de jumelage.

Clignote Rouge – En chargement, la LED s'éteint quand le chargement est complété.

Clignote Rouge – Faible puissance.

Pour un manuel complet, incluant des conseils de dépannage, visitez iFrogz.com/manuals.

