

产品型号

3.2

76mm

142mm

### 切膜机 产品手册

**产品清单**

**外观及功能**

**使用说明**

**一、安装膜切刀头**

**二、电源连接、开机**

**三、切膜机操作**

首次使用时，点击设置网络，完成wif连接，点击下方功能栏“我的”找到选择语言完成语言设置。

**四、蓝牙连接**

二维码下载APP → 进入app后注册账号  
● 手机号码，获取验证码，点击下一步  
● 经销商公司代码，输入自己的注册密码，然后登陆

**五、切膜**

- 请如图所示准备一张待切割的保护膜。确认保护膜平整且膜层完备无弯曲、折叠或缺层现象。
- 不带自动进纸：  
①按下压杆，使压轮抬升，放置保护膜在所示虚线区域。  
②慢慢抬起压杆，使压轮压紧保护膜。
- 带自动进纸：将保护膜平稳推至虚线区域即可松手。

**六、注意事项**

- 避免刀片划伤手指
- 机器断电后拆装必须擦干手避免金属液体掉进机器导致火灾，且有足够的安装空间
- 禁止破坏或更换配线地线，切勿使电源线过度弯曲、缠绕、撞碰或压在重物下，以防电线受损导致触电或火灾
- 较长时间不使用机器，请断开机器电源，以防火灾
- 设备机器的台面必须平整，以防设备跌落
- 当您想断电时，请握紧插头而不是拉拽线缆，断电可能会导致电击或火灾
- 在雷雨天气禁止使用，避免被雷击中
- 禁止私自拆卸

**产品参数**

控制面板	5.5英寸彩色液晶电容屏
网络接入	802.11n Wireless LAN
电源适配器输入	100~240V 1.5A 50~60Hz
电源适配器输出	24V 2A DC
设备输入	DC 24V 2A
功率	48W

扫描此码，请根据提示下载切膜机App

142 mm

76 mm

### ISOD Cutting Machine Manual

**When turning on the film cutter, first put the pinch roller down and tear off the protective film under the pinch roller**

**Product List**

**Appearance and function**

**Instructions**

**I Install the blade holder**

**II Power connection, Starting up**

**After the system starts normally, enter the homepage**

**Enter keywords in the search box, search for the product model you need to cut, and select the corresponding model.**

**IV Bluetooth connection**

Download the app with the QR code, and register an account after entering the app  
● Enter the phone number, get the verification code, and click Next  
● The dealer is the company code, ● your registration password, and log in!

**V Cutting film**

- Please prepare a protective film as shown in the picture to ensure that the protective film is flat and the film layer is complete without bending, folding or missing layers.
- Without automatic paper feeding:  
①Press down the pressure bar to raise the pinch roller, put protective film in the dotted area.  
②Raise the pressure bar to make the pinch roller press the protective film.
- After the cutting finished, the protective film will be automatically pushed out, take out the protective film, and complete the cutting.

**VI Notice**

- Avoid scratching your finger
- The working environment where the machine is placed must be clean and tidy to prevent metal scraps from falling into the machine and cause fire, and there must be enough installation space.
- It is forbidden to damage or replace the original power cord. Do not excessively bend, pull, bind, or press the power cord under heavy objects to prevent damage to the power supply and cause electric shock or fire.
- If you do not use the machine for a long time, please disconnect the machine power to prevent fire.
- The table where the Leveller is placed must be flat and stable to prevent the machine from falling.
- When you want to disconnect the power, please grip under the plug and pull it out. Do not pull the cable. Forcibly pulling the cable may cause electric shock or fire.
- Prohibited to use during thunderstorms to avoid being hit by lightning
- Prohibit unauthorized disassembly

**Product parameter**

Panel	5.5" Colorful HD screen
Internet access	802.11n Wireless LAN
Power adapter input	100~240V,1.5A 50~60Hz
Power adapter output	24V 2A DC
Device input	DC 24V 2A
Power	48W

Scan the QR code, please download the film cutting machine App according to the prompts

销售部		采购部		品质部		生产部	
设计	(签名)	(年月日)	标准化	(签名)	(年月日)		
邓宪涌		2022/03/26					
审核							
工艺			批准				

正反面印刷

142\*684mm

环盛智能(深圳)有限公司

X系列中性说明书-中英文

SMS-01-001C

共1页 第1页