



Artwork size (W×H): 380 × 140 mm.  
Final folded size (W×H): 95 × 70 mm.



# INSIGNIA™

## Quick Setup Guide | NS-GPS4RC101/NS-GPS4RC101-C Media Remote for PlayStation® 4

 


### PACKAGE CONTENTS

- Media remote for PlayStation 4
- USB receiver
- AAA batteries (2)
- *Quick Setup Guide*

### FEATURES


- Fully navigate the XMB™ and PlayStation menu
- Navigate within most apps
- Control most DVD and Blu-ray™ functions

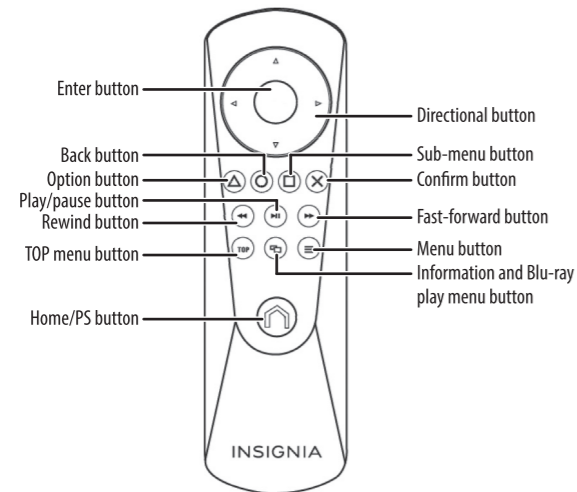


Before using your new product, please read these instructions to prevent any damage.

### SETTING UP YOUR REMOTE

 
**1** From the back of the remote, slide off the battery compartment door.

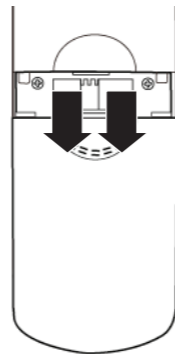

 **2** Remove the USB receiver from the storage slot in the battery compartment.

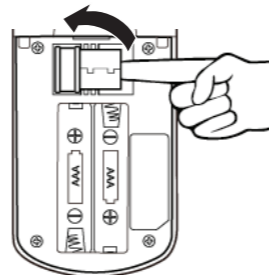


 **3** Place the two AAA batteries (included) into the battery compartment. Make sure that the batteries are in the correct position as shown in the battery compartment.

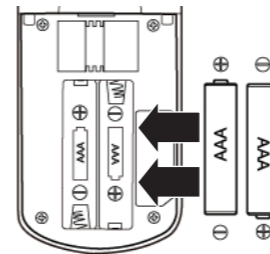


**4** Turn the PS4 console on, then plug the receiver into any available USB port in the console.

 **Note:** The USB receiver is paired with the remote at the factory, and the remote is ready to use. If the remote does not work after plugging the USB receiver into the console, press and hold the **Confirm** and **Home/PS** buttons, then unplug and re-insert the USB receiver into the console. This should automatically initiate pairing.

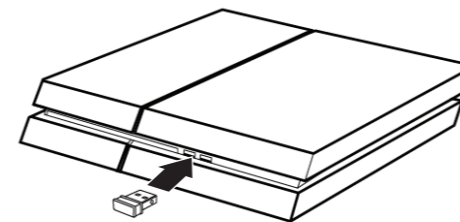

 **5** The PS4 Media Remote appears as “External Keyboard” on your TV screen.

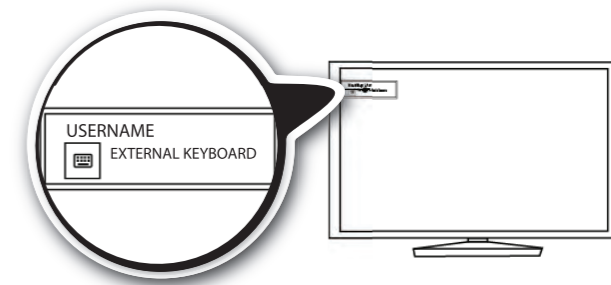

### USING YOUR REMOTE For PS4 menu NAVIGATION:

BUTTON:	FUNCTION:	BUTTON:	FUNCTION:
Enter	Confirm/select	⏮	Back to main XMB menu/select
▲▼◀▶	Move the selection cursor	⏭	No function
△	Additional menu when highlighting an application.	TOP	To top menu
○	Back	ℹ	Information
□	No function	☰	Additional menu when highlighting an application.
×	Confirm/select	🏠	Home/PlayStation button
◀▶	No function		





**For Blu-ray playback:**

BUTTON:	FUNCTION:	BUTTON:	FUNCTION:
Enter	Confirm/select		Play/Pause
	Move the selection cursor		No function
	Information	<b>TOP</b>	Press for options. Press and hold to open the control panel.
	Press to pause playback. Press again to play.		Information
	Pop-Up menu		Press for options. Press and hold to open the control panel.
	Confirm/select		Home/ PlayStation button
	No function		

**Hint:** Press and hold the **TOP** button to launch the on-screen control panel which allows full playback control of a Blu-Ray disc.

**For DVD and other media play back:**

BUTTON:	FUNCTION:	BUTTON:	FUNCTION:
Enter	Confirm/select		Play/pause
	Move the selection cursor		Fast forward
	Information	<b>TOP</b>	Press for options. Press and hold to open the control panel.
	Press to pause playback. Press again to play.		Information
	Menu		Press for options. Press and hold to open the control panel.
	Confirm/select		Home/PlayStation button
	Rewind		

**TROUBLESHOOTING**

PROBLEM:	SOLUTION:
<b>Remote does not work.</b>	<ul style="list-style-type: none"> <li>Make sure that the battery is fully inserted and has enough power to power the remote.</li> <li>For pairing issues, press and hold the <b>Confirm</b> and <b>Home/PS</b> buttons momentarily, then unplug the USB receiver and re-plug it into the console while the PS4 console is ON.</li> </ul>
<b>Fast forward and fast back do not work.</b>	<ul style="list-style-type: none"> <li>During Blu-ray playback, fast forward and fast back are available from the full play menu.</li> <li>Press and hold the <b>TOP</b> button to launch the on-screen control panel, which allows full playback control of a Blu-Ray disc.</li> </ul>
<b>Some buttons do not work in certain Apps.</b>	<ul style="list-style-type: none"> <li>The remote control is not compatible with every App available.</li> <li>Use the DUALSHOCK® 4 controller.</li> </ul>

**SPECIFICATIONS**

<b>Power source</b>	Size AAA batteries (2)
<b>External dimensions (W×H×D)</b>	Approx. 1.9 × 6.9 × 0.9 in (50 × 175 × 22.5 mm)
<b>Operating temperature</b>	41°F~95°F (5°C~35°C)
<b>Wireless technology</b>	2.4 GHz

**SAFETY INFORMATION/CAUTION**

- Never dispose of batteries in a fire.
- Do not use batteries other than those specified. Always replace with the same type of battery.
- Do not mix old and new batteries.
- Insert batteries with the plus and minus ends in the correct direction.
- Remove batteries when they have reached the end of their life, or if the remote control is to be stored for an extended period of time.

**LEGAL NOTICES**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RSS-Gen and RSS-210 statement:**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**RSS-102 Statement:**

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé.

**ONE-YEAR LIMITED WARRANTY**

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

**CONTACT INSIGNIA:**

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) [www.insigniaproducts.com](http://www.insigniaproducts.com)

Other parties' marks are the property of their respective owners. INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2014 Best Buy. All rights reserved. Made in China

