 
 


Repeater configuration

Use with ZBT OS router,no need to configure
1. Connect the reseted repeater ethernet port to ZBT router(DHCP is opened) LAN port , wait for about one minute
When the repeater blue and red lights flicker together, the repeater is setted ok.

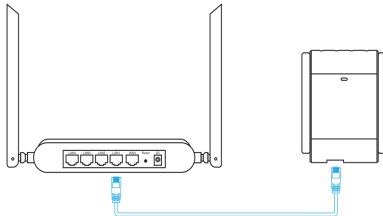

2. Disconnect network cable, and place repeater to the location wanted, then wait for 3 minutes,the green light change to flicker rapidly from slowly. It indicates the repeater is setted ok.

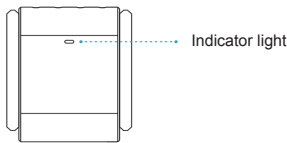

Reminder: The SSID and pass word of wifi repeater is same as the ZBT OS wifi router
Can realize the seamless roaming between repeater and ZBT OS router

Fast installation 01

 
Configure repeater manually

1. Connect the repeater to power, wait untill the green light is stable.
2. Open computer or mobile phone wifi, connect the wifi repeater's SSID 'Repeater-XXXXXX' (Repeater-XXXXXX is the last 6 digits of MAC address)




Fast installation 02

3. Open web browser, input '192.168.1.1': the default pass word is 'admin'

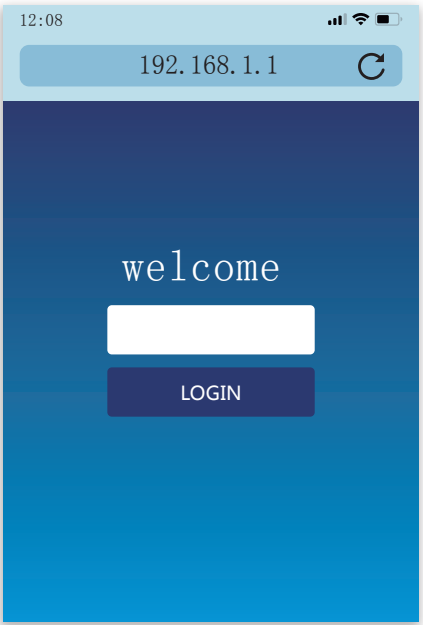

Fast installation 03

 4. Click wifi setting'-repeater settingto scan wifi signals around. Choose the SSID you want to repeat, then click 'connect'.

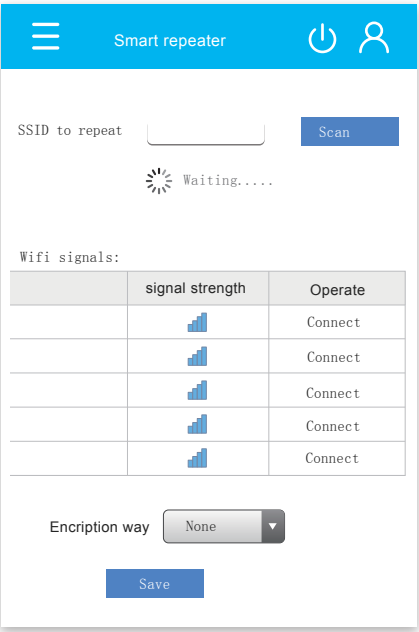

Fast installation 04

5. When the green light of wifi repeater flickers rapidly, indicates repeats SSID successfully, now the 'Repeater-XXXXXX'is signal which is forwarded.

The definition of lights

Color	Status	Details
Green	Keeps on	With the initial settings
Blue+Red	Blue keeps on Red flickers	The repeater is successfully paired with the gateway of the OS system.At this time, if the network cable mode, that is, the Wireless signal is extended through the etwork cable, if it is to be switched to the wireless relay mode, the network cable can be unplugged.
Green	Flicker rapidly	One SSID is repeated successfully
Blue+Green	The two lights flicker slowly	The cable is connected to wifi repeater LAN port, and the repeater is in repeater mode
None	Flicker slowly or keeps on	The repeater LAN port is connected with cable, and the repeater is on AP mode

Fast installation 05

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator your body: Use only the supplied antenna.