FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

WIRELESS DOORBELL

Operating Guide

Thank you for choosing our Wireless Doorbell. It's an ideal unit for easily installing a doorbell without the hassle of wiring. Simply plug into a mains outlet, mount the doorbell where needed and you are ready to go!

The doorbell features 36 chimes and adjustable volume to suit your needs and can reach a distance of up to 280m/approx 1000ft when there are no obstructions.

Doorbell receiver

The doorbell receiver does not require any mounting or batteries. Simply plug it into any mains power socket and you are ready to go.

Batteries (doorbell unit)

- The doorbell requires 1×23A/12V battery (included).
- To install the battery, pry off the back cover using a small, flat-head screwdriver in the small notch at the bottom of the doorbell.
- To finish, clip the back cover back onto the doorbell unit making sure it is fitted tightly.

Mounting the doorbell

The doorbell is mounted by simply sticking it to a wall using the included adhesive strip(s).

- Peel off one side of the adhesive strip and attach it to the rear of the backing plate, ensuring none of it is visible from the front.
- Find the area you want to mount the doorbell. Flat, smooth surfaces are ideal. Make sure they are clean and dry before mounting.
- Peel off the other side of the adhesive strip and attach the doorbell to the mounting surface.

Specifications

Operating current (receiver unit): AC 110-240V, 50 / 60Hz
Operating current (doorbell unit): 12V (1×23A Battery, included)
Transmission Range: 280M/1000ft (Open Area)

Transmission Frequency: 443.92Mhz
Power consumption of transmitter: <10mw
Internal Sounds: 36 chimes

Setting the volume and chime

- To change the volume, press the Volume button, 4 levels of adjustable sound volume are offered and changed from high level to low level circularly.
- To change chimes, press the Chime button to move to the next chime. A chime will play each time you press the chime button. You do not need to confirm your selection. The chime playing is the chime selected and the one which will be heard when the doorbell is pressed. 36 chimes can be changed in order circularly.

