

QUICK START GUIDE



hAppy™
PRINT



Congratulations on your new
ZINK hAppy Print™ — the world's first
smart, happy, little, full-color, zero-ink,
app-powered printer.




In this guide we'll get you
designing and printing in no time.


If you have any questions,
call us at 877-711-ZINK
or visit us online at zink.com.

What's in the Box


1/2" zRoll™

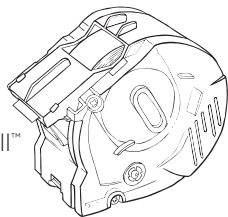

hAppy
Print™

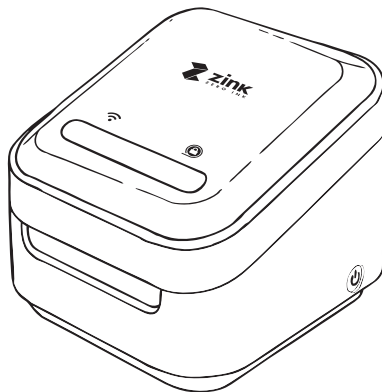


Cleaning
zRoll

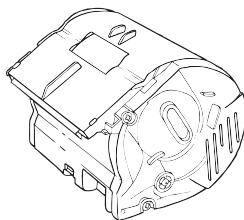

USB Cable




Power Adapter

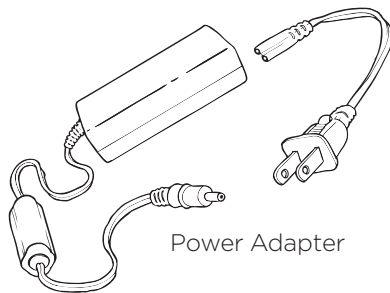




Get to Know Your hAppy Print™



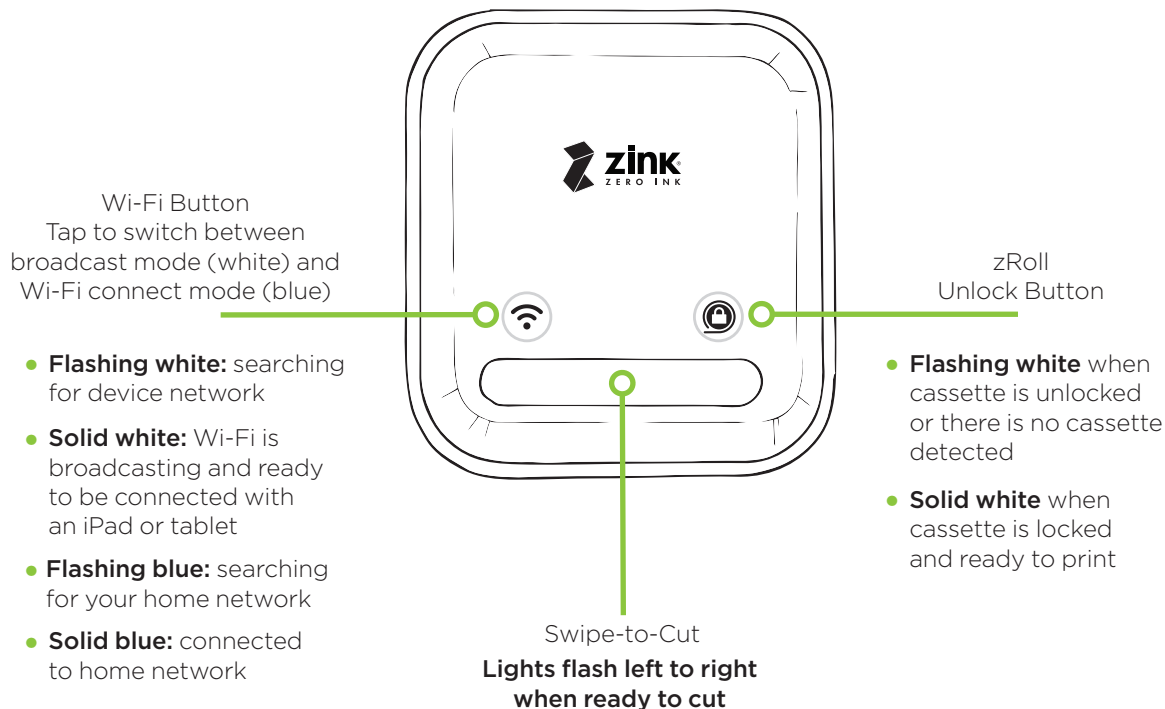


What You Need

hAppy
Print™

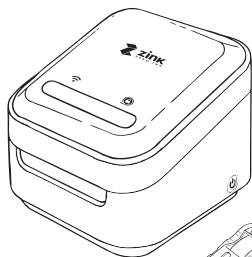

Power
Adapter


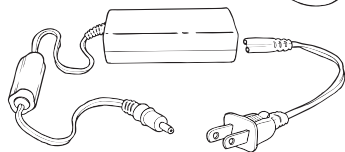


1/2" zRoll



High-speed
Internet

 
Wireless
Router
(Wi-Fi)

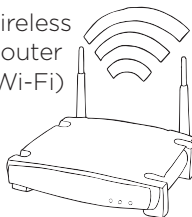

Android smartphone
or iPhone

AND

OR

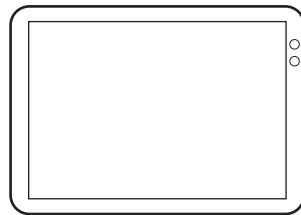

Android tablet or iPad

STEP 1 ● ● ● ● ● ●

Download the ZINK Design & Print Studio™ App

1. Take out your tablet or smartphone.
1. Tap the *App Store* or *Google Play* icon.
2. In the search box type in *ZINK Design & Print Studio*.



3. Look for the hAppy™ icon and tap to download.



You can just scan the QR code.



OR



If you have an iPhone or an iPad: just tap the *App Store* icon and search the store for *ZINK Design & Print Studio*.

If you have an Android phone or Android tablet: tap the *Google Play* or *Play Store* button and search for *ZINK Design & Print Studio*.

STEP 2 ●●●●●


Plug In and Power On Your hHappy Print

1. Insert the power adapter into the port on the underside of your hHappy Print.





Run cord under notches inside groove.

2. Connect the two sections of the power adapter and plug it into a wall outlet.

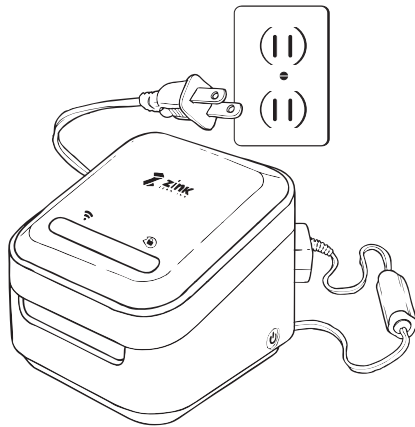

3. Press the power button located on the bottom corner of your hHappy—wait for your hHappy to whirl up.

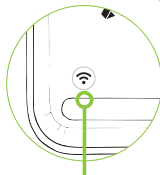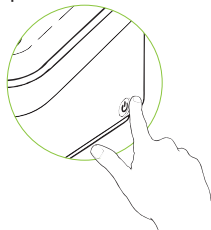


Wi-Fi:
should be solid white


STEP 3 ●●●●●

Load Your zRoll


1. Unpack and remove the pull-tab from the top of the zRoll.

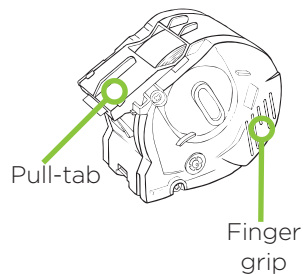

2. Hold your zRoll by the two finger grips on each side and insert it into the back of your hAppy Print.

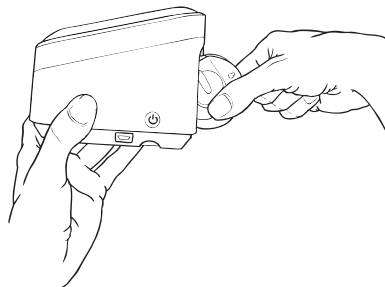

3. Line up the V-shaped ridge on your zRoll with the notch on your hAppy Print—press the zRoll until you hear a slight click.

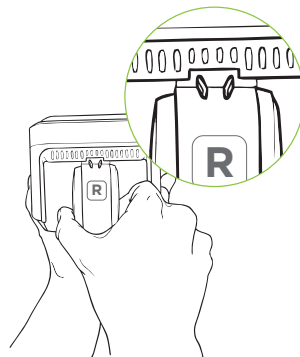

STEP 4 ●●●●●

Connect Your Smart Device to Your hAppy

1. Take out your tablet or smartphone.
2. Tap the settings icon on you smartphone or tablet. It's usually found in the app tray of the device.
3. Go to Wi-Fi settings and select the “hAppyPrinter” wireless network.

STEP 5 ●●●●●

Connect Your hAppy to Your Home Network

1. Tap the *ZINK Design & Print Studio* app.
2. Tap "Setup my hAppy Print."
3. Follow the on-screen instructions.

(waiting for a wireframe/
graphic)

STEP 6 ●●●●●●

Start Printing from the ZINK Design & Print Studio

1. Tap the Library button



2. Tap the Art button



Stuck? Remember that you can always tap the “!” (icon [here](#)) in the upper left corner of the app to get some help.

3. Tap the Print button in the lower left corner of your screen.



NOTE: final illo will have print icon underneath finger and icons at top

4. Swipe-to-cut



Congratulations!
You've printed
your first design.

TIPS

HARDWARE



- **Make sure you're ready to print.** You're ready to print to your hAppy from your home wireless network when your hAppy's Wi-Fi button is solid blue and the zRoll eject button is solid white and your smartphone or tablet is on the same wireless network as your hAppy.
- **Make sure your zRoll is inserted correctly.** Your zRoll is positioned correctly when you hear a light "click" as you hold the zRoll by the side grips and position it into the back of your hAppy.
- **Clean your hAppy.** Insert your white cleaning zRoll into your hAppy after every ten or so prints to keep your hAppy clean and printing well. You can't print to a cleaning zRoll, so be sure to swap it out when you are ready to print.
- **Your hAppy has two Wi-Fi modes.** When the WiFi button is white, your hAppy is broadcasting a Wi-Fi network for your tablet or smartphone to connect to. When the Wi-Fi button is blue, your hAppy is connected to your home wireless network.
- **Print from your computer.** You can connect your hAppy PRINT to your computer with the included USB cable. For more information on how to print to your hAppy from your computer, visit zink.com/support.

TIPS

SOFTWARE

- **Tap those buttons.** The ZINK Design & Print Studio is designed to be easy and intuitive. Tap around and see what happens. We promise you can't break anything!
- **Tap to learn.** Press the green "i" (*put icon here*) in the upper left corner of the app at anytime to learn about each function of the screen you are on.
- **You never have to save.** The ZINK Design and Print Studio automatically saves your design each step of the way. You never have to remember to save your designs or worry about losing them!
- **Tap to approve.** When you want to approve an action, you can just tap the green approve button on the lower right side of the screen.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.