


Quick Installation Guide

EX300 300Mbps Wireless N Range Extender

Copyrights 2013 by TOTOLINK All rights reserved. Website: <http://www.totolink.net>
Information in this document is subject to change without prior notice.

1 Hardware Connection

Operating Temperature: 0°C~40°C (32°F~104°F)
AC Input: AC100~240V/50~60Hz/0.1A +/- 10%

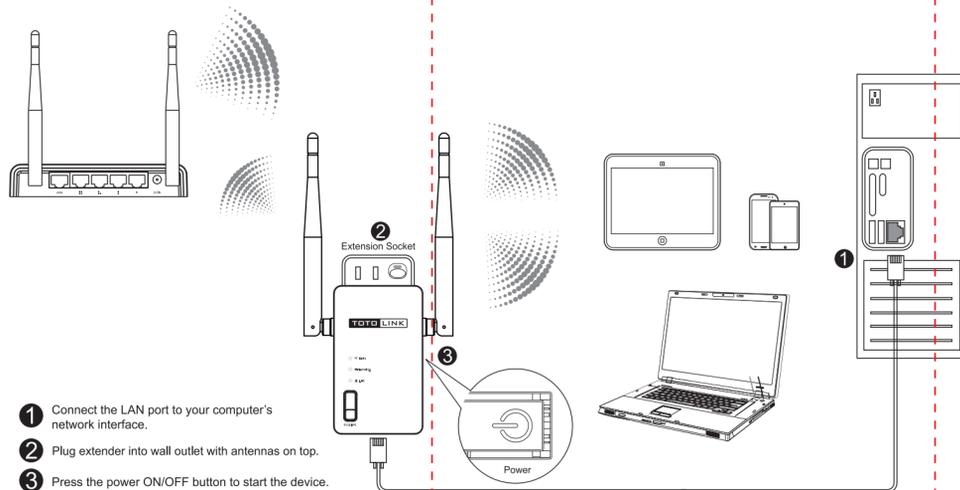

LED Indicators

Names	Status	Description
WiFi	On	No wireless traffic
	Blink	Wireless traffic exists
	Off	Not definition
Extending	On	Connected with Upper AP
	Blink	Trying to WPS connection with Upper AP
Extending	Off	Disconnected with Upper AP
	LAN = LAN	Normal Ethernet Link LED

Button and Port Description

Name	Description
Power	This button can turn on/off the device. Press the button for about 10 seconds, the device will restore to factory default settings.
Rst/WPS	WPS push button for secured easy connection to a wireless network. Press the button for about 5 seconds, it is WPS working.
LAN	This port is used to connect to PC.


NOTE:

The default Network Name (SSID) of EX300 is TOTOLINK EX300 (No encryption). After repeater with other Router/AP successfully, the SSID and password of the extender will change to the connected router/AP's SSID and password. So before following operation, please make sure you have the SSID and password of the router/AP you need this extender to connect. Besides, TOTOLINK Extender can repeater with many other brands routers/APs.

2-1 Establish Connection

Method One: Connected by button

- Press the Rst/WPS button on EX300.
- Press the Rst/WPS button on wireless router for about 5 seconds at the same time. After 5 seconds, a secure connection will be established automatically.

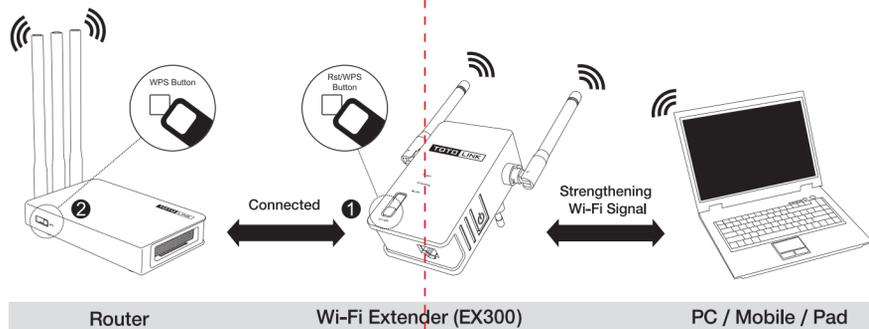


Method two: Connecting by Web Setting_Part A

First, please setup your PC.

For Windows 2000 or Windows XP Operating System, please comply with following steps to set up.

- Right-click "My Network Places", click "Properties"
- Right-click "Local Area Connection", click "Properties"
- Double-click "Internet Protocol (TCP/IP)"
- Configure the IP address manually: IP Address: 192.168.1.x (x can be ranged from 1-253) Subnet mask: 255.255.255.0 Default gateway: 192.168.1.254 Click OK.

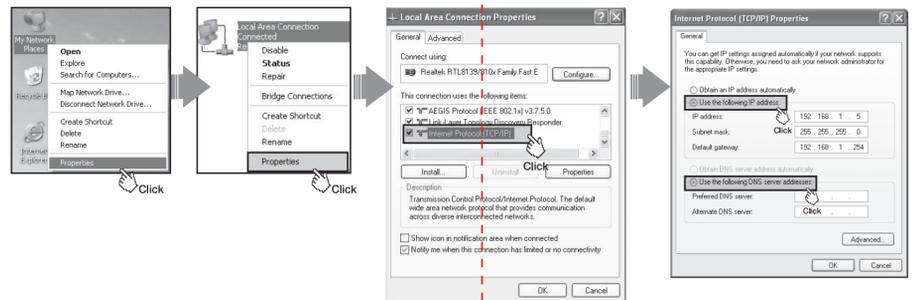


2-2 Establish Connection


Method two: Connecting by Web Setting_Part B

For Windows Vista or Windows 7 Operating System, please comply with following steps to set up.

- Click "Start—Control Panel—Network and Internet—Network Connection", right-click "Local Area Connection", and choose "Properties".
- Double-click "Internet Protocol Version 4 (TCP/IPv4)"
- Configure the IP address manually: IP Address: 192.168.1.x (x can be ranged from 1-253) Subnet mask: 255.255.255.0 Default gateway: 192.168.1.254 Click OK.

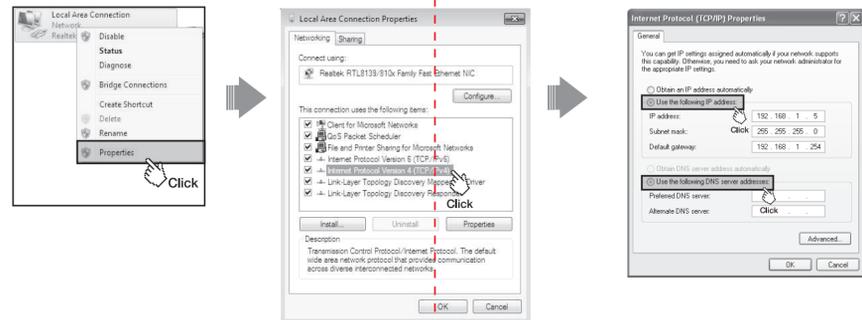

3 Wireless Network Connection

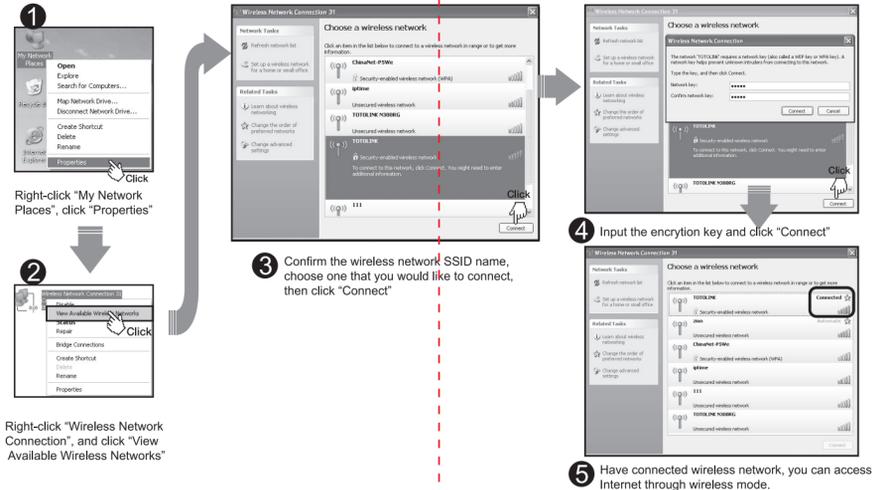

Second, please setup the extender.

