

Table of Contents

1 Preface	-----
2 Introduction	-----
2.1 PHONE DISPLAY
2.2 KEY
2.3 ICONS & SYMBOLS
3 Getting Started	-----
3.1 INSERTING THE SIM CARD AND THE BATTERY
3.2 INSERTING A T-FLASH (EXTERNAL MEMORY) CARD
3.3 TURNING THE PHONE ON
3.4 CHARGING THE BATTERY
3.5 IMPORTANT PASSWORD
3.6 KEYPAD LOCK AND UNLOCK
3.7 TRANSFER FILES TO THE T-FLASH (EXTERNAL MEMORY) CARD
4 Text Entry	-----
4.1 INPUT METHOD
4.2 SMART ENGLISH INPUT
4.3 TRADITIONAL INPUT
4.4 NUMERIC INPUT
5 Calling	-----
5.1 MAKING A CALL
5.2 ANSWERING A CALL
6 Function Menu	-----
6.1 HOW TO USE
6.2 MAIN MENU

6.3 FUN & GAMES	
6.4 PHONEBOOK	
6.5 CALL CENTER	
6.6 MULTIMEDIA	
6.7 CHATTING	
6.8 MESSAGING	
6.9 SETTINGS	
6.10 FILE MANAGER	
6.11 EXTRAS	
6.12 VIDEO PLAYER.....	
6.13 USER PROFILES	
6.14 SERVICES	
7 Precautions -----	
8 Frequently Asked Questions and Troubleshooting -----	
9 Safety Information and Notices -----	

1 Preface

Thank you for purchasing this cellular phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.


Screen displays and illustrations in this user's manual are designed to help you operate your phone to its optimum performance.



We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice.

2 Introduction

2.1 Phone Display

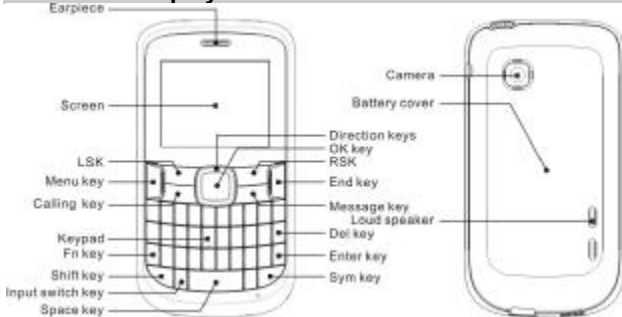

2.2 Key

Key	Function
Calling key	Make a call View call logs in idle screen Receive all calls.



LSK/Left Soft Key	Access main menu screen.
End key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
RSK/Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
OK Key	Enter the main menu in idle mode. Confirm a selection.
Keypad	Enter numbers, letters or characters. Select a submenu item quickly.
Direction Keys	Press to select the desired quick icon option in idle screen (the key can be used in four ways, Up, Down, Left, and Right direction keys). Press in left or right direction to select or function a function.
Shift key	In idle screen, Pressing and holding to turn on/off the torch.










	Switch the input method in text editor screen.
Sym key	In idle screen, Pressing and holding to active/deactive the silent profile. Switch the input method in text editor screen.
Menu key	Direct access the main menu in idle screen.
Space key	In idle screen, press Ok key and then space key to lock the keypad. Enter a black character in text editor mode.



Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 2 seconds.

2.3 Icons & Symbols

Icon	Description
	Network - Indicates signal strength .
	Battery - Indicates battery level.

	Text Message - Indicates you have one or more unread text messages.
	Multimedia Message - Indicates you have one or more unread text messages.
	Lock- Indicates that the keypad is locked.
	Alarm-Indicates that the alarm clock is on.
	Missed call - Indicates there is a missed call.
	Call Divert - Indicates that "Divert All Voice Calls" is activated.
	Headset-Indicates that headset profile is activated.
	Alert type is "Ring".
	Vibrate – Indicates that the vibrator is on.

3 Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

3.1 Inserting the SIM Card and the battery

Remove the back cover


Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards; press and pull the back cover down; lift the back cover up to remove it.

Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top left) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops.

Install the back cover

Align and hook the back cover to the top of the battery slot and then push the cover upwards until it locks into place.

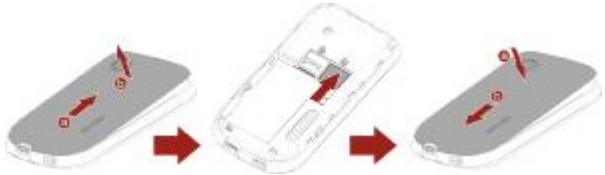

Note: Before installing or removing the subscriber identity module (SIM) card and the battery, ensure that the phone is powered off. Otherwise, the SIM card may get damaged.

3.2 Inserting a T-Flash (External Memory) Card

Remove the battery

Put your finger on the black holder located on the battery slot and lift the battery up to remove it.

Insert the Flash card

With the metal contacts facing down, gently slide the T-Flash card into the slot.

Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down into its slot until it locks into place.



3.3 Turning the phone on

To turn the phone on, press and hold the Call End key. Enter the PIN code if required (the 4 to 8 digit secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.

3.4 Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 3 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.



Connect charger



Disconnect charger



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

3.5 Important Password

The Phone lock and all security password is 1122.

3.6 Keypad Lock and Unlock

Go to **Menu > Settings > Security Settings > Auto Keypad Lock > Auto Keypad Lock** to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.

Press OK key and then Space key to lock the keypad manually.


Press the OK key [Unlock] and then the Space Key to unlock the keypad.

3.7 Transfer files to the T-Flash (External Memory) card

Insert your T-Flash card into an external card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the T-Flash card memory now. You can also connect the USB cable which is available in your box to PC then you can access the phone & T-Flash card memory in your PC and transfer the data vice-versa(Menu > File Manager > Memory Card).

Download or upload the files to T-Flash card.

When the transfer is finished, please make sure that you safely remove

the card reader by clicking .

Finally, insert your T-Flash card into your cellular phone, you can view the files in Menu > File Manager > Memory Card.

4 Text Entry

4.1 Input Method

Your cellular phone supports several input methods, which include:

Traditional Hindi/English

Numeric(123)

Smart English

Changing the input modes

During text editing, you can press the Shift Key to switch input modes or press the Left Soft Key [Option] and choose **Input method** to select different input modes.

Entering Symbols

In any input mode, press the Sym Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

4.2 Smart English Input

Letters and symbols represented by each key are as follows:

0 to 9, a to b	Press to input letters
Sym key	Press to input symbol

Space key	Press to input space
◀/▶	Press to confirm the letter or word, or move the cursor to left or right.
▲/▼	Press to browse the last or next available word.
LSK (Select) or the OK Key	Press to confirm the letter or word
Right Soft Key	Press to clear a letter, press and hold to clear all entries
Shift key	Switch between input mode
Input switch key	Switch between upper case and lower case.
Fn key	Press to enter digit or symbol labeled in keypad.

Example: How to enter the word "HOME"

1. Press the Shift Key to switch to **S abc**.
2. Press h o m e, the first word "home" appears.
3. Press the LSK [Select] or OK key to confirm "HOME".

4.3 Traditional Input

Press the Shift Key to switch to **abc**.

Example:

To enter the word «home» in traditional input mode “abc”, press key h, o, m and key e.

4.4 Numeric Input

Press the Shift Key to select "123" input option then you can enter the numbers.

5 Calling

5.1 Making a Call

In idle mode, enter the phone number.
Press the Calling key to call the number.
Press the Ending Key to end the call.



Note: During a call, press the*/# Key to adjust the volume.

You can press the Left Soft Key [Option] to choose **Sound Recorder**.

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

Making an International Call

1. Press the + Key to appear "+" on the screen.
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Calling key to call directly.

5.2 Answering a Call

Press the Calling Key to answer it.

Press End key to reject it.

6 Function Menu

6.1 How To Use

Select Menu

Press the OK Key [Menu] to enter main menu in idle mode.

Press the Navigation Key Up/Down/Left/Right to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the RSK [Back] or the End Key.

6.2 Main Menu

Fun & Games	Phonebook	Call center	Multimedia
Chatting	Messaging	Settings	File manager
Extra	Video player	User profiles	Services

6.3 Fun & Games

Your cellular phone provides you with games such as Copter, UFO and Fruit.

Set the mode relatent games in Games settings such as BGM, Sound effect and Vibration.

6.4 Phonebook

Your phone features two phonebooks. The SIM phonebook is located on your SIM card and the number of entries you can store depends on the SIM card. The second phonebook (Smart phonebook) is integrated in the phone memory.

Quick search

Press Menu > Phonebook.

Enter the first few letters of the contact name, all the matched contact will display.

Press the up/down navigation Key to scroll and select the desired contact.

Add New Contact

To create a new SIM/phone contact:

Select Menu > Phonebook > Add new contact.

Select Edit option to enter all related information about the contact.

Press the OK Key to save the contact details.

6.5 Call center

View call history information, such as missed calls, dialed calls and received calls.

1. Select Menu > Call settings > Call History > Call History.
2. Press the Navigation Key to view different call logs.
3. Choose a particular number and press the Calling Key to call the number directly.
4. Select Delete all log if you want.
5. Select GPRS counter to view the GPRS volume you have used.

Set call parameters, such as call waiting, call divert, blacklist and so on.

6.6 Multimedia

Note: When there is not enough memory space, you will be unable to save the picture and prompted with a warning message. So you should delete existing pictures before you can store new ones. Storage capacity also depends on the size of the T-Flash card that you insert.

Camera

The phone is provided with built-in 0.3 mega pixel CMOS camera, which supports the photographing and video shooting functions. Pictures are saved in the file system of the phone or the memory card. The file is in the *.jpg format.

In standby mode, select **Menu > Multimedia > Camera** to launch the camera.

Image Viewer

This menu lists the picture from **Menu > Multimedia > Image viewer**

Video recorder

In standby mode, select **Menu > Multimedia > Video recorder** to launch the video recorder.

Audio Player

The songs loaded in the 'My Music' folder inside the T-flash memory card will automatically get loaded into the MP3 skin. There are options to move to next or previous songs, increase or decrease volume or add new songs in some other folders of the memory card.

Sound Recorder

Select Menu > Multimedia > Sound Recorder.

Press the Left Soft Key [Options] and select **Settings** to set your preferred storage, file format and audio quality.

Back to the previous menu, select **New record**.

In the recording screen, you can press the Left Soft Key to pause or continue.

If you have finished, press the Right Soft Key [Stop] to stop recording.

Press the Left Soft Key [Options] and select **"Yes"** for **"Save"** prompt..

After saving a file you can press the LSK and enter options to Append, Rename, Play or delete a recorded file.



Note: Saved sound files can be found in the Menu > File Manager > Phone/ Memory card > Audio menu according to your storage setting.

FM Radio

Note: Before using the FM radio, please pull out the antenna located at the top of the phone to ensure good receiving of the FM program.

To operate the FM radio:

Select Menu > Multimedia > FM radio.

Press the direction key down to activate or deactivate the FM radio.

Press */# Key to adjust the volume.

Press the direction key right/left to tun at a presion of 0.1M Hz.

Press the LSK [Options] to access the FM settings.

6.7 Chatting

The built-in chat tool **FACEBOOK**, **MSN**, **YAHOO** and **SKYPE** on your phone, allows you to chat, send message and files on the move.

Please check your GPRS settings before accessing the chat tools.

6.8 Messaging

Creating a text message

Select Menu > Messages > Write Message.

Write a message, please refer to the **Text entry** section of this manual for detailed information.

After entering text, you can press the LSK(options) and then enter the recipient and press OK key to send the SMS.



Note: Make sure the SC Address in the activated profile is correct; otherwise, you cannot send or receive the messages.

MMS

Functions related to the MMS is network dependent. For provision of and subscription to a service, contact your service provider.

Open multimedia messages with caution. Objects in multimedia messages may contain hazards that can damage your phone, such as malicious software.

Broadcast Message

Receive Mode

Select Menu > messages > Broadcast message.

Press the Left Soft Key [On] to activate this function.

Press the Navigation Key Down to select **Channel setting** to enter the channel number.



Note: To obtain the codes corresponding to the different types of messages, you must contact your operator.

6.9 Settings

Set Wallpaper

Select **Menu > Settings > Phone settings > Display > Wallpaper**.

Select **System** if you want to choose from the default pictures.

Select **User defined** if you want to choose a downloaded or captured picture.

Phone lock

Select **Menu > Settings > Security Settings > Phone lock**.

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled, once it is enabled, the phone code is required each time the phone is powered on. The default phone code is 1122.

6.10 File Manager

Select Menu > File manager.

Press the Left Soft Key [Options] and select Open to view different

folders.



Note: If you have inserted a T-Flash card, you can view its files here by selecting the memory card option.

6.11 Extras

This menu contains features and options designed to keep you organized and informed while on the go.

As most of the features are very simple, here you can only view some important features.

Bluetooth

Select Menu > Extras > Bluetooth.

Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, or use a Bluetooth headset.

Power on will enable the Bluetooth.

Inquiry audio device will help you to search all Bluetooth devices in the vicinity.

My device will show all the devices that are allowed to be connected with your handset. One can add or delete the same.

Create a new task

Select Menu > Extras > Calendar.

Press the Navigation Key to select a date.

Press the Left Soft Key [Option] and select **Add event**.

Select the task type.

Enter the task informations.

Press the LSK [Done] to save it.

Set an alarm

Select Menu > Extras > Alarm.

Select an alarm and then press the Left Soft Key [Edit] to create.

Press the Navigation Key Left or Right to turn it on or off.

Enter other informations, such as time, repeat, and so on.



Note: The “snooze” item allows you to set the snooze minutes. When the alarm is activated, you can select **Snooze** to activate the snooze function.

6.12 Video Player

Keys Operation

The keypad operations during video playback are as follows:

Key	Description
The OK Key	Press to play/pause/resume the selected video file.
Navigation Key ◀ or ▶	Press to rewind/fast forward the selected video file.
RSK	Press to stop playing.

6.13 User profiles

The phone provide seven pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are General, Meeting, Outdoor, Indoor, Headset, Bluetooth and Save power. The phone will automatically enter the headset profile if you connect the headset.

6.14 Services

STK



Note: The submenus of this feature depends on the operator and different operators may provide different services (some SIM cards do not support STK), which cannot be modified. For further information about this, please contact your operator.

Internet service

You can access WAP sites and use WAP-based services on your phone.

To access the WAP sites through your phone, you need to subscribe the corresponding service from the service provider and set the relevant parameters on your phone first.

For details about the service and the charges, contact your service provider.

7 Precautions



Please carefully read and observe the terms below:

Safe power on

Do not use your cellular phone where it is forbidden to use or you might cause a disturbance or danger.



Safe transportation first

Please observe all related local laws and regulations.

Do not use your mobile phone while driving.

Safe transportation should be considered first when driving.



Disturbance

All cellular phone performances might be disturbed.



Turn off when in the hospital

Please follow related limitations.

Please switch your cellular phone off when near a medical

instrument.



Turn off on an airplane

Please follow related limitations.

Do not use your cellular phone on an airplane.



Turn off when at a gasoline station

Do not use your cellular phone at a filling station or around fuels or chemicals.



Turn off around exposure Area

Please observe related limitations and do not use your cellular phone near an area where explosions can occur.



Proper use

As described in this manual, your cellular phone can be used only in the correct location.

If possible, please do not touch the antenna area of your phone.



Use qualified after sales service

Only a qualified technician can install or repair your cellular phone. Please contact a Karbonn authorised service center in case of phone failure.



Accessories and batteries

Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.



Waterproof

Your cellular phone is not waterproof. Please keep it away from water.



Backup

Remember to make a backup or keep a written record of all important information saved in your cellular phone.



Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



SOS emergency calls

Make sure your cellular phone is switched on and in a service area. In idle mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without permission.

8 Frequently Asked Questions and Troubleshooting

Frequently Asked Questions	Cause and Solution
The handset fails to switch on	<p>Press the power on key for over 2 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, and try switching on the phone again;</p> <p>Check if battery is appropriately charged</p>
No Network connection	<p>It could be due to a weak signal. Please try and move to a location with stronger signal coverage and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information;</p>

<p>Display information while turning on</p>	<p>Check if the SIM card (insert the SIM card) is installed correctly</p> <p>Handset lock password. If the handset lock is activated, you have to input handset password before using.</p> <p>Input PIN. Inputting PIN while turning on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: Having input wrong PIN code for 3 times straight will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
<p>Poor quality of calling</p>	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p>

Standby duration shortened	<p>The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and can not receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in an area with no signal reception to save battery.</p> <p>Battery might require replacement. Please try changing the battery.</p>
SIM Card Error	<p>Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card.</p> <p>The SIM card is not installed.</p> <p>The SIM card is damaged. Please contact your network service provider.</p>
Unable to dial out	<p>Please confirm if you press the dial key after dialing.</p> <p>Please confirm if calling is forbidden because of defaulting.</p> <p>Please confirm if the SIM is valid.</p> <p>Please confirm if the call barring is set.</p> <p>Please confirm if the fixed dial function is set.</p>

<p>Unable to receive calls</p>	<p>Please confirm if the mobile phone is on and connected with the network. Please confirm if calling is forbidden because of defaulting. Please confirm if the SIM card is valid. Please confirm if the call barring is set.</p>
<p>Unable to charge</p>	<p>Poor contact. Please check if the plug is connected well. Charge in the environment below 40°C or above 55°C. Please change your charging environment. The battery or charger is damaged. You need to replace it.</p>
<p>Unable to set some functions</p>	<p>Wrong operation; The network provider does not support the function, or you have not applied for it.</p>

Note: If the instruction above can not help you solve problems, please record:

Mobile phone model and serial number

Specific content of warranty

Clear statement of problems

Then contact your local dealer or a Karbonn authorized service center in your area.

9 Safety Information and Notices

Using the Cellular Phone and Charger

Danger:

Only use authorised battery and charger. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas. Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from rain and liquid.

Warning:

Do not bump, shake or tamper with the phone or charger. This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire,

breakdown or damage.

To avoid any damage or breakdown, do not disassemble the phone, battery, charger or internal components by yourself.

Using the Cellular Phone

Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or receive a phone call.

Usage of cellular phones in aircrafts or hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cellular phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless

devices. Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your cellular phone near or with a credit card, disk or other magnetic materials. This may effect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed by the phone's receiver magnet, which may cause harm.

Using the Battery

Danger:

Do not dispose of the battery into a fire. Doing so may cause battery explosion.

If you have difficulties installing the battery, do not force the installation.

This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they do not come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

Replace the battery when the normal usage time begins to decrease or if you notice the battery is overheated or has changed shape or color.

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 55°C (135°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Using the Charger

Danger:

Only use the charger that came with the phone. Using a different charger may cause the phone to breakdown or explode.

If the charger short circuits, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or breakdown.

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of breakdown.

Do not use the charger in places with high humidity like a bathroom.

This may cause a fire or other breakdown.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

Caution:

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below 0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before cleaning it.

Do not place heavy objects on the power cord. This may cause electric

shock or fire.

Hold the plug while unplugging the power cord. This will avoid any potential damage or even fire.

Requirements for Cellular Phone

Avoid using your cellular phone in extremely high or low temperatures. Use the phone in a temperature range between 0~40°C and humidity of 35%~85%.

It is recommended that you do not use your cellular phone near a telephone, TV set, radio or other radio frequency sensitive devices.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you will not be using the cellular phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

The phone battery wears out fast. If charging the battery does not improve its performance, it is time to replace the battery. Properly dispose of the battery according to local regulations. Do not throw it into a fire.

Requirements for the Charger and AC Adapter

Do not charge your phone under the following circumstances: sunshine,

temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a TV, a radio, etc.

Cleaning and Maintenance

The cellular phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on them.

Use a soft cloth to clean the cellular phone, the battery and the charger. Do not use alcohol, diluted liquid or benzene to clean the cellular phone. If dust gets in the sockets the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

Warning!

1. The performance of your phone depends on your local network operator's card and how you actually use it.
2. We are not responsible for any damages due to inappropriate use.
3. We reserve the right to make any modifications on this manual without prior notice.

Specific Absorption Rate (SAR) information

This Model wireless phone meets the government's requirements for

exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.