 


1 Overview

Your Phone

The following figure is a sketch of the phone. The actual product may differ.

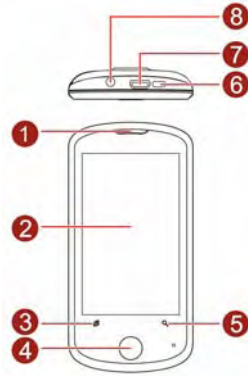













- | | | | |
|---|-----------|---|------------------|
| 1 | Earpiece | 5 | Power on/off key |
| 2 | Screen | 6 | Charger/USB jack |
| 3 | Opera key | 7 | Headset jack |
| 4 | Home key | 8 | Headset jack |

Keys and Functions

Press...	To...
Opera key	Access Opera in standby mode.
Home key	<ul style="list-style-type: none">• Access main menu in standby mode.• Return to standby mode.

Screen Icons

Icon	Indicates
	Signal strength.
	A new text message is received.
	A new multimedia message is received.
	The call forwarding function is enabled.
	The Bluetooth function is enabled.
	MP3 music is played in the background.
	An alarm is activated.
	The keypad is locked.
	Battery power level.
	The headset is being used.

Icon	Indicates
	The Outdoor/ General profile is activated.
	The Silent profile is activated.

2 Getting Started

 
Installing the Battery and a SIM Card


You can install two SIM cards on the phone at the same time. When installing a SIM card, ensure that the golden contact area on the SIM card is facing downward, and the beveled edge of the SIM card is properly aligned with that of the card slot.



Installing a micro SD Card


You can insert a micro SD card to expand the memory capacity of your phone. When installing a micro SD card, ensure that the golden contact area on the micro SD card is facing downward, and the beveled edge of the micro SD card is properly aligned with that of the card slot. Then pull out the clip to fix the micro SD card in the slot.

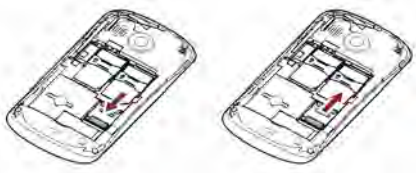

 No micro SD card is delivered in the product package. If a micro SD card is required, you can buy one yourself.

Charging the Battery

 1. Connect the charger to a power socket.
2. Connect the charger to the charger jack on the phone.

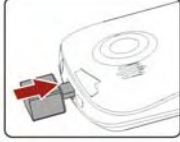

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**0000**) into any numeric string in the range of four to eight digits.

Do remember your phone lock code. If you forget it, contact the service center.



PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both PIN and PUK are delivered with the SIM card. Generally, the default password code of the SIM card is "1234". For details, consult your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

Locking the Keypad

In standby mode, tap the **Lock** icon to lock the keypad. To unlock the keypad, press any key

to turn on the backlight, and then slide  to .

If the **Auto keypad lock** function is enabled and the phone is idle for a preset period in standby mode, the keypad is locked automatically.

3 File manager

You can use **File Manager** to organize your files in folders. If a memory card is inserted, the files stored on it are organized separately. Select **Phone** or **Memory Card** and select **Options** to browse the files in folders.

4 Phonebook

The phone provides two kinds of storage media: SIM card and phone. The phone can store 500 entries. The capacity of the phone book on your SIM card depends on the type of SIM card provided by your network operator. Enter a number in idle screen and press the left soft key or the OK key to save the number. Select the storage location. Then the edit interface appears.

5 User profiles

The phone provides six pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are General, Silent, Meeting, Outdoor, My style and Saver Power.

6 Settings

Pen calibration

Click anywhere on the screen with you style to start calibration. Then follow the prompt and operate, this operation allows the screen to respond more quickly and correctly.

Phone settings

- **Time and date:** you can set up time/date, time zone and format for your phone.
- **Schedule power on/off:** You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.
- **Language:** Select the desired language for the display text. M-5262 supports English and Hindi language.
- **Preferred writing language:** Select the desired input method for the default input method.
- **Widget manger:** enable or disable the corresponding function in the Widget.
- **Encoding:** to set ASCII, ISO-8859-1, Windows-1252, GB2312 and GB18030.
- **Display:** With this function you can configure the basic status of display characteristics including Wallpaper, Screen Saver, Power on display, Power off display and Show owner number.

- **Greeting text:** you can edit the content of greet text.
- **Auto update time:** activate or deactivate this function.
- **Flight mode:** you can select between **Normal mode**, **Flight mode** and **Query when power on**.
- **Handwriting:** set pen speed and pen color.
- **Misc. settings:** You can set the LCD backlight.

Network settings

Network Selection: You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

Preferences: you can add from list or create new.

Security Settings

SIM lock: You will be asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, you will need to input the PIN every time you switch on the power. If you enter incorrect PIN three times, you will be asked to enter PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.

Phone lock: You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be asked to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is **0000**.

Auto keypad lock: You can lock/unlock the phone keyboard and set the Key Lock Time to Off, 5 sec, 10sec, 30 sec, 1 min, and 5 min.

Change Password: You can change PIN, PIN2 and Phone password.

Certificate manager: you can manage Auth. Certificate and User certificate.

Call settings

Call waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).

Call divert: This network service allows you to divert your incoming calls to another number. For details, contact your service provider.

Call barring: Activate, this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.

Line switching: You can select between lines ½.

Fixed dial: view the fixed dial list.

Advanced settings

Blacklist: you can set 20 numbers. When this Black list is enabled, you won't receive the calls from the numbers entered in the Blacklist.

Auto redial: On, the phone will automatically redial the last called number after a while if you fail to connect to the number. The times for auto redial are up to 10 times. Press Abort to end Auto Redial.

Background sound: set up the sound as background sound during a call.

Call time reminder: This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.

Auto quick end: set a time limit. The call will automatically interrupt if there is a time limitation.

Reject by SMS: choose open to reject a call and send message.

Answer mode: you can select between **Any key** and **Auto answer when headset mode**.

Restore factory settings

Access **Settings** to select **Restore factory settings**, and tap **OK**. All settings can be restored to factory settings with this function. The default password is **0000**.

7 Call history

You can view the records include **Dialled calls**, **Missed calls**, and **Received calls**.

8 Dial

Make a call from SIM card.

9 Message

On the mainmenu screen, tap **messaging**, you can select the following options:

Write message: You can edit, send SMS/MMS with this function.

Conversations: Built a conversation.

Drafts: In the Drafts, please select Options, and then you can do send from SIM1/SIM2, edit and some other operations.

Outbox: The messages that have not been sent successfully get stored in the Outbox folder.


Archive: You can save your messages in the Archive folder.

Delete messages: You can select to delete inbox, drafts, outbox, sent messages, archive or all messages using Delete Messages option.

Broadcast message: This network service enables you to receive all kind of text messages, such as weather reports or transportation information. There are several networks who afford this service in this world. Please consult your network operator for more reference.

Templates: The phone provides templates of text/multimedia message.

Message settings: You can change the settings about text message, multimedia message, service message, conversations.

-  Functions related to the MMS and emails are network dependent. For provision of and subscription to a service, contact your service provider.
- Open multimedia messages and emails with caution. Objects in multimedia messages or emails may contain hazards that can damage your phone, such as malicious software.

10 Connectivity

Conn. Management: you can manage a connection.









Data account: The function is used to set account information.

11 Email

You can send E-mail including text, sound and picture. If you want to use this function, you need to apply for the E-mail service, and set the E-mail account and server.

Camera



The phone is provided with a built-in 2.0 mega pixel CMOS camera at the back, which supports the photographing and video shooting functions. Pictures are saved in the file system of the phone or the T-Flash card. The file is in the *.jpg format. You can send the pictures taken by the MMS/Bluetooth function provided by the phone.






1. Select **Camcorder** to access Camera.
2. On the picture taking screen, do the following:
 - Tap  to view photos or configure relevant settings.
 - Tap  to adjust the exposure value.
 - Tap  to zoom in or to zoom out.
 - Tap icons such as  and  to configure the corresponding settings.
3. Focus the camera on the scene and press home key or tap  to take a picture.
4. Tap  to save the picture. You can take another picture or tap  and to delete the picture.

Video recorder

Video recorder is used for video shooting.

To record a video clip, do the following:

1. Select **Camcorder**, and the tap  to switch to Video recorder mode.
2. In video recording mode, you can do the following:
 - Tap  to configure the relevant settings.

- Tap  to start recording or  to pause.
- Tap  to adjust the exposure value.
- Tap  to zoom in or zoom out.
- Tap  to stop recording and save the video clip as instructed.




13 Image viewer


Pictures taken can be accessed quickly in Image viewer. Select **Options** for available options while viewing pictures.

14 Media player

The media player plays audio clips stored in the **Audio** folder and video clips stored in the **Videos** folder in the phone memory or on the microSD card. The **Audio** folder and the **Videos** folder can be accessed from **File manager**. To obtain better sound quality, it is recommended that you use the headset to listen to audio clips.

To play a clip, do the following:

1. On the mainmenu screen, tap **Media Player**.
2. Select a video or audio file, and then tap  to start playing the clip.
When the clip is being played, you can do the following:
3. Tap  to pause playing the clip.
4. Tap  to go to the previous menu.

 Only files in .mp4 and .3gp formats are supported. Files in other formats may not play.

15 Photo editor

Photo artist: You can resize or clip the pictures which select from the File manager, the pictures can be gained directly from launching the camera too.

Image tiles: You can tile pictures using this function. The phone provides 3 types of picture tiles, they are 2 image tiles, 4 image tiles and 9 image tiles.

16 Sound recorder

The mobile phone supports **AMR, WAV, AWB** recording formats. You can record conversations, which may be saved to the Audio folder under File Manager.


Note: If a call is coming while recording, the record will abort and the data will be paused. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

17 FM radio

The headset cable also functions as an antenna. To ensure reception of radio programs, do not disconnect the headset from the phone or bend the headset cable.

1. Connect the headset to the phone.
2. On the mainmenu screen, tap **FM radio** to access.

When listening to the radio, you can do the following:

- Press the button on the headset cable to switch between channels.
- Tap  to view or edit the channel list, manually set a frequency, automatically search for and save channels, configure the relevant settings, record the audio clip, and so on.

18 Calendar

You can view and edit the memo of a specified date with this function.

View: You can view or edit the daily arrangement of the day.

View all: You can view or edit all the daily arrangement of the day.

Add event: You can select task types: Reminder, Meeting, and Course.

Delete event: You can select delete entries from All, Overdue, Spec Period.

Jump to date: Skip to the specified date to view or edit the daily arrangements of the day.

Go to today: Skip to the current date.

Go To Weekly/Monthly View: Go to the specified date to check which week/Month it is.

19 Tasks

You can **View, Add, Edit, Search, Delete, Delete Overdue, Delete all, Jump to date, View uncompleted, Send Vcalendar** and **Save as file** as desired. Start up the **Tasks** and press OK. Press **Add** to access to add a new memo.

20 Alarm

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear.

21 World clock

Scroll to browse every city's time zone in the world map. The related date and time will display at the bottom of the screen.

22 Bluetooth

Through Bluetooth, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, or use a Bluetooth headset.

23 WAP

You can access WAP sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe the corresponding service from the service provider and set the relevant parameters on your phone first.

For details about the service and the charges, contact your service provider.

24 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the mobile safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Switch off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Use accessories authorized by manufacturers. Using unauthorized accessories will render the warranty null and void.

- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by battery.

Preventing Hearing Damage

Using the receiver, earbuds, headphones, speakerphone, or earpieces at high volume can result in permanent hearing loss. Be extremely careful when listening at high decibel levels. Set the volume to a safe level. If you experience strange sounds in your ears like ringing or if you hear muffled speech, get your hearing checked. If you continue to use high volume, your hearing will soon get affected.

Hearing experts offer the following suggestions to protect your hearing:

- Reduce the time you use the receiver, earbuds, headphones, speakerphone, or earpieces at high volume.
- Do not increase the volume to block noisy surroundings.
- Reduce the volume if you cannot hear people speaking near you.

Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

Environment Protection

Follow all the local regulations regarding the disposal of your devices or electrical accessories (such as chargers, headsets, or batteries). Recycle them. Do not dispose of an exhausted battery or a used device in a garbage can.

Accessories

Use only the accessories, such as the charger, battery, and headset, delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

Battery and Charger

- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- If the ambient temperature is considerably low or high, the capacity and life of the battery is reduced. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Clearing and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.
- If the ambient temperature is considerably low or high, the capacity and life of the battery is reduced. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.31 W/Kg and when worn on the body, as described in this user guide, is 0.422 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: YAUZMCK895