

**ZTE A475**  
**Mobile Phone**  
**User Manual**

## **LEGAL INFORMATION**

**Copyright © 2015 ZTE Corporation.**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

**Version No.:** R1.0

**Edition Time:** 2015.05.27

# Contents

<b>For Your Safety</b> .....	<b>8</b>
General Safety .....	8
Distraction.....	9
Driving .....	9
Operating Machinery .....	9
Product Handling .....	10
General Statement on Handling and Use.....	10
Small Children .....	11
Demagnetization.....	11
Electrostatic Discharge (ESD).....	11
Antenna.....	12
Normal Use Position .....	12
Air Bags.....	12
Seizures/ Blackouts .....	12
Repetitive Motion Injuries.....	12
Emergency Calls .....	13
Loud Noise .....	13
Phone Heating.....	13
Electrical Safety .....	13
Accessories .....	13
Connection to a Car.....	14
Faulty and Damaged Products.....	14
Interference.....	14
General Statement on Interface .....	14

Pacemakers .....	14
Hearing Aids .....	15
Medical Devices .....	15
Hospitals .....	15
Aircraft .....	15
Interference in Cars.....	16
Explosive Environments .....	16
Petrol Stations and Explosive Atmospheres .....	16
Blasting Caps and Areas.....	16
FCC Compliance .....	17
Health and safety information .....	18
Radio Frequency (RF) Energy.....	18
<b>Getting Started .....</b>	<b>20</b>
Overview .....	20
Keys Explained.....	21
Starting up.....	21
Installing the SIM/SD Card and Battery .....	21
Removing the Battery and SIM/SD Card .....	24
Charging the Battery .....	24
Switching Your Phone On/Off .....	25
Setting Up Your Phone for the First Time	错误! 未定义书签。
Switching to Sleep Mode .....	错误! 未定义书签。
Waking Up Your Phone.....	错误! 未定义书签。
Getting Around Your Phone.....	错误! 未定义书签。
Touch Control .....	错误! 未定义书签。

Home Screen.....	错误！未定义书签。
Status and Notification Icons.....	27
Using the Notification Panel.....	错误！未定义书签。
<b>Phone Calls</b> .....	错误！未定义书签。
Making Calls .....	错误！未定义书签。
Calling from the Phone .....	错误！未定义书签。
Calling from Your Contacts .....	错误！未定义书签。
Calling from Your Call Log .....	错误！未定义书签。
Calling from a Text Message .....	错误！未定义书签。
Receiving Calls .....	错误！未定义书签。
Answering a Call.....	错误！未定义书签。
Rejecting a Call .....	错误！未定义书签。
Muting a Call.....	错误！未定义书签。
Turning the Speakerphone On/Off.....	错误！未定义书签。
Ending a Call .....	错误！未定义书签。
<b>Contacts</b> .....	错误！未定义书签。
Creating a Contact .....	错误！未定义书签。
Searching for a Contact.....	错误！未定义书签。
<b>Messaging</b> .....	错误！未定义书签。
The Message Box .....	错误！未定义书签。
Sending an Message .....	错误！未定义书签。
Message Settings .....	错误！未定义书签。
Touch Input Settings .....	错误！未定义书签。
<b>Getting Connected to the Internet</b> .....	错误！未定义书签。

## **Adding a New Network Connection** 错误！未定义书签。

- Turning On Wi-Fi ..... 错误！未定义书签。
- Connecting to a Wi-Fi Network ..... 错误！未定义书签。
- Checking the Wi-Fi Network Status .. 错误！未定义书签。
- USB tethering & portable hotspot..... 错误！未定义书签。
  - Enabling USB tethering ..... 错误！未定义书签。
  - Disabling USB tethering ..... 错误！未定义书签。
  - Enabling the Wi-Fi Hotspot..... 错误！未定义书签。
  - Disabling the Wi-Fi Hotspot..... 错误！未定义书签。

## **Browsing the Internet** ..... 错误！未定义书签。

- Browsing Options ..... 错误！未定义书签。
- Using Bookmarks ..... 错误！未定义书签。
  - Editing a Bookmark..... 错误！未定义书签。
  - Deleting a Bookmark..... 错误！未定义书签。
- Changing Browser Settings ..... 错误！未定义书签。

## **Bluetooth** ..... 错误！未定义书签。

## **Making the Most of Multimedia** 错误！未定义书签。

- Taking Pictures with Your Camera.... 错误！未定义书签。
- Listening to Your FM Radio ..... 错误！未定义书签。
- Playing Your Music..... 错误！未定义书签。
- Opening Your Gallery ..... 错误！未定义书签。
- Making Voice Memos ..... 错误！未定义书签。

## **Sorting out Your Phone Settings** 错误！未定义书签。

- Setting Date and Time..... 错误！未定义书签。

Display Settings .....	错误！未定义书签。
Audio Profiles Settings .....	错误！未定义书签。
Language Settings .....	错误！未定义书签。
Disabling Data Services.....	错误！未定义书签。
Switching Networks .....	错误！未定义书签。
Setting Access Point Names.....	错误！未定义书签。
Security Settings .....	错误！未定义书签。
Protecting Your Phone with a Pattern	错误！未定义书签。
Protecting Your Phone with a Voice unlock	错误！未定义书签。
Protecting Your Phone with a PIN or Password	错误！未定义书签。
Disabling Screen Unlock Security	错误！未定义书签。
Protecting Your SIM Card with a PIN .	错误！未定义书签。
Managing Your Device Memory .....	错误！未定义书签。
Privacy: Reset to Factory Settings....	错误！未定义书签。
Applications .....	错误！未定义书签。
Installing an Application .....	错误！未定义书签。
Removing an Application .....	错误！未定义书签。
Moving an Application.....	错误！未定义书签。
Managing Other Settings.....	错误！未定义书签。
Text-to-speech Output .....	错误！未定义书签。
Accessibility .....	错误！未定义书签。
<b>Other Applications.....</b>	<b>错误！未定义书签。</b>





Clock .....错误！未定义书签。  
Calculator .....错误！未定义书签。



# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.

	<p>Switch off when near explosive materials or liquids.</p>		<p>Only use approved accessories.</p>
	<p>Don't rely on your phone for emergency communications.</p>		<p>To prevent possible hearing damage, do not listen at high volume levels for long periods.</p>

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

# Product Handling

## General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.

- The phone's normal operating temperature is 0°C ~ 40°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the SIM card's metal connectors.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

## **Seizures/ Blackouts**

The phone can produce a bright or flashing light.

## **Repetitive Motion Injuries**

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## **Electrical Safety**

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

## **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

## **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## **Interference**

### **General Statement on Interface**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this



must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

## FCC Compliance

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/ TV technician for help.

## **Health and safety information**

### **Radio Frequency (RF) Energy**

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base

station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.363 W/kg and when worn on the body, as described in this user guide, is 0.748 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements). Simultaneous RF exposure is 0.872W/Kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.


The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: SRQ-A475

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.

# Getting Started
 
## Overview

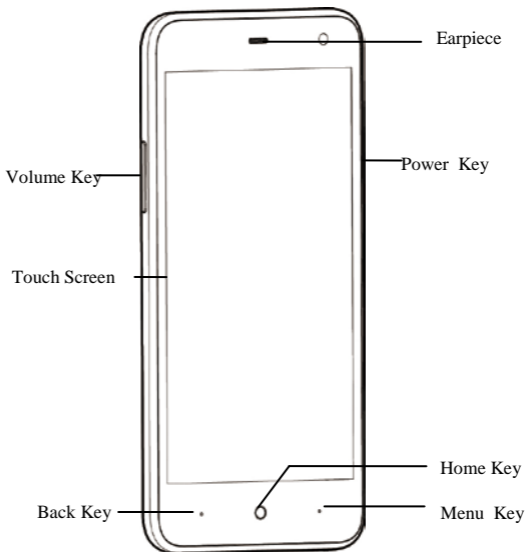

## Keys Explained

 
Key	Function
Power Key	<ul style="list-style-type: none"><li>• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.</li><li>• Press to switch your phone to Sleep mode.</li><li>• Press to wake up your phone.</li></ul>
Home Key	Press to return to the Home Screen from any application or screen.
Menu Key	Press to see recently used applications..
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

## Starting up


### Installing the SIM/SD Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.


1. Remove the back cover.

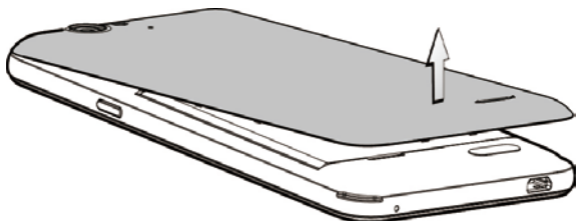

 2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

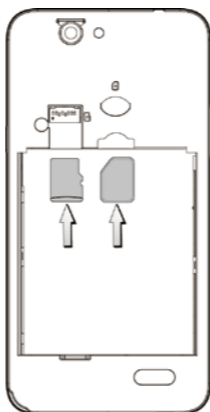


 3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.

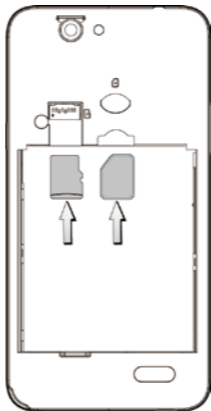

 4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



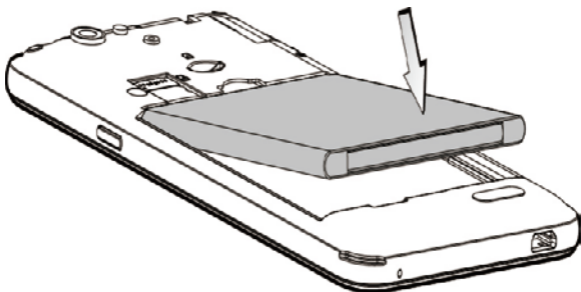

5. Press the cover gently back into place until you hear a click.

## **Removing the Battery and SIM/SD Card**

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out.
4. Slide the SIM card out.
5. Slide the SD card out.

## **Charging the Battery**

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the

adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

## Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**.

## Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.


Press **Home key > Settings > Language & input > Language** to change the language you want to use, if needed.

## Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display

is automatically turned off after a certain period of time. You can start sleep mode by the following method. Press **Power Key** to switch to Sleep Mode.

## Waking Up Your Phone

1. Press **Power Key** to activate your screen display.
2. Swipe  up to unlock.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Getting Around Your Phone

### Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Hold and drag to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image. Pinch on with two fingers to zoom in/out a web page.

## Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

### Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

### Choosing Your Wallpaper

1. Press **Home Key** to return to the Home Screen.
2. Press and hold Home Screen and select **WALLPAPERS**.
3. Choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
4. Tap **SET WALLPAPER**.















### Removing Items from Your Home Screen

1. Press **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the **Remove** appears on the screen.
3. Drag the item to the remove icon and release your finger when the item turns red.

### Status and Notification Icons

Your phone will tell you exactly what's going on by showing

you simple icons. Here's what they mean.

	USB connected		Missed call
	Airplane mode		Bluetooth icon
	New Wi-Fi network detected		New message
	Battery charge		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		Meeting mode
	Signal searching		Signal strength

## Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

## Open Recently-Used Applications



1. Hold **Menu Key** from any screen. The phone will display icons of applications you used recently.
2. Tap the application you want to open.


# Phone Calls

## Making Calls


There are many ways to make a call with your phone. And they're all easy to do.

### Calling from the Phone


1. Tap  on the Home Screen.
2. Tap , enter the phone number using the on-screen keypad.


Tap  to delete wrong digits.

3. Tap the dial icon.

**TIPS:** To make international calls, hold  to enter the “+”.


### Calling from Your Contacts

1. Press **Home key** >  > **Contacts**.
2. Slide your finger to scroll the contacts list and tap the contact you want to call.

You can search for a contact by tapping  on the top of the screen.

3. Call the contact.


### Calling from Your Call History

1. Press **Home key** >  > **RECENTS**

2. Tap the call log to dial the number.

## Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home key** > .
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.
4. Tap the dial icon

## Receiving Calls

### Answering a Call


Tap the  **ANSWER** icon to answer the call.

### Rejecting a Call

Tap the  **DISMISS** icon to reject the call.



### Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.


Tap  to turn your microphone off. To turn your microphone

back on, tap  again.

## Turning the Speakerphone On/Off

 
Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone.

## Ending a Call

Tap  to finish a call.

## Call settings

1. In the standby screen, Click on common functional areas

 Open the dialer interface into dialing.

2. Click the  **>Settings**

**Call accounts** (Voice phone settings)


- **Voicemail:** Voice mail service and number.
  - **Service:** Select the voice mail service.
  - **Setup:** Set voicemail number.
- **Call forwarding:** Set up call forwarding options.
- **Call barring:** Set limit outgoing and incoming.
- **Additional settings:** Set the Caller ID and call waiting situation.
- **Fixed dialing numbers:** Enable / disable fixed dialing、Change PIN2 and manage fixed dialing list.




- **TTY mode:** Use of hearing or speech difficulties.

## People


You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key** >  > **Contacts**.

## Creating a Contact

1. Tap  from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

## Searching for a Contact

1. Tap  on the top of the Contacts Screen.
2. Input the contact name you want to search for. The contacts matched will be listed.

## Messaging








Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key** >



# The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.


## Sending a Message


1. Press **Home key** > .
2. Tap  to create new message.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap  to select recipients from the contacts.
4. Tap **Type text message** and type your message.
  - Tap  to insert quick text, insert contact or Add subject or Discard.
  - If you are sending an MMS, tap  to **add subject**, or tap  to attach pictures, videos, audio, or slideshow.
5. Tap  to send your message.

**NOTE:** Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll

automatically become a text message.

## Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap  > **Settings** from the Messaging Screen.

**NOTE:** From SMS settings screen tap  > **Restore default settings** to change all the message settings back to the original.


## Touch Input Settings

Choose the touch input settings by tapping **Home key > Settings > Language & input** from Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings that you need.




## Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.

You can view settings by pressing **Home key >  > Settings > More > Cellular networks > Access Point Names.**

## Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key** >  > **Settings** > **Wi-Fi**.
2. Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

## Connecting to a Wi-Fi Network

1. Press **Home key** >  > **Settings** > **Wi-Fi**.

When the WLAN is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it.

**NOTE:** If security features are implemented, you'll need to enter a password.

## Checking the Wi-Fi Network Status



You can check the Wi-Fi network by looking at the  icon in the status bar.

## Tethering & portable hotspot



Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

## Enabling USB tethering

**TIPS:** The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press **Home Key** >  > **Settings** > **More** > **Tethering & portable hotspot** > **USB tethering** and Click  next to turn it on.

## Disabling USB tethering

Press **Home Key** >  > **Settings** > **More** > **Tethering & portable hotspot** > **USB tethering** and Click  next to turn it off.

You can also just pull out the USB cable.


## Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

### **NOTE:**

When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.


You can configure the Wi-Fi hotspot as follows:

1. Press **Home Key** >  > **Settings** > **More** > **Tethering & portable hotspot** and slide the **Portable Wi-Fi hotspot**

switch


2. Tap Configure **Wi-Fi hotspot** to set up & manage portable Wi-Fi hotspot.

## Disabling the Wi-Fi Hotspot


Press **Home Key** >  > **Settings** > **More** > **Tethering & portable hotspot** and turn off the Portable **Wi-Fi hotspot** Switch

## Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.




Press **Home Key** > .

**There are different ways to open web pages:**


- Tap the address bar to enter the website you want to browse. Then enter the website.
- Tap  > **Bookmarks/History** and select a bookmark or history to open.

## Browsing Options


When you browse the Web, you can also do the following:

- Press  > **Close** and select **Quit** to exit.
- Press  > **Bookmarks/History** and select a bookmark or history to open.
- Press  > **Settings** to configure browser settings.


## Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap  > **Save to bookmarks**. Give the bookmark a name and save it.


## Editing a Bookmark

1. Open a Browser window.
2. Tap  > **Bookmarks/History**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **OK** to save it.

## Deleting a Bookmark

1. Open a Browser window.
2. Tap  > **Bookmarks/History**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.




## Changing Browser Settings

Tap  > **Settings** from a browser window to change

browser settings.

## Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key** >  > **Settings**>**Bluetooth**.
2. Click  next to the Bluetooth menu to turn it on, When Bluetooth is on, the  icon will appear in the status bar.
3. Tap **Bluetooth**. Your phone will show all visible Bluetooth devices in range.
4. Tap the device you want to pair with and operate according to the message prompt.  
When the owner of the device to be paired accepts the connection, the pairing is completed.

**TIPS:** Tap your device name to make your phone discoverable if other devices try to pair with your phone.


## Making the Most of Multimedia

### Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home**







**Key** >  > **Camera.**



Tap  to take a shot. To view it, just tap the picture in the lower right corner of the screen.

**NOTE:** Before taking a picture, click the corresponding icon on camera screen to complete the camera-related settings.

## Shooting Video with Your Camcorder

Open the camcorder by pressing **Home Key** >  > **Camera** > tap .

Tap  to start shooting, and tap  to Pause, and

Tap  Continue shooting, tap  The end of the video. Select the picture in the lower right corner of the screen to view the video you've just shot.


## Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and collect them to your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.


- To tune in, plug your headset into your phone. Press **Home key** >  > **FM Radio.**

## Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.





1. Press **Home Key** >  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

## Opening Your Gallery

Press **Home Key** >  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

## Making Voice Memos

**Sound Recorder** enables you to record your voice memos.

1. Press **Home Key** >  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Save the voice recording after stop, or tap **DISCARD** to delete the recording.

# Using Your Google Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application that needs a Google account, such as **Play Store**.
2. If you've got a Google account, tap **Enter your email**, then tap **NEXT**, enter your password. Then tap **Sign in**. (Or tap **OR CREATE A NEW ACCOUNT** if you don't have a Google account.)

## Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:


Open **Gmail** by Pressing **Home Key** >  > **Google** > **Gmail**.

## Using Google Hangouts


Google **Hangouts** is Google's instant messaging program, which enables you to communicate with other people who also use it. Press **Home Key** > **Google** > **Hangouts**

# Sorting out Your Phone Settings

## Setting Date and Time


1. Press **Home key** >  > **Settings** > **Date & time**.
2. Tap the **Automatic date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

## Display Settings

Press **Home key** >  > **Settings** > **Display**, you can adjust the display settings as you like:

- **Wallpaper:** Choose window animation.
- **Brightness level:** Adjust brightness of the screen.
- **Sleep:** Set the delay for the screen to automatically turn off.


## Sound Settings

By pressing **Home Key** >  > **Settings** > **Sound & notification**, you can select the profile, adjust the sound settings, such as ringtones, volume and vibrate.


## Language Settings

You can change the language of your phone system in two


simple steps.

1. Press **Home key** >  > **Settings > Language & input > Language.**
2. Select a language from the list given.

## Switching Network Modes


1. Press **Home key** >  > **Settings > More > Cellular networks > Preferred network type.**
2. Select one of the following: **GSM/WCDMA/LTE automatic, GSM/WCDMA, GSM only ,or WCDMA only.**

## Switching Networks

1. Press **Home key** >  > **Settings > More > Cellular networks > Network operators.** The phone automatically searches for all available networks.
2. Tap a network to register manually, or tap **Choose automatically.**

## Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.


Press **Home key** >  > **Settings > More > Cellular networks > Access Point Names.**

# Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

## Protecting Your Phone with a Pattern

### Creating Your Screen Unlock Pattern

1. Press **Home key** >  > **Settings** > **Security** > **Screen lock** > **Pattern**.
2. Drag your finger to connect at least four dots, draw the pattern.
3. Touch **Continue**.
4. Redraw your pattern to confirm.
5. Touch **Confirm**

### Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
  2. Draw the pattern you set to unlock the screen.
- If you make a mistake, please try again.

## Protecting Your Phone with a PIN or Password

### Creating a PIN or Password

1. Press **Home key** >  > **Settings** > **Security** > **Screen lock**.


2. Tap **PIN** or **Password**.

## Unlocking the Screen with Your PIN or Password

1. Press **Power Key** to wake up the phone.
2. Enter the PIN or password you set.


## Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Press **Home key** >  > **Settings** > **Security** > **Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created.
3. Tap **None**.

## Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.


1. Press **Home key** >  > **Settings** > **Security** > **Set up SIM card lock**.
2. Tick the **Lock SIM card** check box.
3. Enter the PIN you've been given and tap **OK**.

**TIPS:** If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN

Unlock Key (PUK) to restore the SIM card.

## Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key** >  > **Settings** > **Security** > **Set up SIM card lock**.
2. Make sure you already tick the **Lock SIM card** check box.
3. Tap **Change SIM PIN**.

## Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

### Deleting Secure Credentials

1. Press **Home Key** >  > **Settings** > **Security**.
2. Tap **Clear credentials** to clear credentials.

## Managing Your Device Memory

Press **Home Key** >  > **Settings** > **Storage**.


**DEFAULT WRITE DISK:** The default option is to phone storage, the phone files are automatically saved in the phone storage, or manually select the SD card so that the files are saved in SD card.

You can view the space information of the SD card as well as the phone storage.



- **Unmount SD card:** You can unmount the SD card to safely remove it.
- **Erase SD card:** Erase all data on the SD card.

## Privacy: Reset to Factory Settings

Press **Home key** >  > **Settings** > **Backup & reset** > **Factory data reset** > **Reset phone** > **Erase everything.**

**WARNING:** All your personal information and downloaded applications on your phone will be erased after the resetting.

## Applications

Press **Home Key** >  > **Settings** > **Apps.**

### Installing an Application

You can install an application from the Play store (**Home Key** > **Play Store**).


You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** >  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.

4. Read the installation instructions that come with the application and follow it to complete the setup.

**NOTE:** Please take your handset as the standard.


## Removing an Application

1. Press **Home key** >  > **Settings** > **Apps** .
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

## Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.


**NOTE:** Not all applications can be move to your phone or memory card.

1. Press **Home key** >  > **Settings** > **Apps** .
2. Click the application you want to move on the **Downloaded** tab.

## Managing Other Settings

### Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key** >

 > **Settings > Accessibility.**




## Text-to-speech Output

You can set the text-to-speech and voice recognition options by pressing **Home Key >  > Settings > Language & input > Text-to-speech output.**

**NOTE:** You need to download voice data in order to use the text-to-speech function.


## Other Applications

### Alarms

1. Press **Home key >  > Clock >  Alarm.**
2. Tap the default alarm to configure it. Or to create a new alarm, tap  New.

### Calculator

You can use the phone directly perform simple mathematical calculations.

1. Press **Home Key >  > Calculator.**
2. Click the button corresponding with the calculator display, perform basic arithmetic.

**TIPS:** Tap **Menu Key > Advanced panel** to use scientific calculation.