

# **CDMA2000 Wireless Data Terminal User Guide**

This User Guide is used for Wireless Data Terminal of AC2793.

**Copyright Statement**

Copyright © 2013 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

## Table of Contents

1. Introduction.....	1
2. Precautions.....	1
3. Appearance .....	2
3.1 Insert microSD Card .....	2
3.2 Operation Guide of Data Cable.....	2
4. Install and Uninstall.....	3
4.1 System Requirements.....	3
4.2 Installation Guide.....	3
4.2.1 Install.....	3
4.2.2 Uninstall.....	3
5. Run the Application .....	4
6. Connect/Disconnect.....	4
7. SMS .....	4
8. Settings .....	5
9. Help .....	6
10. Trouble-shooting.....	7
11. FCC Regulations.....	9
12. ▶ RF Exposure Information (SAR).....	9

## 1. Introduction

Thank you for choosing ZTE Corporation's CDMA2000 Wireless Data Terminal (hereinafter referred to as Data Terminal).

Data Terminal supports both CDMA2000 1X EV-DO and CDMA2000 1X network. In the area where there is signal, it allows you to go surfing on the Internet, send & receive short messages.

The pictures in this help are only used to demonstrate your Data Terminal's functions, so they are maybe different from what you see on your Data Terminal. Please refer to your Data Terminal if they are differences.

## 2. Precautions


- Use the original accessories or those authenticated by the manufacturer. Using any unauthenticated accessories may affect the data terminal's performance, violate the warranty provisions or relevant national regulations about telecom terminals, or even cause body injury.
- Do not disassemble, modify, frequently pull/plug the antenna, stretch, rotate or bend the antenna with great force.
- Before pulling out the data terminal, please use Windows safely removing the hardware and make sure to exit the application. Do not directly pull out the terminal to avoid the damage of data terminal or the influence on the normal operation of operating system.
- Do not forcefully plug/pull the data terminal to avoid the damage of connector.
- Do not use your data terminal near weak signal or high-precision electronic devices. Radio wave interference may cause misoperation of electronic devices or other problems.
- Turn off your data terminal on airplane where it's forbidden to use it. The data terminal may affect the normal operation of electronic devices, therefore please follow the relevant regulations when using your terminal on airplane.
- Turn off your data terminal in hospital where it's forbidden to use it. The data terminal may affect the normal operation of medical apparatus, therefore please follow the relevant regulations when using your terminal in hospital.
- Please do not use the data terminal near flammable or explosive materials; otherwise it might cause failure or fire.
- Keep your data terminal away from water. This may cause overheating or failure if water or any other kind of liquid enters your terminal. Please do not use your data terminal near high temperature, damp or dusty place.
- Keep your data terminal away from children to avoid shock, plunge or impact. It may cause body injury when the data terminal is used as a toy.

### 3. Appearance

#### 3.1 Insert microSD Card

**Note:** If your data terminal doesn't need microSD card, please skip this section.


1. Pull out the tap;
2. Take out the microSD card cover in the direction indicated by the arrow;
3. Insert microSD card as below figure;

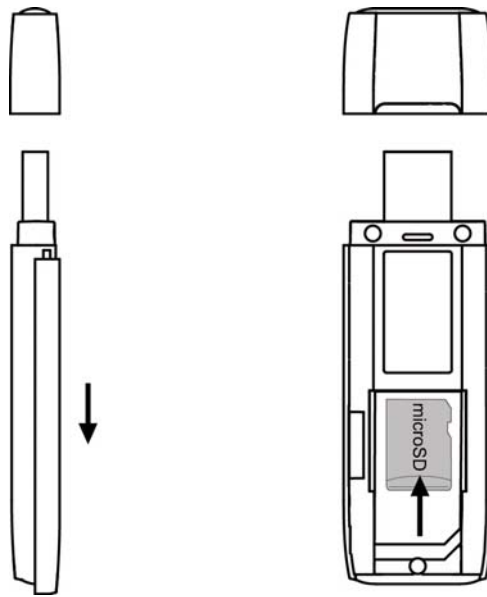

4. Push back microSD card cover.

#### 3.2 Operation Guide of Data Cable

Generally, the Data Terminal could be directly connected with USB port. You could also connect the Data Terminal with PC by using the accompanying data cable, as shown in the following figure. Connect Interface ① with Data Terminal, and interface ② with PC's USB port. If the power supply from USB port is insufficient, connect both interface ② and ③ with USB port together.

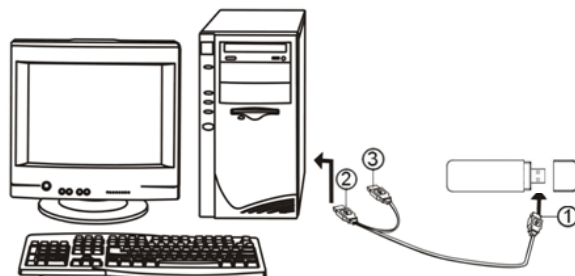

## 4. Install and Uninstall

### 4.1 System Requirements

The Data Terminal supports the following operating system:

- Windows XP
- Windows Vista

PC minimum configurations:

CPU	Pentium-II/233MHz
USB interface	2.0 (USB1.0 and 1.1 compatible)
Optical Drive	CD-ROM (for installation only)
Memory	64 MB
Disk Space	50 MB (used for installation of application)

### 4.2 Installation Guide

Take Windows XP for example. Under other operating systems, please refer to the installation under Windows XP. Do not insert the Data Terminal before installation.

#### 4.2.1 Install

1. Please connect Data Terminal to PC through USB interface. You could use the data cable to connect.
2. The installation driver will automatically run. Please install according to the installation wizard.
3. The system will automatically find new hardware and install the driver. Wait for a while. Click "Finish" after the installation is completed.

**Note:**

*Please connect the Data Terminal and PC with USB extension cable under weak signal to obtain the optimal performance. If necessary, adjust the Data Terminal's position.*

---

#### 4.2.2 Uninstall

1. Select **Start → All Programs → ZTEMT → Uninstall ZTEMT UI**, and you will be asked if you want to remove the program. Click "Yes".
2. Please wait and then click "OK" when un-installation is completed.

## 5. Run the Application


 
After the application is installed successfully, the application icon will appear on your desktop. Double-click this icon or select from **Start** → **Programs** → **ZTEMT** → **ZTEMT. UI** Run the application to display the user interface.

The icons on the interface are used to access the function, which indicate as below:



## 6. Connect/Disconnect

### Connect


- ✧ Click  icon to set the relevant parameters. For details, please refer to 12 “Setting” for details.
- ✧ Click .
- ✧ After connecting to Internet, the current network information will appear on the interface. Double-click any place in the display area to view the connection drawing.
- ✧ Please connect the Data Terminal and PC with USB extension cable under weak signal to obtain the optimal performance. If necessary, adjust the Data Terminal's position and the antenna's direction.

### Disconnect


- ✧ After connecting to Internet, click **Disconnect**.

## 7. SMS

(If this feature is not supported by your Data Terminal, please skip over this chapter.)

Click  icon to enter SMS interface.

### Send a Message

- ✧ Input the text and the recipient's number.
- ✧ Input the recipient's number or click  button to select the recipient from Phonebook.
- ✧ Add more recipients if you like.
- ✧ Select priority.

- ✧ Click  button to send a message.
- ✧ Click  button to save the text into Draftbox.

The received messages will be saved in the Data Terminal In-box.


You could copy the messages from the Data Terminal In-box to PC In-box by selecting Copy or Copy All; you could also copy the messages from PC In-box to the Data Terminal In-box by selecting Copy.

Take Data Terminal In-box as an example:


### Reply

- ✧ Click  to reply to the sender.

### Forward

- ✧ Click  to forward this message to other recipients.


### Save Sender's Number

- ✧ Click  to save the sender's number into Phonebook.


### Delete

- ✧ Click  to delete your selected records.


### Clear

- ✧ Click  to delete all the records in the inbox..


### Copy

- ✧ Click  to copy your selected record into PC.

### Copy All

- ✧ Click  to copy all the records from the data terminal to PC.

## 8. Settings

Click  to enter the settings interface.

### Network Connection Setting

- ✧ Set the network parameters (username, password), work mode, etc.
- ✧ After the setting, click “Apply” button to save the settings on the current interface.



- ✧ Click “Default” button and then “Apply” button to restore the settings on the current interface to factory default.

---

**Note:**

*The default network setup parameters are as below. Different regions may have different network setup parameters, so please consult your local telecom operator.*  
*Phone: #777*  
*User: card*  
*Password: card*

---

**If your Data Terminal does not support some following functions, please neglect relevant description.**


**Other Setting**

- ✧ Click “Options” to switch the interface, and you could set URL and language, etc. If you want to use conference call, please select “Show 3 way call button during calling”;
- ✧ After the setting, click “Apply” button to save the settings on the current interface.
- ✧ Click “Change Password” button to set lock device. The password is required when you start the application. The setting has nothing to do with "Default" button.
- ✧ Click the button “Enable Pin”. PIN code is needed when the application is started. The setting has nothing to do with "Default" button.
- ✧ Click “Default” button and then “Apply” button to restore the settings on the current interface to factory default.

**Update**

Select Manual Upgrade or Auto Upgrade for the software.

## 9. Help

Click  button to view the help file.

- ✧ Click “Help” button to view the relevant help file; click “Online service” to enter our company’s website.
- ✧ You could view the software version information under “About”.

## 10. Trouble-shooting

Failures	Causes	Solutions
Error occurs during the program installation.	The setup file may be damaged.	Please download the program on our website <a href="http://WWW.ZTEMT.COM">WWW.ZTEMT.COM</a> and reinstall it.
Open port failed.	Directly run the software before the Data Terminal is plugged in.	Close the software, plug in the Data Terminal and run it again.
	The port is occupied by other applications, such as "Hyper terminal", or the software is already run.	Close relevant software and run the software again.
No R-UIM card.	R-UIM card is not inserted.	Insert R-UIM card.
	R-UIM card is not inserted properly. Sometimes the front side and back side are confused.	Please refer to User Guide. Properly insert R-UIM card.
	R-UIM card is damaged. Validate by using a CDMA terminal.	Replace R-UIM card.
No signal indicated.	Antenna is not connected to the Access Box.	Insert the antenna into the Data Terminal.
	Out of the network service area.	Make sure it is in the CDMA network service area.
	The antenna or RF component is damaged.	Replace relevant damaged parts.
Internet connection failure.	The Data Terminal is being connected. (It usually occurs when the Internet connection is immediately made after the call is dialed.)	Reconnect.
	Poor network signal.	View signal strength indication and check if the antenna is properly inserted.
The installation program can't auto set up. (If the Data Terminal supports auto setup function.)	The program has already been installed in current system.	Firstly remove the original program and insert the terminal again.
	Autorun function in CD-ROM is disabled because of installation of anti-virus software in the system, or Windows Vista system itself disabled Autorun function in CD-ROM in default.	Open "My Computer" to enter CD-ROM disk ordinal, and double-click Setup.exe to install manually.
No CD-ROM disk ordinal in "My Computer".	CD-ROM will automatically disappear once the program is installed successfully.	This is normal. If you want to display CD-ROM disk ordinal, you could firstly remove the program and then insert the terminal again.
	The program is not yet installed, and	Please restart your computer. Please contact your

	<p>no other previous version was installed in the system.</p>	<p>local operator or product technical support center if CD-ROM disk ordinal doesn't appear after your computer is restarted.</p>
<p>The driver might be unable to work and the application is unable to run normally if the terminal is pulled out and plugged in again when the application is being used under Win2000 (SP4) operating system .In this case, the device in device manager will be marked with yellow exclamation mark, and the system must be restarted to run normally.</p>	<p>The operating system needs installing Update Roll 1 patch for Win2K SP4.</p>	<p>Please download the patch from the following web site and install it.  <a href="http://www.microsoft.com/downloads/details.aspx?familyid=B54730CF-8850-4531-B52B-BF28B324C662&amp;displaylang=en">http://www.microsoft.com/downloads/details.aspx?familyid=B54730CF-8850-4531-B52B-BF28B324C662&amp;displaylang=en</a></p>

## 11. FCC Regulations

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 12. RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves.

This terminal is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the terminal while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for body, as described in this user guide, is 1.18 W/kg for CDMA BC0 band.

While there may be differences between the SAR levels of various terminals and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this

device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: SQR-AC2793.

For body operation, this device has been tested and meets the FCC RF exposure guidelines for use the positions the device a minimum of 0.5cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.