

ZTE-G N285
Mobile Phone
User Manual

LEGAL INFORMATION

Copyright © 2011 by ZTE CORPORATION

All Rights Reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 01.24, 2011

Manual No. : 07958450****

Table of Contents

SECURITY	4	SENDING AND RECEIVING MESSAGES	27
SAFETY PRECAUTIONS	4	SENDING AND RECEIVING EMAIL	30
RF EXPOSURE	11	USER PROFILES	31
LIMITATION OF LIABILITY	14	SETTINGS	32
YOUR PHONE	15	CONNECTIVITY	34
TURNING ON / OFF OR WAKING UP YOUR PHONE	16	ORGANIZER	36
LOCKING / UNLOCKING THE KEYPAD	16	EXTRA	36
USING THE TOUCHSCREEN	16	FILE MANAGER	37
STATUS BAR ICONS	17	FUN&GAMES	37
ADJUSTING THE VOLUME	17	MULTIMEDIA	38
TECHNICAL PARAMETERS	18	SERVICES	41
BATTERY	18	DECLARATION OF ROHS COMPLIANCE	43
INSERTING THE SIM CARD	20	DISPOSAL OF YOUR OLD APPLIANCE	44
INSERTING THE MICROSD CARD	22	EC DECLARATION OF CONFORMITY	44
WRITING TEXT	23		
PHONEBOOK	24		
MAKING AND RECEIVING CALLS	25		
CALL CENTER	26		

Security

- To protect your mobile phone from illegal usage, take the following security measures:
 - Set the PIN code of the SIM card.
 - Set the phone lock code.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as when holding a standard wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or

playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)

- Keep the phone out of reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use the hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if required.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing-aid manufacturer to discuss

alternatives.

- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In areas with special requirements, such as hospitals or health care facilities, please pay attention to the restrictions on the use of your mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause injury and may violate related local regulations for telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce an electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TVs, telephones, radios and personal computers can cause interference.
- Do not expose your mobile phone to direct sunlight or store in hot places.

High temperatures can shorten the life of electronic devices.

- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can damage internal circuit boards.
- Do not connect the phone with any incompatible accessory or enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without the battery.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive environments, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Sparks in potentially explosive environments can cause explosions or fire, resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices”. Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by the mobile phone if inadequately shielded, such as the electronic systems of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbags, brakes, speed control systems and oil eject systems should not be affected by wireless transmissions. If you do meet any of the above problems, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and in the locations where the use of two-way radio is also prohibited.

Aircraft Safety

- Please turn off your mobile phone before take off. In order to protect the aeroplane's communication system from interference, it is forbidden to use mobile phones in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the automatic timing power-on feature, please check your alarm setting to make sure that your phone will not be automatically turned on during the flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store the battery in hot areas or throw it into a fire. Otherwise, it may cause an explosion.
- Do not disassemble or refit the battery. Otherwise, it may cause liquid leakage, overheating, explosions and ignition of the battery.
- Please store the battery in a cool dry place if you do not use it for a long period.
- The battery can be recharged many times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of ageing.
- Return the worn-out battery to the provider or dispose of it in accordance with local environmental regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone

manufacturer. Using unauthorized batteries may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If leakage does come into contact with eyes or skin, wash the affected areas thoroughly in clean water and consult a doctor.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

RF Exposure

Your phone contains a transmitter and a receiver. When it is ON, it receives and

transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg and the highest SAR value for this device when tested at the ear was 1.320W/kg and at the body worn was 1.070 W/kg . As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

FCC ID:Q78-GN280

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

 
Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for demonstration of functions. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because the handset function has been updated, please refer to the follow-up public information from ZTE.

Your phone

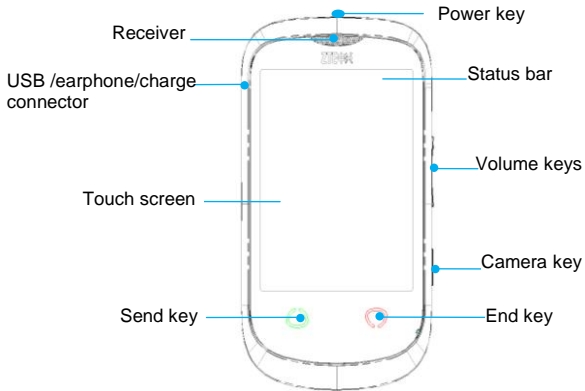

Turning On / Off or waking up your phone

Hold the **Power key** to turn your phone on or off.

In **Menu**→**Settings**→**Phone settings**→**Misc. settings**→**LCD backlight**, set the LCD backlight time. If the phone is not operated within this time, the screen will turn black.

Press the **Power key**, **Volume keys** or **Camera key** to wake up your phone.

Locking / unlocking the keypad

In **Menu**→**Settings**→**Security settings**→**Auto keypad lock**, set the auto keypad lock time. If the phone is not operated within this time in the standby mode, the keypad will be locked. Or you can press the **Power key** or **End key** in the standby mode, then select **Yes** to unlock the keypad.

To unlock the keypad, drag the locked icon on the bottom left corner to the right.

Note: In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.
















Using the touchscreen

Your phone supports touch screen functionality.

- Tap any application to open it.

- Drag up or down to scroll.

Status bar icons

Indicator	What it means	Indicator	What it means
	Signal strength		New SMS, blinking when message box is full
	GPRS		New MMS
	Roaming		Calling or in call
	Bluetooth		Missed call
	Ring		Call forward
	Outdoor		Keypad unlocked
	Meeting		Battery status
	Alarm clock set		

Adjusting the volume

When you're on the phone or listening to songs, movies, or other media, the Volume keys on the left side of your phone adjust the audio volume.

Otherwise, the keys control the volume for the ringer, and other sound effects.

Technical parameters

Handset

Type	ZTE-G N285
Dimensions (L×W×H)	98 mm×55 mm×13 mm
Weight	Approx. 85 g (with battery)

Battery

Continuous standby time	max. 500 hours (subject to network status)
Continuous talk time	max. 400minutes (subject to network status)

For other parameters about battery and charger, refer to their labels.

 
Battery

The lithium ion battery of the mobile phone can be immediately used after unpacking.

Installing the battery


1. Pull the battery cover from the notch on the bottom and remove the cover.
2. Insert the battery by aligning the gold-coloured contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.

4. Replace the battery cover and close it gently until you hear a click.

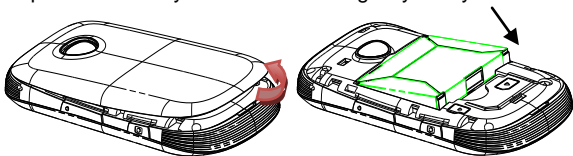

Removing the battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.

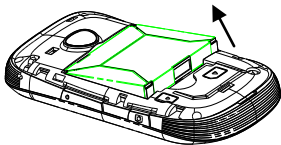


Charging the battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then

charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

 1. Connect your travel adapter to the side of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When you charge the battery, the battery charging indicator appears.
4. When the battery is fully charged, disconnect the charger.

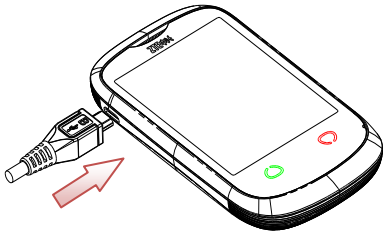


Inserting the SIM card

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

 - Make sure that the phone is switched off and the charger is disconnected from the phone.
- Turn the phone over and remove the battery cover.
- Remove the battery if it is already installed.
- Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the gold-coloured contacts facing downward.
- Replace the battery first.
- Replace the battery cover.

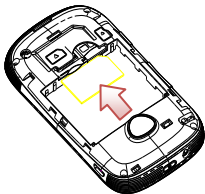

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

 
Inserting the microSD card

You can use a microSD card to expand the storage of the phone. You can store or copy files such as videos, photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

microSD Logo is a trademark. Insert the microSD card as follows:

The microSD card slot is on the side of the SIM card holder. Insert the card with the metal contacts facing down until it clicks to the right position.

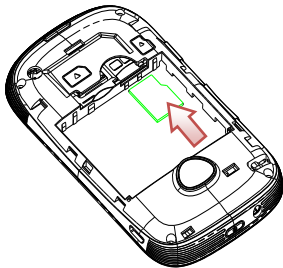

Note: microSD is a trademark of SD Card Association.

Writing text

You can use the onscreen keyboard to enter text messages, contact information, notes, and more.

1. Tap a text field, such as in a note or new contact, to bring up the keyboard.
2. Tap keys on the keyboard. As you type, each letter appears above the keyboard.
 - Change input mode: Tap the # button to change the input mode (input modes: Smart ABC, Smart abc, ABC, abc and Numeric).
 - Input Letters: In ABC/abc mode, tap the corresponding letter key till the letter appears.
 - Input Words: In Smart ABC/Smart abc mode, input any letter with a single button tap. Tap each button only once for every letter. The word changes after each button stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by tapping the character string.
 - Input Digits: In 123 mode, tap the digit button once to input a digit. In Smart ABC/Smart abc mode, tap the digit button, and select the number.
 - Input Symbol: Tap the * button to enter the symbol mode. In symbol mode select the required symbol by tapping once. In Smart ABC/Smart abc mode, tap the 1 button, and select the required symbol (common symbols).

- **Input Space:** Tap the space button to input a space. It does not work in 123 mode.
- **Delete Character:** Tap the back button to clear a character.
- **Move Cursor:** Among the text, tap in the position you want to move

Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

- **Add new contact**

Go to **Menu**→**Phonebook**→**Add new contact**. (Select a storage location if you have selected **Both** in **Preferred storage**.) Edit the information and select **Options**→**Done** to save.

- **Save number to Phonebook**

You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your **Phonebook** list.

- **Quick search**

To quickly search for the contacts, tap the input box, and then enter the first letter of your desired contact on the screen.

- Delete one record

To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

- Copy or move records

You can copy or move the records to SIM or to phone. Select **Options**→**Copy** or **Move**.

- Set preferred storage

Select **Options**→ **Phonebook settings**→**Preferred storage** and then select **SIM**, **Phone** or **Both**.

- View memory status

Select **Options**→**Phonebook settings**→**Memory status** to check the memory status of both phone and SIM.

Making and receiving calls

- Basic way to make a call

In the standby mode select Dialer icon. Tap the numeric buttons to input the number and press the **Send key** to dial.

- Dial from the Phonebook

Go to **Menu**→**Phonebook**. Find the name of the person you want to call, and press the **Send key**.

- Make an emergency call
You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.
- Answer a call
Press the **Send key**.
- End a call
Press the **End key**.
- Use call options
During a call, you can select **Options** to enter the call options.
You can use the speakerphone by tapping the **H-free** button.
You can put a call on hold, make a conference call, and use applications such as Messaging & Phonebook while you're on a call.

Call center

Go to **Menu**→**Call center**.

- Call history
Missed calls, Dialed calls and Received calls are saved in **Call history**. If the records are full, the earliest saved records will be deleted.
Also, you can view call timers, call cost, Text msg. counter and GPRS counter in **Call history**.

- Call settings
 - ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.
 - ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.
 - ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
 - ◆ Call barring: You can bar outgoing and incoming calls.
 - ◆ Line switching: Switch the call line.
 - ◆ Closed user group: You can create groups and numbers in one group can call each other, but can not call numbers in other groups.
 - ◆ Advance settings: You can set auto redial, IP dial, call time display and call time reminder.

Sending and receiving messages

- Write a new message

You can use your mobile phone to send and receive messages.

1. Go to **Menu**→**Messaging**→**Write message**.
 2. Write your message. For more information on input method, see section “Writing text”. The default message type is SMS.
 3. If you want to change to MMS, you can press **Options** and choose **Switch to MMS**; or you can press **Options** and choose **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
 4. You can select **Options**→**Slide options** to select to add a new slide. And you can select **Options**→**Advanced** to insert an attachment, contact number, contact name or bookmark.
 5. When you finish writing, press **Options**→**Send to** to enter recipient or add from **Phonebook**. If you are writing an MMS, after adding recipients, then you can select **Options**→**Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.
 6. Select **Options**→**Send** to send the message out. If you want to save the MMS as a draft, select **Options**→**Save to Drafts**. If you are writing a SMS, select **Options**→ **Save**.
- View messages
Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.
 1. Press **View** to view the message.

2. While the message is open, use **Options** to reply, delete, or forward the message. You can also call back the sender or save the sender's number to **Phonebook**.

You can view the message boxes in the Messaging interface.

- ◆ Select **Inbox** to view received messages.
 - ◆ Select **Drafts** to view unsent messages.
 - ◆ Select **Outbox** to view messages that failed to send.
 - ◆ Select **Sent messages** to view messages been successfully sent and saved.
 - ◆ Select **Archive** to view archive messages.
 - ◆ Select **Broadcast message** to view broadcast messages.
 - ◆ Select **Templates** to view message templates.
- Messages settings

Go to **Menu**→**Messaging**→**Message settings**→**Text message**.

- ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
- ◆ Voicemail server: Edit your voicemail server and call voicemail.
- ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent messages or not.
- ◆ Memory status: View the SIM and phone memory status.

- ◆ Preferred storage: Set the preferred storage to SIM or Phone.
- ◆ Preferred connection: Set the preferred connection to GPRS, GSM or GSM only.

Go to **Menu**→**Messaging**→**Message settings**→**Multimedia message**.

- ◆ Profiles: You can activate a profile or add new ones.
- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Delivery report, Read report, Priority, Delivery time, and Send and save. In **Retrieval**, you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or Memory card. In **Memory status**, you can view memory status.

Sending and receiving Email

- Set up accounts

First you have to setup your Email accounts. If the account is not properly set or activated, you cannot send or receive any Emails.

Go to **Menu**→**Messaging**→**Email**→**Email accounts**.

1. Select **Options**, and then select **New account**.
2. Select a mail server, then enter your email address, user name and password. Or you can select **Other Email accounts**, then enter your email

address, protocol, data account, and server information, etc.

3. Activate your email account.

- Send an Email

Go to **Menu**→**Messaging**→**Email**→**Write Email** to edit your Email. When you finish writing, select to send and/or save the Email.

- Send and receive Emails

If you want to receive Emails, go to **Menu**→**Messaging**→**Email**. Press **Send and receive**, and the Emails in your mailbox will be downloaded to your phone and the Emails in the Outbox will be sent out. Go to **Inbox** to view your received Emails.

User profiles

Go to **Menu**→**User profiles**. You can select your preferred profile in this menu. The profile options are: General, Meeting, Outdoor, Indoor, Headset and Bluetooth. The default settings for each individual profile are preset at the factory. You can change them in the **Options**→**Customize** menu.

- Tone settings: Set the tone for various conditions.
- Volume: Set the Ringtone and Key tone.
- Alert type: Choose among four modes based on ring and vibration.
- Ring type: Choose among Single, Repeat and Ascending.

- Extra tone: Let the phone alert when Warning, Error, Camp on or Connect.
- Answer mode: Select **Any key** to answer a call.

Note: The Headset mode can only be activated with the headset connected. And the Bluetooth mode can only be activated when the Bluetooth headset is connected.

Settings

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Pen calibration

If you feel that the contact point of your touch screen is not accurately positioned, you can fix it by this function.

Complete the calibration operation according to the system prompts. Tap the centre of the cross until the calibration is completed.

- Phone settings

- ◆ Time and date: You can set home city, time/date and format.
- ◆ Schedule power on/off: Set auto power on and off time.
- ◆ Language: You can set the language.
- ◆ Display: You can set Wallpaper, Screen saver and Interactive screen.
- ◆ Flight mode: You can select to use flight mode. In flight mode, all wireless

functions are disabled.

- ◆ Misc. settings: You can set the LCD backlight brightness and time.
- Network settings

In this menu, you can set **Network selection** to be **Automatic/Manual** to select the network service provider according to requests. If you have selected a service provider manually, you have to manually select again or return to the **Automatic** option to select the service provider when you switch to the SIM card of another network.

The GPRS Connection can be set to **When needed** or **Always**.

- Security settings
 - ◆ SIM lock: If SIM Lock is currently set **Off**, select **On**, then input a PIN code to turn it on. You need to input the correct PIN code to unlock your SIM card when you turn on your mobile phone next time.

Note: The PUK code is required to unlock the SIM card if you have incorrectly input the PIN code for three consecutive times. The PIN code and the PUK code may be supplied along with the SIM card. If not, contact the network provider.
 - ◆ Phone lock: Phone lock can prevent your mobile phone from unauthorized use. Select **On/Off** to enable or disable the handset lock protection.
 - ◆ Auto keypad lock: Select a time for auto keypad lock, and the phone will automatically lock the keypad to prevent unintended touch.

- ◆ Change password: You can change the PIN, PIN2 and phone password here.

Note: You may be required to input the phone lock code in some of the security settings interfaces. The default lock code is 1122.

- Restore factory settings

You need to input the correct phone lock password, and press **OK**→**Yes** to restore factory settings.

Connectivity

Go to **Menu**→**Connectivity**.

- Bluetooth: The Bluetooth devices must be paired before the communication is performed.
 - ◆ Turn on or off the Bluetooth on your phone
Go to **Power**, you can turn on or off Bluetooth.
 - ◆ Make your phone visible
Go to **Bluetooth**→**Visibility**, you can choose to be visible or not.
When your phone is visible, and the Bluetooth is turned on, all other Bluetooth-enabled devices within range can detect your phone.
 - ◆ Create a Bluetooth partnership

1. Go to **Bluetooth**→**My Device**→**Search new device** to search other Bluetooth-enabled devices and list them.
2. Select the desired device name in the list and press **Pair**.
3. Enter a passcode (1 up to 16 characters), and then press **OK**. When the opposite party enters the same passcode, the connection will be established.

◆ Beam information using Bluetooth

After the Bluetooth partnership is established, you can beam information, such as calendar items, as well as files from your phone to another Bluetooth-enabled device.

For example, if you want to send a calendar item to the opposite party, find that item, press **Options**→**Send vCalendar**→**Via Bluetooth**, and then select the device name. If you want to send a multimedia file, find the file from the media folder and then press **Options**→**Send**→**Via Bluetooth**, and then select the device name.

◆ Connect a Bluetooth hands-free or stereo headset

For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Go to **Bluetooth**→**Search audio device** to search for the Bluetooth hands-free or stereo headset.

- Data account: You can add and view your GSM and GPRS data usage.

Organizer

Go to **Menu**→**Organizer**.

- Calendar

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

You can click the dates, browse the dates, and click the direction arrows on the screen to switch the year and month; the information on the screen will also change consequently.

- Tasks

You can add tasks.

- Alarm

You can view, and edit the alarm clocks settings. You can also enable or disable the alarms. By taping **Edit**, you can set the corresponding features of the alarm according to instructions: repeat type, date, time, alert type, etc.

- World clock

You can view the time in different cities.

Extra

Go to **Menu**→**Extra**.

- Calculator

You can perform simple calculations. You can add, subtract, multiply or divide, and select M+, M-, MR, and MC to perform relevant operations.

Note: This calculator has limited accuracy and rounding errors may occur especially in long division.

File manager

Go to **Menu**→**File manager**. You can check all the folders in the phone, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

Note: When you select **Format**, the data will be lost, so please be careful with this function.

Fun&Games

Go to **Menu**→**Fun&Games**.

Java MIDlets are Java™-based applications that can run on your phones. It supports Java 2 Edition, J2ME™. Java allows you to download Java-based applications, such as games and tools that are specifically designed for mobile phones. Java gives you the flexibility of installing and managing additional J2ME applications from the Internet.

You can view and launch the built-in JAVA applications such as Y!Messenger.

Multimedia

Go to **Menu**→**Multimedia**.

- Camera

1. Take a Photo

You can also press the **Camera key** in the standby mode. Aim the camera at the object and then tap the **Camera key** to take the shot.

Before capturing a photo, adjust brightness and zoom to the right size.

2. Configure your camera

Press the icon on the bottom left corner to configure your camera:

- ◆ Photos: Enter **Image viewer** to view the photos you've just taken.
- ◆ Camera settings: Set Shutter sound, EV, Night mode, Contrast, Anti-flicker, Delay timer and Cont. shot.
- ◆ Image settings: Set Image size and Image quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Scene mode: Select Auto or Night.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.

- ◆ Storage: Select Phone or Memory card.
- ◆ Restore default: Restore to factory default settings.
- Image viewer

The images you want to view in Image viewer must be put in the **..Photos** folder in the phone or microSD card, and in **Options**→**Storage**, the storage must be set to phone or card correspondingly.

You can select an image and view it.

Image viewer supports: jpeg, jpg, bmp, gif, png.

- Video recorder
 1. Take a video

Aim the camera at the object and then press the **Camera key** to start, press it again to pause, and tap the icon on the bottom right corner to finish recording.

Before recording a video, adjust brightness and zoom to the right size.

2. Configure your video recorder

Press the icon on the bottom left corner to configure your video recorder:

- ◆ Camcorder settings: Set EV, Night mode and Anti-flicker.
- ◆ Video settings: Set Video quality.
- ◆ White balance: Select Auto, Daylight, Tungsten, etc.
- ◆ Effect settings: Select Normal, Grayscale, Sepia, etc.

- ◆ Storage: Select Phone or Memory card.
- ◆ Restore default: Restore to default factory settings.
- Media player

You can play the audio and videos in your phone or the memory card. The videos you want to play in **Media player** must be put in the **..\Videos** folder in the phone or memory card.

To create a playlist, in **My playlists**, select **Options**→**New**, and then set the list name. select **Options**→**Open**→**Options**→**Add**, and select the file, then the file will be added into the playlist.

Media player supports: AMR, AMR-WB, WAV, MP3, MIDI, H.263 baseline, Mpeg4, 3GP.

- FM Radio

With the radio, you can search for radio channels and listen to them. When you receive an incoming call while listening to the radio, the radio will switch off. In the FM radio interface, press the icon on the bottom left corner to enter the submenu.

- ◆ Channel list: Edit and save radio channels.
- ◆ Manual input: Manually input a channel.
- ◆ Auto search: Automatically searches for channels.
- ◆ Settings: You can turn on Loudspeaker and set Channel effect.

Note: The quality of the radio broadcast depends on the coverage of the radio

station in that particular area. The wired headset works as an antenna, so always connect the headset when using the radio.

Services

Go to **Menu**→**Services**.

Services allows you to view internet content. In **Services**, you can use the STK and Internet service, and you can select **Licence manager** to manage the licences.

- STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

Go to **Services**→**Internet service**. You can perform the following operations:

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Profiles**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.

- ◆ Input address: Input a URL and press **Options**→**Done** to visit the site.
- ◆ Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go to** to visit the page again.
- ◆ Settings: You can set Profiles, Browser options, Preferences or Security settings.
- Licence manager
 - ◆ Licence list: Display the list of Licences.
 - ◆ Status: Check the version and time.
 - ◆ Advance: Select **Sweep** to remove useless licences and reboot your phone.

Declaration of RoHS Compliance

To minimize the environmental impact and take more responsibility for the earth we live in, this document shall serve as formal declaration that the ZTE-G N285 manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- (1) Lead (Pb)
- (2) Mercury (Hg)
- (3) Cadmium (Cd)
- (4) Hexavalent Chromium (Cr (VI))
- (5) Polybrominated biphenyls (PBB's)
- (6) Polybrominated diphenyl ethers (PBDE's)

(Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of the substances listed above are below the maximum level set by EU 2002/95/EC, or are exempt due to their application.) The ZTE-G N285 manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's Recycling Manual based on WEEE directive, please send an email to weee@zte.com.cn, or visit the website below to download the document:
<http://ensupport.zte.com.cn>