

# **ZTE-G R260**

**Mobile Phone**

**User Manual**

## **LEGAL INFORMATION**

**Copyright © 2011 ZTE CORPORATION.**

**All rights reserved.**

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

**Version No. : R1.0**

**Edition Time : 05.16, 2011**

## Table of Contents

SECURITY .....	4	MAKING AND RECEIVING	
SAFETY PRECAUTIONS .....	4	CALLS.....	30
FCC COMPLIANCE.....	14	CALL CENTER.....	31
LIMITATION OF LIABILITY.....	18	SENDING AND RECEIVING	
KEY FUNCTIONS.....	19	MESSAGES.....	33
LOCKING AND UNLOCKING THE		USER PROFILES .....	37
KEYPAD.....	21	SETTING YOUR PHONE.....	37
STATUS BAR ICONS .....	21	BLUETOOTH.....	39
BATTERY .....	22	ORGANIZER.....	41
INSERTING THE SIM CARD.....	25	EXTRA.....	42
INSERTING THE MEMORY CARD		FILE MANAGER.....	43
.....	27	GAMES.....	43
POWERING YOUR PHONE		MULTIMEDIA.....	43
ON/OFF.....	28	USING SERVICES.....	45
WRITING TEXT .....	28	WLAN.....	47
ADDING CONTACT TO THE			
PHONEBOOK .....	29		

## **Security**

- To protect your mobile phone from illegal use, take the security measures as follows:
  - Set PIN codes of the SIM card.
  - Set handset lock code.
  - Set call restrictions.

## **Safety Precautions**

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

### **Operational Precautions**

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

## **Precautions While Driving**

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.

- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

## **Precautions for Medical Devices and Facilities**

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.

- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

## **Mobile Phone**

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.

- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.



- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

## **Precautions for Potentially Explosive Atmospheres**

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## **Precautions for Electronic Devices**

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

## **Safety and General Use in Vehicles**

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

## **Aircraft Safety**

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

## **Battery Use**

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and idle time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.

- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

**Warning:** If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

## **FCC Compliance**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

## **Health and safety information**

### **Radio Frequency (RF) Energy**

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using

standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.070 W/kg and when worn on the body, as described in this user guide, is 1.100 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file



with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-GR260.

 
For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

## **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

**Note:** The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

# Key Functions

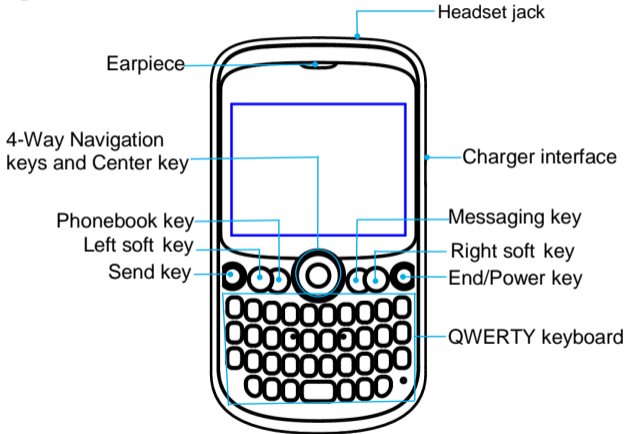

<b>Function</b>	<b>Description</b>
<b>Left soft key</b>	Performs the function indicated at the left bottom of the screen.
<b>Right soft key</b>	Performs the function indicated at the right bottom of the screen.
<b>Center key</b>	Press to confirm actions and make selections.
<b>4-Way Navigation keys</b>	These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus.
<b>Send key</b>	Press to dial a phone number or answer a call, or view the call history.
<b>End/Power key</b>	Press to exit to the idle mode. Hold to switch on/off the phone.
<b>QWERTY keyboard</b>	Press to enter characters 0-9, the alphabets from a-z and symbols.

**Note:** In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it.





## Locking and Unlocking the Keypad











In idle screen, hold  key to lock the keypad.

To unlock the keypad, press the **Left soft key** and then press  Key.

Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

## Status Bar Icons

Indicator	What it means	Indicator	What it means
	Signal strength		General
	GPRS		Outdoor

	Missed call		Silent
	Call forward		Meeting
	New SMS, message full when blinking		Bluetooth
	New MMS		Keypad locked
	Battery status		Alarm clock set

## Battery

 
The lithium ion battery of the mobile phone can be immediately used after unpacking.

### Installing the battery

1. Pull the battery cover from the notch on the bottom and remove the

cover.


2. Insert the battery by aligning the gold-colored contacts with the contacts in the battery slot.
3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.



Remove the battery cover



 
Push down the battery



Replace the battery cover

## Removing the battery

 1. Make sure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Remove the battery cover



Pull up the battery

## Charging the battery

Your phone is powered by a rechargeable battery. For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the right side of your mobile phone as shown in the diagram.



2. Connect the other end of the travel adapter to the mains socket.
3. When the battery is being charged, the display will show the animation of a battery being filled up.
4. When the battery is fully charged, disconnect the charger.

 


## **Inserting the SIM card**

Insert the SIM card as follows.

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.

3. Remove the battery if it is already installed.
4. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.
5. Replace the battery first.
6. Replace the battery cover.

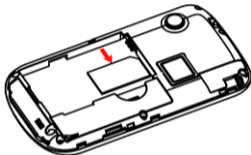

Insert the SIM card

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.


## Inserting the Memory Card

 You can use memory card to expand the storage of the phone. You can store or copy files such as photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or storing data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows.

Open the battery cover. Insert the card with the metal contacts facing down until it clicks to the right position.

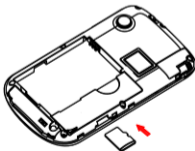

Insert the Memory card

## Powering your phone on/off

Make sure that your SIM card is in your mobile phone and that the battery is charged.


Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network.





## Writing text

- Text Mode

Your mobile phone provides the following input methods: alphabetic (**abc, Abc, ABC**) mode and numeric (**123**) mode. The current input mode is displayed on the screen above the input field. You can press **Options**→**Input method** to select the input mode.

- Alphabetic Modes

- ◆ Press A ~ Z to enter desired characters.
- ◆ Press  to switch between uppercase and lowercase.

- ◆ Press  to select symbols.
- ◆ Press  to start a new paragraph.
- ◆ Press  to enter a space.
- ◆ Press  to delete letters left of the cursor.
- Numeric Mode  
In numeric mode, use the numeric keys to enter numbers.  
**Notes:** Letters cannot be entered in this mode.
- Entering Symbols  
Press **Options**→**Insert symbol**, then select desired symbol.

## **Adding contact to the Phonebook**

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

1. Go to **Menu**→**Phonebook**→**Add new contact**.
  2. Select to save the number to SIM or phone.
  3. Edit the information and confirm by pressing the **Center key** and selecting **Yes**.
- You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your Phonebook list.
  - To delete someone from your **Phonebook** list, first select the name, then select **Options**→**Delete**.

## **Making and receiving calls**

- Basic way to make a call  
In idle screen, press the **numeric keys** to input the number and press the **Send key** to dial.
- Dial from the Phonebook  
Go to **Menu**→**Phonebook**. Find the name of the person you want to

call, and press the **Send key**.

- Make an emergency call

You can make emergency calls without the SIM card inserted so long as you are in an area with network coverage.

- Answer a call

Press the **Send key**.

- End a call

Press the **End key**.

Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

## **Call center**

Go to **Menu**→**Call center**.

- Call history

Dialled calls, Missed calls and Received calls are saved in **Call**

**history.** If the records are full, the earliest saved records will be deleted. Select **Options** to enter the submenu:

- ◆ View: View the details of call record.
- ◆ Call: Call the record again.
- ◆ Send message: Send a message to the record.
- ◆ Save to Phonebook: Save the current number to Phonebook.
- ◆ Add to Blacklist: Add the current number to Blacklist.
- ◆ Edit before call: Edit the number before you call.
- ◆ Delete: Delete the current call record.
- ◆ Delete all: Delete all your call records.
- ◆ Advanced: View call timers, call cost, text msg. counter and GPRS counter
- Call settings
  - ◆ Caller ID: You can select to Set by network, Hide ID or Send ID.
  - ◆ Call waiting: After this function is activated, the system will inform you if there is another incoming call. Please contact your



network provider for details.

- ◆ Call divert: The call divert service enables you to divert an incoming call from a service to a specified telephone number in preset conditions. You can contact the network provider to activate this service. You can set the call divert service so that voice calls and data calls are diverted to a preset number under different conditions.
- ◆ Call barring: You can bar outgoing and incoming calls.
- ◆ Line switching: Switch the call line.
- ◆ Advance settings: You can set blacklist, auto redial, IP dial, background sound, call time display, call time reminder, auto quick end, reject by SMS, connect notice and answer mode.

## **Sending and receiving messages**

- Write a new message

You can use your mobile phone to send and receive messages.

1. Go to **Menu**→**Messaging**→**Write message**.
2. Write your message. For more information on input method, see section 'Writing text'. The default message type is SMS.
3. If you want to change to MMS, you can press **Options** and select **Switch to MMS**; or you can press **Options** and select **Add picture**, **Add sound**, **Add video** or **Add subject** to directly insert multimedia contents to the message and it will be switched to MMS automatically.
4. You can select **Options**→**Slide options** to add a new slide. And you can select **Options**→**Advanced** to insert an attachment, contact number, contact name or bookmark.
5. When you finish writing, press **Options**→**Send to** to enter recipient or add from Phonebook. If you are writing an MMS, after adding recipients, then you can select **Options**→**Change to Cc** or **Change to Bcc** to change the current contact to Cc or Bcc.
6. Select **Options**→**Send** to send the message out. If you want

to save the MMS as a draft, select **Options**→**Save to Drafts**.  
If you are writing a SMS, select **Options**→ **Save**.

- View messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to open the Inbox. You can also go to Inbox through the main menu to read the message.
2. While the message is open, use **Options** to reply, delete or forward the message. You can also call back the sender.

You can view the message boxes in the Messaging interface.

- ◆ Select **Inbox** to view received messages.
- ◆ Select **Drafts** to view unsent messages.
- ◆ Select **Outbox** to view messages that failed to send.
- ◆ Select **Sent messages** to view messages been successfully sent and saved.
- ◆ Select **Broadcast message** to view broadcast messages.

- Messages settings

Go to **Menu**→**Messaging**→**Message settings**→**Text message**.

- ◆ Profile settings: This is automatically set by the service provider, but please contact us if this is not available.
- ◆ Voicemail server: Edit your voicemail server and call voicemail.
- ◆ Common settings: You can set Delivery report and Reply path on or off. You can select to save sent messages or not.
- ◆ Memory status: View the SIM and phone memory status.
- ◆ Preferred storage: Set the preferred storage to SIM or Phone.

Go to **Menu**→**Messaging**→**Message settings**→**Multimedia message**.

- ◆ Data account: View the primary and secondary account.
- ◆ Common settings: In **Compose**, you can set Slide time, Creation mode, Picture resizing, Auto signature and Signature. In **Sending**, you can set Validity period, Delivery report, Read report, Priority, Delivery time and Send and save. In **Retrieval**,

you can set Home network, Roaming, Filters, Read report and Delivery report. In **Preferred storage**, you can set the preferred storage to Phone or Memory card. In **Memory status**, you can view memory status.

## User profiles

Go to **Menu**→**User profiles**. You can select your preferred profile in this menu. The profile options are: General, Silent, Meeting, Outdoor and My style. The default settings for each individual profile are preset at the factory. You can select **Options**→**Activate** to activate a profile. Or you can select **Options**→**Customize** to edit a profile.

## Setting your phone

You can adjust various settings of your phone. Go to **Menu**→**Settings**.

- Phone settings: Set time and date and schedule power on/off, select language, set display, misc. settings, etc.
- Network settings: Set to automatically or manually select network, and

set the preferred networks.

- Security settings: Set security features to protect you from unauthorized use of your phone and SIM card.

**Note:** You may be required to input the phone lock code in some of the security settings interfaces. The default lock code is 1122. Go to **Security settings**→**Change password**→**Phone password** to change the phone lock code.

- Connectivity
  - ◆ Bluetooth: See chapter “Bluetooth”.
  - ◆ Conn. management: You can view your GPRS connectivity actions.
  - ◆ Data account: You can add and view your GPRS data usage.
- Restore factory settings: Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.
- Sound effects: Set your phone audio effect.

# Bluetooth

Go to **Menu**→**Settings**→**Connectivity**→**Bluetooth**. The Bluetooth devices must be paired before the communication is performed.

- Turn on or off the Bluetooth on your phone  
Go to **Power**, you can turn on or off Bluetooth.
- Make your phone visible  
Go to **Visibility**, you can choose to be visible or not. When your phone is visible, and the Bluetooth is turned on, all other Bluetooth-enabled devices within range can detect your phone.
- Create a Bluetooth partnership
  1. Go to **My device**→**Search new device** to search other Bluetooth-enabled devices and list them.
  2. Select the desired device name in the list and press **Pair**.
  3. Enter a passcode (1 up to 16 characters), and then press **OK**. When the opposite party enters the same passcode, the connection will be established.

- Beam information using Bluetooth

After the Bluetooth partnership is established, you can beam information, such as contacts and calendar items, as well as files from your phone to another Bluetooth-enabled device.

For example, if you want to send an item from the **Phonebook** list to the opposite party, find that item, press **Options**→**Send business card**→**Via Bluetooth**, and then select the device name. If you want to send a multimedia file, find the file from the media folder and then press **Options**→**Send**→**Via Bluetooth**, and then select the device name.

- Connect a Bluetooth hands-free or stereo headset

For hands-free phone conversations or to listen to music, you can use a Bluetooth hands-free or stereo headset.

Go to **Search audio device** to search for the Bluetooth hands-free or stereo headset.



# Organizer

Go to **Menu**→**Organizer**.

- Calendar

Enter **Calendar**, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

- Tasks

You can add tasks.

- Alarm

You can view, and edit the alarm clocks settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to instructions: Repeat , Time, Snooze, Alert type, etc.

- World clock

You can view the time in different cities.

- Notes

You can add notes.

## Extra

Go to **Menu**→**Extra**.

- Calculator

You can perform simple calculations. You can add, subtract, multiply or divide, and select M+, M-, MR, and MC to perform relevant operations.

**Note:** This calculator has limited accuracy and rounding errors may occur especially in long division.

- Currency converter

Your mobile phone provides you with basic functions of currency conversion. Input the Rate, select **OK** and input a figure in the Local field, and then press **OK** to get the result.

- Ebook reader

Read the ebooks stored in the **..\Ebook** folder.

## **File manager**

Go to **Menu**→**File manager**. You can check all the folders in the phone or memory card, create new ones or rename, delete, or sort, etc. The files you download from the internet will be stored in these folders.

**Note:** When you select **Format**, the data will be lost, so please be careful with this function.

## **Games**

Go to **Menu**→**Fun&Games**→**Games**.

Your mobile phone has classic games and applications pre-loaded. Select a game and start it, you can view **Help** to see the rules of the game.

## **Multimedia**

Go to **Menu**→**Multimedia**.

- Camcorder

Aim the camera lens at the object and then press the **Center key** to take the shot.

Press the **Left soft key** to configure your camera, and you can select to **Switch to Video recorder** to record a video.

- Image viewer

The images you want to view in **Image viewer** must be put in the **..\Photos** folder in the phone or memory card, and in **Options**→**Storage**, the storage must be set to phone or memory card correspondingly.

You can select an image and view it.

- Media player

You can play the audio and videos in your phone or the memory card.

- Sound recorder

Go to **Options**→**New record** to record a sound clip. Go to **Options**→**Settings** to set preferred storage and file format. Go to

**Options**→**List** to view the sound clips you recorded.

- FM radio

With the radio, you can search for radio channels and listen to them. In the FM radio interface, you can press the **Up/Down keys** to adjust volume, press the **Left/Right keys** to tune the frequency, and press the **Center key** to pause. Select **Options** to enter the submenu.

**Note:** The wired headset works as an antenna, so always connect the headset when using the radio. The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

## Using Services

Go to **Menu**→**Services**.

**Services** allows you to view internet content. In **Services**, you can use the STK and Internet service, and you can select **Licence manager** to manage the licences.

- STK

SIM card Toolkit (STK) services are value-added services provided by your network provider.

Your mobile phone supports STK service, but if your SIM card and network provider do not support the service, these functions can't be used.

- Internet service

Your phone supports Wireless Application Protocol (WAP). You can get access to this service through your network provider. **Internet service** lets you get information about news, weather forecasts and more.

You can perform the following operations:

- ◆ Homepage: Homepage is a WAP site you set in **Settings**→**Homepage**.
- ◆ Bookmarks: Access your phone's preset websites. Select a bookmark and press **Options**→**Go to** to load the website.
- ◆ Input address: Input a URL and press **Options**→**Done** to visit the site.

- ◆ Last web address: View the last web address.
- ◆ Recent pages: Display the pages you've visited recently. Select an item and choose **Options**→**Go to** to visit the page again.
- ◆ Stored pages: View the stored web pages.
- ◆ Settings: You can select profile, set Browser options, Preferences and so on.
- Licence manager
  - ◆ Licence list: Display the list of Licences.
  - ◆ Status: Check the version and time.
  - ◆ Advance: Select **Sweep** to remove useless licences and reboot your phone.

## **WLAN**

**WLAN** provides wireless Internet access.

- Turning on WLAN

Go to **Menu**→**WLAN**. Select **Yes** to turn WLAN on. Then your phone will search available networks and list them.

- Connecting to a WLAN Network

Select the desired WLAN Network name in the list and press **Options**→**Connect**.

- ◆ If you selected an open network, you will be automatically connected to the network.
- ◆ If you selected a secured network, you will need to input the correct password.

- Turning off WLAN

- ◆ If there is not a available network, you can press **Off** to turn off WLAN.
- ◆ When your phone has been connected to a WLAN Network, you can press **Options**→**Disable WLAN** to turn off WLAN.