

ZTE-G S203
Mobile Phone
User Manual

LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 2012.05.09

Manual No. :

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset lock code.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.
- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.

- Turn off your phone before you clean it. Clean your mobile phone, battery and charger with a soft dry cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.

- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.



Warning:

If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Limitation of Liability



ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Your Phone

Overview



Keys and Functions

Function	Description
OK Key (Green Key) 	<ul style="list-style-type: none"> • Press to make a call. Press to answer an incoming call. • In the standby mode, press to enter the call history list. • Press to confirm the function you choose.
End Key (Red Key) 	<ul style="list-style-type: none"> • Long press to power on or off. • Press to go back to previous menu. • Clear text and numbers
Up Arrow Key	<ul style="list-style-type: none"> • In the standby mode, press to enter Organizer directly. • Press to move the cursor.
Down Arrow Key	<ul style="list-style-type: none"> • In the standby mode, press to access the main Menu. • Press to move the cursor.
# Key	<ul style="list-style-type: none"> • Press to input '#'. • Switch text input mode. • In the standby mode, long press to activate/deactivate Silent mode.
* Key	<ul style="list-style-type: none"> • In the standby mode, press to enter '*', consecutive press to enter '+', 'W', or 'P'. • Use + for the international dial prefix. • 'W' will wait until the next number is entered into the dial sequence. • 'P' inserts a 3 second pause into the dial sequence. • In SMS mode press to access common symbols.
Numeric Keys	<ul style="list-style-type: none"> • Enter numbers 0-9 and characters A-Z.
Volume Keys	<ul style="list-style-type: none"> • Adjust the volume up and down.
Torch Switch	<ul style="list-style-type: none"> • Turn the torch on or off.
FM Radio Switch	<ul style="list-style-type: none"> • Turn the FM radio on or off.
Keylock Switch	<ul style="list-style-type: none"> • Lock and unlock the keypad.




Notes:

The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Starting Up

Open the Back Cover

 Press and push the back cover of the phone to remove.

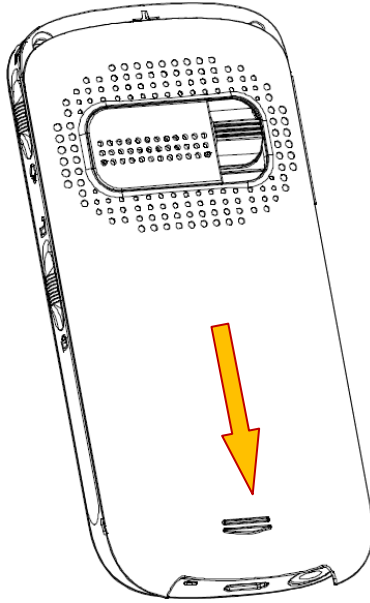


Installing the Battery



Notes:

 - If you are not going to use the battery for a long time, remove it from the phone and store it in a cool dry place.
1. Carefully insert the battery with the contacts located against the metal springs.
 2. Push down the battery until it clicks into place.

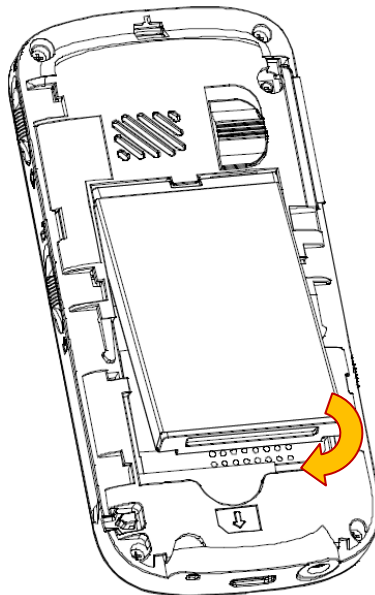


Installing the (U)SIM Card



Notes:

 
- Do not bend or scratch your (U)SIM card. Keep the card away from electricity and magnetism.
 - Don't touch the metal surface of the (U)SIM card. Doing so could cause information on the card to be lost or destroyed.
 - Disconnect the charger and other accessories from your phone and remove the battery before inserting and removing your (U)SIM card.
1. Hold the (U)SIM card with the metal contacts facing downward and the cut corner at the lower left.
 2. Insert the card into the card holder and push it until it clicks into position.

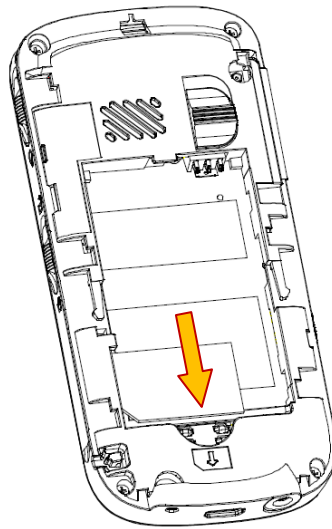

Charging the Battery

Your phone is powered by a rechargeable battery. The battery is not fully charged when first unpacked, but there may be enough power to power on your phone. You should use it up completely before charging the battery for the first three times. Charge the battery with the procedure indicated below.

 1. Insert the charger's USB adapter into the USB port.
2. Connect the charger to a standard AC outlet.

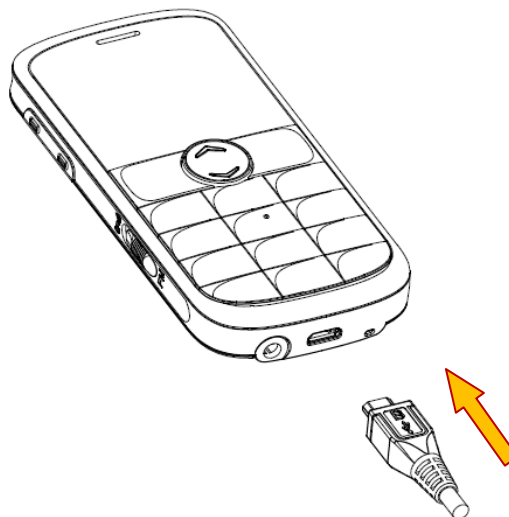

3. Remove the charger from both the AC outlet and the phone once the charging is completed.



Notes:

The phone automatically switches off if the battery power is too low.

If you are not going to use the battery for a long time, remove it from the phone and store it in a cool dry place.

The battery will be fully charged for 3~4 hours.

Charging is only possible within a temperature range of 0°C to 45°C.

If the phone is over-used in shortage of battery or not used for a long time, the screen may not display the charge indicator until it is continues charged for 10 to 40 minutes.

To charge the battery, you can use the provided charger or the USB data cable from your computer.

Main Display

1	2	3
4		
5		
6		

1. Network signal
2. Status bar
3. Battery level
4. Service provider name
5. Time
6. Date

Indicators and Icons

	Battery level		Keypad locked
	Network signal level		Headset inserted
	New SMS message		Alarm enabled
	Outdoor		Silent Mode enabled
	Missed call		Roaming
	Call Forwarding active		Meeting

Power on / off the phone

Long press the **Red key** to power on.

Long press the **Red key** to power off the phone in the standby mode.

Voice call

Dial emergency call

- Go to **Organizer > SOS > SOS Switch** to set emergency call function on or off.
- Go to **Organizer > SOS > SOS Volume** to set the type of volume or turn off the alerting sound.
- Go to **Organizer > SOS > SOS Number** to set five emergency numbers.
- Go to **Organizer > SOS > SOS SMS** to edit an emergency SMS.
- If you have already set emergency numbers and enabled this function, when you push up the **SOS key**, the phone will send emergency SMS to the numbers you set first, and then dial these numbers one by one. If one number can not get through, it will call the next number. There will be two calling cycles. After call the set numbers, the phone will call the local emergency numbers automatically.
- If you are in the place that has the network signal, whether you has inserted the SIM card or not, you can dial emergency call.
- The phone will send out alerting sound when it is sending message. After the message is sent out, then it will call set emergency numbers.
- If any call can get through, the phone will be in emergency alert status after the call ends, and send out alerting sound.
- In any status, push down the **SOS key**, the phone will go back to the standby mode. If the keypad is locked, the phone will still activate emergency mode when you push up the **SOS key**.

Dial call

- Input the area code and phone number and press the **Green key** to dial out. Use the **Red key** to delete if there is wrong input. Long press the **Red key** to clear all characters.
- Press the *** key** twice to input "+". Press the *** key** for three times to input "p" symbol. Press the *** key** for four times to input "W" symbol.
- Press the **Green key** to answer an incoming call, and press the **Red key** to end the call or reject a call.
- Dial a number in Phonebook: go to **Contacts**. Then press the **Up/Down Key** to select the number you want to dial and select **Options > Call** to dial.
- If you have set the speed dial number, in the standby mode, long press the numeric keys (2 to 9) to dial the corresponding speed dial number.
- Press the **Volume keys** to adjust volume during the call.

Messaging

- If the phone receive a new message, a message icon will appear in the screen on screen. When the icon blinking means mail box is full.
- Select **Messaging > Write message** to type a new message, then press the **Green key** to send or save the message.

- Press the **# key** to select the input method.
- When a message is received, press the **Green key** to read message directly. Press the **Red key** to exit if you want to read it later.
- **Inbox** shows all received messages. **Outbox** shows all sent out messages if you saved. **Drafts** shows all your messages saved. **Sent messages** show the messages which you successfully sent out. **Broadcast messages** shows all the received broadcast message. Select **Delete messages** to choose the messages you want to delete.

Call history

- Press the **Green key** to check call history in the standby mode. Select **Missed calls** to check all the missed incoming calls. Select **Dialled calls** to check all the outgoing calls. Select **Received calls** to check all the received calls.
- Delete call logs: You can delete call logs from Dialled calls, Missed calls and Received calls.
- Call timers: You can check the call time spent.

Contacts

- You can save the name and phone number of contact to the phone memory and SIM card.
- Select **Contacts > Options > Contacts settings > Preferred storage** to set the storage for the contacts.
- Select **Contacts > Add new contact** to add new contacts.
- Select **Contacts**, then input the first letter of the contact's name into the blank to search for the contact.
- Select **Contacts > Options** to view more options.

Settings

- Select **Settings > User profiles** to choose a mode to adjust the external environment.
- Select **Settings > Phone settings**, you can set Time and Date, Schedule power on/off, select Language, Pref. input method, Show date and time on/off, set Flight mode, LCD backlight, Audio Time on/off.

Note: If you set your phone to flight mode, all the wireless functions will be disabled.

- Select **Settings > Call settings**, you can set Call waiting, Call divert and Call barring. (Some functions in Call settings need network support, please consult your network provider for details.)
- Select **Settings > Network selection > New search** to search for network.
- Select **Settings > Network selection > Select network** to select the last network we use.
- Select **Settings > Network selection > Selection mode** to set **Automatic** or **Manual** search for network.
- Select **Settings > Security setting** to set **SIM security** or **Phone security**.

Organizer

Calendar

Select **Calendar** to view the calendar.

SOS

See the Chapter of "Dial emergency call".

Tips

- Select **Tips> Birthdays**. Select **Add** to edit the information about your birthday, and the phone will remind of .you when your birthday is coming.
- Select **Tips> Important Dates**. Select **Add** to edit the information, and the phone will remind of you at that time every year.
- Select **Tips> Medication Reminder**. Select **Add** to edit the information, and the phone will remind of you to take medical care every day.
- Select **Tips> Getting Up**. Select **Add** to edit the information, and the phone will remind of you at that time every day.
- Select **Tips> Entertainment**. Select **Add** to edit the information, and the phone will remind of you at that time every day.
- Select **Tips> Count Down**. Select **Add** to edit the information, and the phone will start to count down.
- Select **Tips> Others**. Select **Add** to edit the information, and the phone will remind of you as your settings.

Alarm

You can view, and edit the alarm clock settings. You can also enable or disable the alarms. By pressing **Edit**, you can set the corresponding features of the alarm according to the instructions.

Calculator

- Select **Calculator**. Press **Up/Down keys** to choose the operation symbol and press the **Green key** to get the result.
- Press the **Red key** to clear all input and exit calculator while 0 appears in the display.

Radio

- Push the **FM Radio Switch** to turn the radio on or off in the standby mode. Press **Red key** to stop it and press again to continue.
- Press **Up/Down keys** to tune the frequency.
- Press **Volume Keys** to adjust the volume.

Select Options to view the submenu:

Input method

1. Change input mode: Press the **# key** to change the input mode (input modes: Smart ABC, Smart abc, ABC, abc, PinYin, Simplified Chinese stroke, Smart PinYin, Numeric).
2. Input Letters: In ABC/abc mode, constantly press the corresponding letter key till the letter appears. In eZi ABC/eZi abc mode, press the corresponding letter key ,then choose the letter you want by pressing **Up/Down keys**, press the **Green key** to confirm it.
3. Input Words: In Smart ABC/ Smart abc mode, input any letter with a single key press. Press each key only once for every letter. The word changes after each key stroke. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the **Green key**. If the word is incorrect, press the **Up/Down keys** to view other matching words found in the dictionary.
4. Input Digits: In Numeric mode, press digit key once to input a digit. In eZi ABC/eZi abc mode, press the digit key, and select the number by pressing the **Up/Down keys**. You cannot input 0

in eZi ABC/eZi abc mode. In ABC/abc mode, constantly press the digit key until the number appears.

5. You can also input Chinese in PinYin/Simplified Chinese stroke/eZi PinYin mode.
6. Input Symbol: Press the * **key** to open the symbol list. Press the **Up/Down keys** to select a symbol and press the **Green key** to confirm it. In ABC/abc mode, constantly press the **1 key** till the required symbol (common symbols) appears.
7. Input Space: Press the **0 key** to input space. It does not work in Numeric mode.
8. Delete Character: Press the **Red key** to clear a character. Hold the **Red key** to delete all characters and clear the display.
9. Move Cursor to left or right: Press the **Up/Down keys** to move the cursor to left or right.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Health and safety information

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In

general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is **1.35** W/kg and when worn on the body, as described in this user guide, is **0.433** W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: Q78-GS203

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

The operating temperature is between -10°C~55°C.