

S226
Mobile Phone
User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No.: R1.0

Edition Time: 20120111

Table of Contents

SECURITY	5	TURNING THE TORCH ON/OFF	28
SAFETY PRECAUTIONS	5	WRITING TEXT.....	28
LIMITATION OF LIABILITY ...	18	HOW TO ADD CONTACT TO THE PHONEBOOK.....	30
KEY FUNCTIONS	19	HOW TO MAKE AND RECEIVE CALLS	30
LOCKING AND UNLOCKING THE KEYPAD	21	HOW TO SEND MESSAGES .	31
INTERFACE ICONS	21	HOW TO RECEIVE MESSAGES	32
BATTERY	22	HOW TO SET USER PROFILES	32
INSERTING THE SIM CARD ..	24	HOW TO VIEW CALL HISTORY	33
INSERTING THE MEMORY CARD	26		
CHARGING THE BATTERY ...	26		
POWERING YOUR PHONE ON/OFF	28		

HOW TO CONFIGURE CALL SETTINGS.....	33	HOW TO PLAY MUSIC	35
HOW TO SET YOUR PHONE	33	HOW TO USE SOUND RECORDER	错误！未定义书签。
HOW TO SET YOUR ALARM	34	HOW TO USE FM RADIO	错误！未定义书签。
FILE MANAGER	35	MTN	36
CAMERA	35	SERVICES.....	36
VIEWING IMAGE ..	错误！未定义书签。		

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
 - Set PIN codes of the SIM card.
 - Set handset lock code.
 - Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wireline telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.

- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.

Precautions While Driving

- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Use hands-free function of the phone, if available.

- Pull off the road and park before making or answering a call if conditions require.

Precautions for Medical Devices and Facilities

- When using your phone near pacemakers, please always keep the phone more than eight inches (about twenty centimeters) from the pacemaker when the phone is switched on. Do not carry the phone in the breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with some hearing aids. In the event of such interference, you may consult your hearing aids manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- In those facilities with special demand, such as hospital or health care facilities, please pay attention to the restriction on the use of mobile

phone. Switch off your phone if required.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom terminals.
- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.

- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your

phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.

- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire

resulting in bodily injury or even death.

- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled

with great force and cause serious injury to occupants of the vehicle.

- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety regulations require you to have permission from a crew member to use your phone while the plane is on the ground.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery Use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it

will cause explosion.

- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and standby time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.

Warning: If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Health and safety information

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using

standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.400 W/kg and when worn on the body, as described in this user guide, is 0.830 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file

with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-GS226

 
For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Key Functions

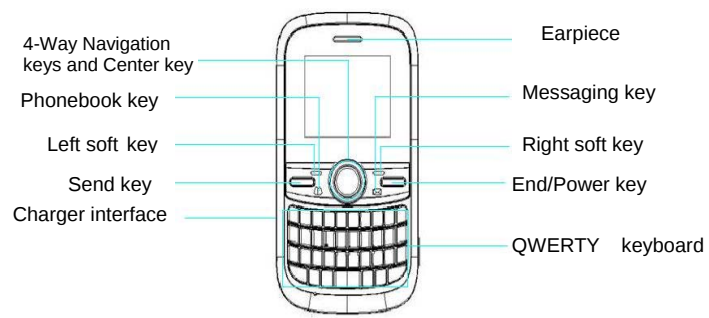

Function	Description
Left soft key	Performs the function indicated at the left bottom of the screen.
Right soft key	Performs the function indicated at the right bottom of the screen.
Phonebook key	Press to enter the contacts list from the standby screen.
Messaging key	Press to enter the Inbox interface from the standby screen.
4-Way Navigation keys and Center key	♦ These keys (UP, DOWN, LEFT and RIGHT) allow for navigation through menu options and quick access to some function menus. ♦ Press to enter the main menu, confirm actions and make selections.
Send key	Press to dial a phone number or answer a call, or view the call history.

End/Power key	• Press to exit to the standby mode. • Hold to switch on/off the phone.
QWERTY keyboard	Press to enter characters 0-9 and the alphabets from a-z.

Note: In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it.

Lock / Unlock the Keypad

In the standby mode, hold the Space key for about two seconds to lock the keypad. To unlock the keypad, press **Left soft key** and then press Space key within two seconds to unlock the keypad. Locking the keypad can prevent unintentional operations on it. You can answer an incoming call with the regular operation when the keypad is locked.

Interface icons

	SIM1_ Missed call		SIM2_ Missed call
	Alarm		New SMS
	SIM1_ Signal strength		SIM2_ Signal strength
	Outdoor		General
	Battery status		

 
Battery

The lithiumion battery of the mobile phone can be immediately used after unpacking.


Installing the battery

1. Remove the battery cover.
2. Insert the battery by aligning the metal contacts with the contacts in the battery slot.


3. Push down the upper section of the battery until it clicks into place.
4. Replace the battery cover and close it gently until you hear a click.

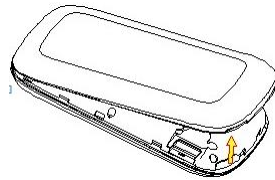

Remove the battery cover

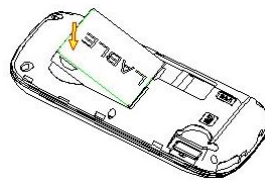 


Push down the battery

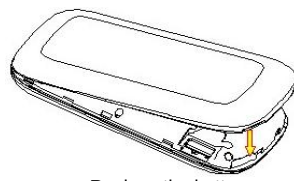 


Replace the battery cover

Removing the battery

 1. Make sure that your mobile phone is switched off and remove the battery cover.
2. Pull the battery up and remove it from the mobile phone.

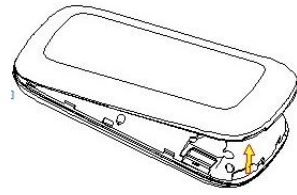

Remove the battery cover

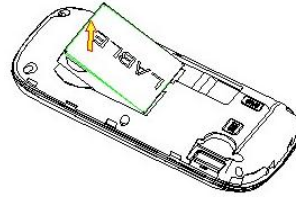 


Pull up the battery from here

Inserting the SIM card

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is

 - disconnected from the phone.
2. Turn the phone over and remove the battery cover.
 3. Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder with the metal contacts facing downward.
 4. Replace the battery cover.

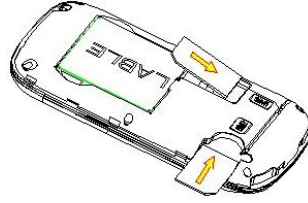

SIM card (Subscriber Identity Module) is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

 
Inserting the Memory Card

You can use a memory card to expand the storage of the phone. You can store or copy files such as videos, photos, music, and so on.

Do not take out the card or switch off the phone while transmitting or saving data, which may cause data loss or damage to the phone or the card.

Insert the memory card as follows:

1. Open the battery cover and remove the battery.
2. Insert the card into the metal slot with the metal contacts facing down until it clicks to the right position.

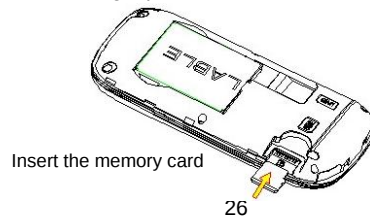

Charging the battery

Your phone is powered by a rechargeable battery. For optimum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

1. Connect your travel adapter to the left of your mobile phone as shown in the diagram.
2. Connect the other end of the travel adapter to the mains socket.
3. When the battery is fully charged, disconnect the charger.



Note: Using USB is another way to charge battery.

Powering your phone on/off

Make sure that your SIM card is in your mobile phone and that the battery is charged.

Hold the **End/Power key** to power on/off the phone. The phone will automatically search for the network when the phone is on.

Turning the torch on/off

In the standby mode, hold the **Center key** can turn on or off the torch.

Writing text

- Text Mode

Your mobile phone has two writing languages and provides the following input methods: alphabetic (**Multitap ABC, Multitap abc, Multitap ES, Multitap es**) mode and numeric (**123**) mode. The current input mode is displayed on the screen above the input field. You can

press **Options>Writing language** to select the input language.

Basic using:

- Alphabetic Modes
 - ♦ Press A~Z to enter desired characters.
 - ♦ Press  to switch between uppercase and lowercase.
 - ♦ Press **Right soft key** to delete a character left of the cursor, Hold the **Right soft key** to delete all characters and clear the display.
 - ♦ Press **Space key** to enter a space.
 - ♦ Press  to start a new paragraph.
 - ♦ Press the key with **Sym** character to select symbols.
- Numeric Mode

In numeric mode, use the numeric keys to enter numbers.

Note: Letters cannot be entered in this mode.
- Move cursor to left or right

Among the text, press the **Left/Right soft keys** to move the cursor to left

or right.

How to add contact to the Phonebook

There are some numbers that you may want to call again and again, so it makes sense to add these numbers to your **Phonebook**. You can then access these numbers quickly and easily.

1. Go to **Menu>Phonebook>Add new contact**.
2. Edit the Name and other informations.
 - You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your Phonebook list.
 - To delete someone from your Phonebook list, first select the name, and then select **Options>Delete**.

How to make and receive calls

The most basic way to make a call is to input the number in the standby mode and press the **Send key**. You can also make a call from the

Phonebook list.

- To call someone: Go to **Menu>Phonebook**. Use the **Up/Down keys** to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call to find the right name, and press the **Send key**.
- To receive a call, press the **Send key**.
- To end a call, press the **End/Power key**.
- To reject a call, press the **End/Power key**.

Note:

- Make sure that you are in an area with sufficient coverage to make calls. The strength of the network signal is indicated on the Status Bar of the screen.

How to send messages

You can use your mobile phone to send and receive messages.

1. Go to **Menu>Messages>Write message**.

2. Write your message. For more information on input method, see section 'Writing text'. When you finish writing, press **Options>Send**, and edit the recipient or add from Contacts/Call logs.
3. Select **Options>Send** to send the message out. If you want to save your message, press **Options>Save** when you finish writing a SMS.

How to receive messages

Upon receiving a message, the mobile phone will alert you with a ringtone, prompt, or a new message icon.

1. Press **View** to open the new message. You can also go to Inbox to read the message.
2. Use the **Up/Down keys** to view the message.
3. While the message is open, use **Options** to reply, delete, or forward the message. You also can call back the sender.

How to set User profiles

Go to **Menu>Settings>Profiles**. You can select **Options>Activate** to

activate a profile. Or you can select **Options>Customize** to edit a profile.

How to view Call history

Go to **Menu> Call logs**.

Dialed calls, Received calls and Missed calls are saved in **Call logs**. If the records are full, the earliest saved records will be deleted.

How to configure Call settings

Go to **Menu>Settings>Call settings**.

You can set call waiting, call divert and call barring.

In Common call settings, you can set auto redial, call time reminder and answer mode.

How to set your phone

You can adjust various settings of your phone. Go to **Menu>Settings**.

- Date and time: set date and time.
- Phone settings: Set shortcuts, input method settings, select language,

auto keypad lock, flashlight switch, etc.

- Network settings: Set to automatically or manually select network, and set the preferred networks.
- Security settings: Set security features to protect you from unauthorized use of your phone and SIM card.
- Display: set the phone's wallpaper and Lcd backlight, etc.
- Restore factory settings: Enter the phone lock code to restore to the factory settings. Some personal information might be lost if you use this function, so be careful.

Note: You may be required to input the phone lock code in some of the security settings interfaces. The default lock code is 1122. Go to **Security settings>Phone Security>Change password** to change the phone lock code.

How to set your alarm

Go to **Menu>Organizer>Alarm**. You can view, and edit the alarm clock settings. You can also enable or disable the alarms. Use number keys

to edit time and select the alarm tones according to instructions.

File manager

Go to **Menu>File manager**. You can check all the folders in the memory card, create new ones or rename, delete the folders, etc. The files you download from the internet will be stored in these folders.

Note: Before you use File manager, please insert the memory card into your phone.

Calendar

Go to **Menu>Organizer>Calendar**.

Enter the calendar interface, the calendar of the current month will be displayed on the screen and the current date will be marked by a background box in a special colour.

How to play Games

Go to **Menu>Fun & Games>Games**.

Your mobile phone has classic games and applications pre-loaded. Select a game and start it, you can view **Game Help** to see the rules of the game.

How to play Music

Go to **Menu>Fun & Games>Audio player**. You can play the audio in the memory card.

If you want to play music, you must copy the music files to the memory card and then insert into you mobile phone.

Using Services

Go to **Menu>Services**.

A Services allows you to view internet content.