

**GSM Dual-Band GPRS Digital
Mobile Phone
User Manual**

文档信息

版本	修订日期	修订人	软件版本	备注
V1.0	08 年 07 月	赵琼	i766_v2_Z0_S_A 07A200	



GSM Dual-Band GPRS Digital Mobile Phone



The manual is applicable for ZTE i766 mobile phone

Copyright © 2008 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

Version 1.0, Jul. 2008

Table of Contents

1 Before Use	1
1.1 Introduction	1
1.2 Safety Instructions	2
1.3 Safety Warnings and Precautions	2
1.4 Parts Definition	8
1.4.1 Appearance	8
1.4.2 Mechanical Parts	9
1.4.3 Key Definitions	10
1.4.4 Descriptions of touch-screen shortcuts	11
1.4.5 Descriptions of icons on status bar	11
1.5 Battery	12
1.5.1 Installing the Battery	12
1.5.2 Removing the Battery	13
1.5.3 Charging the Battery	14
1.6 Insert and Remove SIM Card	15
1.7 Insert and Remove Memory Card	16
1.8 Power On/Off	18
2 Call	19
2.1 Make a Call	19
2.1.1 Dial Domestic Calls	19
2.1.2 Dial Extension	19
2.1.3 Dial International Calls	20
2.1.4 Dial from Call History	20
2.2 Answer Calls	20
2.3 Emergency Calls	21
2.4 Adjust the Volume	21

2.5 Call Options	21
3 Call History	23
3.1 View	23
3.2 Delete Call Log	24
3.3 Call Time	24
4 Movistar.....	24
5 Multimedia.....	25
5.1 Camera	25
5.2 Video Player	26
5.3 FM Radio.....	27
5.4 Sound Recorder	28
5.5 Video Recorder	29
6 Gallery	30
6.1 Album	30
6.2 File Manager.....	31
7 Phone Book.....	33
7.1 Quick Search	34
7.2 Search Entry	34
7.3 Add New Entry	34
7.4 Caller Group.....	35
7.5 Copy All	35
7.6 Delete All	36
7.7 Preferred Storage.....	36
7.8 Information	36

8 Messages	37
8.1 SMS	37
8.2 MMS	41
8.3 Email	45
8.4 Voice Mail Server	48
9 Fun&Games.....	49
9.1 Games.....	49
9.2 E-Book Reader	49
9.3 Melody Compose.....	50
10 Services	52
10. 1 WAP.....	52
10.2 Data Account	53
10.3 GPRS Counter.....	54
11 Audio Player.....	55
12 Extra	57
12.1 Calendar	57
12.2 Alarm	57
12.3 World Clock.....	58
12.4 Calculator.....	58
12.5 Typical Stopwatch	59
12.6 nWay Stopwatch	59
12.7 Unit Converter	59
12.8 Currency Converter	59
13 Analog TV	60

14 Settings	61
14.1 Pen Calibration	61
14.2 User Profiles	62
14.3 Phone Setup	62
14.4 Call Setup	64
14.5 Network Setup	65
14.6 Security Setup	65
14.7 Restore Factory Settings	68
15 USB Data Function	70
15.1 Mass Storage	70
15.2 Webcam	70
16 Input Methods	71
16.1 General Description	71
16.2 Keypad Definitions	71
16.3 Descriptions of Input Methods	72
16.3.1 Handwriting Input Method	72
16.3.2 ES Input Method	72
16.3.3 English Input Method	73
16.3.4 Number Input Method	73
16.3.5 Symbol Input Method	73
17 Appendix	74
17.1 Special Functions	74
17.2 Shortcuts	76
17.3 Clearance and Maintenance	76
18 Failure Analysis	78

1 Before Use

1.1 Introduction

Thank you for choosing ZTE Corporation's "i766" GSM Dual-Band GPRS Digital Mobile Phone.

To guarantee your mobile phone always in its best condition, please read this manual carefully and keep it for future use.

The pictures in this user manual are only used to demonstrate the mobile phone's functions, so they are maybe different from what you see on your mobile phone. Please refer to your mobile phone if there are any differences.



Note:

"i766" GSM Dual-Band GPRS Digital Mobile Phone is shortly referred to Mobile Phone in the user manual.

Your mobile phone offers the following functions:

Voice Call	Originates traditional voice calls based on GSM/GPRS network.
SMS	Sends, receives and edits short messages.
MMS	Provides MMS function.
Email	Sends, receives and edits email.
Fun&Games	Bring you much fun and relaxation.
Multimedia	Provides camera, video player, FM Radio, etc.

1.2 Safety Instructions

If your mobile phone is lost or stolen, notify your service provider immediately to prevent others from abusing it. Meanwhile you need provide your service provider with your mobile phone's IMEI, which is printed on the label on the back of your mobile phone (appears after the battery is taken out). Keep the IMEI properly for future use.

To protect your mobile phone against abuse, take the following precautions:

- Set PIN code (as your phone needs SIM card) and modify it from time to time.
- Take your mobile phone along as much as possible.

1.3 Safety Warnings and Precautions

Precautions for using your mobile phone



Traffic Security

- Pay attention to traffic security and follow all local relevant laws and regulations while driving.



Interference

- Do not use your mobile phone near weak signal or high-precision electronic devices. Radio wave interference may cause misoperation

of an electronic device or other problems. Pay special attention when you use your mobile phone near audiphone, pacemaker and/or other medical electronic devices, fire detector, auto-door and/or other auto-control equipments. For details on the influence caused by your mobile phone on pacemaker or other medical electronic devices, please consult the manufacturer or your local distributor.

- Do not use your mobile phone near TV set, radio or office automated equipments to avoid mutual influence.



On Airplane

- Turn off your mobile phone on airplane where it's forbidden to use it. The mobile phone may affect the normal operation of electronic devices, therefore please follow the relevant regulations when using your mobile phone on airplane.



In Hospital

- Turn off your mobile phone in hospital where it's forbidden to use it. The mobile phone may affect the normal operation of medical apparatus, therefore please follow the relevant regulations when using your mobile phone in hospital.



In Gas Station

- Do not use your mobile phone in gas station. Turn off your mobile phone near fuels or chemicals.



Waterproof

- Keep your mobile phone away from water. This may cause overheating, electric leakage or failure if water or any other kind of liquid enters your mobile phone.



Disassemble

- Do not disassemble or reassemble your mobile phone because this might cause damage, electric leakage or circuit failure.



Antenna

- Do not use your mobile phone if your antenna is damaged because this may cause body injury.



Away from Children

- Keep your mobile phone from children. It may cause body injury when the mobile phone is used as a toy.



Original Accessories

- Use the original accessories or those authenticated by the manufacturer. Using non-original accessories may affect the mobile phone's

performance, violate the warranty provisions or relevant national regulations about telecom terminals, or even cause body injury.



Explosion Areas

- Please strictly follow relevant laws and regulations to turn off your mobile phone in or near the explosion areas.



Emergency Calls

- Make sure your mobile phone is turned on and in the service area. Input the emergency number and press “Send” key to dial. Let others know where you are and do not hang up without permission.

Precautions for using the battery

- Put the battery in a cool and ventilated place where there is no direct sunshine.
- The battery life is usually limited, and it becomes shorter and shorter after the battery is charged over and over again. If the charging fails several times, this indicates that the battery is worn out and the replacement is advised.
- Dispose the worn-out batteries in designated places according to specified regulations rather than throw them into residential garbage.
- Do not throw the worn-out batteries into fire because this might cause fire or explosion.
- Do not press with great force when installing the battery because this may result in leakage, overheating, explosion or fire.

- Do not disassemble or reassemble the battery because this may result in leakage, overheating, explosion or fire.
- If the battery becomes hot, changes in color or gets deformed during the course of use, charging or storage, please immediately stop using and replace it.
- Keep the battery away from dampness to prevent overheating, smoldering or erosion.
- Do not leave the battery in direct sunshine, around a car or high-temperature place because this might result in leakage or overheating. This might affect the battery's performance and shorten its life.
- Do not keep charging the battery continuously over 24 hours.

**Note:**

If the battery is damaged, please avoid contacting the materials in it. If your skin has contacted those materials, flush your skin with lots of water and seek for help from doctors if necessary.

Precautions for using the charger

- Use the power voltage between 110VAC and 220VAC. Using the voltage beyond the range may cause leakage, fire or damage to the phone and charger.
- Do not short-circuit the charger because this might cause electric shock, smoldering or damage.
- Do not charge the battery in direct sunshine, near dampness, dust, vibration, TV set, or radio (may affect the image, sound), etc.

 
- Do not use the charger if the power cable is damaged because this might cause fire or electric shock.
- Do not place water containers near the charger to avoid water splashing. If water or any other kind of liquid splashes on the charger, immediately remove the charger from the power socket to avoid overheating, fire, electric shock or failure.
- Do not disassemble or reassemble the charger because this might cause body injury, electric shock, fire or damage.
- Do not touch any charger, power cable or power socket with wet hands to avoid electric shock.
- Do not place heavy objects onto power cables or refit power cable because this might cause electric shock or fire.
- Remove power plug from the socket before cleaning and maintenance.
- Hold the charger rather than pull the power cable while removing the plug from the socket because this might cause damage, electric shock or fire.

1.4 Parts Definition

1.4.1 Appearance



1.4.2 Mechanical Parts

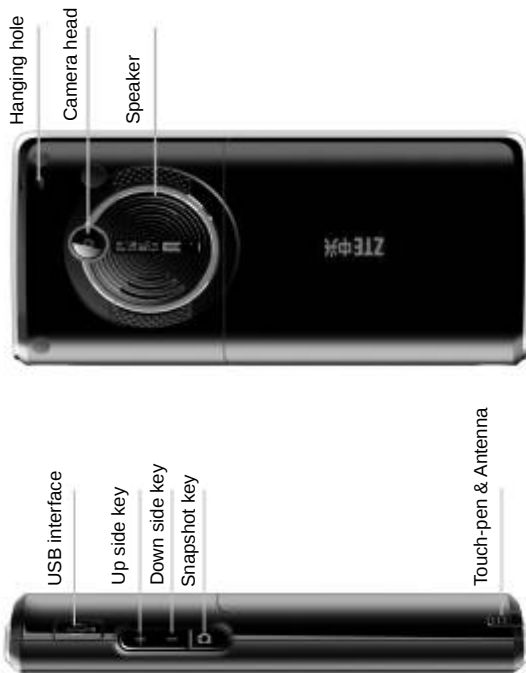

1.4.3 Key Definitions

Left/right key	Move the cursor to the left/right; In idle mode, press left key to enter "Multimedia", press right key to enter "Messages". Under the status of camera preview, press left/right key to adjust EV parameter.
Up/down key	Move the cursor up/down; Move the cursor up/down to select menu options; In idle mode, press up key to enter "TV Application", press down key to enter "Phone Book". Under the status of camera preview, press up/down key to adjust the focus.
Left soft key	In idle mode, press left key to enter "Menu"; Execute the operations at the left-down corner of the screen.
Right soft key	In idle mode, press right key to enter "Browser"; Execute the operations at the right-down corner of the screen.
Send key	Dial a number or receive incoming calls; In idle mode, press the key to view all call history.
End key	Hang up a call or reject an incoming call; hold this key to power on/off; In other cases, press this key to return to idle mode.
Numeric keys	Input numbers or symbols. Quickly select the menu option during menu operation.
* key	Execute different functions under different modes or in different menus.
# key	Execute different functions under different modes or in different menus. Hold this key to quickly enter or quit Mute.
OK key	Normally, OK key functions the same as left soft key.
Side keys	Adjust the volume.
Snapshot key	In idle mode, press this key to quickly enter "Camera". Function as shutter key under camera mode.

1.4.4 Descriptions of touch-screen shortcuts

	In idle mode, click this icon to enter “Call History”.
	In idle mode, click this icon to enter “Video Player”.
	In idle mode, click this icon to enter “Messages”.
	In idle mode, click this icon to enter “Audio Player”.
	Click this icon to return to idle mode from current interface.

1.4.5 Descriptions of icons on status bar

Icons	Descriptions	Icons	Descriptions
	Network signal strength		Battery capacity
	Unread SMS		Unread MMS
	Call Forwarding		Calling or in call
	Hands-free		Alarm ON
	Outdoor		Meeting
	Flight		Mute
	Self-defined		GPRS
	In Roaming		FM Radio ON
	MP3		



Note:

 
In this user manual, “press” means pressing the key and

then releasing; “hold” means pressing and holding the key for about 2 seconds or more; “click” means clicking the corresponding icon on the screen with touch-pen.


1.5 Battery

1.5.1 Installing the Battery

1. Align the battery's contact points in the direction of the arrow as shown, and Insert the battery into the slot;

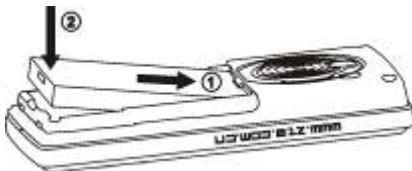


 2. Put on the battery cover, and push forward in the direction of the arrow as shown until it's locked.

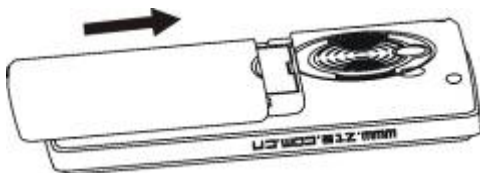

1.5.2 Removing the Battery

 1. Push down the battery back and take out the back cover;

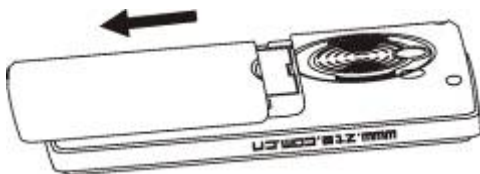

2. Pull the battery in the direction of the arrow as shown and take out the battery.



**Note:**

Please turn off your mobile phone before taking out the battery.

1.5.3 Charging the Battery

The lithium battery can be used directly after being taken out from the package. To make the battery always in its best condition, please exhaust the capacity of the battery and then fully recharge it for the first three times.

1. Plug in the charger;
2. Insert the charger plug into USB port of your mobile phone;
3. When the phone is powered on, the battery capacity bar on up-right corner of the screen keeps scrolling during charging; when the phone is powered off, there will be charging indication on the screen during charging. If the phone is used excessively without enough capability, the charging indication will not immediately appear on the screen of the phone when charging starts and the phone might not be powered on within a few minutes after the charging starts;
4. When the phone is on, the battery is fully charged as the battery capacity bar on the up-right corner of the screen is full and doesn't flicker any longer. When the phone is off, the battery is fully charged as fully charged picture appears on the screen. During the charge, your mobile phone and charger may normally become hot;
5. Please disconnect the charger from your mobile phone and the outlet when the charging is completed.



 
Note:

1. *Put your phone in ventilated place under normal temperature during charging. Use the original charger or those authenticated by the manufacturer. Using non-original charger may cause danger and violate the warranty provisions.*
 2. *Charge your mobile phone in time when it is powered off automatically or prompts the lack of the power.*
-

1.6 Insert and Remove SIM Card

Insert a valid SIM card into your mobile phone before use. All information regarding network connection and SIM phonebook is saved in SIM card. In order to avoid the loss and damage of information saved in SIM card, please don't touch the metal surface and put SIM card far away from electricity or magnetism.

1. Turn off your mobile phone, remove the battery and disconnect the external power;
2. Put SIM card into the socket as shown in the figure;

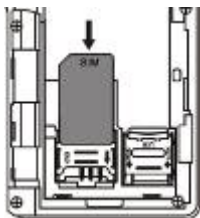

3. Turn off your mobile phone and remove the battery before taking out SIM card.

1.7 Insert and Remove Memory Card

1. Turn off your mobile phone, remove the battery and disconnect the external power;
2. Open the clasp in the direction of arrow as shown;



3. Insert the memory card into the slot;



4. Close the clasp;



5. Secure the clasp in the direction of arrow as shown;



6. Turn off your mobile phone and remove the battery before taking out the memory card.

1.8 Power On/Off

Press and hold End key until the power-on/off animation appears.

After your turn on your mobile phone, it will automatically check whether or not SIM card is inserted or usable, and shows the following information on the screen in turn:

- ◆ **Enter Phone Lock Code:** if you've set the code.



Note:

If you forget the Phone Lock Code, please contact your local authorized service center as soon as possible.

-
- ◆ **Enter PIN:** if you've set PIN code for SIM card.



Note:

SIM card will be locked if you enter wrong PIN code three times. Then you need PUK code to unlock SIM card. The PIN code may be provided to you together with SIM card. If not, contact your network service provider. The default PIN code is normally 1234. Please replace it with your own PIN code as soon as possible.

-
- ◆ **Search:** The mobile phone will search for the available network.

2 Call

2.1 Make a Call

You will be able to make or receive calls as the network provider's logo appears on the screen. The bar at the left-up corner of the screen indicates network signal strength. The more bars there are, the stronger the signal will be. Sometimes you need move your mobile phone slightly to improve the voice quality since it is greatly affected by the obstacles.

2.1.1 Dial Domestic Calls

1. In idle mode, use touch-pen to click any blank space on the screen or press numeric keys to display the dialing keypad;
2. Click  to enter the list of phonebook and select the number to dial;
3. Click  to dial;
4. Click **"Abort"** or press End key to hang up the call;
5. Click **"Save"** to save the number to SIM card or phone;
6. Click **"Clear"** to clear the inputs;
7. Hold **"Clear"** to clear the inputs and return.

2.1.2 Dial Extension

Sometimes you can not dial the extension directly. Dial the direct line firstly, click  continuously until "P" appears on the screen, and

finally dial the extension number.

2.1.3 Dial International Calls

To dial an international call, click  continuously until “+” appears on the screen. This will enable you to dial an international call anywhere even without knowing the international prefix.

2.1.4 Dial from Call History

Every number you dialed or received will be saved in Call History. The latest dialed, received and missed calls will be respectively categorized into “Dialed Calls”, “Received Calls” and “Missed Calls”. When the storage is full, the earliest number saved will be deleted.

You may perform the following operations:

1. In idle mode, press Send key to view “Call Logs”;
2. Select the number you want to dial in “Call Logs” and press Send Key to make a call directly;
3. Under “Call Logs”, press “Ok” to view Call Info and press “Option” to save or delete the number.

2.2 Answer Calls

You can press “Send” key to answer the call.

Press any key to answer

In idle mode, enter “Settings”  “Call Setup”  “Answer Key”

➡ “Any Key” to set.

After the setting, press any key except “End” key to answer the call.

Use headset to answer

If the headset is connected, you can press the key on the headset to answer the call.

2.3 Emergency Calls

You could make emergency calls without SIM card so long as you are in the area covered by the network.

2.4 Adjust the Volume

1. During the conversation, press side keys to adjust the voice volume;
2. In idle mode, press side keys to adjust the key volume.

2.5 Call Options

Click “Option” to enter menu options during a call, or click “H-Free” to turn on the speaker. Click “H-Held” to turn off the speaker when “H-Free” is activated. The operation method of call options is the same as that of function menu.

During the conversation, press “Option” to enter the menu. You could perform the following operations:

- ◆ **Hold:** Hold the current conversation.

- ◆ **End:** End the current conversation.
- ◆ **New Call:** Enter new dialing interface.
- ◆ **Phone Book:** Enter Phone Book.
- ◆ **Message:** Enter "Message". MMS function will be disabled during the conversation due to the restriction of network occupancy.
- ◆ **Sound Recorder:** Record the current conversation.
- ◆ **Mute:** When "Mute" is on, the other party can't hear your voice.
- ◆ **DTMF:** Turn on or off.
- ◆ **Conference* :**
 - Swap:** Keep switching between different parties.
 - Conference:** Have a conference phone call.
 - Transfer:** Transfer current call to other phone.
 - End Single:** End current call.
 - End All:** End all active calls.

**Note:**

The menu option marked with "" appears only under specific conditions. Conference function requires network support.*

3

Call History

“All Calls”, “Missed Calls”, “Dialed Calls”, and “Received Calls” are saved in “Call History”. If the records are full, the earliest saved records will be deleted.

In idle mode, press OK key to enter the main menu, and then select “Call History”.

3.1 View

1. Select “Call History” in the main menu to select “All Calls”/ “Missed Calls”/ “Dialed Calls”/“Received Calls”.
2. Select the record you want to view from the list.
3. Press “Option”, you could select:
 - ◆ **Details:** View the detailed information.
 - ◆ **Dial:** Press it to dial the number.
 - ◆ **Save to Contact:** Save the number to Contact.
 - ◆ **Send SMS:** Send a short message to the number.
 - ◆ **Send MMS:** Send multimedia message to the number.
 - ◆ **Delete:** Delete the record.

3.2 Delete Call Log

1. Select "Call History" in the main menu to select "Delete Call Log".
2. Select "Missed Calls", "Dialed Calls", "Received Calls" or "Delete All".

3.3 Call Time

Under "Call Time", you could select "Last Call Time", "Total Sent", "Total Received" or "Reset All Time".

4

Movistar

Movistar STK card services are value-added services provided by your network provider.

Your mobile phone supports STK service. If SIM card and your network provider do not support the service, this function can't be used.

5 Multimedia

5.1 Camera

1. Select "Camera" to enter the preview interface, and press "Option":
 - ◆ **Album:** Enter Album to view the photos you've just taken;
 - ◆ **Camera Settings:** Set "Shutter Sound", "EV", "Banding", "Delay Timer", and "Cont Shot".
 - ◆ **Image Settings:** Set "Image Size" and "Image Quality".
 - ◆ **White Balance:** Select "Auto", "Daylight", "Tungsten", "Fluorescent", "Cloud", or "Incandescence".
 - ◆ **Scene Mode:** Select "Auto" or "Night".
 - ◆ **Effect Settings:** Select "Normal", "Grayscale", "Sepia", "Sepia Green", "Sepia Blue", "Color Invert", "Gray Invert" or "Contrast".
 - ◆ **Wall Paper Frame:** Select "Off" or 4 different kinds of frames.
 - ◆ **Storage:** Select "Phone" or "Memory Card".
 - ◆ **Restore Default:** Restore to factory default settings.
2. Press **OK** key to take photos after the above settings:

On the preview interface, you could perform the following operations with the handwriting pen:

- ◆ Click   to adjust EV parameters;
- ◆ Click   to adjust the camera focus;
- ◆ Click FX to change effect settings;
- ◆ Click  to delay the time;
- ◆ Click  to set "Cont Shot";
- ◆ Click  to set "Image Quality";
- ◆ Click  to set "image size";
- ◆ Click  to complete "Capturing" and ask "Save Image?".

**Note:**

The camera focus can not be adjusted when the image size is set maximum.

5.2 Video Player

Select "Video Player" to enter the list of video files. Press Up/down key to select the file to play, press "Option" or directly use handwriting pen to select the video. You could perform the following operations:

- ◆ **Play:** Play the select video.
- ◆ **Forward:** Select "To Email" or to receive your video.
- ◆ **Rename:** Change the name of selected video.
- ◆ **Delete:** Delete the selected video.

- ◆ **Delete All Files:** Delete all videos.
- ◆ **Sort:** Select “By Name”, “By Type”, “By Time”, “By Size” or “None”.
- ◆ **Storage:** Select “Phone” or “Memory Card”.

Select the video and press “Option” to set:

- ◆ **Play:** Play the select video.
- ◆ **Settings:** Set “Auto Repeat”

Select a video and use handwriting pen to perform the following operations:

- ◆ Click  or “Play” to play the video.
- ◆ Click  or “Pause” to pause.
- ◆ Click “Stop” to stop playing.
- ◆ Click  to switch to full screen, and click any space on the screen or press # key to return to normal mode.
- ◆ Click  to adjust the volume.
- ◆ Click   to control the playing process.
- ◆ Click “Back” to return to previous interface.

5.3 FM Radio



Note:

You could listen to the radio only as the headset is inserted

into the mobile phone.

- ◆ **Channel List:** Edit up to 9 channels.
- ◆ **Manual Input:** Manually input a channel.
- ◆ **Preset Auto Search:** Automatically search for channels.
- ◆ **Settings:** After you turn on "Background Play", "Record Format" and "Record Storage".
- ◆ **Record:** Record the current channel.
- ◆ **Append:** Continue to record amr files on the current file.
- ◆ **File List:** Display the list of files.

You could also use the handwriting pen to operate as below:

- ◆ Click  to search for channels.
- ◆ Click  to stop listening to the radio.
- ◆ Click   to adjust the volume.
- ◆ Click  to view the list of channels.
- ◆ Click  to listen to the next channel; click  to listen to the previous channel.
- ◆ Click  to record the current channel.
- ◆ Click  to enter the setting menu.

5.4 Sound Recorder

The recorded files will be saved in this menu. Press "Option" to select:

- ◆ **Record:** Start recording.
- ◆ **Settings:** Set "Pre. Storage" and "File Format".
- ◆ **List:** View all the recorded files in the list.

Select a recorded file and press "Options" to select: :

- ◆ **Play:** Play the selected file.
- ◆ **Append:** Continue to record amr files on the current file
- ◆ **Rename:** Change the name of recorded file.
- ◆ **Delete:** Delete the selected file.
- ◆ **Delete All:** Delete all recorded files.

5.5 Video Recorder

1. Select "Video Recorder" to enter the preview interface, and press "Option" to perform the following operations:
 - ◆ **To Player:** Enter "Video Player" to view the recorded videos.
 - ◆ **Camcorder Setting:** Set "White Balance", "EV", "Night Mode" and "Banding".
 - ◆ **Video Setting:** Set "Video Quality", "File Size Limit", "Rec Time Limit", "Record Audio" and "Encode Format".
 - ◆ **Effect Setting:** Select "Normal", "Grayscale", "Sepia", "Sepia Green", "Sepia Blue", "Color Invert", "Gray Invert" or "Contrast".
 - ◆ **Restore Default:** Restore to factory default settings.

2. After the above settings, press OK key to record videos.

Under the record preview interface, you could use handwriting pen to perform the following operations:

- ◆ Click  to record a new video.
- ◆ Click  to pause.
- ◆ Click “Stop” to stop recording.
- ◆ Press “Back” to return to previous interface.

The default name of saved video shall be “MOV+ four SN number + Letter”, and the letter varies from A to Z. The videos will be saved in “Video Player”.



Note:

You could view the videos from “Video Player” or “Video” folder under “File Manager” of Memory Card.

6 Gallery

6.1 Album

Select “Album” to view the photos taken or other pictures saved in “Album”.



Note:

You could view the photos in “Album” only when they are saved in “Photos” folder of Phone or Memory Card.

Select a photo and then press “Option” to select:

- ◆ **View:** View the photo.
- ◆ **Browse Style:** Select “List Style” or “Matrix Style”.
- ◆ **Forward:** Select “To Wallpaper”, “To Phone Book”, “To MMS”, “To Email”. Whether it can be sent or not depends on MMS space and screen size
- ◆ **Rename:** Change the name of selected photo.
- ◆ **Delete:** Delete the selected photo.
- ◆ **Delete All Files:** Delete all photos.
- ◆ **Sort:** Select “By Name”, “By Type”, “By Time”, “By Size” or “None”.
- ◆ **Storage:** Select “Phone” or “Memory Card”.

6.2 File Manager

Enter “File Manager” to display “Phone” and “Memory Card”. The Total and Free memory space will be displayed on the upper part of the interface.

Press “Option” to select:

- ◆ **Open:** List the directories and files under root directory.

- ◆ **Create Folder:** Create a new folder and edit the folder name.
- ◆ **Format:** Format the selected storage. This would delete all the data saved in the selected storage.

Select "Open" to open the relevant folder and file.

Select a file and press "Option" to select:

- ◆ **View:** This option appears only when the phone supports the files.
- ◆ **Play:** This option appears only when the phone supports multimedia files.
- ◆ **Forward:** Select "To Wallpaper", "To Contact", "To MMS", "To Email". Whether it can be sent or not depends on MMS space and screen size
- ◆ **Send:** The contents might be different under "Send" for the files with different formats. Please operate according to prompts on the screen.
- ◆ **Detail:** Display the last revised date and file size.
- ◆ **Rename:** Change the name of the file.
- ◆ **Copy:** Select "Reserve Original File" or "Delete Original File" when copying.
- ◆ **Delete:** Delete the file.
- ◆ **Delete All Files:** Delete all files under the current folder.
- ◆ **Sort:** Select "By Name", "By Type", "By Time", "By Size", or "None" (random).



Note:

The phone supports Digital Rights Management (DRM).

7 Phone Book

In Phone Book, you could save the contact's name, telephone number, mobile phone number, etc. The numbers could be saved either in Phone or SIM card.

In idle mode, use the handwriting pen to enter the main menu. Under "Phone Book", you could select the following functions:

7.1 Quick Search

Use the handwriting pen to click the first letter of your desired contact on the screen to quickly search for the contacts, or view all contacts in Contact list.

You could perform the following operations to the current contact, such as "Call", "Send MSG", "View", "Delete", "Send vCard", "Add New Entry" and "Copy to Phone".

7.2 Search Entry

Enter the name, and press "Search" to find the corresponding entries.

7.3 Add New Entry

You could add new entry "To SIM" or "To Phone".

If you want to add new entry to SIM, you need input "Name" and "Number" only.

If you want to add new entry to Phone, besides "Name", "Number", "Home Number", "Office Number", "Other Number", "Email Address", "Memo", and you need edit the following:

Caller Group

Add the phone number into different caller groups.

Associate Picture

Set your personalized caller picture for the current number. Select the proper picture from “System”, “Phone” or “Card”, which could be previewed (the size of the picture selected from File Manager folder can not larger than 20K).

Associate Sound

Select the proper ring tone from “System”, “Phone” or “Card”.

7.4 Caller Group

Your mobile phone supports caller grouping function, which allows you to select “View Member”, “Group Ringtone”, “Group Picture”, “Add Member”, “Del Number”, “Rename”, or “Del all”.



Note:

You could add/delete the members only when they are saved in Phone.

7.5 Copy All

Select “From SIM” to copy all entries from SIM card to Phone, or select “From Phone” to copy all entries from Phone to SIM card.



Note:

When copying all entries from Phone to SIM card, only the name and number will be copied.

7.6 Delete All

Select "From SIM" to delete all entries saved in SIM card, and select "From Phone" to delete all entries saved in Phone.

7.7 Preferred Storage

You could set the preferred storage location for the current number.

7.8 Information

Owner Number

You could set two numbers for Owner Number.



Note:

Any changes arising from the use of this function will not affect the actual numbers saved in SIM card.

Memory Status

You could check the memory status of both phone and SIM.

8 Messages

8.1 SMS

Your mobile phone supports Enhanced Message Service (EMS), which allows you to insert picture, animation, cantus, sound, etc, or use template to create short message.

Write Message

1. Enter "Write Message" to edit a short message.
2. Press "Option" to select:
 - ◆ **Send Only:** Send SMS to the the recipient's number.Press "Option" to select "Send Now" after entering the

recipient's number (You could select multiple numbers from "Phone Book" or "Call Log").

- ◆ **Send By Group:** you could send the message to all the contacts in the group.
- ◆ **Insert:** select "Use Template", "Insert PHB Number", "Insert PHB Name", "Insert Bookmark" or "Insert Object".
- ◆ **Text Format:** set "Text Style", "Alignment" and "New Paragraph".
- ◆ **Save and Send:** Send SMS and save in "Outbox".
- ◆ **Save as draft:** save the message in "Drafts".
- ◆ **Exit**

**Note:**

SMS centers of some cities and regions do not support a short message containing more than 70 Chinese characters (or 160 English letters). Only the mobile phone with EMS function could receive/send static icons, animated icons and music files.

Inbox

1. Enter "Inbox" to view the received messages.
2. Press Up/Down key to select the message, and press "Option" to select:
 - ◆ **View:** Read the message;

- ◆ **Reply:** Reply to the message.
- ◆ **Reply through MMS:** Reply to the message by MMS.
- ◆ **Delete:** Delete the message.
- ◆ **Forward:** Forward the message to other recipient.
- ◆ **Call:** Dial the sender's number.
- ◆ **Get Number:** Get the sender's phone number or the number in the message text, you can dial the number or save the number into Contact.
- ◆ **Copy to Phone/SIM:** Copy this message to Phone or SIM card.
- ◆ **Copy All:** Copy all messages from SIM/Phone to Phone/SIM.
- ◆ **Use Email Address**

Outbox

1. Enter "Outbox" to view the messages.
2. Press Up/Down key to select the message, and press "Option" to select "View", "Edit", "Send", "Delete", "Get Number", "Copy to Phone/SIM", "Copy All" or "Use Email Address".

Drafts

1. Enter "Drafts" to view the messages you are saved.
2. Press Up/Down key to select the message, and press "Option" to select "View", "Edit", "Send", "Delete" or "Use Email Address".

Delete Message

You could select “Delete Inbox”, “Delete Outbox”, “Delete Drafts” or “Delete All”.

Template

There are 10 short messages predefined in your mobile phone. You could select “Edit”, “Erase” or “Write Message”.

Settings

Before using Messages, you need perform relevant settings:

- ◆ **Profile Settings:** Please contact your local network provider to obtain the service center number. Enter “Profile Settings” and select one profile. Select “Edit” to set “Profile Name”, “SC Address”, “Valid Period” and “Message Type”.



Note:

“Valid Period”, “Fax” and “Page” need network support.

-
- ◆ **Deliver Report:** select ON/OFF for “Deliver Report”. When “Delivery Report” is set on, the SMS center will return status report to you no matter whether or not the other party could receive your message. In this way, you could conveniently

know whether or not the other party has received your message.

- ◆ **Memory Status:** display the memory space for SMS in SIM card and Phone.
- ◆ **Preferred Storage:** select "SIM" or "Phone" as the default storage media for SMS.

SMS Counter

You could view the number of messages "Sent" and "Received".

8.2 MMS

MMS indicates Multimedia Messaging Service, which features in the multimedia function and enables users to send messages that include multimedia objects (text, images, audios, etc.).



Note:

*MMS requires network support, therefore make sure your SIM card supports MMS before use, or consult your network provider. Make sure to complete the following operations before sending MMS: you've set service center number; you've completed WAP setting.
If the MMS is too large, the mobile phone might not be able to send or receive it.*

Your mobile phone supports MMS. After necessary settings, you could send/receive MMS.

Write Message

1. Enter "Write Message" to edit:
 - ◆ **To:** You could select "Add Number" or "Add E-mail";
 - ◆ **Cc:** If the network supports, you could add more recipients. The operation is the same as "To".
 - ◆ **Bcc:** If the network supports, you could add more blind recipients. The operation is the same as "To".
 - ◆ **Subject:** The subject could be null.
 - ◆ **Edit Content:** Under the interface of editing MMS, you could edit contents. Press "Option" to select "Input Method", "Add Image", "Add Audio", "Add Video", "Add Attachment", "Add Slide Before" or "Add Slide After".
2. After editing, you could select "Send Only", "Save and Send", "Save to Draft", "Send Options" or "Exit".

Inbox

The MMS will be saved in the inbox. You could perform the following operations:

- ◆ **View:** View the current MMS content, and press right soft key to stop playing. As the message size exceeds the screen, press Up/down key to view.
- ◆ **Reply:** Edit MMS and reply to the sender. The subject will be

changed to "RE: original subject".

- ◆ **Reply by SMS:** Edit SMS and reply to the sender.
- ◆ **Reply to all:** Edit MMS and reply to all.
- ◆ **Forward:** Forward the current MMS.
- ◆ **Delete:** Delete the current MMS.
- ◆ **Delete All:** Delete all MMS.
- ◆ **Properties:** View the details of MMS.
- ◆ **Use Details:** Get the sender's number and the number in current message to dial or save.



Note:

When you check MMS with music, the side keys can't be used to adjust the volume.

Outbox

The multimedia messages will be saved in the Outbox as you select "Save and Send". Press "Option" to select "View", "Forward", "Edit", "Delete", "Delete All", "Properties" or "Use Details".

Draft

The draft stores those messages you are not ready to send. You could edit the messages again and send later. Press "Option" to select "View", "Send", "Edit", "Delete", "Delete All", "Properties", or "User Details".

Template

Your mobile phone stores 5 predefined multimedia messages. Press "Option" to select "View", "Write Message" or "Properties".

Message Settings

Before using MMS, you must perform some necessary settings.

Compose

You could set "Creation Mode", "Image Resizing" and "Auto Signature".

Send

You could set "Validity period", "Delivery report", "Read report", "Priority", "Slide Timing" and "Delivery time".

Retrieve

You could set "Home network", "Roaming", "Read Report" and "Delivery Report".

Filter

You could set "Anonymous" and "Advertisement".

Server Profile

Generally, the default setting will be movistar MMS.

Memory Status

You could check the memory status.



Note:

The use of “Delivery Report” and “Anonymous” depends on your network service provided by your provider. For more details, please consult your network provider.

Your mobile phone has reserved some usable space to save MMS. It may fully occupy the space if you store a lot of multimedia messages. If your phone prompts with “storage full”, you must delete some redundant messages to make sure there is enough space to store new multimedia messages.

8.3 Email

Send and Receive

“Send and Receive” sends/receives email to/from sever. Sends any unsent mails in the “Unsent” folder and receives the new mails,if only ,form POP3/IMAP4 sever.

Write Message

1. Enter “Write Email” to edit:

◆ **To:** You could select “Add E-mail”.

- ◆ **Cc:** If the network supports, you could add more recipients. The operation is the same as "To".
- ◆ **Bcc:** If the network supports, you could add more blind recipients. The operation is the same as "To".
- ◆ **Subject:** The subject could be null.
- ◆ **Attachment:** You could select "Attachment" from "Attachment List".
- ◆ **Priority:** You could select "Normal", "Low" or "High".
- ◆ **Content:** Under the interface of editing Email, you could edit contents. Press "Option" to select "Input Method" or "Use Template".

2. After editing, you could select "Send", "Save and Send", "Save to Draft", or "Quit without Saving".

Inbox

The Email will be saved in the inbox.

You could perform the following operations for POP3:

- ◆ **Reply:** Send the reply to the sender.
- ◆ **Reply Without Content:** Reply to the sender without original mail content.
- ◆ **Reply All:** Reply to the sender and all recipients.
- ◆ **Reply All Without Content:** Reply to the sender and all recipients without original content.
- ◆ **Forward:** Forward the email to other parties.
- ◆ **Delete:** Delete the selected email.

If current incoming protocol is set to IMAP4, You could perform the following operations after reading email: "Read", "Next Page", "Previous Page" or "Jump To Page".

Unsent

The draft stores those Email you are not ready to send. You could perform the following operations: "Send", "Save and Send", "Edit", "Move To Draft" or "Delete".

Drafts

The draft stores those Email you are not ready to send. You could perform the following operations: "Edit", "Delete", "Next Page", "Previous Page" or "Jump To Page".

Delete All Folder

Delete the selected folder: "Inbox", "Sent", "Unsent", "Draft" and "All Folder".

Delete All Mark

Delete all markde information.

Email Profile

"Email Profile" configures various servers and profile related settings.

Template

Your mobile phone stores 10 predefined multimedia messages. Press "Option" to select "Edit", "Erase" or "Write Email".

8.4 Voice Mail Server

When you are unable to answer the call, you could let the other party leave a message for you through voice mail server. You could visit voice mail server to listen to the message later.

You could set two voice mail numbers.

In idle mode, hold "1" key to dial the first voice mail number you've set.



Note:

Make sure to apply for the service before use because it requires network support.

9 Fun&Games

9.1 Games

Your mobile phone provides one Games. Enter the menu and view the operation descriptions.

9.2 E-Book Reader

Enter "Bookshelf" and press "Option" to select :

- ◆ **Open E-Book:** Open E-Book, and press "Option" to select "Find", "Jump To", "Go To Bookmark", "Add Bookmark", "Delete Bookmark", "Book Info", "Settings", "Apply Global Settings" or "Help".
- ◆ **CleanUp Bookshelf:** Clean the bookshelf.
- ◆ **Global Settings:** You could set "Font Style", "Scroll By", "Auto Scroll", "Scroll Speed", "Full Screen", "Encoding" or "Select Memory".
- ◆ **Book Info:** Display the file title, size and format.
- ◆ **Delete:** Delete this file.
- ◆ **Delete All Files:** Delete all files.

- ◆ **Sort:** You could select "By Name", "By Type", "By Time", "By Size" or "None".
- ◆ **Apply Global Settings:** Restore factory default settings.

**Note :**

The list will be automatically updated as you put txt files into "E-book" directory of the phone or memory card.

9.3 Melody Compose

You could compose your favorable music as the ringtone for incoming call and alarm. Your mobile phone could save up to 5 composed ringtones, and each ringtone could contain a maximum of 150 notes.

Add

Enter "Melody Compose", press "Add" to enter the ringtone editing interface; Press "Option" to perform the following operations:

- ◆ **Play:** Listen to the ringtone you're composing;
- ◆ **Play Speed:** Select the speed of playing the ringtone;
- ◆ **Select Instrument:** Select the instrument for the ringtone;
- ◆ **Save:** Save the ringtone you've just composed.

Edit

- ◆ **Insert:** insert a note.
- ◆ **Edit:** edit a note.
- ◆ **Play:** play the composed ringtone.
- ◆ **Up key:** raise the tone of current note.
- ◆ **Down key:** lower the tone of current note.
- ◆ **Left key:** move the cursor to the left.
- ◆ **Right key:** move the cursor to the right.

Edit

Select the composed ringtone, and press "Option" to perform the following operations:

- ◆ **Play:** Play the composed ringtone;
- ◆ **Edit:** Edit a note;
- ◆ **Add:** Add a new ringtone;
- ◆ **Rename:** Change the name of the composed ringtone;
- ◆ **Delete:** Delete the selected ringtone;
- ◆ **Delete All Files:** Delete all ringtones;
- ◆ **Forward:** Select "To MMS", "To Email"

10 Services

10.1 WAP

Your mobile phone supports Wireless Application Protocol (WAP). You could get access to the services provided by your network provider. It allows you to get information about news, weather forecast, airline flights, etc. These services are especially designed for the mobile phone, and they are maintained by WAP provider.

**Note:**

WAP service requires network support. Please consult your network operator or service provider for details on usability, quotation, and tax of WAP service. Your service provider will give you instructions on how to use this service.

You could use the value-added services provided by network operator.

- ◆ **Homepage:** You could visit the homepage. Homepage is WAP site you set in "Settings". If you do not set WAP site, the factory preset site will be used.
- ◆ **Bookmarks:** Select a bookmark, press "Option" to select "Goto", "Edit", "Send", "Delete", "Delete All" or "Add Bookmark".



Note:

Before use, please make sure your bookmark list is not empty. In order to avoid this, a few common websites have been preset to you in your mobile phone.

- ◆ **Recent Pages:** Display the recent pages you've visited. If you have select the history, simply select "Goto" to visit this page.
- ◆ **Enter Address:** Input URL address, and press "Done" to complete. You could visit WAP site now.
- ◆ **Service Inbox:** Check the service information sent by your service provider. Press "Option" to select "Read", "Delete" or "Delete All".
- ◆ **Settings:** You could select "Edit Profile", "Browser Options", "Service Message Settings", "Clear Cache", "Clear Cookies" or "Trusted Certificates".

10.2 Data Account

GSM Data

Under "GSM Data", the list of data accounts is displayed. Select one account, press "Edit" to edit the following items:

- ◆ **Account Name:** Edit the account name.
- ◆ **Number:** Edit the connection number of current account.
- ◆ **User Name:** Edit the user name for dial server (not WAP gateway),

the default value is wap.

- ◆ **Password:** Edit the password for dial server (not WAP gateway), the default value is wap.
- ◆ **Line Type:** Select the line type "ISDN" or "Analogue".
- ◆ **Speed:** Select the data connection speed "4.8Kbps", "9.6Kbps" or "14.4Kbps".
- ◆ **DNS:** Select WAP's DNS.

GPRS

In "GPRS", display the list of data accounts. Select one account, press "Edit" to edit the following items:

- ◆ **Account Name:** Edit the account name.
- ◆ **APN:** Input APN.
- ◆ **User Name:** Edit the user name for APN server, the default value is empty.
- ◆ **Password:** Edit the user name for APN server, the default value is empty.
- ◆ **Auth. Type:** Select "Normal" or "Secure".

10.3 GPRS Counter

Check the data flow under GPRS network. You could view "Last Sent", "Last Received", "All Sent", "All Received" or "Reset Counter".

11 Audio Player

Your mobile supports audio file formats such as midi 、mp3 and amr.

1. Select "Audio Player" to enter the interface, and press "Option" to select "Settings" :
 - ◆ **Pre. Play List:** Select the file from "Phone" or "Memory Card".
 - ◆ **Background Play:** Select "On" or "Off".
 - ◆ **Lyrics Display:** Select "On" or "Off".
 - ◆ **Repeat:** Select "Off", "One", or "All".
 - ◆ **Shuffle:** Select "On" or "Off".
 - ◆ **Equalizer:** Select "Normal", "Classical", "Rock", "Bass", "Dance", "Pop", or "Treble".
 - ◆ **Lyrics Display:** select "On"/"Off" to display or not display the lyrics.
2. Press "Option" ➡ "Play List" to view the list of files in Phone or Memory Card.
3. Press "Option" ➡ "Play" to play the selected audio file.



Note:

The audio files must be saved in "My Music" folder of the phone or memory card.

Select an audio file, and press “Option”  “Play”:

- ◆ Press Up key to enter “Player Settings”, press Down key to enter the play list, and press OK key to pause/resume.
- ◆ Press side keys to adjust the volume.
- ◆ Press Right key to play the next file, and press Left key to play the previous one.

You could also perform the operations using the handwriting pen:

- ◆ Click  to play.
- ◆ Click  to pause.
- ◆ Click  to stop playing.
- ◆ Click   to adjust the volume.
- ◆ Click  to play the next file; click  to play the previous file.
- ◆ Click  to change repeat mode.
- ◆ Click  to change random mode.
- ◆ Click  to enter Setup menu.



Note:

Please select medium volume when listening to music.

12 Extra

12.1 Calendar

Enter “Calendar”, the calendar in current month will be displayed on the screen and the current date will be marked by a background box in special color.

You could press navigation keys or click the direction arrows on the screen to browse the dates and the information on the screen will also change consequently.

You could set To Do List on the calendar. Enter To Do List and press “Option” to “View”, “Add”, “Edit Task”, “Delete Task” or “Delete All”.

If you need add new To Do List, select “Add Task” and then select “Meeting”, “Course”, “Date”, “Call”, “Anniversary” or “Reminder”.

To Do List for current date will be displayed on the idle screen after adding a new task and turning on “Alarm”. Click it to view the details.

12.2 Alarm

Your mobile phone could set up to 8 alarms, and it supports turn off alarm.

1. In the list of alarms, select an alarm to edit.
2. Set “Switch”, “Time”, “Repeat”, “Snooze”, and “Audio Options”.
3. Press “Save”.

12.3 World Clock

Press left/right navigation key to view the time of different cities.

12.4 Calculator

Your mobile phone provides a calculator to perform simple calculations. You could add, subtract, multiply or divide, and select M+, M-, MR, and MC to perform relevant operations.

Descriptions of M+, M-, MR and MC

- ◆ **MR**: Read the data saved in current memory.
- ◆ **MC**: Clear the data saved in current memory.
- ◆ **M+**: Add the input data and the data saved in current memory, and save the result in current memory.
- ◆ **M-**: Subtract the input data from the data saved in current memory and save the result in current memory.



Note:

The calculator is limited to precisions, therefore it might generate errors.

12.5 Typical Stopwatch

You could select “Spit Timing”, “Lap Timing” or “View record”.

12.6 nWay Stopwatch

Press 4 different navigation keys to record the different timing respectively.



Note:

Press LSK to stop time measuring, and hold left soft key to clear up all the records.

12.7 Unit Converter

Your mobile phone provides you with unit converter to convert the weight and length. Input the value to perform the conversions, such as from Kg to Pound, from Kg to Ounce, from Km to Mile, and from M to Yard.

12.8 Currency Converter

Your mobile phone provides you with basic functions regarding currency conversion.

13

Analog TV

Your mobile phone provides analog TV function. Select “**Analog TV**” and enter. The TV effect depends on your local TV station signal. You could use video cable to connect your mobile phone and cable TV interface.

Please follow the instructions in the figure below to pull out the antenna at the end of touch-pen, and rotate the antenna to achieve the best effect.



Press “**Options**” to select:

- ◆ **Select Area:** Select your local area.
- ◆ **Mode Selection:** Select “Analog TV” or “Cable TV”.
- ◆ **Channel List:** Display the list of the best channels you’ve searched for.
- ◆ **Auto Search:** Automatically search for channels.
- ◆ **Manual Input:** Manually input a channel.
- ◆ **Settings:** Select “Default Settings”.

14 Settings

14.1 Pen Calibration

As you feel your mobile phone doesn't react properly after you use the handwriting pen to click relevant option or icon, you need calibrate the touch screen. Click  with the handwriting pen until the calibration is

completed. If the calibration is still not accurate as you make sure to click the center every time, you should refer to 14.7 Restore Factory Settings.

14.2 User Profiles

Your mobile phone provides multiple profiles, which allows you to perform personalized settings of “Incoming Call Alert”, “Alarm”, “Message Alert”, “Keypad Tone”, “Alert Tone” and “Power On/Off Volume” according to different occasions. The optional profiles include “General”, “Silent”, “Meeting”, “Outdoor”, “Flight”, and you could also customize the profiles.

Press “Option” and select “Activate” to start using the selected profile.

14.3 Phone Setup

Display Characteristic

- ◆ **Wallpaper:** Set the current wallpaper. You could select the photo preset in the phone or select the suitable photo from “System”, “Phone” or “Memory Card” which could be previewed successfully as your wallpaper.
- ◆ **Date:** Show or hide “Date” on the desktop.
- ◆ **Time:** Show or hide “Time” on the desktop.
- ◆ **MainKey Icons:** Show or hide “MainKey Icons” on the desktop.

LCD Backlight

You could set the duration and brightness for LCD backlight.

Time and Date

You could set “Date”, “Time”, “Date Format” and “Time Format”.

Scheduled Power On/Off

You could edit up to 4 groups of power on/off time. Press “Edit” to set “Status”, “Type” and “Time”.



Note:

The time should be set different y to avoid conflict.

Auto Keypad Lock

You could prevent misoperation resulting from improper key press.
Press LSK and # key to unlock the keypad.

Power Saving Mode

You could turn on/off power saving mode.

Language

You could set the language as “ES” or “English”.

Handwriting

You could set “Pen Speed” and “Pen Color”.

14.4 Call Setup

Call Waiting

After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.

Call Divert

This function allows you to divert incoming call to another designated number.

**Note:**

This function requires network support, so please contact your network provider for details.

You could select "Divert All Voice Calls", "Divert If Busy", "Divert If No Answer", "Divert If Unreachable", or "Divert All Data Calls".

If you don't need to divert, you could select "Cancel All Divert".

Press OK to select:

- ◆ **Activate:** Set the diverted object number.
- ◆ **Deactivate:** Cancel call divert.
- ◆ **Query Status:** Check the status of the function.

Set Answer Key

You could set "Send Key" or "Any Key" to answer the incoming call.

Black List

You could edit the Black List. After you select “On” under Mode, the incoming call from the numbers in the Black List will be rejected.

Auto Redial

You could turn on/off this function. If the other party doesn't answer the call as you select “On”, your mobile phone will automatically redial after a while. It will auto redial up to 10 times.

14.5 Network Setup

Network Selection

There are three modes under Network Selection: “New Search”, “Select Network” and “Selection Mode”. Under “Selection Mode”, you could select “Automatic” or “Manual”.

GPRS Connection

Press left soft key “Change” to switch between “When Needed” and “Always”.

14.6 Security Setup

You need to input the password '0000' to enter “Security Setup”.

SIM Lock

- ◆ If “SIM Lock” is currently set “OFF”, select “ON” to input PIN code

to unlock your SIM card. You need input correct PIN code to unlock your SIM card as you turn on your mobile phone next time.

- ◆ If “SIM Lock” is set “ON”, select “OFF” to cancel the protection.

**Note:**

Your SIM card will be locked if you enter wrong PIN code continuously for three times. In this case you need PUK code to unlock your SIM card.

The PIN code, PUK code and SIM card may be provided to you all together. If not, contact your network provider. The default PIN code is normally 1234. Please change to your own PIN code as soon as possible.

Phone Lock

Phone Lock could prevent your mobile phone against illegal use.

- ◆ Select “Power On” to input the password. You need input correct password to unlock your mobile phone as you turn on your mobile phone next time.
- ◆ Select “Changing SIM” to input the password. You need input correct password to unlock your mobile phone as you change your SIM card next time.
- ◆ Select “OFF” to cancel the protection.

**Note:**

The default password is 0000. Please change to your own password as soon as possible.

Call Barring



Note:

Please contact your network provider for details since some providers might not provide call barring service. When applying for this service, you will get a four-digit password provided by your provider to activate call barring.

Press “Call Barring” to select:

- ◆ **All Outgoing Calls:** Select “Activate”, “Deactivate” or “Query Status”.
- ◆ **International Calls:** The same as above.
- ◆ **International Calls Except To Home PLMN:** The same as above.
- ◆ **All Incoming Calls:** The same as above.
- ◆ **When Roaming:** The same as above.
- ◆ **Cancel All:** Input the password to cancel all call barring.
- ◆ **Change Barring PW:** Input the old password and set new one.

Fixed Dial

If your SIM card supports, only the selected numbers could be dialed. After this function is activated, you are only allowed to dial the numbers in

Fixed Dial List or a few numbers.

Enter "Fixed Dial" to select:

- ◆ **Mode:** Input PIN2 code to turn ON/OFF Fixed Dial function.
- ◆ **Fixed Dial List:** Edit a maximum of 10 fixed dial numbers. Press "Option" to select "Edit" or "Find in PHB".



Note:

*You need input PIN2 code to turn on/off fixed dial function.
Please contact your network provider to get PIN2 code.
After fixed dial is activated, only the entries you set in
Fixed Dial List will be displayed in Contact.*

Change Password

You could change "PIN", "PIN2" and "Phone Lock Password".



Note:

*The length of password must be more than 4 digits and less
than 8 digits.*

14.7 Restore Factory Settings

Enter "Restore Factory Settings". You need input the correct phone lock

password, and press “OK” to restore factory settings.

15

USB Data Function

15.1 Mass Storage

Mass storage indicates your mobile phone supports mobile storage.

- ◆ As the phone is turned off, connect your mobile phone with PC through USB data cable. In this case, your mobile phone can be used as U disk.
- ◆ As the phone is turned on, connect your mobile phone with PC through USB data cable. If the memory card is inserted, you could select Mass Storage.

15.2 Webcam

Your mobile phone supports webcam, which can be operated simply like USB webcams.

- ◆ As the phone is turned on, connect your mobile phone with PC through USB data cable. In this case, your mobile phone will display "Webcam".
- ◆ Select "Webcam", press "OK", and a full-screen camera interface will appear. This indicates your mobile phone could be used as webcam now.
- ◆ Your computer will detect new video devices. Up to now, you could use the camera like other USB webcams.
- ◆ Press End key or directly pull out the data cable to exit camera mode.

16 Input Methods

16.1 General Description

Your mobile phone supports handwriting input. The handwriting input methods include abc/ABC/ES/es Input method, 123 Input method and Symbol Input method.

Under handwriting input mode, you could enter the inputs in the following two ways:

- ◆ Use the handwriting pen.
- ◆ Click the virtual keypad.

16.2 Keypad Definitions

Virtual Keypad

Under the editing interface, click the icon at the bottom of the screen to switch the input method. You could use handwriting pen to input manually or click virtual keypad to enter. In this case, the current input method will appear at the left-up corner of the screen.

General Keypad

- ◆ Left Soft Key (LSK): Generally used to confirm.

- ◆ Right Soft Key: Generally used to return or clear.
- ◆ * Key: Generally used to switch different input method.
- ◆ Navigation Keys (left/right/up/down): Generally used to move the cursor or select the menu options or characters.

16.3 Descriptions of Input Methods

16.3.1 Handwriting Input Method

Adopting advanced character recognition technology, your mobile phone supports the handwriting of numbers and English characters. You could click the prompt bar above the editing interface to switch the input method. After the input method is selected, you could use handwriting pen to write message. After you input manually and pause for while, the recognized results will be displayed on the screen for you to select. If there is no character you want on the screen, you could click one of the selected.

16.3.2 ES Input Method

Spanish Input Method includes uppercase input and lowercase input.

1. Input Spanish letters.

Click the corresponding letters to input your desired word.

2. Click the screen to move the cursor.

3. Click to input space.

4. Click to delete the last input.

5. Click  to input European symbol.
6. Click  switch between capital and small letter.

16.3.3 English Input Method

English input method includes abc input method and ABC input method.

1. Input English letters.

Click the corresponding letters to input your desired word.

2. Click the screen to move the cursor.
3. Click  to input space.
4. Click  to delete the last input.
5. Click  switch between capital and small letter.

16.3.4 Number Input Method

1. Click the corresponding numbers on the screen to input your desired numbers.
2. Click  to input space.
3. Click  to delete the input number.

16.3.5 Symbol Input Method

Click  to open virtual keypad and select the corresponding symbols to input.

17

Appendix

17.1 Special Functions

As a type of multimedia mobile phone, your mobile phone not only supports the basic functions, but rich, practical, and quick multimedia functions as below:

Analog TV

You could use your mobile phone to watch TV.

E-book

Your mobile phone supports the display of txt format. You could browse your favorable books at any time.

SMS

Your mobile phone supports EMS, voice mail server and broadcast message.

MMS

Your mobile phone supports MMS, which enables you to send/receive messages that include multimedia objects (text, images, audios, etc.)

Email

Your mobile phone supports Email, which enables you to send/receive emails.

MP3

Support the audio formats including midi, mp3 and amr etc. You could make different settings under Equalizer to get different sound effect.

Sound Record

Your mobile phone supports talk record and non-talk record

Camera

Your mobile phone support camera function.

Video Player

Your mobile phone support video playing function.

Video Recorder

Your mobile phone support video recording function 。

Network Service

Your mobile phone support WAP service. You could get access to Internet through WAP browser to obtain as much information as you can.

Input Methods

Your mobile phone supports multiple input methods, which enable users to input Spanish letters , English letters, numbers, symbols, etc. Handwriting input function provides you with much convenience.

17.2 Shortcuts

lock the keypad

In idle mode, hold * key to quickly lock the keypad.

Unlock the keypad

In idle mode, press LSK and # key to unlock the keypad.

Navigation Keys

In idle mode, the default settings are as below: Press left key to enter "Multimedia", press right key to enter "Messages", press up key to enter "TV Application" and press down key to enter "Phone Book".

17.3 Clearance and Maintenance

- Please maintain your mobile phone with good care since it is delicately designed and manufactured. The following advice might help you extend the life of your mobile phone.

- Clean your mobile phone, battery and charger with a soft dry cloth.
- Do not clean your mobile phone with the liquor such as alcohol, dilution agent or benzene.
- Clean the socket from time to time because a dusty socket might cause disconnection, power failure, or even charging failure.
- Do not press keys with needles, pen points or other sharp objects to avoid damage or misoperation.
- Keep tiny metal objects such as thumb pins away from the phone receiver. The phone speaker is magnetic and thus magnetizes those metal objects, which may hurt people or damage the phone.
- Keep your mobile phone dry. Rain, moisture or any kind of liquid containing minerals might corrupt the circuit.
- Do not touch the mobile phone with wet hands because this might cause electric shock, which would hurt people or damage the phone.
- Don't use and put your mobile phone in a dusty or dirty environment because this might damage the phone components.
- Don't keep your mobile phone near high-temperature because it might shorten the life of electronic devices, damage the battery, twist or melt some plastic parts.
- Don't keep your mobile phone in a place where the temperature is too low, otherwise the water vapor would form inside the phone when the temperature rises up to normal degree, which would damage PCB of the phone.
- Don't put your mobile phone in or on the heating devices (microwave

oven, toaster oven or radiator) because overheating might result in explosion.

- The color of the waterproof label in the phone will be changed if the phone or battery gets wet. In this case, the warranty provisions will become void even if the warranty period doesn't expire.
- Please send your mobile phone to the nearest service center for inspection if there is anything wrong with your mobile phone, battery, charger or accessories. The service center staff will provide you help.

18

Failure Analysis

Symptoms	Possible Causes	Solutions
----------	-----------------	-----------

Unable to turn on the phone	Inadequate battery capacity	Charge the battery
	Poor contact	Reinstall the battery
Automatic power-off	Seriously poor battery capacity	Recharge the battery
Inadequate standby time	Decreasing of battery performance	Replace the battery
	Poor network signal	Turn off the phone as the signal is poor.
Unable to connect the network	Poor network signal	Move to other places
	Out of the service area	Make sure your phone is in network service area
Call drop	Poor network signal	Move to other places
Do not ring upon incoming calls	Set "Mute" or minimum volume.	Enter "User Profile" to set "Unmute" or check the ringing volume.
Prompt to input PUK	SIM card locked due to the continuous entering of wrong PIN code for three times.	Contact your network operator.
Unable to view some photos	Your phone doesn't support the photo format, or the size of photo is too big	Change the photo format or size

FCC Regulations:

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation.

●This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► RF Exposure Information (SAR)

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.807 W/kg and when worn on the body, as described in this user guide, is 1.1 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-I766.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.