

Content

Announcement.....	2
Precautionary Information.....	2
ChapterOne:Overview.....	4
1.1ProductOverview.....	4
1.2Back Overview.....	4
1.3PowerOnandOff.....	5
1.4EnterandExitStandbyMode.....	6
1.5HomeScreen.....	6
1.6LockandUnlockScreen.....	6
1.7StatusBar.....	7
1.8TextInput.....	8
1.9USBConnection(ConnectbetweenTablet&Computer).....	9
ChapterTwo:Internet&Bluetooth.....	9
2.1Wi-FiandNetwork.....	10
2.2Browser.....	11
2.3Bluetooth.....	12
ChapterThree:Applications.....	12
3.1Camera.....	12
3.2Gallery.....	13
3.3Video.....	14
3.4Music.....	14
3.5Calendar.....	15
3.6FileManager.....	16
3.7E-mail.....	17
3.8Download.....	18
3.9Clock.....	19
3.10Phone, People and Messaging.....	19
ChapterFour:SystemSettings.....	20
4.1InternetSettings.....	20
4.2SoundSettings.....	22
4.3DisplaySettings.....	23
4.4AppsSettings.....	24
4.5Date&TimeSettings.....	24
4.6LanguageandInputSettings.....	24

Announcement

Version (V1.0)

Our company may modify and change the content of this manual whenever necessary.

Please forgive for any error and omissions in this manual.

Please make the object as standard if contents in this manual are different from the object.

Precautionary Information

Please read carefully the precautions and operations shall be in accordance with the warnings, hints and instructions.

- Please turn off the power and remove the power adapter before cleaning your Tablet PC. Please do not clean the touch screen with any chemical cleaner.
- Connection of the power adapter shall be in accordance with the rated voltage and current input marks. Correct power adapter shall be used and please do not use any power adapter that not equipped by this product.
- Before turning on the Tablet PC, please carefully check if all the peripheral equipment of the Tablet PC is properly connected.
- Please turn off the power before installing or remove a peripheral device are not hot-pluggable.
- Please do not try to disassemble and check the Tablet PC. It may cause

trouble to your Tablet PC and lose corresponding warranty rights.

- Please keep the Tablet PC from direct sunlight to avoid advanced ageing of the electric components.
- Avoid using the Tablet PC in places with rising dust or in a dirty and untidy environment (dust may cause system failure).
- Please avoid placing the Tablet PC nearby the magnetic substance to avoid influencing the touch performance; please do not click the touch screen with nail or sharp articles; please do not click the touch screen or the keys with gloves on.

 
Please do not place the Tablet PC under over cold (below 5°C) or over heat environment (above 35°C), otherwise the Tablet PC may not be normally started and operated.

Please do not stuff any objects into the Tablet PC to avoid short-circuit of components or damage of circuit. Please do not splash any liquid on this product.

The charging period of the rechargeable battery is limited, and the battery may require changing someday. The client shall not change the battery by oneself, and only an authorized facilitator may change the battery.

Chapter One: Overview

1.1 Product Overview

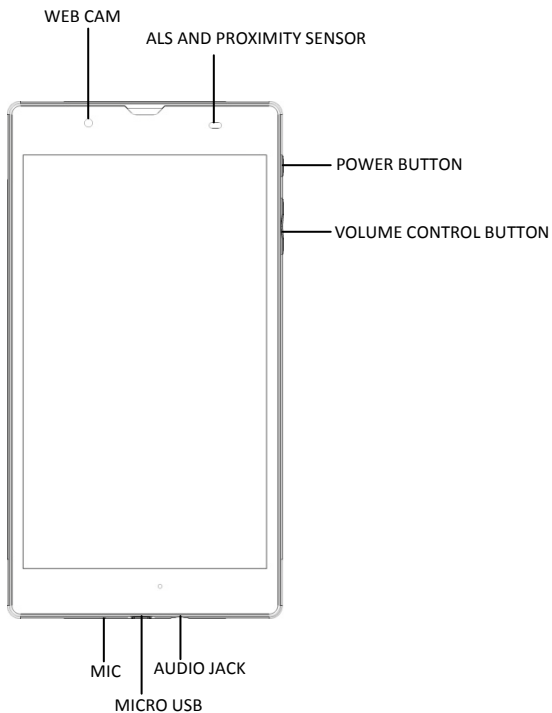


1.2 BACK Overview

➤ **Open cover**



Open cover by slot as picture shows.

 ➤ **Install cover**

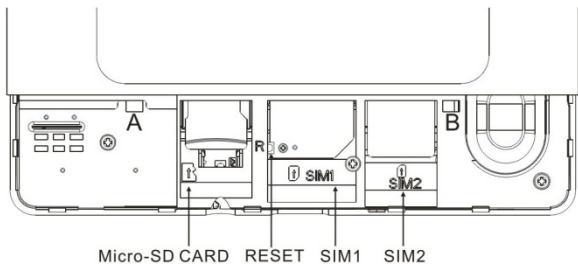

Install the cover in 45 degrees to point A and B as picture shows, press to fasten.

*Please turn off tabletPC , before installation or removal of micro-SD card or SIM card .

➤ **Reset**

Pin and hold the reset button on the side of the device for 3 seconds to start and reset the system.

1.3 Power On and Off

Power on

Press and hold the power button (see Product Overview image) for 2-3 seconds, and the system will begin to boot. While the unit is off and charging, press the power button to see a charging notification.

1.4 Enter and Exit Standby Mode

Enter standby mode

To save power while the unit is on but inactive, tap the power button to enter standby mode.

Exit standby mode

While the unit is in standby mode, tap the power button to resume activity.

1.5 Home Screen

Add application shortcuts: Press and hold an application icon from the Application list and drag the icon to the home screen to add as a shortcut.

• **Remove application shortcuts:** Press and hold an application icon in the homescreen at the top of the screen displays an “X”. Drag the application icon toward the “X” until it turns red, and then release the hold to remove the application shortcut.

1.6 Lock and Unlock Screen

Lock

You may set an idle time frame after which the unit automatically enters standby. The system will sleep and the screen will lock if it is inactive for the set amount of time.




Unlock

Move the  icon to unlock the unit, as shown below.

1.7 Status Bar

The status bar is located at the bottom of the screen and on the upper right corner.



- Back : Tap to return to previous screen.
- Home : Tap to return to home screen.
- History : Tap to view the most-recently accessed applications.

The icons on the right side of status bar display Wi-Fi signal, Wi-Fi connection status, battery power/battery charging status, USB and SD card connection status.

1.8 Text Input

When using the tablet, you may use its virtual keyboard to enter text, numbers and symbols.

olsdirectlybytouchingthescreen.Aftertappingintoatextinputarea,thedefaultkeybo
ardwillappearasshown below:

Toalternatebetweennumbersandletters,press

7123

Toalternatebetweenuppercaseandlowercaseletter,press

 


1.9 USB Connection (Connect between Tablet&Computer)

Whenconnectingthetablettoyourtablet

PCviaethein-boxUSBcable,click**TurnonUSBstorage**toconnectyourdevices.The
deviceofyourtabletsouldthenappearonyourPCunderMyComputeras“ZTE”.

TurnoffUSBstoragetodisconnectyourtabletfromthePC.

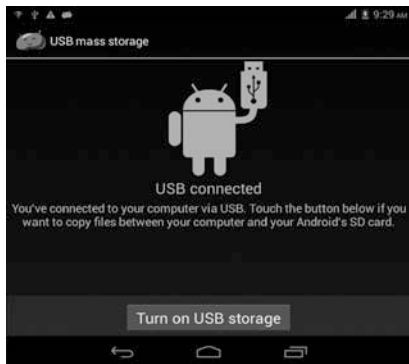

ChapterTwo: Internet& Bluetooth

2.1 Wi-Fi and Network

Network support is needed to use the web browser. If you experience any network problems, please contact your wireless service provider.

Click



to enter Settings. Turn on Wi-Fi and find your wireless network. Sign in with your Wi-Fi password. Once connected, Wi-Fi connectivity icon will be shown at the right side of toolbar. You may also click **[+] Add network** to manually input your wireless network if it does not appear on the list, but is within range.



Other Wi-Fi Options

Tap the Advanced



icon on the upper-right corner of the screen to display advanced options and other network information.

When the **Network notification** option is checked, the system automatically scans


and displays available networks within range. If it is unchecked, you must tap **SCAN** to manually scan for nearby networks and tap **ADD NETWORK** to manually do so.





2.2 Browser

 
From your Application list, click  to open the web browser.

Touch the URL input area to display the soft keyboard to type site address.

Click  to add site to Bookmarks

Click  to add new browser tab


Click  to close the browser tab

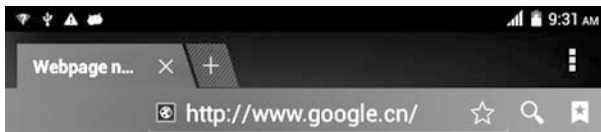

2.3 Bluetooth



 Click to open the Bluetooth.

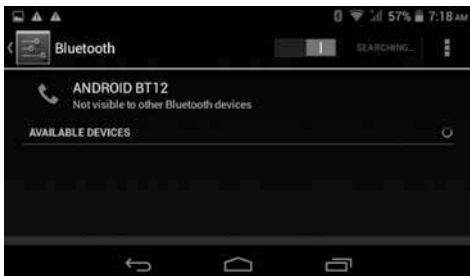

ChapterThree:Applications

3.1Camera






Click to enter the camera app.






CameraMode

Click  to take a picture.

Click  to set  white balance and  scene mode.

 
VideoMode

Click  to enter video mode. Press the red button to record.


Click  to set  white balance and  scene mode.

3.2 Gallery

Click 

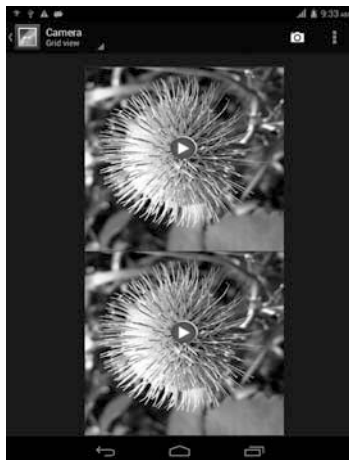


to view all pictures saved onto the tablet.

Click  to display the pictures by different modes.


Click  to enter Camera mode. Click  to choose an album to edit or delete.

 
3.3 Video

Click  to open the video player.





You may adjust video play settings on the bottom menu bar by slightly tapping the screen while playing.

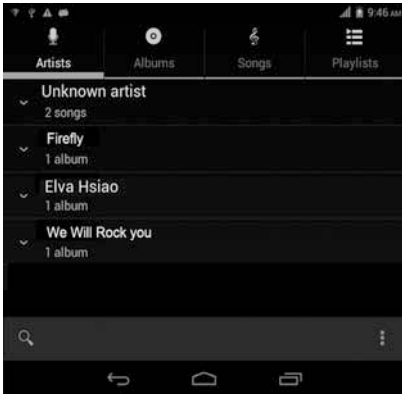
3.4 Music

From your application list, click  to open the music player. This song list may be displayed alphabetically by artist name, album name, or song title.



Click on a song to play it.

 -  Playlist
-  Random Play (Shuffle)
-  Repeat
-  LRC

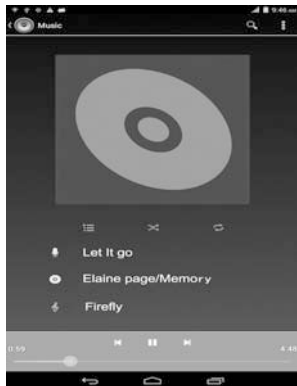

3.5 Calendar

From your Application list, click  to open the calendar.

On your first time entering the calendar interface, it will remind to add your Google account, which facilitates more options. If you do not need to set it, click **Later**.

DateView: Press and hold to an event to view, edit, or delete it. Press and hold a blank area to add a new event.

WeekView: Press and hold to an event to view, edit, or delete it. Press and hold a blank area to add a new event.


MonthView: Click on a date, then press and hold to an event to view, edit, or delete it. Press and hold a blank area to add a new event.

 
Agenda: Lists all saved events. Click to read details.

Touch the “Today” icon at any time to return to the current date.



3.6 File Manager

From your Application list, click  to view and edit your files. It allows you to manage/edit all your document files within the

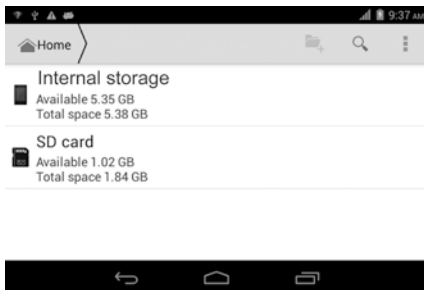


Internal storage and external SD card.

3.7 E-mail

Network support is needed to use E-mail. If you experience any network problems, please contact your wireless service provider.

 Addaccount

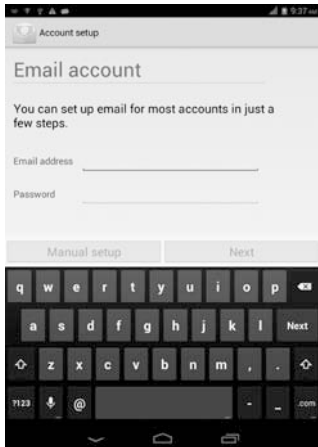


Upon your first time entering the E-mail app, you will be asked to set up an E-mail account. To add more accounts after set-up, click **Settings** on the top right corner of the page, then select **Add account**.

Compose E-mail

From the inbox, you can click  on the top of the screen to compose an E-mail.

 
Enter the recipient's E-mail address on the "To" address line, then proceed to fill in the subject and E-mail content.

Add Attachment

To add attachment(s) while composing an E-mail, click on the  on the top right corner of the screen. Select **Attach file**.

Reply and Forward

To forward or reply to an E-mail, open the message to find a blue menu bar next to the Sender's name and E-mail address. Click **reply** , **reply all** , or **forward**  to perform those functions.

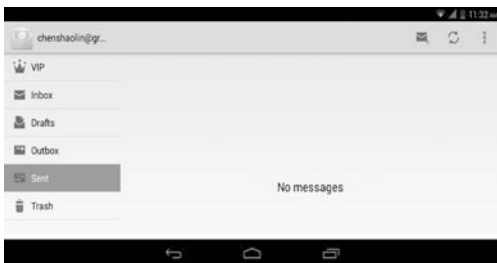

3.8 Download

click  to see all



downloadeditemsandin-progressdownloads.

Click next to an item, then click  to delete its contents.

3.9 Clock

From your Application list, click 

to enter the clock interface.



 
Under the time and date, click **Set alarm** to add an alarm.

3.10 Phone, People and Messaging



From your Application list, click  to enter the Phone interface.

From your Application list, click  to enter the People interface.

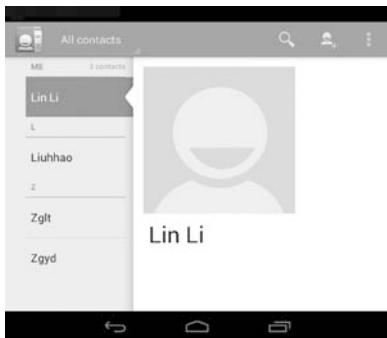


From your Application list,

click  to enter the Messaging interface.

 


ChapterFour:SystemSettings

Click  to enter the system settings interface.



4.1 Internet Settings

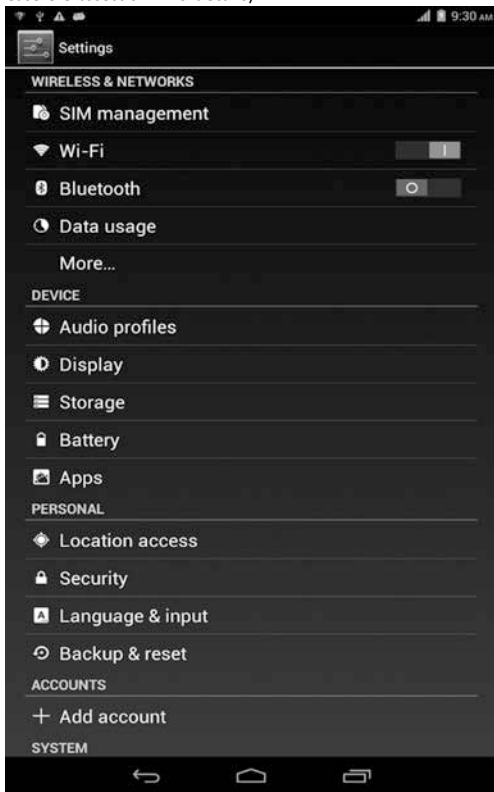(Please refer to section 2.1 for details)



4.2 Sound Settings

In Sound settings, you may adjust the volume of notifications/alarms, choose the default notification ringtone, as well as mute all sounds.

Click , choose  **Audio profiles** and enter setting as below to adjust "Volumes".

4.3 Display Settings

Display settings include: Brightness, Wallpaper, Sleep and Font Size

Brightness

Adjust the brightness of the screen by sliding left or right.

Wallpaper

Change the wallpaper on your home screen by selecting an image from available galleries.

Sleep

Adjust idle time before the screen locks and the tablet enters standby mode.

Font size

Set system font size with four options: Small, Normal, Large, Huge.

4.4 Apps Settings

Application management

The tablet's apps are listed here by category, under **Downloaded**, **Internal storage**, **Running**, and **All**. Click an app to see more details and options, such as **Force Stop**, **Disable**, **Uninstall**, **Clear Data**, and **Clear Cache**.

Running

In this setting, you can force stop some programs that are running on the background to save battery.

4.5 Date & Time Settings

You may select **Automatic Date & Time** while connected to the Internet, or choose to manually input the correct date and time. You may also change the display format.

4.6 Language and Input Settings

Language

Choose the system display language among different options. Select **Spelling Check** to enable the system to correct spelling errors.

Android keyboard

Tap the Settings icon next to “Android keyboard (AOSP)” to configure the Android keyboard settings, such as auto-capitalization, sound, etc.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device

types ZTE K70(FCC ID:SRQ-K70) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product

certification for use when properly worn on the body is 1.194 W/kg and for head is 0.318 W/kg. Simultaneous RF exposure is 1.580W/Kg.

. This device was tested for

typical body - worn operations with the back of the handset kept 5mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that

maintain a 5mm separation distance between the user's body and the back of the

handset. The use of belt clips, holsters and similar accessories should not contain

metallic components in its assembly. The use of accessories that do not satisfy these

requirements may not comply with FCC RF exposure requirements, and should be

avoided.