

Tablet User Manual

The manual is applicable for the K85.

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

The Bluetooth word and logos are registered trademarks of the Bluetooth SIG, Inc., and any use of such marks by ZTE Corporation is under license.

Google, Android, Android Market, Google Mail are trademarks of Google, Inc.

Other trademarks and trade names are the property of their respective owners.

Third-party Software Statement

When you install the software from a third-party, the tablet might be restarted repeatedly or the software might not be used normally due to the incompatibility of the software itself. It is not the fault of the tablet itself.

Version 1.0 in May 2015

Using your tablet


Thanks for choosing the K85. Powered by Android™, the tablet supports 3G high-speed Internet access, which brings you brand new experiences.

Don't worry if the pictures we use to demonstrate your tablet's functions look a little different from what you see on the screen. It's the functions that matter.

Before getting started


Inserting and removing the SIM

1. Switch off your tablet and disconnect any external power.
2. Remove the back cover.
3. Hold your SIM on the cut corner, and slide it face down into the card holder.
4. Replace the back cover.

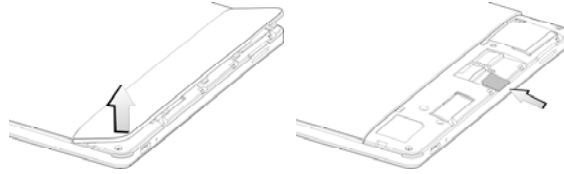

Inserting a memory card

1. Remove the back cover.
2. Push tightly until the card is installed in the correct position and replace the back cover.

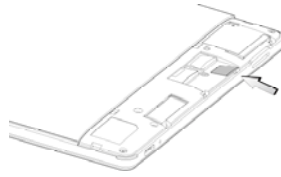

Charging the battery

The battery is not fully charged when you unpack it for the first time. Please exhaust the capacity of the battery before you recharge it for the first time. To ensure the battery is always in its best condition, please charge the battery 8 hours for the first time and recharge it later at least 2 hours each time.

1. Connect the charger to the tablet, and insert the charger to the standard power socket.
2. Please disconnect the charger from the power socket after the charging is completed.




Tips:

- To charge the battery, you can also connect the tablet to the PC through the USB cable.

- During charging, the tablet and charger may normally become hot.



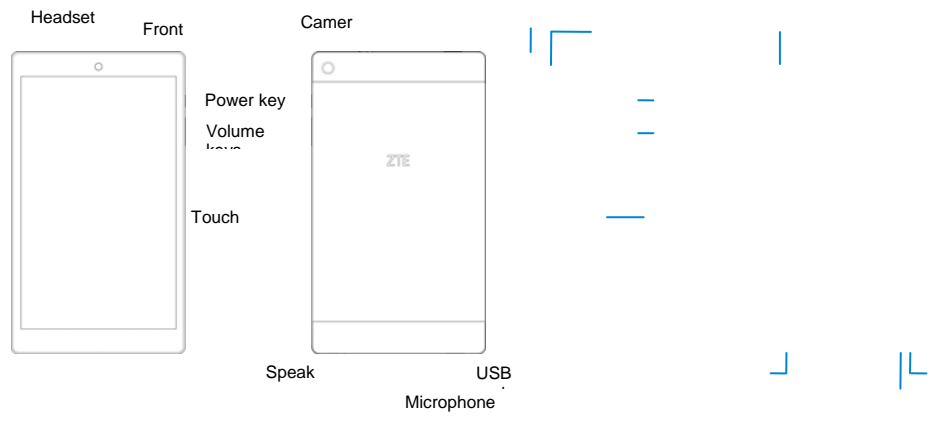







Getting to know your tablet



Descriptions of Keys

Keys	Functions
Menu key	Touch it to open a menu with items that affect the current screen or application.
Home key	Touch it to open the home screen. If you're viewing the left or right extended home screen, Press it to open the central home screen.
Back key	Touch it to open the previous screen you were working in. If the onscreen keyboard is open, touch it to close the keyboard.
Power key	Press it to turn on/off the display. Long press it to open a menu with options for Airplane mode, for Silent mode, for Vibration mode, and for powering off and for rebooting the tablet.
Volume keys	Adjust the volume. Long press it to quickly adjust the ring tone volume to maximum or minimum.

Onscreen icons

Icon s	Descriptions	Icon s	Descriptions
	Full battery		Charging
	You have an unread E-mail.		Music playing
	Alarm clock on		Airplane mode
	Vibration mode		Silent mode
	Wi-Fi function on		Bluetooth [®] function is on

Power on/off

Powering on

Long press the **Power key** until the power-on animation appears.

Powering off

Long press the **Power key** to display the tablet options and select **Power off**.

Screen Control

You can control your tablet through a series of operations on the screen.

- **Tap:** tap once on an item on the screen to select it or open whatever you tap.
- **Slide to scroll:** slide your fingers on the screen to move through what's on the screen.
- **Press & hold:** press your finger down and leave it there for a few seconds to open a menu specific to what you're doing.
- **Drag:** drag an item on the screen to perform certain operations.
- **Pinch or stretch:** In some applications (e.g., Gallery, Browser), touch the screen with two or more fingers, and then pinch your fingers together on the screen or stretch them apart to zoom out or in.

- **Rotate:** In most screens, rotate your tablet sideways to switch the screen from portrait mode to landscape mode.

Home screen

The home screen appears as the tablet is in idle mode. On the home screen, you can check the status of the tablet and access applications.

Extend home screen

The home screen can be extended to exceed the width of the screen to provide more space for newly added applications, shortcuts, widgets, etc.

Slide to scroll the home screen to move to the left or right side of the home screen.

Tap the small dot at the lower part of the screen to directly move to the corresponding screen. Press & hold the small dot area and drag to quickly start navigation.

Quick Launch Toolbar

There are icons at the bottom of the screen. You can move the applications or shortcuts that you need access most frequently into the quick launch toolbar.

1. Press & hold an icon at the toolbar and drag it to the area outside the toolbar.
2. Press & hold another icon on the screen you want to move, and then drag it to an empty area inside the toolbar.

Show/hide notification bar

As a new notification icon appears in the notification bar, you can pull down the notification bar to view the list of notifications, and touch a notification to perform detailed operation.

Swipe up from any place on the screen to hide the notification bar.

Move icons on home screen

To move an icon on the home screen, press & hold the icon you

want to move, drag it to your desired position on the screen and release it. Drag the icon to the navigation bar to quickly switch to other screen.

Press & hold the icon you want to move and release it, the icon shall jump to the bottom of the screen; slide left or right to the target screen, and touch the icon at the bottom of the screen to jump to the target screen.

Delete icons on home screen

To uninstall an application or remove a widget, press & hold the Application or Widget icon and drag it to the Remove/Uninstall icon at the top of the screen.

Note:

The preinstalled system applications cannot be removed.

Change desktop wallpaper

On the home screen, press **Wallpapers** to choose a wallpaper.

Use shortcuts panel

On the home screen or in the process of using an application, pull down the notification bar to open the shortcuts panel. Touch the shortcuts icons to perform relevant settings.



Create a folder and add items into the folder

1. On the home screen, press & hold an icon and drag it to another icon on the screen to create a folder containing these two icons.
2. Press & hold other icons and drag them to the folder to add items into the folder.

Arrange Icons

On the Home screen, press and hold an empty area to select "Arrange Icons" and touch the icons you want to arrange to move them to the bottom of the screen.

Swipe right to the target screen and touch the icons at the bottom of the screen to move to the target screen.

Touch  to add a new screen and touch  to set the current screen as the Home screen.

Lock and unlock the screen

Lock the screen

As the tablet is powered on, press the **Power key** to lock the screen. The tablet shall automatically lock the screen after it's not used for a while.

Lockscreen photo

As the screen is locked, press the **Power key** to light up the screen.

Unlock the screen

1. Press the **Power key** to light up the screen.
2. Swipe up from the bottom of the screen to the icon **Unlock** to unlock the screen; slide right to the icon **Camera** to directly enter the camera interface.

Change screen lock method

1. On the home screen, press **Settings**> **Security & location** >

Screen lock.

2. Choose the screen lock method.

Text Input

Your tablet supports the Google™ voice typing input method.

On the home screen, touch the **Settings >More >Language & input**. Look under **Default** to select Google voice typing input method.

Google voice typing

You can use voice input to type text. This feature uses Google's speech-recognition service, so you must have a data connection on a mobile or Wi-Fi network to use it. You can continue entering text, keep it, or delete it. You can speak to enter text in most places where you can enter text with the onscreen keyboard.

1. Touch a text field, or a location in text you've already entered in a text field.
2. Touch the Microtablet key on the onscreen keyboard.
3. When you see the microtablet image, speak what you want to be typed.

safety information

Using your tablet safely



On the road

- Using a tablet while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Near sensitive electronics

- Don't use your tablet near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

- For more information about how your tablet affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.


- Your tablet may cause interference when used near TVs, radios or automated office equipment.



While flying

- Your tablet can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline

personnel ask you to switch off your tablet, or disable its wireless functions, please do as they say.

 **In hospital**

- Your tablet may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.

 **At a petrol station**

- Don't use your tablet at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

 **Around water**

- Keep your tablet away from water (or any other liquid). It's not a waterproof model.

 **Making repairs**


- Never take your tablet apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.

 **Broken antenna**


- Don't use your tablet if the antenna is damaged, as it could cause injury.

 **Around children**

- Keep your tablet out of children's reach. It should never be used as a toy and it might not be good for their health.

 **Original accessories**

- Only use the original accessories supplied with your tablet or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of tablets, or even cause injury.

 **Near explosives**

- Turn off your tablet in or near areas where explosive materials are used. Always obey local laws and turn off your tablet when requested.

 **Emergency calls**

- To make an emergency call your tablet must be turned on and in an area where there's network coverage. Dial the national

emergency number and touch the Send icon. Explain exactly where you are and don't hang up until help has arrived.



Working temperature

- The working temperature for the tablet is between 0°C and 40°C. Please don't use the tablet outside the range. Using the tablet under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a tablet can damage your hearing.

Battery care and safety

- Although the battery is rechargeable, it'll eventually start to lose its ability to recharge. If you find that the battery won't recharge, it's time to replace it.

- Please don't throw old batteries into your household rubbish. You'll find there are special bins for batteries at refuse collection points. And some high street electrical stores provide a battery recycling service too.

- Never throw the battery into a fire – it's highly inflammable and could explode, hurting you or somebody else.

- Never take the battery apart. This may result in leakage, overheating, explosion or fire.

- If the battery becomes hot, changes colour or shape at any time (when in use, charging or even while in storage) please stop using it immediately and replace.
- Keep the battery dry. Damp or wet conditions can cause it to overheat or corrode.
- Don't charge the battery continuously for 24 hours. Overcharging is not good for it.

Note:

Please avoid contact with the materials inside a damaged or leaking battery. If they get on your skin, wash with lots of water and seek medical assistance if required.

Charger care and safety

- Only plug into voltages between 110VAC and 240VAC. Using a voltage outside that range can damage the tablet/charger – and cause the battery to leak or catch fire.
- Never short-circuit the charger – this may cause electrocution, overheating or damage.
- Don't charge the tablet in direct sunlight or in an area where it's damp, dusty, or on a vibrating surface. And charging your tablet near – or on – a TV or radio could interfere with transmission.
- Don't use the charger if the power cable is damaged. It may cause a fire or give someone an electric shock.

- Keep water well away from the charger. If the charger does get splashed by water, or any other kind of liquid, immediately unplug it to avoid overheating, fire or electrocution.
- Don't take the charger apart. It could cause injury, give you an electric shock or catch fire.
- Never touch any charger, electric cable or socket with wet hands.
- Don't place heavy objects on the electric cable.
- If the cable is damaged, don't try to mend it yourself – it could cause a fire or electrocute you.
- Always unplug the charger before you clean it.
- When unplugging the charger, hold the plug itself, rather than pulling on the cable. A damaged cable can cause electrocution or fire.

Appendix

Care and maintenance

Your tablet is a delicate device. The following advice will help you to keep it looking good and performing well...

- Use a soft dry cloth to clean your tablet, battery and charger. Don't use liquids such as alcohol, dilution agents or benzene.
- From time-to-time, clean the socket where the charger cable connects to the tablet. Dust tends to gather there. This will ensure a really good connection.

- Don't use needles, pen points or other sharp objects on the keypad or screen.
- Don't use your tablet with wet hands – it could injure you and damage the tablet.
- Don't use your tablet in dusty or dirty environment.
- Keep your tablet away from extremes of heat – like radiators or ovens. It may explode if it gets too hot.
- If your tablet gets wet and the colour of the label on it changes, the warranty will be void, even if the warranty period hasn't expired.
- If there's anything wrong with the tablet, battery, charger, or any accessory, please send them to your nearest service centre for inspection.

Health and safety

▶ RF exposure information (SAR)

This mobile tablet meets the government's requirements for exposure to radio waves.

This tablet is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 1.6 watts/kilogram (W/kg) averaged over 1 gram of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over

one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.334 W/Kg.

(Body-worn measurements differ among tablet models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various tablets and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model tablet with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model tablet is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: SRQ-K85.

For body worn operation, this tablet has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 0mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the tablet at the ear, position the handset a minimum of 0mm from your body when the tablet is switched on.

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

This device complies with Part 15 of the FCC Rules and with RSS-247 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications made to this equipment not expressly approved by ZTE Cooperation may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-
- This Class B digital apparatus complies with Canadian ICES-003.
 - Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT NOTE:

IC Radiation Exposure Statement This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance 0mm between the radiator & your body. The highest SAR value is 1.334 W/kg for the model tablet as reported to the IC.

IC: 5200E-K85

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Declaration of RoHS compliance

We're determined to reduce the impact we have on the environment and take responsibility for the earth we live on. So this document allows us to formally declare that K85, manufactured by ZTE CORPORATION, fully complies with the European Parliament's RoHS (Restriction of Hazardous Substances) Directive 2002/95/EC, with respect to all the following substances:

- (1) Lead (Pb)
- (2) Mercury (Hg)
- (3) Cadmium (Cd)
- (4) Hexavalent Chromium (Cr (VI))
- (5) Polybrominated biphenyl (PBB)
- (6) Polybrominated diphenyl ether (PBDE)

Our compliance is witnessed by written declaration from our suppliers. This confirms that any potential trace contamination levels of the substances listed above are below the maximum level set by EU 2002/95/EC, or are exempt due to their application.

The K85 manufactured by ZTE CORPORATION, meets all the requirements of EU 2002/95/EC.

Disposal of your old tablet



1. When the wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from normal household waste via designated collection points provided by government or local authorities.
3. The correct disposal of electrical and electronic products will help protect the environment and human health.