

MF97V

User Manual

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



microSDHC Logo is a trademark of SD-3C, LLC.



Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

 
Other trademarks and trade names are the property of their respective owners.

 
Version No.: R1.0

 
Edition Time: January 7, 2015

Manual No.:

Getting to Know Your MF97V

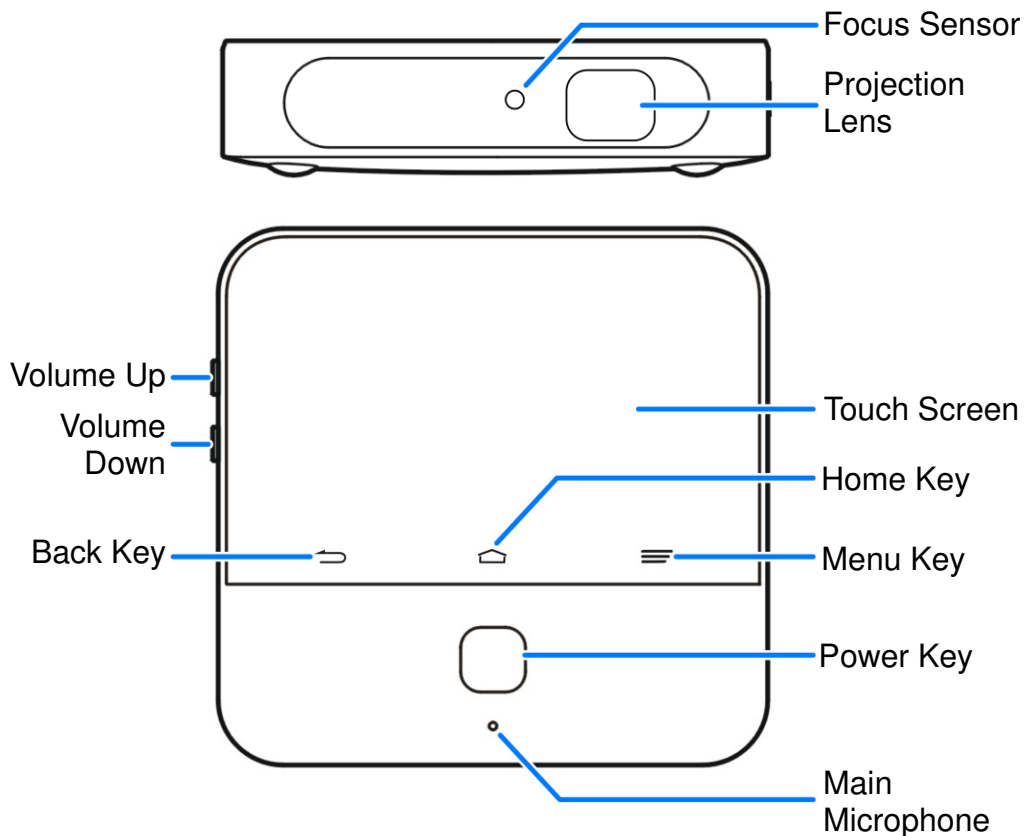

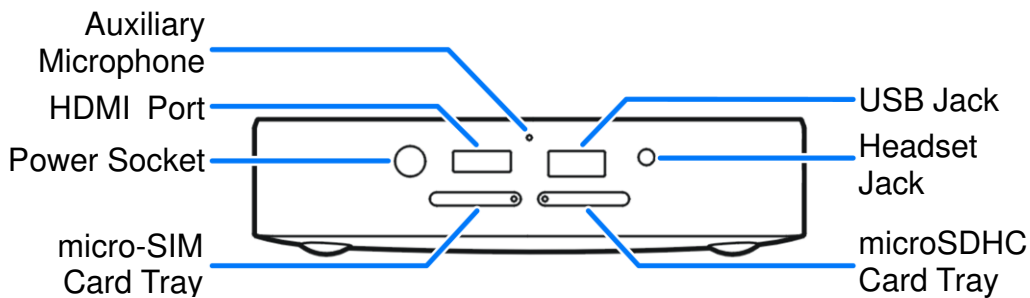

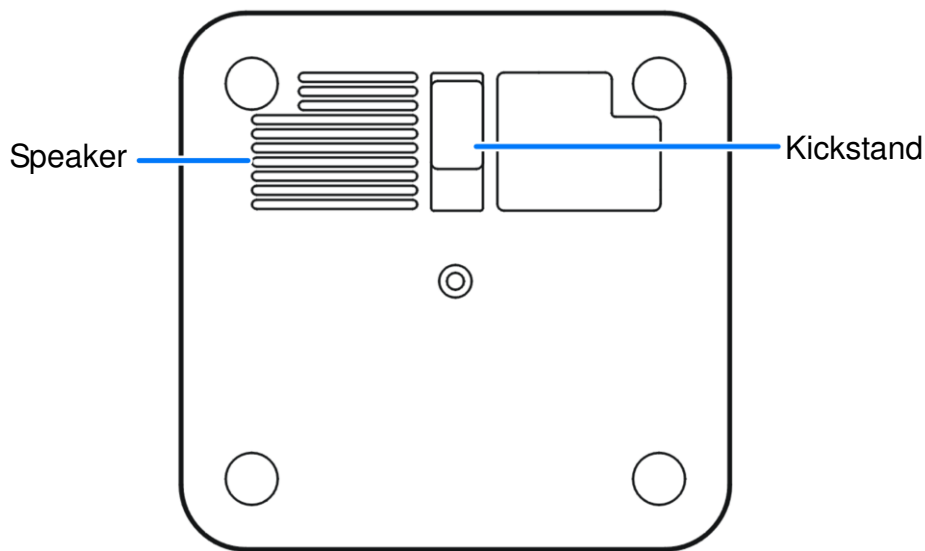

Projection Lens

Project the display on a surface.



WARNING!

Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on as this may cause injury to the eyes.

Focus Sensor

Analyze the clarity of the projected image in order for the projector to adjust its focus automatically.

Back Key

Touch to go to the previous screen.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to open the Google app.

Menu Key

- Touch to get the options for the current screen.
- Touch and hold to see recently used apps.

Power Key

- Press and hold to enable or disable airplane mode, sound, or vibration, power off or restart your MF97V.
- Press to turn off or on the screen display.

Volume Up/Down Key

Press or hold to turn the volume up or down.

Main Microphone / Auxiliary Microphone

Transmit your voice. The auxiliary microphone is useful for canceling ambient noise.

Ventilation Port

Exhaust the hot air when the projector is on.

 


WARNING!


Do not place anything near the ventilation port as this may cause internal heat buildup. Do not place your hand near the ventilation holes as this may cause injury.

Installing the micro-SIM Card

1. Insert the end of a small paper clip or other eject tool into the hole on the micro-SIM card tray and take the tray out of the slot.

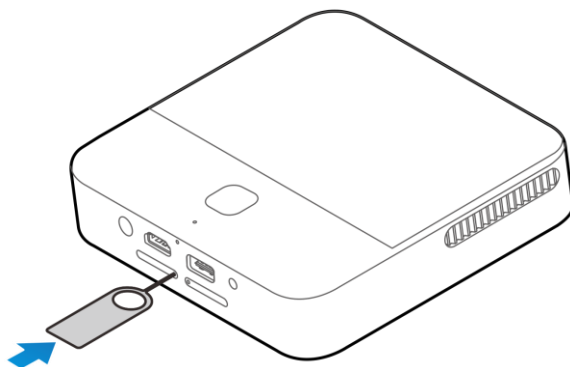

 
2. Place the micro-SIM card on the tray as shown and carefully install the tray back.

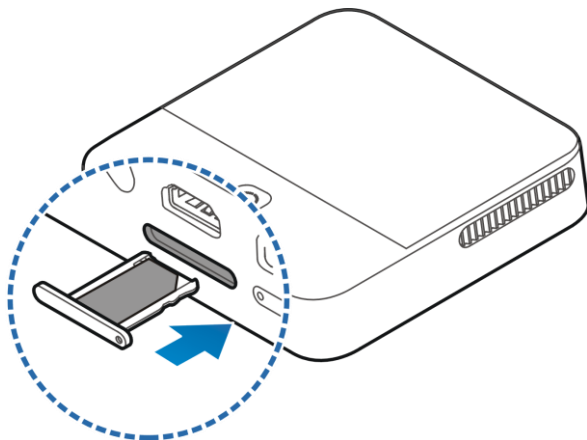


Installing the microSDHC™ Card (Not Included)

A microSDHC card can be installed or removed while MF97V is turned on. You need to unmount the microSDHC card before removing it.

 1. Insert the end of a small paper clip or other eject tool into the hole on the microSDHC card tray and take the tray out of the slot.

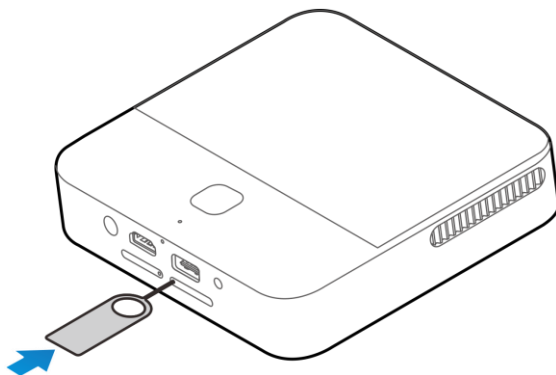

 2. Place the microSDHC card on the tray as shown. Then carefully install the tray back.

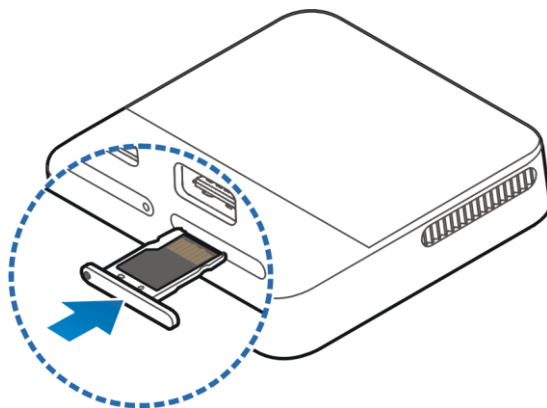

NOTE:

Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

Charging the Battery

Your MF97V's battery should have enough power for it to turn on. You should fully charge the battery as soon as possible.



WARNING!

 
Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your device or cause the battery to explode.



CAUTION:

Do not remove or change the built-in rechargeable battery in your device by yourself. The battery can only be changed by ZTE or ZTE authorized service provider.

1. Plug the AC adapter into the power socket on your MF97V and then plug the AC adapter into an electrical outlet.

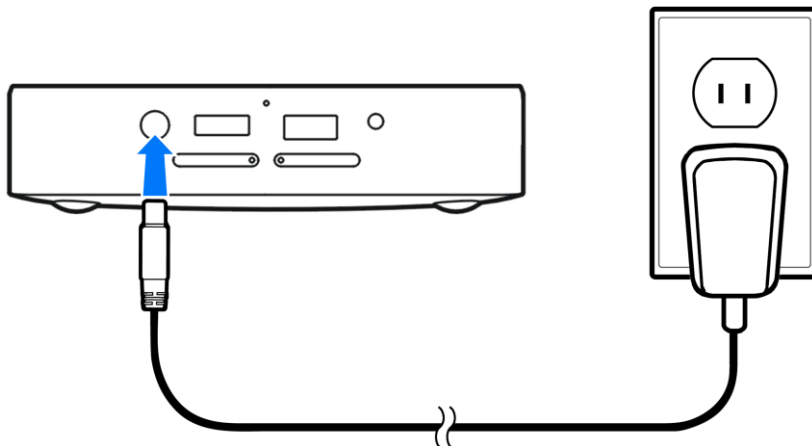

2. Disconnect the adapter when the battery is fully charged.

 NOTE:

If the battery is extremely low, you may be unable to power on the device even when it is being charged. In this case, try again after charging the device for at least 20 minutes. Contact the customer service if you still cannot power on the device after prolonged charging.

Powering On/Off

Ensure that the battery is charged.

- Press and hold the **Power Key** to turn on your MF97V.
- To turn it off, press and hold the **Power Key** to open the options menu.

Touch **Power off** and then touch **OK**.

Restarting Your Device

If the screen freezes or takes too long to respond, try pressing and holding the **Power Key** for about 10 seconds to restart MF97V.

Waking Up Your Device

Your MF97V automatically goes into sleep mode when it is not in use for some time. The display is turned off to save power and the keys are locked to prevent accidental operations.

You can wake up your MF97V by turning on the display and unlocking the keys.

1. Press the **Power Key** to turn the screen on.
2. Touch and hold the screen.



NOTE:

If you have set an unlock pattern, a PIN or a password for your device, you'll need to draw the pattern, or enter the PIN/password to unlock it.

Turning On/Off the Projector

You can use the projector embedded in your MF97V to project the display

onto large surfaces.

1. Slide down the status bar at the top of the screen.
2. Touch **Projector** to turn the projector on or off.

Using the Touch Screen

Your MF97V's touch screen enables you to control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.



- Touch and Hold

To open the available options for an item (for example, a link in a web page), touch and hold the item.



 
- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




- Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

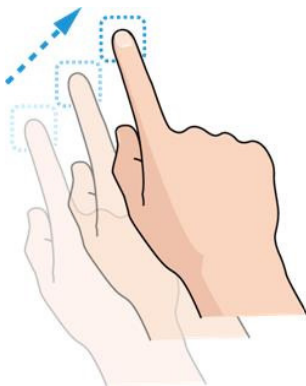

- Pinch

 In some apps (such as Maps, browsers, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

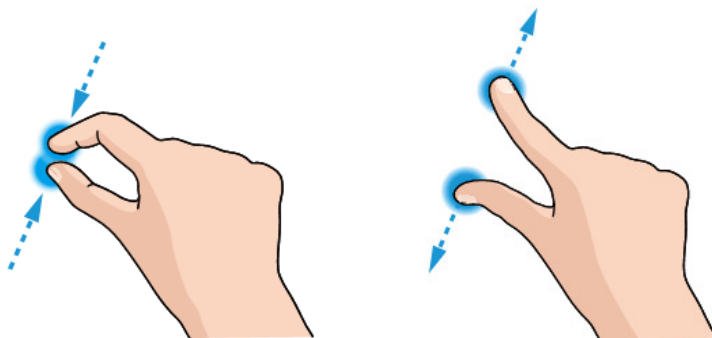

- Rotate the screen

For most screens, you can automatically change the screen orientation from landscape to portrait by turning the MF97V sideways.

Projecting a File Saved in Your MF97V

You can project a file stored in your MF97V.

1. Open the file you want to project.
2. Turn on the projector.
3. Adjust the projection distance and place the MF97V on a flat surface.

 


NOTE:

For best results, project onto a flat screen at a 90° angle to the floor.
When you want to finish the projection, turn off the projector.

Projecting an HDMI Source

You can project an HDMI source when connecting your MF97V to a laptop or TV box.

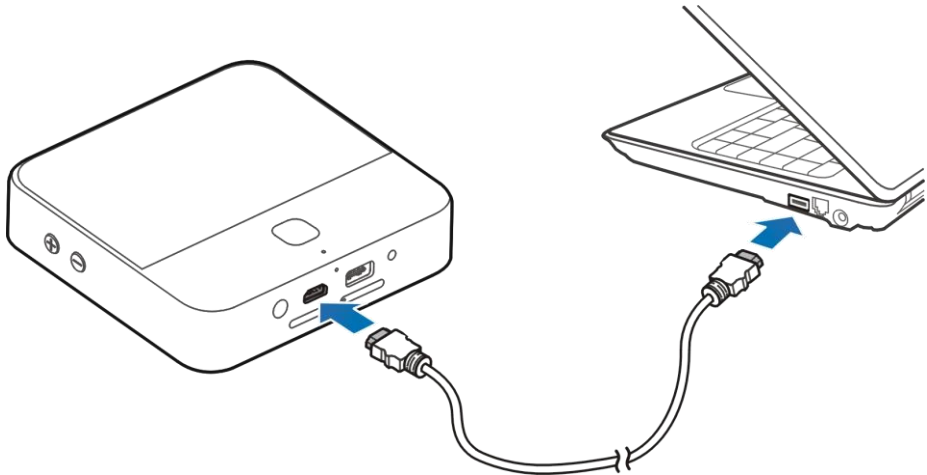


1. Connect your MF97V with the laptop or TV box via the supplied HDMI cable.
2. Turn on the projector.

3. Slide down the status bar at the top of the screen and touch **HDMI**.
4. Operate your laptop or TV box to select the content you want to view.

Projecting a File Saved in Your USB Flash Drive

 You can project a file stored in the USB flash drive.

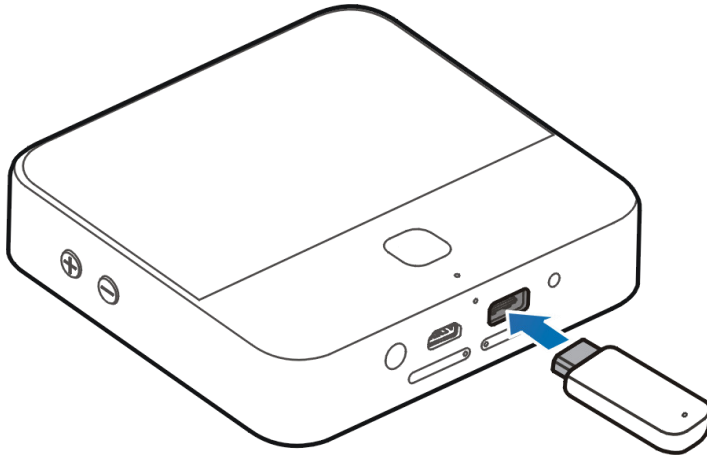

1. Connect your MF97V with the USB flash drive via the USB jack.
2. Touch the **Home Key > APPS** tab > **File Manager**.
3. Touch **USB DEVICE** to open the file you want to project.

4. Turn on the projector.

 
 


NOTE:

Before connecting your MF97V with the USB flash drive, slide the status bar down to open the notification panel and ensure that the **Connect to PC** option is not highlighted.

Projecting a Source on Your Phone (Wi-Fi Display)

You can display the content of your phone on your MF97V with a wireless link.

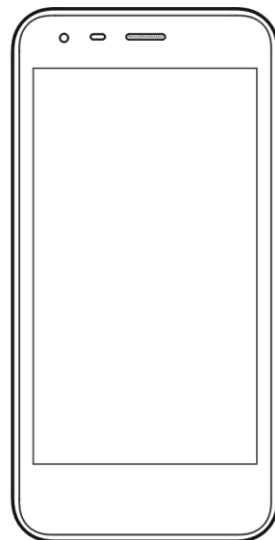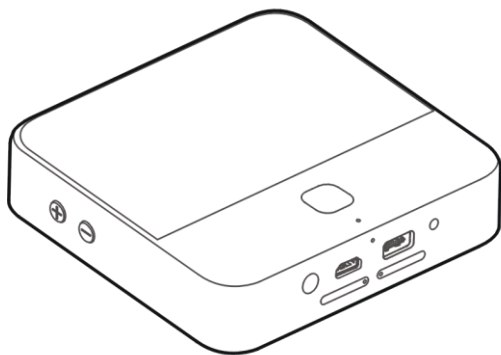

1. Turn on the projector.
2. Slide down the status bar at the top of the screen and touch **Miracast**.
3. Open a Wi-Fi display application on the phone to scan for available devices within range.
4. When you see the name of your MF97V displayed in the available devices section, touch the name. The phone then automatically tries to pair with your MF97V.
5. Touch **Accept** on your MF97V. After successful connection, the contents in the phone will be displayed on the projector.
6. Choose the content you want to display.

For Your Safety

General Safety

	Small parts may cause choking.		Don't use at gas stations.
	Your device can produce a loud sound.		Your device may produce a bright or flashing light.
	Avoid contact with anything magnetic.		Don't dispose of your device in fire.
	Keep away from pacemakers and other electronic medical devices.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Turn off when asked to in hospitals and medical facilities.		Avoid extreme temperatures.
	Turn off when told to in aircrafts and airports.		Avoid contact with liquids. Keep your device dry.

	Turn off when near explosive materials or liquids.		Do not attempt to disassemble your device.
	Only use approved accessories.		

FCC RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless employs a unit of measurement known

as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-MF97V.

For this device, the highest reported SAR value for near the body is 0.79 W/kg.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

SAR compliance for body operation is based on a separation distance of 10 mm between the unit and the human body.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using this device while driving can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your device and any consequences of its use.

You must always switch off your device wherever the use of your device is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and projection lens clean. Unclean screen or projection lens may slow down the device's reaction to your operations

or lower projection image quality.

- Clean your device and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your device or its accessories to open flames or lit tobacco products.
- Do not expose your device or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device or its accessories, only authorized personnel can do so.
- Do not expose your device or its accessories to extreme temperatures, minimum 23 °F and maximum 104 °F (minimum – 5 °C and maximum + 40 °C).
- Do not place your device inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your device may be damaged.
- Please check local regulations for disposal of electronic products.

Children

Do not leave your device and its accessories with your young children alone. The device is not a toy. They might accidentally damage the device. The projection light may cause discomfort to them or others without parents' direction.

The device contains small parts that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your device for a long time.

Air Bags

Do not place a device in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Seizures/Blackouts

The device can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, you can

use your device in a well lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your device:

- Do not grip the device too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Predictive Text.
- Take lots of breaks to stretch and relax.

Loud Noise

This device is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Device Heating

Your device may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Faulty and Damaged Products

Do not attempt to disassemble the device or its accessory.

Only qualified personnel can service or repair the device or its accessory.

If your device or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturer to determine if operation of your device may interfere with the operation of your medical device.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker. To achieve this, do not use this device near your pacemaker and do not carry it near the breast.

Hearing Aids

People with hearing aids or other cochlear implants may experience

interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Equipment

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft.

Interference in Vehicles

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of your device in their vehicles.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs

to turn off wireless devices such as your device or other radio equipment. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.