

ZTE T760
WCDMA/GSM Mobile Phone
User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Copyright © 2011 ZTE CORPORATION.

Version No.: R1.0

Date : 2011.11.02

Contents

ZTE T760	1
Contents	3
Security	6
Operational Precautions	6
Mobile Phone	6
Precautions for Potentially Explosive Atmospheres	7
Precautions for Electronic Devices	7
Safety and General Use in Vehicles	7
Aircraft Safety	7
Battery use	8
SAR	错误! 未定义书签。
Adapter use	8
Overview	9
Keys Functions	9
Technical parameters	9
Status and Notification Icons	10
FCC Compliance	11
Health and safety information	11
Starting up	11
Installing SIM card	12
Installing memory card	12
Install and remove the battery	12
Charging the battery	13
Powering your phone on/off	14
Switch to sleep mode	14
Waking up Your Phone	14
Touch Control	14
Phone Calls	17
Making Calls	17
Calling from the phone	17
Calling from the contacts	17
Calling from your call history	17
Calling from a Text Message	17
Dialing an emergency numbers	17
Dialing international numbers	17
Receiving Calls	17
Rejecting a Call	17
Ending a Call	17
Call settings	17
Contacts	17
Adding a new contact	18
Adding contacts to collect	18
Searching for a Contact	18
Edit a contact	18
Delete contact	18
Text input	18
Replying message	19
Forward the message	19
Delete messages:	19
Messaging settings	19
E-mail	20
Sending E-mail	20
Reply or forward E-mail	20
Getting Connected to the Internet	20
Turn on/off blue tooth	21
Bluetooth Settings	21
Connect Bluetooth with other device	21
Portable WLAN	21
Starting portable WLAN	21
Turn off WLAN	21
Camera	21
Camcorder	21
Music	21
Video	22

Picture.....	22
Recorder.....	22
Basic Settings	23
Setting Date and Time	23
Display Settings	23
Language Settings	23
Mobile Network Services	23
Security Settings.....	23
Setting up Credential Storage.....	23
This lets you select applications to access secure certificates and other credentials.....	23
Tap Home Key >menu key > Settings > Security > secure certificates	23
Managing Your Device Memory.....	23
Managing Applications.....	23
Reset to Factory Settings.....	23
Clock	23
Calculator	24

About ZTE SMS anti-counterfeit

In order to safeguard the interests of ZTE mobile phone users , assure all the user purchase genuine ZTE product , avoid fake products to disrupt the ZTE mobile phone market, and make sure users enjoy high-quality national network ZTE phone service, ZTE Corporation hereby declared that,

Thank you for purchasing the mobile phone. The system will send a message to ZTE automatically if meet any requirements as follows:

SMS conditions:

- 1.Total talk time up to 15 minutes;
2. More than 5 hours continuous standby time and greater or equals to 3 times.
3. Any call for more than 5 minutes.

This security is effective to send message only one time. it will disappear after sending this security message. The Content of SMS is only used to identify the phone.

You have right to refuse the transaction.

If the transaction is successful and you don't mention not to pay for it which means that you accept the agreement, and agree to charge for the common message.

Basic Knowledge

Introduction

Thank you for purchasing ZTE products. Please read the user manual carefully in order to make the products in best condition.

Image shown here is indicative only and may differ from actual product. Please confirm with the information we release later if content of brochure have some different from actual item caused by updating ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Security

- To protect your mobile phone from illegal use, take the security measures as follows:
- Set PIN codes of the SIM card.
- Set handset lock code.
- Set call restrictions.

Safety Precautions

This section includes some important information on safe and efficient operation. Please read this information before using the phone.

Operational Precautions

- Please use your phone properly. When making or receiving a call, please hold your phone as holding a wire telephone. Make sure that the phone is at least one inch (about two point five centimeters) from your body when transmitting.
- Do not touch the antenna when the phone is in use. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-light feature on your phone. (The flashing-light feature is not available on all products.)
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.
- Driving
- Please pay attention to the traffic safety. Check the laws and regulations on the use of your phone in the area where you drive. Always obey them.
- Medical equipment and hospital
- Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.
- Pacemaker manufacturers recommend that a minimum separation of 20 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.
- People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.
- The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.
- Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities.

Mobile Phone

- Please use original accessories or accessories approved by the phone manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related local regulations about telecom

terminals.

- Turn off your phone before you clean it. Use a damp or anti-static cloth to clean the phone. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Keep your phone dry. Any liquid may damage your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with any incompatible enhancement.
- Do not attempt to disassemble the mobile phone or battery.
- Do not store the phone with flammable or explosive articles.
- Do not charge the mobile phone without battery.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep phone out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fueling areas, fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.
- To avoid possible interference with blasting operations, switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Precautions for Electronic Devices

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.

Safety and General Use in Vehicles

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmission. If you do meet problems above, please contact your automobile provider. Do not place your phone in the area over an airbag or in the airbag deployment area. Airbags inflate with great force. If a phone is placed in the airbag deployment area and the airbag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.
- Please turn off your mobile phone at a refueling point, and the same to the place where the use of two-way radio is prohibited.

Aircraft Safety

- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is forbidden to use mobile phone in flight. Safety

regulations require you to have permission from a crew member to use your phone while the plane is on the ground.

- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to make sure that your phone will not be automatically turned on during flight.

Battery use

- Do not short-circuit the battery, as this can cause the unit to overheat or ignite.
- Do not store battery in hot areas or throw it into fire. Otherwise, it will cause explosion.
- Do not disassemble or refit the battery. Otherwise, it will cause liquid leakage, overheating, explosion and ignition of the battery.
- Please store the battery in a cool dry place if you don't use it for a long period.
- The battery can be recharged for hundreds of times, but it will eventually wear out. When the operating time (talk time and idle time) is noticeably shorter than normal, it is time to replace it with a new one.
- Please stop using the charger and battery when they are damaged or show evidence of aging.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish.
- Please use original batteries or batteries approved by the phone manufacturer. Using any unauthorized battery may affect your handset performance or may cause danger of explosion, etc.
- Return the worn-out battery to the provider or dispose of it in accordance with environment regulations. Do not dispose of it in household rubbish



Warning:

If the battery is damaged, do not discharge it. If the leakage does come into contact with the eyes or skin, wash thoroughly in clean water and consult a doctor.

Adapter use

- To improve the charging efficiency and ensure the charging safety, please use the 220 V AC
-
- Don't short circuit the charger, otherwise it will cause electric shock, smoke and damage to the charger
- Don't use the charger in case of power cord damage, it may cause fire and electric shock
- Clean the outlet of the product without delay
- Please don't put the containers that full of water beside to the charger, so as to prevent charger overheating, leakage cause by water splashing.
- Don't modify or remanufacture the charger otherwise it may lead to injure your body, Electric shock or damage charger.
- Don't charge in the bathroom or other moist place otherwise it may lead to injure your body, Electric shock or damage charger.
- Don't touch the charger, wires and outlets with wet hands or may cause electric shock.
- Don't place heavy things on the power cord or attempt to modify the power cord, otherwise it may cause electric shock or fire
- Please pull the charger out of the outlets before clean and maintenance. You need to hold the charger instead of pulling wire by force. If you do that , it may damage the power cord and cause electric shock or fire
- Don't charge in such place: High temperature, strong sunlight, dusty, moisture place or shake the phone

Limitation of Liability


ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

Note: The pictures and icons shown in the manual are just schematic drawings for function demonstration. If they are inconsistent with your handset, please take your handset as the standard. If the inconsistency exists in the manual because of the handset function updating, please refer to the follow-up public information from ZTE CORPORATION.

Overview

V760 mobile phone can work in WCDMA / GSM networks. It has the newest Technology and a lot of function

With the latest 3G technology to bring high-speed broadband connection, it can share your life with others in time.

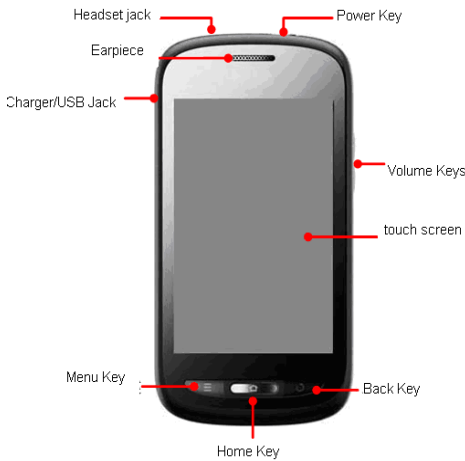


Keys Functions








 
 
 
 
 
 
key	function
Power key	Hold to turn on or off Silent or Airplane mode, or to power off. Press to switch your phone to Sleep mode. Press to wake up your phone
Home Key	Press to return to the Home Screen from any application or screen. Hold to see recently used applications
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen
Volume Keys	Press or hold to turn the volume up or down.

Technical parameters

Model	ZTE T760
Dimension (length X width X height)	About 116mm*62.5mm*12.6mm
Weight	About 128g (including standard battery)
Screen	3.5inch 320*480pixel

camera	Type of sensor	CMOS
	Pixel	2,000,000
Type of memory	Micro SD card	
Max memory	32 GB	
battery	Capacity	1350mAh
	Stand by time	450H (depend on internet)
	Takinng time	360min (depend on internet)
Browser version	533.1	
Note: microSD is SD Card Association's trademark.		

Status and Notification Icons

	Signal strength		USB connected
	Bluetooth		Alarm on
	Battery low		earphone insert
	Battery very low		new multimedia message
	Battery charging		new text message
	Vibrate mode		calling
	Airplane mode		music play
	New mail		missed calls

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Health and safety information

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government: The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.01 W/kg and when worn on the body, as described in this user guide, is 1.16 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of

<http://www.fcc.gov/oet/fccid> after searching on

FCC ID: Q78-T760

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Starting up


SIM card:

If you sign with the mobile phone carrier, you will get a new SIM card. It is a micro-chip that holds your personal information such as the phone number, contacts, text message and service message of carrier. The above function is valid just in inserting SD card. The mobile phone can only make emergency calls without SIM card inserted.

Memory card: Micro SD card has a great memory, so you can store all kinds of multimedia data, including video, photos, MP3 music files and ring tones .Besides, it is also used to store other files.


Installing SIM card

1. Make sure that the phone is switched off and the charger is disconnected from the phone
2. Inserting SIM card: Remove the back cover and then insert the SIM card as follows

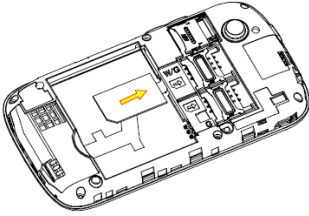


Installing memory card


1. You need to push the cover to the top of the phone

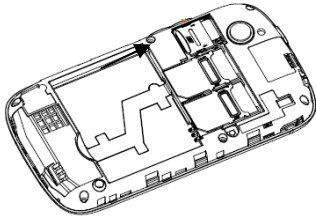

2. Open the battery cover. Insert the card with the metal contacts facing down until it clicks to the right position.

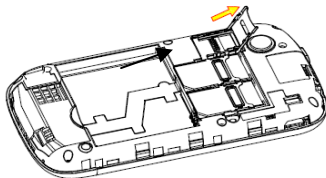


3. Insert the card with the metal contacts facing down until it clicks to the right position

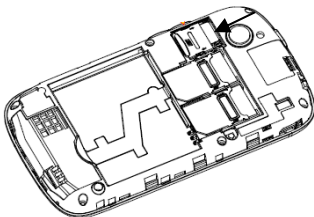


Install and remove the battery

Install the battery


1. Pull the battery cover from the notch on the bottom and remove the cover.

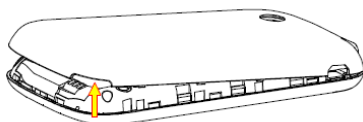

2. Insert the battery by aligning the gold-colored contacts with the contacts in the battery slot.

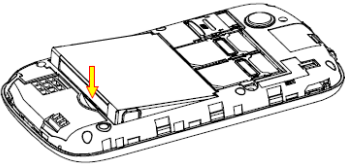

3. Push down the upper section of the battery until it clicks into place.


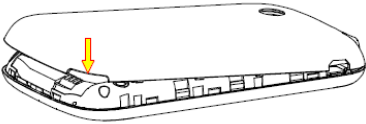


4. Replace the battery cover and close it gently until you hear a click.

Remove the battery

1. Make sure that your mobile phone is switched off.

2. Remove the back cover

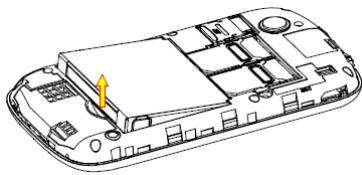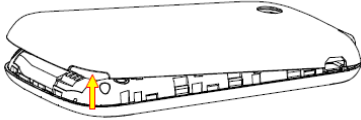

3. Pull the battery up and remove it from the mobile phone

Charging the battery

For maximum battery performance, it is recommended that you first use up the battery power and then charge it completely. A new battery's full performance is achieved only after three complete charge and discharge cycles.

You can charge the battery by travel adapter:

1. Connect the adapter to the charger jack as shown in the following illustration



2. Connect the charger to a standard AC wall outlet. .
3. Disconnect the charger when the battery is fully charged. .

Note:

Using USB is another way to charge battery.

It need to connect mobile phone with USB jack of computer.

Charging temperature is between 0°C and 45°C.

Powering your phone on/off

1. Hold Power Key to switch on your phone
2. Please input your PIN or password if it's essential.
3. To switch it off, hold Power Key to get the phone options. Select Power off, and then tap OK

Note: PIN is provided by your operator. The phone will automatically search for the network. It will cost a few seconds

Switch to sleep mode


To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time

Press Power Key to switch to Sleep Mode.

Waking up Your Phone

After the phone switches to sleep mode, the display will turn off and be locked. If you need to use the phone now, wake up and unlock screen .

Tap Power Key to activate your screen display

Drag the icon  to the right as follows to unlock screen



NOTE:

If you set an unlock pattern, you'll need to draw the pattern

Touch Control

You can use finger gestures to control your phone.

Tap: Tap the buttons, icons, or applications to select items or to open applications.

Slide: Flick the screen to scroll up, down, left or right

long press : You are able to get the menu by long pressing the icon and add the useful icons to the home screen.

Drag: You can point, drag and drop to move particular items across the screen.

You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape

Home screen

After switch on the phone and unlock the screen the shown is home screen.



No.	Function	Description
1	Indicator icon	Show signal strength and Battery status
2	Quick search bar	Search for relevant information through the Internet
3	Shortcut icon	Tap to the appropriate application directly
4	Call	Tap to the dialer screen.
5	main Icon	Tap the icon to enter main menu screen
6	Browser	Browse the Internet

You can add or remove file to the home screen. The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

Extended Home Screen


The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

Adding Items to Your Home Screen



1. Press Home Key to return to the Home Screen
2. Tap Menu Key and select Add
3. Select a category, either shortcuts, widgets, or folders
4. Choose the item you want to add to the Home Screen

Note:

Another way to add item

1. Tap home key > .
2. Hold any icon until the background become home screen.
3. Release the icon and drag to the application page.

Removing Items from Your Home Screen

1. Tap home key to return to the Home Screen.
2. Tap and hold the item you want to delete until the  icon appears on the screen.
3. Drag the item to  and release your finger when the item turns red.

Choosing Wallpaper

1. Tap Home Key to return to the Home Screen
2. Tap Menu Key and select Wallpaper
3. Tap Gallery, Live wallpapers, or Wallpapers and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
4. Tap Set wallpaper


Phone Calls

Making Calls

Calling from the phone

Tap home key  >  >  Phone or tap on the home screen.

Enter the phone number using the on-screen keypad.

Tap  to delete wrong digitals before cursor or tap the image all the time until delete all the digitals.. During the process, it will show matched number automatic. At this time, you can drop down the contact list to hide keyboard which benefit look for more matched number.

Choose the number you need from the matched list.

Calling from the contacts

1. Tap Home Key >  >  contacts.

2. You can search for a contact by tapping  on the top left of the screen.

3. Tap  to call

Calling from your call history

1. Tap Home Key  Call Log.


2. Tap the call log to dial the number.

Calling from a Text Message

1. Tap Home Key >  >  Messaging.

2 Tap the conversation and then the message that contains the phone number you need.


3. Tap the message, the phone will list the numbers.

4. Tap the number you want to dial  .


Dialing an emergency numbers

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

1. Turning on the phone.

2. Select  to enter the mode.


Enter the official emergency number for your present location


Tap  to start a call

Dialing international numbers

Note:

International number Function depends on the international long distance telephone services and network conditions provided by operator

1. Tap 

2. Hold  to enter the “+”

3. Input Country code and phone number.

4. Tap 

Receiving Calls

When there is an incoming call, the phone will ringing, vibrating alert or animation (depending on the current mode your settings).

Answering calls by slipping the relevant icon to right


Tip:

If you have plugged the earphone, you can use the key on the phone to answer the call

Rejecting a Call

Press **Reject icon** to reject the call.

Ending a Call

Tap  to finish a call.



Call settings

Tap home screen> menu key > set up > call settings, .

Contacts

Starting to use contacts

You can research or manage your contacts

Tap home screen>  >  > contact screen

Manage contacts

Adding a new contact

1. Tap **+** **>**, New contact from the Contacts Screen.
2. Choose where to save the contact.
3. Enter the contact name, phone numbers, and other information
4. Tap Save to save the contact

Adding contacts to collect

Tap **+** on Contacts Screen

Searching for a Contact

1. Tap **Q** on the upper right screen
2. Input the contact name you want to search for.
The contacts matched will be listed.

Edit a contact

1. Hold the contact you need to modify until the shortcut menu appeared and choose “edit contact”
2. Edit the contact information and save it.

Delete contact

1. Select an item you want to delete and then tap menu key .
2. Tap” Delete contact “from menu

You also can hold an item you want to delete from contact screen until the shortcut menu pops up and Tap “delete contact”


Tips:

If you want to delete some contacts at one time, tap menu key>delete contacts , tick the contacts you want to delete from screen. Tap delete on the bottom of screen .


Text input

Using the Virtual Keyboard

Pinyin input

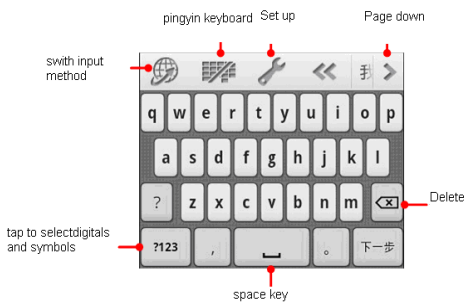

English input

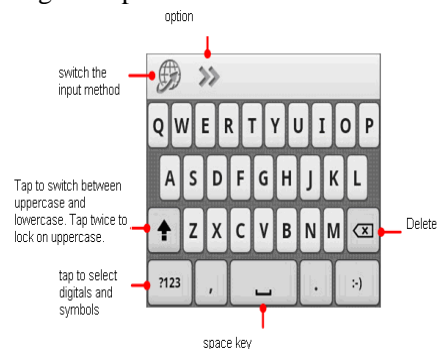

stroke input



Handwriting



Note: If you hide Virtual Keyboard, tap text input box



Text setting

Tap home key > **menu key**>**setting**> **language and keyboard**


Message

Tap home key >  >  , You can send or receive message.

Sending a new text message

1. Tap icon  and choose “write new message ”
2. Enter the recipient’s number or name. As you type, matching contacts will appear. Tap  a suggested contact to add as a recipient.
3. Write the message content.
4. Tap Send to send your message。

Sending a new multimedia message

1. Tap icon >  writing new message from message screen,
2. Enter the recipient’s number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
3. Tap menu key > add subject, write subject and content。

Note:

The SMS will be switched to MMS automatically when insert subject or attachment directly. Likewise if you remove all attachments and the subject from an MMS, it’ll automatically become a text message.

Tap menu key>attachment and insert the picture, video or audio as attachment.

Message Settings

The same contact or number of message will be arranged in one list according to order .You can manage them from the message screen.

Replying message

Open the message you need to reply from the information screen

Tap “edit message ”and input the message.

Forward the message

1. Open the message you need to forward from the information screen
2. Hold the message until the option appeared and choose “forward”

Delete messages:


Hold the message you need to delete from message screen

Delete the message

Messaging settings

Tap Menu Key > Settings from the Messaging Screen.

E-mail

Tap home key >  >E-mail. You can receive and send E-mail from mail screen.

Sending E-mail

Tap menu key >writing.

Reply or forward E-mail

1. Select the E-mail you need to reply or forward from inbox
2. Tap menu key>reply/forward

Getting Connected to the Internet

Internet connection

1.Tap Home Key >  > Settings > Wireless & networks > Mobile networks > Access Point Names

WLAN

WLAN provides wireless Internet access.

Turn on/off WLAN


Tap home key >menu key >Settings > Wireless & networks >
Tick select box to turn on WLAN and cancel ticking select box to turn of WLAN

Connecting to a WLAN Network

Tap home key >menu key >Settings > Wireless & networks >WLAN setting

Your phone will search available networks and list them.


Condition of the WLAN connection

- 1.Check the icon .The more the number of cells highlighted, the stronger the wireless network signal strength
- 2.Tap home key >menu key >Settings > Wireless & networks >WLAN setting and select the desired WLAN Network name in the list


Browser the Internet

You can connect to the Internet thought browser and enjoy the WAP Wireless wireless network freedom. The business need network support .please consult the specific network operator for charging.

Open a Windows for web browsing.

1. Tap home key >  > Internet> Input address
2. Input address

Options

Tap  zoom in or zoom out the website
Tap menu key >refresh the page
Tap menu key>shut off Exit Browser
Tap menu key >More operation

Explorer setting


Tap menu key>more >setting up to enter setting screen.

Bluetooth

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.



Turn on/off blue tooth

Tap Home Key > Menu Key > Settings > Wireless & networks
When Bluetooth is on, the  icon will appear in the status bar.

Bluetooth Settings

Tap Home Key > Menu Key > Settings > Wireless & networks>Bluetooth settings.
If Bluetooth is not turned on, please tick the check box.

Connect Bluetooth with other device

1. Tap Home Key > Menu Key > Settings > Wireless & networks>Bluetooth settings.

If Bluetooth is not turned on, please tick the check box.

2. **Tap Bluetooth settings > Scan for devices. Your phone will show all visible Bluetooth devices in range.**

3. **Tap the device you want to pair with and, if required, enter your PIN and tap OK.**

Portable WLAN

You can use the phone as a portable WLAN router, providing Wi-Fi connection for one or multiple PC or other devices. The function need data connection on a mobile network and may result in data charges.

TIPS:

The PC accesses the Internet via the phone's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the phone as a Wi-Fi hotspot. When the portable Wi-Fi hotspot function is enabled, you cannot access the Internet with any application on your phone via its Wi-Fi connection.

Starting portable WLAN

Go to Home key→Menu→Settings→wireless and website→WLAN setting→agent.

Turn off WLAN


Go to Home key→Menu→Settings→wireless and website→WLAN setting. Cancel tick WLAN to turn off WLAN

Multimedia

Camera

Your phone has a 2-megapixel camera and can be used for taking photo. Setting up the picture as wallpaper or send them by MMS, e-mail .

Opening camera

Tap home key>  >camera

Tips:

You need to insert memory card before using the camera. Slip  to switch video.

Camcorder

Opening Camcorder


Tap home key >camcorder


Tips:

You can drag  to switch camera mode

Video

Focus on the location.

Tap  to start .


Tap  to end.

Music


You can play digital audio files from your phone's memory card in Music.

Open music player


You need to copy music file to memory card before play music.

Tap Home Key >  > Music to open the Music Screen.

Manage music playlist

1. Tap Home Key >  > music > playlist
2. Choose list you need to edit or play and press the key until the menu appeared

Add music to playlist


- Open music file and chose tag page
2. Select the music file you need to add to the playlist and press it until the  appeared
Tap add to playlist.
 3. choose the playlist you need to add.

Setting the music as calling music

You can tap menu key to setup the music as calling music when you play the music

Video

Please copy video file to memory card and insert to the phone before play video

Tap Home Key >  > media.


Select local video

Picture

Tap **Home Key** >  > **Picture**

Recorder

Please ensure insert memory card.

Tap Home Key >  > recorder

Basic Settings

Setting Date and Time

Tap Home Key > Menu Key > Settings > Date & time.

Display Settings

Brightness

Tap home key > menu key > settings> display > Brightness

Standby time

1. Tap home key > menu key > settings> display> Screen timeout.
2. Choose the standby time.
3. Set the delay for the screen to automatically turn off.

Screen display orientation

1. Tap home key > menu key > settings> display
2. Tick rotate the screen automatically

Turn on/off window animation

Tap home key > menu key > settings> display> animation

Language Settings

You can change the language of your phone system in two simple steps.

1. Tap Home Key > menu key > Settings > Language & keyboard > Select language.
2. Select a language from the list given.

Mobile Network Services

Switching Networks

Tap Home Key > Menu Key > Settings > Wireless & networks > Mobile networks > Network operators.

Switching flight mode

Tap Home Key > Menu Key > Settings > Wireless & networks

Tick flight mode. The mobile phone will shut off of the wireless connected after switching to flight mode.

Security Settings

Screen Unlock Pattern

You can setup Screen Unlock Pattern to protect your phone and SIM card from unauthorized use.

Creating Your Screen Unlock Pattern

Tap Home Key >  > Settings > Security > Set up screen lock > Pattern.

Draw your own pattern as instructions

Tips:

Please setup easy remember pattern to avoid you forget it.

Unlocking Password

Tap Home Key > menu key > Settings > Security > Set up screen lock > password

Protecting Your Phone with a PIN

PIN protect your Phone against unauthorized usage

Tap **Home Key** > Menu Key > **Settings** > **Security** > **Set up SIM card lock**.

Enter the numeric PIN and tap **OK** to confirm

Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Tap Home Key > menu key > Settings > Security > secure certificates

Managing Your Device Memory

You can view the space information of the micro SD card as well as the phone storage.

Tap Home Key > Menu Key > Settings > Storage

Managing Applications


Copy the application file to the microSD card and install the card on your phone.

Tap Home Key > Menu Key > Settings > Manage applications


Reset to Factory Settings

Tap Home Key > Menu Key > Settings > Safe > Erase everything,

Clock

Tap Home Key >  clock,

Calculator

Tap Home Key >  > Calculator, you can use the calculator to perform the basic operation.

Troubleshooting

Problem	Reason	Solution
Weak signal	Network signal is weak (such as in the basement or nearing a building),.	Go to another place that can receive good signal
	the network is busy Currently	Avoid to use the phone during this period.
	Far away from the base station	Request the map of service area from network operator
Echo or noise	network in poor quality	Hang up and redial.
	Poor quality of local telephone lines	
some specific functions are prohibited	These function are not supported or not open	Consult network operators
The battery can't be charged	Battery or charger damaged	Contact dealer
	Temperature is below -10 °C or higher than 50 °C	Avoid temperature too high or too low when charging
	Poor contact between the battery and charger.	Check all connectors to make sure all lines are properly connected.
Standby time is shorter than before	Standby time is related to the system operators set. The same mobile	You' d better power off when in the poor signal area.

Problem	Reason	Solution
	phone in different network may result in different standby time	
	Phone is out of battery. In the high temperature environment, the battery life will be shortened	Change new battery
	If you can not connect to the Internet, mobile phones will continue to search for the base station transmit signal and consume battery power, which resulting in standby time. shortened	Finding new place that have good signal to access the local network, or turn off the phone temporarily
(U) SIM card error	(u)SIM card is damage	Test SIM card by operator
	(U)SIMcard Erroneous insertion	Insert SIM card correctly
	SIM card contacts dirty	Clean SIM card with dry cloth
Unable to connect to the network	(U)SIM card is invalid	Contact with net operator
	You are not in service area.	Inquiry service area
	Poor signal	Please move to the open place; If you are close to building, move to a place near the window.
PIN is locked	You input wrong PIN code three times	Ask network operator PUK code to unlock (U) SIM card.
Can' t input	Contacts memory is full	Please delete some

Problem	Reason	Solution
any information to contacts	◦	information