

Vodafone Smart Tab 10

User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : June 2011

Contents

For Your Safety	13
Product Safety Information.....	13
RF Exposure	15
General Statement on RF Energy	15
Specific Absorption Rate (SAR)	16
Body-worn Operation	16
Limiting Exposure to Radio Frequency (RF) Fields	17
Regulatory Information.....	18
Distraction	18
Driving	18
Operating Machinery.....	18
Product Handling.....	19
General Statement on Handling and Use	19
Small Children	20
Demagnetization	21
Electrostatic Discharge (ESD).....	21

Air Bags	21
Seizures/Blackouts	22
Repetitive Motion Injuries.....	22
Emergency Calls.....	22
Loud Noise	22
Device Heating	23
Electrical Safety	23
Accessories	23
Connection to a Car	23
Faulty and Damaged Products.....	24
Interference.....	24
General Statement on Interference	24
Pacemakers.....	25
Hearing Aids	25
Medical Devices.....	25
Hospitals.....	26
Aircraft	26
Interference in Cars	26

Explosive Environments	27
Petrol Stations and Explosive Atmospheres	27
Blasting Caps and Areas.....	27
Radio Frequency (RF) Energy	28
Declaration	30
Getting Started	33
Overview	33
Key Definition	34
Starting up.....	34
How to slot your SIM/memory card	34
How to charge your Tablet	37
Powering On/Off Your Device.....	38
How to power on/off your device	38
Setting Up Your Tablet for the First Time	39
How to switch your device to sleep mode.....	40
How to wake up your device from sleep mode	40
Getting Around Your Device	42

Using Finger Gestures	42
Home Screen.....	43
Applications and Settings Preview	47
Contacts	55
Starting to use Contacts	55
Managing Contacts	56
Importing/Exporting Contacts	56
Creating a Contact	57
Searching for a Contact	57
Editing a Contact	58
Deleting Contacts.....	58
Synchronize Contacts.....	58
Entering Text	60
Using the On-screen Keyboard	60
Input Options.....	62
Touch Input Settings	62

Messaging	64
Exchanging Messages	64
Composing an SMS	64
Composing an MMS	65
Managing Messages and Messages Threads	67
Message Settings	68
Using Email.....	69
Creating an Email account	70
Composing and sending an Email.....	71
Reply to or Forward an Email.....	72
Email Settings.....	72
Getting Connected	74
Connecting to the Internet	74
Ways of Connecting to the Internet	74
GPRS/3G/EDGE.....	74
Wi-Fi.....	76
Using the Tablet as a Modem.....	78

Enabling the Tablet as a Modem.....	79
Disabling the Modem Function.....	80
Using the Tablet as a Wi-Fi Hotspot	80
Enabling the Wi-Fi Hotspot	81
Disabling the Wi-Fi Hotspot.....	82
Using Browser.....	82
Opening Browser	82
Opening Web Pages.....	83
Browsing Options.....	83
Using Bookmarks.....	86
Browser Settings.....	88
Bluetooth.....	91
Turning on/off Bluetooth.....	91
Making your device visible	92
Change your device name	93
Pair with another Bluetooth device	93
Experiencing Multimedia	95

Camera	95
Opening Camera	95
Taking Pictures	95
Camera Settings	96
Camcorder	97
Opening Camcorder	97
Shooting Videos	97
Camera Settings	98
Music	98
Opening Music	99
Playing Music	99
Creating Playlists	99
Managing Your Playlists	100
Gallery	101
Sound Recorder	101
Opening Sound Recorder	101
Record Your Memo	102







Google Applications.....	103
Signing In to Your Google Account.....	103
Using Gmail	103
Open Gmail	104
Creating and sending an gmail.....	104
Using Google Calendar	104
Using Google Talk.....	105
Opening Google Talk.....	105
Adding a new friend	105
Viewing and accepting an invitation	106
Starting a chat.....	106
Settings	107
Basic Settings	107
Setting the Time and Date	107
Screen Settings	108
Sound Settings	109
Language Settings.....	112









Mobile Network Services.....	112
Security Settings	114
Protecting Your Tablet with a Screen Lock.....	114
Protecting Your SIM Card with a PIN	117
Setting Up Credential Storage.....	118
Managing Memory.....	120
Managing Your Memory Card	120
Managing Internal Storage.....	121
Reset to factory settings.....	121
Application Settings.....	121
Managing Applications	121
Removing an Application	122
Moving an Application to or from the Memory Card.....	123
Other Settings	124
Speech Synthesis Settings	124
Other Applications	125
Alarming.....	125




Set alarms	125
Global Time.....	125
Calculator.....	126
Maps	127
Places	128
Navigation	129
Latitude	129
Specifications	131

For Your Safety

Product Safety Information

	Read the Safety Information section of this user guide on this page		Do not use while re-fuelling
	Do not use hand-held while driving		This device may produce a bright or flashing light
	Small parts may cause a choking hazard		Do not dispose of it in a fire

	<p>This device may produce a loud sound</p>		<p>Avoid contact with magnetic media</p>
	<p>Keep away from pacemakers and other personal medical devices</p>		<p>Avoid Extreme Temperatures</p>
	<p>Switch off when instructed in hospitals and medical facilities</p>		<p>Avoid any contact with liquid, keep it dry</p>
	<p>Switch off when instructed in aircrafts and airports</p>		<p>Do not attempt to disassemble</p>

	<p>Switch off in explosive environments</p>		<p>Do not rely on this device for emergency communications</p>
	<p>Only use approved accessories</p>		

RF Exposure

General Statement on RF Energy

Your mobile device contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your device, the system handling your call controls the power level at which your device transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device was 0.85 W/kg. As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 62311, IEC 62209-2.

Body-worn Operation

Important safety information regarding radio frequency radiation (RF)

exposure:

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting Exposure to Radio Frequency (RF) Fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile devices. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of wireless data transmission

Further information on this subject can be obtained online from the WHO fact sheet N°193 at <http://www.who.int/mediacentre/factsheets/fs193/en/>

Regulatory Information

The following approvals and notices apply in specific regions as noted.

Please find the Declaration of RoHS Compliance, and EC Declaration of Conformity in Appendix.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile device while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce

the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your mobile device and any consequences of its use.

You must always switch off your mobile device wherever the use of a Tablet is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your device or its accessories to open flames or lit tobacco products.
- Do not expose your device or its accessories to liquid, moisture or high humidity.

- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device or its accessories, only authorized personnel should do so.
- Do not expose your device or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your mobile device in your back pocket as it could break when you sit down.

Small Children

Do not leave your mobile device and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the

device.

Your mobile device contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your device for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Air Bags

Do not place the device in the area over an air bag or in the air bag deployment area.

Store the device safely before driving your vehicle.

Seizures/Blackouts

The device can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your device:

- Do not grip the device too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Loud Noise

This mobile device is capable of producing loud noises, which may

damage your hearing. Turn down the volume before using headsets, Bluetooth stereo headsets or other audio devices.

Device Heating

Your device may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a mobile device interface to

the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the device or its accessory.

Only qualified personnel should service or repair the device or its accessory.

If your device or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference

General Statement on Interference

Care must be taken when using the mobile device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile device and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the mobile device on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if

operation of your mobile device may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment,

some vehicle manufacturers forbid the use of mobile Tablets in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your Tablet or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile Tablet or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Radio Frequency (RF) Energy

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the Tablet while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to the antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for body, as described in this user guide, is 0.938W/kg for CDMA 850 band.

While there may be differences between the SAR levels of various Tablets and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-V11A.

For body operation, this device has been tested and meets the FCC RF exposure guidelines for use the positions the device a minimum of 0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

Declaration

We, ZTE Corporation, declared that:

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user 's authority to operate the

equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Getting Started

Overview



Key Definition

Key	Function
Power Key	Press and hold to power on your Tablet. Press to switch to sleep mode. Press to wake up your Tablet.
Volume Keys	Use to control the volume Up or Down.

 
Starting up

How to slot your SIM/memory card


Power off your LIGHT before installing or replacing the battery, SIM card, or memory card.

1. Insert your SIM card into the SIM slot. There is a diagram showing the


correct orientation of the card printed above the SIM slot.

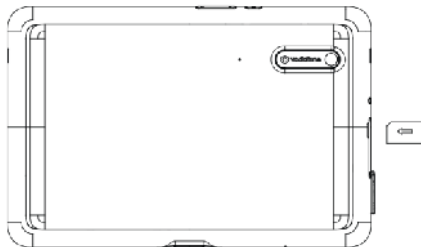

 2. Insert your memory card into the memory card slot. There is a diagram showing the correct orientation of the card printed above the memory card slot.

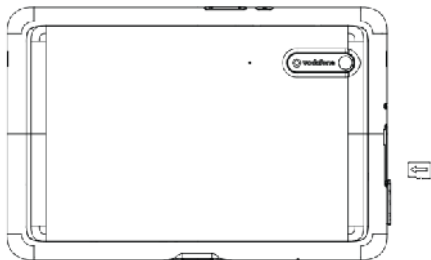


Notes:

microSD logo () is a trade mark of SD Card Association.

How to charge your Tablet

 The new battery is not fully charged. To charge the battery, you need to:
Connect the adapter to the charger jack.

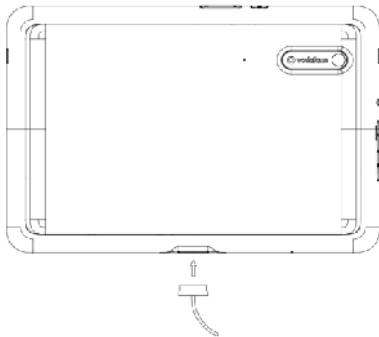

3. Connect the charger to a standard AC wall outlet.
4. Disconnect the charger when the battery is fully charged.

Notes:

Use only the charger that came with your tablet when charging your tablet. Do Not attempt to connect a charger to the USB port. The USB port is used for data transfer only, NOT for charging.

Powering On/Off Your Device

 
How to power on/off your device

1. Make sure your SIM card and the battery are inserted.
2. Press and hold the **Power Key** to power on your device.
3. To switch it off, hold **Power Key** to get the Tablet options. Select **Power off**, and then tap **OK**.

Setting Up Your Tablet for the First Time

When you first power on your Tablet after you purchase it or reset it to factory settings (see *Sorting out Your Tablet Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

1. Select language and tap **Start**.

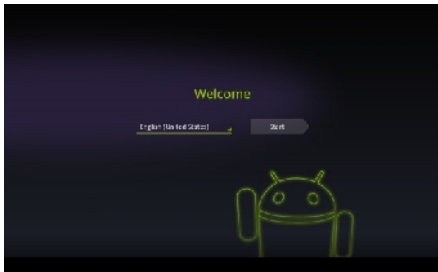

2. Select Google's location service and press **Next**.

3. Configure the date and time options, and tap **Next**.
4. Create a Google Account or sign in your account.

You can also tap **Skip** to set up an account later.

 
 
How to switch your device to sleep mode


Press the **Power Key**.

Sleep Mode suspends your device to a low-power-consumption state while the display is off to save battery power. Your device also goes into Sleep Mode automatically when you leave it idle after a certain period of time.

How to wake up your device from sleep mode

If your device is switched to sleep mode, you need to wake it up:

 1. Press the **Power Key** to activate your screen display.
2. Press the icon  and move it to .

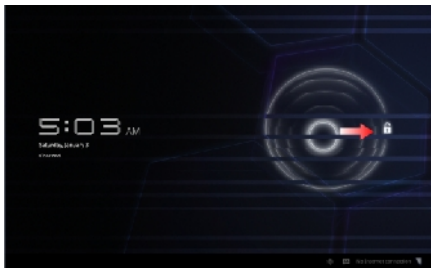

Notes:

If you have set an unlock pattern for your device (refer to *Settings -> Location & security -> Set up screen lock -> Pattern*), you need to draw the pattern to unlock your screen.

Getting Around Your Device

Using Finger Gestures

You can use finger gestures to control your device. The controls on your touch screen change dynamically depending on the tasks you are performing.

 
1. Tap the buttons, icons, or applications to select items or to open applications.
2. Hold a certain item to get available options.
3. Slide on the screen, you can scroll up/down. From Home Screen, you can also slide left/right to browse the extended Home Screen.
4. Drag a certain item to move it or to do some other corresponding operations.

Tips:

Besides using finger gestures to control your device, you can also switch your device screens (such as text input screen, gallery screen, etc.) between portrait or landscape mode by holding the device upright or sideways.

Home Screen

You can add or remove home items in your Home Screen.

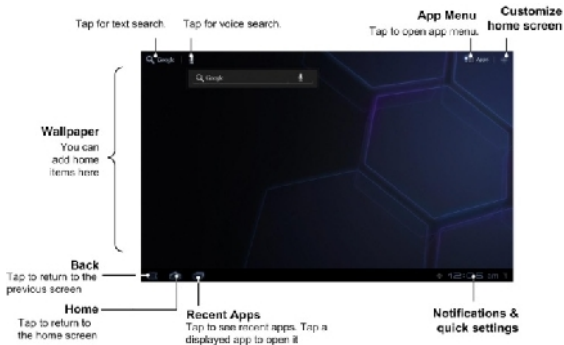

How to extend the Home Screen

Beyond the screen width, the Home Screen extends to provide more space for adding items. Slide your finger to the left or right to get the extended Home Screen.



Customize the Home Screen Wallpaper

To change the wallpaper

1. Tap  to open **Customize home screen**.

2. Tap **Wallpaper** to open the wallpaper menu.
3. Select the wallpaper you want to use from **Gallery**, **Live wallpapers**, or **Wallpapers**.
4. Tap **Save** or **Set wallpaper**.




To add a Home Screen item

 
 
1. Tap  open **Customize home screen**.



2. Tap **Widgets**, **App shortcut** or **More** to select an item. And move the item to Home Screen.

To remove a Home Screen item


1. Tap  to return to Home Screen.
2. Tap and hold the item you want to delete until the  icon appears on the screen.
3. Drag the item into .

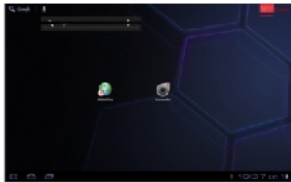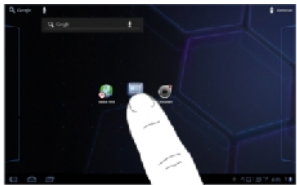

How to open the notifications and quick settings panel


From the **Notifications and quick settings panel**, you can get the information of tablet status, app notification, and quick settings from the Notification Panel.

 To see a specific notification, touch the icon. To open a panel, touch the digital clock.

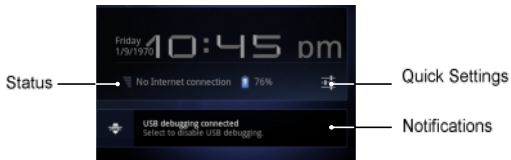

Applications and Settings Preview

 Programs Preview

Your Tablet has lots of functions. Tap  to get the following

programs that are pre-installed on your device.


Applications	Description
Books	Enables you to view books.
Browser	Enables you to browse the internet.
Calculator	Enables you to perform the calculation.
Calendar	Enables you to schedule appointments, including meetings and other events.
Camcorder	Enables you to enter camcorder and shoot the video clips you like.
Camera	Enables you to enter the camera screen directly and use the camera features.
Clock	Set alarms.
Contacts	Enables you to manage the information of your friends and colleagues.
Downloads	Access useful applications and fun games to download.

Applications	Description
Email	Enables you to enter the Email screen, where you can setup Email, send or receive Emails.
Gallery	Enables you to organize and manage your multimedia files.
Global Time	Enables you to view the global time.
Gmail	Enables you to access your Gmail account and check your email on your mobile device.
Latitude	See your friends' locations and share yours with them.
Maps	Enables you to track your current location, view real-time traffic situations, and receive detailed directions to your destination.
Market	Enables you to access to useful applications and fun games which you can download and install on your device.
Messaging	Enables you to enter the Messages screen, where

Applications	Description
	you can send and receive SMS and MMS messages.
Movie Studio	Make movie.
Music	Enables you to browse your audio files and listen to them in the Music player.
Navigation	Enables you to use Google Maps Navigation.
Places	Enables you to find restaurants, ATMs, and other places of interest near you.
Search	Enables you to searching by typing.
Settings	Enables you to adjust the device settings.
Sound Recorder	Enables you to record audio clips.
Talk	Enables you to send and receive instant messages and voice over internet protocol (VOIP), offered by Google Inc.
Voice Search	Enables you to searching or dialing by voice instead

Applications	Description
	of typing.
YouTube	Enables you to watch YouTube videos and upload your own.

 Settings Preview


You can adjust the device settings. Tap the  > **Settings** to view all the settings on your device.


Wireless & networks	Enables you to configure and manage your device's wireless connections, such as Wi-Fi, Bluetooth, mobile networks, and Virtual Private Networks. You can also enable the Airplane mode.
Sound	Enables you to set sound settings, such as ringtones, notifications and so on.
Screen	Enables you to set display settings such as screen

	brightness and so on.
Location & security	Enables you to set the Lock screen, Encryption . You can also select the sources to use when determining locations from My Location .
Applications	Enables you to manage applications and installation of new programs.
Account & sync	Enables you to manage your account and configure general sync settings.
Privacy	Enables you to configure privacy settings, such as back up settings, and Personal data.
Storage	Enables you to check the available memory of the external card and the internal storage.
Search	Enables you to set the search options.
Language & input	Enables you to set the locale (operating system language and region), and text input options. Enables you to configure the text-to-speech settings

	if you have installed a text-to-speech (voice data) application.
Accessibility	Enables you to manage accessibility options.
Date & time	Enables you to set the date, time, time zone, and date/time format. If the network supports, you can also enable automatic time update.
About tablet	Enables you to view the device status, battery level, and legal information and you can make system updates.

How to open recently used applications

 1. Tap  from any screen until the following recently used applications interface appears.

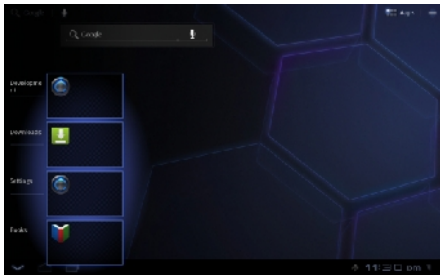

2. Tap the application you want to open.

Contacts

Starting to use Contacts

You can add new contacts along with their information. Setting up communication information for the contact will allow you to call the person quickly or browse the contact's information. Contacts are saved in the internal memory or in the SIM card. If you store the information in the SIM card, you can fill the name and a number. If you store the information in the internal memory, you can also fill out more information including Email, Postal address, pictures, Nickname, website, etc.

 
Tap the  >  > **Contacts** to enter the Contacts Screen.

Managing Contacts


Importing/Exporting Contacts

You can import/export contacts from/to you SIM card or microSD card.

Import/export contacts from/to SIM card

1. Tap  > **Import/Export** from the Contacts Screen.
2. Select to import or export contacts from/to your SIM card.
Your tablet will automatically read the contacts.
3. Select the contacts you want to import/export.

Tips:

- ▶ If you want to import/export all contacts, tap the  > **Select all**.
4. Tap **Done**.

Import/export contacts from/to memory card


1. Tap the  > **Import/Export** from the Contacts Screen.

2. Select to import or export contacts from/to microSD card.


If you want to import contacts from microSD card, you should have vCard files saved in the microSD card. If there is more than one vCard file, you need to select the vCard file.

3. Tap **OK**.

Creating a Contact


1. Tap  **New** from the Contacts Screen.
2. Enter the name and Tablet numbers. You can also set the Group, Email addresses, IM addresses, Postal addresses, Organizations etc. if you select to create a Tablet contact.
3. Tap **Done** to save the contact.

Searching for a Contact


1. Tap  **Find contacts** from the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Editing a Contact

1. Select the contact you want to edit from the Contacts Screen.
2. Tap .
3. Edit the contact and tap **Done**.

Deleting Contacts


1. Tap  > **Delete contacts**.
2. Select the contacts you want to delete.
3. Tap **Done**.

Synchronize Contacts

 
All your contacts from your email and social networking accounts are automatically synched and backed up. When you change a contact for one account, your tablet updates you other accounts.

Entering Text

Using the On-screen Keyboard

Tap any text field to open the touch keypad. To close keypad keyboard, tap Back .


Android Keyboard is a keyboard layout similar to a desktop computer keyboard. You can choose to use the landscape orientation of the on-screen keyboard, by turning the Tablet sideways.

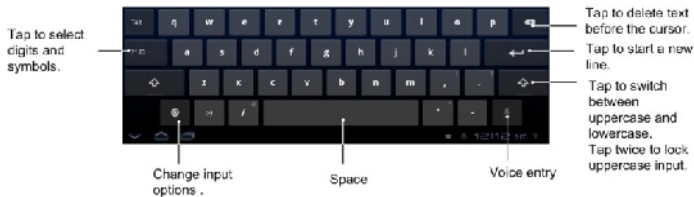

Tips:

- If you want to use the landscape keyboard, you need to select the **Auto-rotate screen** check box in **Settings > Screen**.
- Hold and select the text, tap **Cut** or **Copy**.
- Tap location to paste, then touch **Paste**. You can paste the cut or copied text.

Input Options

To change input options, tap  and you can select **Input languages** or **Android keyboard settings**.

Input languages


 
Under **Android keyboard**, select **Use system language**. Or deselect **Use system language** and select an active input method.

Android keyboard settings

General setting: **Auto-capitalization**, **vibrate on keypress** or **sound on keypress**.

Text correction settings: **Auto correction** or **show correction suggestions**.

Touch Input Settings

You can configure the touch input settings by tapping the  >  > **Settings > Language & input**.

Language settings

- Select language
- User dictionary:

Voice input

- Voice recognizer settings

Voice output


 
- Text-to speech settings

Keyboard settings

- **Current input method:** Enables vibration feedback as you touch on the keyboard.
- **Input method selector:** Enables the sound feedback as you touch on the keyboard.
- **Configure input methods:** Select the check box to capitalize the first letter of each sentence automatically.

Messaging


Messaging is where all of your SMS and MMS accounts are located.

To access your message accounts, tap the  >  > **Messaging**.

Exchanging Messages

From **Messages**, you can receive and send an SMS or MMS.

When you receive a new message, you can open it from the Notifications Panel, or from Messages Screen. Simply tap on the new message to read it.




The device will alert you for the unread message(s) with the icon  in the status bar.


Composing an SMS

1. Tap the  >  > **Messaging**.

2. Tap **New message**.
3. Tap **To** field and enter the recipient's number. In **Android keyboard** input method, you can also enter the first letter of the recipient; the contact which matches the first letter of the recipient name is listed, and then you can select a recipient from the list.
4. Tap **Type to compose** field and enter the message.
5. Tap **Send** to send your SMS.

Composing an MMS

1. Tap the  >  > **Messaging**.
2. Tap **New message**.
3. Tap **To** field and enter the recipient's number. In **Android keyboard** input method, you can also enter the first letter of the recipient, the contact which match the first letter of the recipient name is listed, and then select a recipient from the list.
4. Tap the  > **Add subject** to enter the subject of your MMS.

5. Tap **Type to compose** field and enter the message.
6. Tap the  > **Attach** to add an attachment to your MMS:
 - Pictures:** Select a picture to add to your MMS.
 - Capture picture:** Take a photo and add to your MMS.
 - Videos:** Select a video clip to attach to your MMS.
 - Capture video:** Shoot a video clip and add to your MMS.
 - Audio:** Select an audio file to add to your MMS.
 - Record audio:** Record an audio file and add to your MMS.
 - Slideshow:** Edit a sildeshow and add to your MMS.
7. Tap **Send** to send your MMS.

Tips:

- If you add a subject or an attachment to your SMS, the SMS will be converted to an MMS automatically.
- If you remove the subject and attachment of your MMS, the MMS will be converted to an SMS automatically.


Managing Messages and Messages Threads

SMS and MMS messages which are sent to and received are grouped into message threads in the Messages screen. Threaded messages show you exchanged messages (similar to a chat program) with a specific contact on the screen. Message threads are sorted by the time when you received them, with the latest one on the top.


Reply to a message

1. Tap the message you want to reply to from the Messages Screen.
2. Tap **Type to compose** and enter the contents of your message.
3. Tap **Send**.

Delete a thread

1. Tap the thread you want to delete from the Messages Screen.
2. Tap the  > **Delete thread** from the Messages Screen.
3. Tap **Delete**.

Message Settings

Tap the  > **Settings** from the Messages Screen. You can configure your message settings.

Storage settings

- **Delete old messages:** Select to delete old messages as limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings

- **Delivery reports:** Request a delivery report for each SMS message you send.
- **Manage SIM card messages:** Manage messages stored on your SIM card.


 
Multimedia message (MMS) settings

- **Delivery reports:** Request a delivery report for each MMS message you send.
- **Read reports:** Request a read report for each MMS message you send.
- **Auto-retrieve:** Select to retrieve MMS messages automatically.
- **Roaming auto-retrieve:** Select to retrieve MMS messages automatically when you are roaming.

Notifications settings

- **Notifications:** Select to display message notifications in the status bar.
- **Select ringtone:** Select a ringtone for your incoming messages.
- **Vibrate:** Select to make your LIGHT vibrate when receiving a new message.

Using Email

Tap the  >  > **Email**. You can enter the Email Screen to setup

your Email account and exchange Emails.

Creating an Email account

1. Enter your Email address and password, then tap **Next** when you enter the Email Screen for the first time.

2. Select the type of your account and tap **Next**.

3. Edit the incoming server settings and then tap **Next/Next[Check]**.

If you tap **Next[Check]**, your device will check the incoming server settings and finish the setup automatically. If you are notified that setup could not be finished, you might need to correct some settings to finish it. If there is any problem, please contact your mobile service provider and Email service provider.


4. Edit the outgoing server settings and tap **Next/Next[Check]**.

If you tap **Next[Check]**, your device will check the outgoing server settings and finish the setup automatically.

5. Set the Email checking frequency, select whether to use this account by default or be notified when Email arrives, and then tap **Next**.
6. Give your account a name and set a name displayed on outgoing message, and then tap **Done**.

Composing and sending an Email

After creating an Email account, you can compose and send Email messages.

1. Tap the  from the Email Screen.
2. Tap the **To** field and enter the recipient's address.

When you enter the address, the matching addresses saved in your **Contacts** will be displayed. You can tap the recipient from the list.

Tips:


You can also tap the  > **Add Cc/Bcc** to add recipients.

3. Enter the subject and the content of your Email.
4. Tap **Send**.

Reply to or Forward an Email

1. Open the Email you want to reply to or forward from Email Screen.
2. Enter your response in the text box at the bottom. To forward a text message, tap and hold the message in the conversation, then touch **Forward message**.

Email Settings

Tap the account you want to set from the Email Screen and tap the  > **Account settings**. You can get the Email settings.

General settings

- **Account name:** Set your account name.
- **Your name:** Set the name displayed on outgoing message.
- **Email address:** View or edit the email address.
- **Use signature:** Select to use signature.
- **Signature:** Edit your signature.

- **Email check frequency:** Set the email checking frequency.
- **Power-saving mode:** Enable the email synchronization time intelligent adjustment.
- **Default account:** Select the check box to send email from this account by default.
- **Sync deleted message:**

Notification settings

- **Email notifications:** Select to be notified in status bar when Email arrives.
- **Select ringtone:** Select the ringtone for incoming Email notification.
- **Vibrate:** Select to be notified by vibration with ringtones when Email arrives.

Server settings

- **Incoming settings:** Set the incoming server settings.
- **Outgoing settings:** Set the outgoing server settings.

Getting Connected

Connecting to the Internet

Your device's networking capabilities allow you to access the Internet or your corporate network.

Ways of Connecting to the Internet

You can use the default connection settings to connect to the Internet through your mobile network (GPRS/3G/EDGE), or Wi-Fi.


 

GPRS/3G/EDGE

Use **GPRS/3G/EDGE** to connect to the Internet and to send and receive MMS/Email messages on your Tablet. You will need a data plan to use your wireless service provider's GPRS/3G/EDGE network. Check with your wireless service provider for GPRS/3G/EDGE rates. If the GPRS/3G/EDGE settings are not pre-configured on your device, contact your operator for the parameters. Do not change the settings as this may


cause services to stop working.

Add a new GPRS/3G/EDGE connection


Before you begin, get the following information from your service provider:

- Access Point Name (APN)
 - Your user name and password if needed.
 - Server IP and the port number if the network uses a proxy server.
1. Tap the  >  > **Settings > Wireless & networks > Mobile networks > Access Point Names.**
 2. Tap the  > **New APN.**
 3. Tap **Name** to enter you APN name (You can name it as you like).
 4. Tap **APN** to enter the APN you want to add.
 5. Tap **Proxy** and **Port** to enter the Server IP and port if the network uses a proxy server.
 6. Tap and enter **Username** and **Password** (If there is no User name

and Password, leave them blank).

7. Tap and enter **APN type** if needed.
8. After finish the setting, press .



Notes:

If you want to set the APN to default settings, tap the  > **Reset to default**.


 
Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 meters).

Turn on Wi-Fi

1. Tap the  >  > **Settings** > **Wireless & networks**.
2. Select the **Wi-Fi** check box to turn Wi-Fi on.

Add a Wi-Fi network



1. Tap the  >  > **Settings > Wireless & networks > Wi-Fi settings.**

 
The Wi-Fi network names and security settings (open network or secured network) of detected Wi-Fi networks are displayed in the **Wi-Fi networks** section.

2. Tap a network to connect.
 - ▶ If you select an open network, you will be automatically connected to the network.
 - ▶ If you select a secured network, you will need to input the wireless password.

Check the Wi-Fi network status

You can check the Wi-Fi network status from the wireless controls.

Tap the  >  > **Settings > Wireless & networks > Wi-Fi settings**, then tap the wireless network that the device is currently connected to.

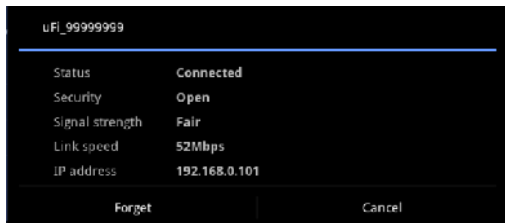

You can check the network status from the pop-up window.

Using the Tablet as a Modem



You can access the Internet on your PC via your Tablet as a modem. Note the function may result in data charges from your mobile Tablet carrier. Please contact them for detail.

Enabling the Tablet as a Modem

TIPS:

- Make sure that USB storage is turned off before enabling the modem function. To turn off USB storage, flick down the notification panel and tap **Turn off USB storage > Turn off USB storage**.
 - The PC accesses the Internet via the Tablet's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the Tablet as a modem.
1. When you connect your Tablet to your PC with the provided USB cable for the first time, a window will pop up and prompt you to install the driver.
 2. Double click the executable file (.exe) in the window and follow the prompt to finish the driver installation.

NOTES: If the window doesn't pop up automatically for some reason, please open the new CD-ROM drive on your PC manually and find the executable file to run it.

3. Tap on the Tablet  >  > **Settings > Wireless & networks > Tethering & portable hotspot** and tick the **USB tethering** check box. A new network connection will be created on your PC.
4. Go to **Control Panel > Network** on your PC to enable the new network connection.

Now you can launch the Internet browser on your PC and start surfing.

Disabling the Modem Function

Tap  >  > **Settings > Wireless & networks > Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.



Using the Tablet as a Wi-Fi Hotspot

You can use the Tablet as a portable WLAN router, providing Wi-Fi connection for one or multiple PC or other devices. The function need data connection on a mobile network and may result in data charges.

TIPS:

- The PC accesses the Internet via the Tablet's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the Tablet as a Wi-Fi hotspot.
- When the portable Wi-Fi hotspot function is enabled, you cannot access the internet with any application on your Tablet via its Wi-Fi connection.

Enabling the Wi-Fi Hotspot

5. Tap  >  > **Settings > Wireless & networks > Tethering & portable hotspot** and tick the **Portable Wi-Fi hotspot** check box.
6. Tap **Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot**.
7. Change the name of the hotspot and its security setting, if necessary. The default hotspot is set as an open one. You can tap **Open** and choose **WPA2 PSK** to set up a password. The password must have at least 8 characters.

8. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Tap  >  > **Settings** > **Wireless & networks** > **Tethering & portable hotspot** and clear the **Portable Wi-Fi hotspot** check box.

Using Browser


You can use your Browser to browse most of the websites. Some web pages may not be displayed properly as some specific web page technologies, such as Flash, are not supported by the browser. Your LIGHT will automatically create an EDGE or GPRS/3G connection for you while browsing web pages.

Opening Browser

Tap the  >  > **Browser** to start this function.




Opening Web Pages








 
In **Browser**, you can open web pages through the following ways.

1. Tap the address bar to enter the website you want to browse, and tap **Go**.
2. Tap the  to enter bookmarks screen and select an item to open.
3. Select an item from **History** tab of bookmarks screen.


Browsing Options

When browsing web pages, you can do some operations.



1. Tap the  to refresh the page.
2. Tap the  > **New tab** to open a new tab in the same browser window.
3. Tap the  > **New incognito tab** to open a new blank tab in the browser window to prevent the browser from storing information about your browsing session.

4. Tap the  > **Find on page** to enter the search item to view the search result.
5. Tap the  > **Share page** to send the page by **Bluetooth, Email, Gmail, or Messages**.
6. Tap the  > **Save page** to save the page.
7. Tap the  > **Page info** to view the page information.
8. Tap the  > **Downloads** to view and manage the download information.
9. Tap the  > **Settings** to set the browser.
10. Rotate your device sideways to view the landscape Browser Screen if you select the **Auto-rotate screen** check box in **Screen settings** by tapping  >  > **Settings** > **Display**.

Open a new browser window

1. Tap the  > **New tab** to open a new browser window in browser.
2. Tap the address bar to enter the website you want to browse.

Switch between different browser tab

You can open several web pages in the same window to multiply your web surfing fun. Touch  to open a new tab. To see a web page, just touch its tab. Touch  on the tab to close it.

Open links in web pages

1. Open a web page that contains a link.
2. Tap a link to open the page.

You can also hold on the link to open the shortcut menu:

- ▶ **Open:** Open the web page.
- ▶ **Open in new tab:** Open the web page in a new tab.
- ▶ **Save link:** Download the linked web page to your LIGHT.
- ▶ **Copy link URL:** Copy the link to the clipboard.
- ▶ **Select text:** Select text to copy, share, find web search or select all.

Download applications from web pages

1. Open a web page that contains an application link.
2. Tap the link or hold on the link and select **Save link** to download the application to your Tablet.


Notes:

Downloaded applications are saved in your microSD card.


Using Bookmarks

You can save your frequently-used pages as bookmarks on your Tablet.


Add a new bookmark

1. Open a web page.
2. Tap the .
3. Enter a name of the bookmark and tap **OK**.


Edit a bookmark

1. Open a Browser window.
2. Tap the .
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **OK** to save it.

Delete a bookmark

1. Open a Browser window.
2. Tap the .
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm the deletion.

Browser Settings

You can set the Browser text size, home page etc. by tapping the  > **Settings** from a browser window.

General

Set homepage: Select to edit the home page web site.

Sync with Google Chrome: Share bookmarks & other data between Android browser and Google Chrome.

Form auto-fill: fill out web forms in a single click.

Auto-fill data: Enter and save data for auto-filling web from fields.

Privacy & security

Page content settings

Privacy & security

- **Clear cache:** Delete all the cached page contents.
- **Clear history:** Clear the browser navigation history.

- **Show security warnings:** Select to show warnings if there is a problem with a site's security.
- **Accept cookies:** Select to allow sites to save and read cookies.
- **Clear all cookie data:** Clear the browser cookies.
- **Remember form data:** Select to remember the data you type in forms for later use.
- **Clear form data:** Clear the saved form data.
- **Enable location:** Select to allow sites to request access to your location.
- **Clear location access:** Select to clear access for all websites.
- **Remember passwords:** Select to save usernames and passwords for web sites.
- **Clear passwords:** Clear the saved passwords.

Advanced settings

- **Set search engine:** Select a search engine.

- **Open in background:** Select to open new windows behind the current one.
- **Enable JavaScript:** Select to enable JavaScript.
- **Enable plug-ins:** Select to enable plug-ins.
- **Website settings:** Advanced settings for individual websites.
- **Text size:** Adjust the browser text size.
- **Default zoom:** Set the browser default zoom.
- **Open pages in overview:** Select to show overview of newly opened pages.
- **Auto-fit pages:** Select to format the web pages to fit the screen.
- **Block pop-up:** Select to block pop-up windows.
- **Load images:** Select to show the images of web pages.
- **Text encoding:** Select a text encoding type.
- **Reset to default:** Clear all browser data and reset all settings to default.

Labs

- **Quick controls:** Swipe thumb from left or right edge to access quick controls and hide application and URL bars.
- **Most-visited homepage:** Your homepage displays your most-visited webpages.
- **Google Instant:** Use Google Instant when you use Google Search.


Bluetooth

Bluetooth is a short-range wireless communication technology. Wireless devices with Bluetooth capabilities can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired before the communication is performed.

Turning on/off Bluetooth

1. Tap the  >  > **Settings > Wireless & networks.**

2. Select the **Bluetooth** check box to turn Bluetooth on.


 
The  icon will be displayed in the status bar. If you want to turn Bluetooth off, clear the **Bluetooth** check box.

Notes:

By default, Bluetooth is turned off. If you turn it on, and then turn off your device, Bluetooth is also turned off. When you turn on your device again, Bluetooth turns on automatically.



Making your device visible

Other devices with Bluetooth capabilities can detect your LIGHT, establish a partnership, or use a Bluetooth service.

1. Tap the  >  > **Settings > Wireless & networks > Bluetooth settings.**
2. Select the **Bluetooth** check box if needed.
3. Select the **Discoverable** check box to make your device visible.



4. Select the **Discoverable timeout** to set how long device will be discoverable.

Change your device name

1. Tap the  >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Select the **Bluetooth** check box if needed.
3. Tap **Device name**.
4. Enter the name and tap **OK**.

Pair with another Bluetooth device

You can pair your device with another device that has Bluetooth capabilities. Once you do this, the two devices must have Bluetooth turned on but do not need to be visible for you to exchange information between them.

1. Tap the  >  > **Settings > Wireless & networks > Bluetooth settings.**
 2. Tap **Find nearby devices.**
Your Tablet will display all reachable Bluetooth devices in the **Found devices** section.
 3. Tap the device you want to pair with.
 4. If necessary, type your PIN to pair and tap **OK.**
- Tips:** The same PIN should be entered on the other device.

Experiencing Multimedia


Camera

Your Tablet comes with a 3.2–megapixel camera that lets you capture sharp pictures.

Opening Camera

 
Tap the  >  > **Camera** to open the camera.

Notes:





You can switch from the camera to the camcorder quickly: Drag the  switch up.

Tap  to change to front camera or back camera.

Taking Pictures


Aim the camera at the subject and then tap  to take the shot.

After you take the photo, tap the picture at the bottom of right corner (portrait mode) of your Camera Screen to open the gallery. Tap the photo to open it.


- Tap  to start a slideshow.
- Tap  to send the photo in a messaging, transfer it using Bluetooth wireless, or post it online.
- Tap  to delete the photo.
- Tap  to see details, rotate, crop or set as a contact photo or wallpaper.



 Camera Settings

Tap  to adjust the camera settings, like picture size.

Tap  to select the scene mode.

Tap  to select color effect.

Tap  to adjust the white balance.

Tap  /  to zoom in or zoom out the image.

Camcorder

Camcorder enables you to shoot video clips.

Opening Camcorder



Tap the  >  > **Camcorder** to open the camcorder.

Notes:





You can switch from the camcorder to the camera quickly:

- ▶ Drag the  switch down.


 




Shooting Videos

1. Tap  to start shooting.
2. Tap  to stop shooting.

After you take the photo, tap the picture at the bottom of right corner (portrait mode) of your Camera Screen to open the gallery. Tap the photo to open it.

- Tap  to start a slideshow.
- Tap  to send the photo in a messaging, transfer it using Bluetooth wireless, or post it online.
- Tap  to delete the photo.
- Tap  to see details.

Camera Settings



- Tap  to adjust the camera settings, like video duration.
- Tap  to set video quality.
- Tap  to select color effect.
- Tap  to adjust the white balance.
- Tap  /  to zoom in or zoom out the image.

Music

You can play digital audio files from your memory card in Music.

Opening Music

You need to copy the audio files you want to play to your memory card first.

1. Tap the  >  > **Music** to open Music Screen.
2. Select a file to open.

Playing Music


1. Tap the list heading to see your music grouped your way-like by Artist, by Albums, or Songs.
2. Tap a song from the list to start playing.

Notes:

Press the **Volume Keys** to adjust the volume.


Creating Playlists

You can create some playlists to organize your music files.


1. Select a music file you want to add to a new playlist.
2. Tap  > **New playlist...**
3. Enter the playlist name and tap **OK**.

The playlist is created and the file you selected is added to the playlist.

Managing Your Playlists

1. Tap **Playlists** from the Music Screen to view all playlists.
2. Tap  and a shortcut menu pops up.
 - i. Tap **Play** to play the playlist.
 - ii. Tap **Delete** to delete the playlist.

Add songs to your playlist

1. Open the folder where the song you want to add to a playlist is.
2. Tap  and select **Add to playlist**.
3. Select a playlist from the list.

Gallery

Gallery helps you view pictures and play back videos. For pictures, you can also do some basic editing tasks. For instance, set them as your wallpaper or contact icon, and share with your friends.

Sound Recorder




Sound Recorder enables you to record your voice memos that you can set as ringtone.

Opening Sound Recorder



Tap the  >  > **Sound Recorder** to open the sound recorder.

Notes: You need to install a memory card to use Sound Recorder.

Record Your Memo

1. Get the microTablet near to your mouth.
1. Tap  to start recording.
2. Tap  to stop recording.
3. Tap  to play back the voice recording.
4. Tap **Use this recording** to save the voice recording, or tap **Discard** to discard the recording.

Notes:

You can find your recordings in  >  > **Music** > **New and recent >recordings.**

Google Applications

Signing In to Your Google Account

Signing in to your Google Account enables you to synchronize Gmail, Calendar, web album, and contacts between your device and the web.

1. Tap a Google application, such as **Talk**.
2. Read the instructions and tap **Next**.
3. Tap **Sign in** if you have a Google account. Enter your user name and password, and then tap **Sign in**.

Tap **Create** if you do not have a Google account.

Using Gmail

Gmail is Google's web-based email service. Gmail is configured when you sign in to your Google account. Depending on your synchronization settings, Gmail on your LIGHT is automatically synchronized with your

Gmail account on the web.


 
Open Gmail

Tap the  >  > **Gmail**.

Creating and sending an gmail

1. In the Inbox, press the **Menu Key** and then tap **Compose**.
2. Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
3. Enter the email subject, and then compose your email.
4. After composing your email, tap the **Send**.

Using Google Calendar



Tap the  >  > **Calendar** to use Google Calendar, Google's

time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as are scheduled. All your appointments are synchronised to your Google account, which enables you to share your schedule, get your entire calendar on the go, and receive Email reminder for your upcoming events.

Using Google Talk

Google Talk is Google's instant messaging program, which enables you to communicate with other people that also use Google Talk.

Opening Google Talk


Tap the  >  > **Talk**.

Adding a new friend

You can only add people who have a Google account.

1. In the Friends list, press the  > **Invite a friend to chat.**
2. Enter the Google Talk instant messaging ID or Google email address of the friend you want to add.


Viewing and accepting an invitation

1. In the Friends list, press the  > **Invite a friend to chat.**

All chat invitations you have sent or received are listed on the pending invitations screen.

2. Tap a received pending invitation, and then tap **Accept** or **Decline**.


 
Starting a chat

1. Tap a friend in the Friends list.
2. Chat with your friend by entering text using the on-screen keyboard.
3. After entering your message, tap .

Settings



Basic Settings

Setting the Time and Date

1. Tap the  >  > **Settings** > **Date & time**.
2. Clear the **Automatic** check box if you want to set time and date by yourself.
3. Configure the time and date settings:
 - Tap **Automatic date & time** to use network-provided time.
 - Tap **Automatic time zone** to use network-provided time zone.
 - Tap **Set date**. Adjust the date, and tap **Set** to save it.
 - Tap **Select time zone** and tap the area where you are.
 - Tap **Set time**. Adjust the time, and tap **Set** to save it.

- Tap the check box behind **Use 24-hour format** to change the time format.
- Tap **Select date format** and select the type you like.

Screen Settings

By tapping the  >  > **Settings** > **Screen**, you can configure the display settings, such as brightness, auto-rotate screen, animation, and screen timeout.

Adjust the screen brightness

1. Tap **Brightness**.
2. Adjust the brightness and tap **OK**.

Adjust the delay before the screen turns off

1. Tap **Timeout**.
2. Select the time from the list.

Switch the screen orientation automatically

You can select to switch your screen orientation to landscape or portrait mode automatically when rotating your LIGHT.

Select the **Auto-rotate screen** check box.



Show animation when opening/closing windows

You can select to show an animation when opening or closing windows.

1. Tap **Animation**.
2. Select the animation type you'd like to use.

If you want to disable this function, select **No animations**.

Sound Settings

By tapping the  >  > **Settings** > **Sound**, you can configure the sound settings, such as ringtones and notifications.

Set the default notification ringtone

1. Select **Notification ringtone** in **Notifications** section.

2. Scroll the ringtone list and select one to set as the default notification ringtone.
3. Tap **OK** to save.

Adjust the ringtone, media and alarm volume

If you want to set the ringer volume, make sure your device is not in silent mode.

1. Tap **Volume** in the **General** section.
2. Adjust the **Ringtone**, **Media** and **Alarm** volume and tap **OK** to save.

Tips:


 
You can adjust the ringer volume quickly by pressing the **Volume Keys** from any screen.

Switch your device to vibration mode

Tap **Vibrate** and select vibration mode in the **General** section.

Enable the haptic feedback

You can get the vibration feedback while pressing the soft keys and on certain UI interfaces if you have enabled haptic feedback.

1. Tap the  >  > **Settings** > **Sound**.
2. Select the **Haptic feedback** check box.

Enable the screen selection tones

You can set your LIGHT to play sound while making a selection by touching the screen.

Select the **Audible selection** check box in the **Feedback** section.

Enable the screen lock sounds



You can set your Tablet to play sound when locking and unlocking the screen.

Select the **Screen lock sound** check box in the **Feedback** section.

Language Settings

You can change the system language of your device.


 
Change the language of your operating system

1. Tap the  >  > **Settings > Language & input > Select language.**
2. Select a language from the locale list to set it as the system language.


 
Mobile Network Services

The GSM and WCDMA services are supported by your device. You can configure the network settings according to your Tablet service.

Enable data roaming


 

1. Tap the  >  > > **Settings > Wireless & networks > Mobile networks.**
2. Select the **Data roaming** check box to enable data roaming.

Switch the network mode

1. Tap the  >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Mode**.
2. Select your preferred network mode to switch the network mode.

Set the Access Point Names

You can use the default Access Point Names (APN) to connect to the internet. If you want to add a new APN, please contact your network operator to get detailed information.

1. Tap the  >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Access Point Names**.
2. Tap the  > **New APN**.
3. Set the necessary parameters (see *Getting Connected -> Connecting to the Internet -> GPRS/3G/Edge -> Add a new GPRS/3G/EDGE connection*.)



Security Settings

 
You can protect your device and SIM/UIM card from unauthorized use.

Protecting Your Tablet with a Screen Lock

Set the screen unlock pattern

You can protect your Tablet from unauthorized use by creating a personal screen unlock pattern.

1. Tap the  >  > **Settings** > **Location & security** > **Configure lock screen**.
2. Tap **Pattern**.
3. Read the instructions and tap **Next**.
4. Draw your own pattern and tap **Continue**.

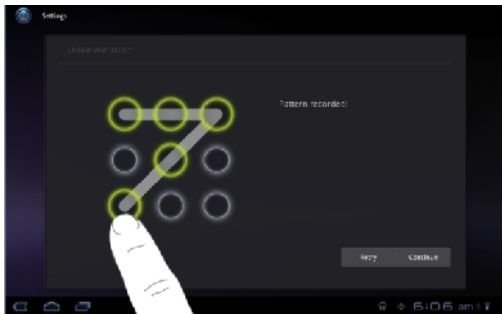

5. Draw the pattern again and tap **Confirm**.

Lock the screen

 
Press the **Power Key** to lock the screen.

Unlock the screen with a pattern

1. Press the **Power Key**.
2. Draw the pattern you set to unlock the screen.


 


If you make a mistake, your LIGHT will ask you to try again.

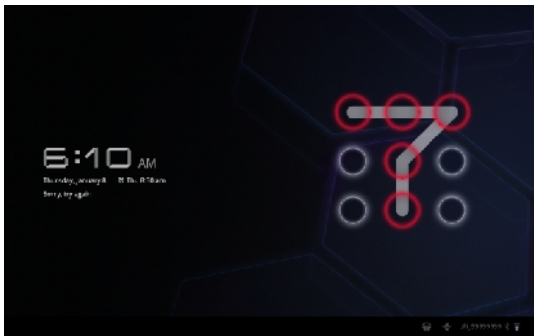



Protecting Your SIM Card with a PIN

You can set the PIN password to prevent others from using the SIM function. The initial PIN code is provided by your service operator.

1. Tap the  >  > **Settings > Location & security > Set up SIM card lock.**
2. Select the **Lock SIM/USIM card** check box.
3. Enter the PIN code and tap **OK**.

Change SIM PIN

Before changing SIM PIN, you need to enable it.



1. Tap the  >  > **Settings > Location & security > Set up SIM card lock.**
2. Tap **Change SIM PIN**.
3. Enter the old PIN code and tap **OK**.
4. Enter a new PIN code and tap **OK**.
5. Re-enter the new PIN code and tap **OK**.

Setting Up Credential Storage

You can select to allow applications to access secure certificates and

other credentials.



Enable secure credentials

1. Tap the  >  > **Settings > Location & security**.
2. Tap **Set password** to create a password.

Tips:

You can also install encrypted certificates from microSD card by tapping **Install from SD card**.

Delete credentials

1. Tap the  >  > **Settings > Location & security**.
2. Tap **Clear credentials** to clear credentials.

Managing Memory

Managing Your Memory Card

View the space information



Tap the  >  > **Settings** > **storage**.

You can view the **Total space/Available** space information in the **SD card** section.

Unmount your memory card



1. Tap the  >  > **Settings** > **storage**.
2. Tap **Unmount SD card**.

Erase the data of your memory card



1. Tap the  >  > **Settings** > **storage**.
2. Tap **Erase SD card**.
3. Tap **Erase SD card** to confirm.

Managing Internal Storage

View the Tablet space information

1. Tap the **H**  >  > **Settings** > **storage**.
2. Scroll down to view the **Available** in the **Internal storage** section.

Reset to factory settings

1. Tap the  >  > **Settings** > **Privacy**.
2. Tap **Factory data reset**.
3. Tap **Reset tablet**.
4. Tap **Erase everything**.

Application Settings

Managing Applications

You can view and manage the applications installed in your device.

View the applications installed in your device

Tap the  >  > **Settings > Applications > Manage applications.**

Your tablet will show you the applications in a list.


 
Allow the installation of non-Market applications

1. Tap the  >  > **Settings > Applications.**
2. Select the **Unknown sources** check box.

Install an application

You can install an application from the Android Market by selecting the item you want to download and tap **Install**.

Removing an Application

9. Tap  >  > **Settings > Applications > Manage applications.**
10. Select the application you want to delete.



11. Tap **Uninstall** and **OK** to confirm.

TIPS: Market applications can also be removed by going to the **Downloads** page in **Market**, selecting the unwanted application, and tapping **Uninstall**.

Moving an Application to or from the Memory Card


 
You can move the applications downloaded or installed on your Tablet to the memory card when the Tablet memory is full. You can also move applications to your Tablet if the memory card is getting full.

NOTE: Not all applications can be move to your Tablet or memory card.

1. Tap  >  > **Settings > Applications > Manage applications.**
2. Tap the application you want to move on the **Downloaded** tab.
3. Tap **Move to tablet** or **Move to SD card**.
- 1.

Other Settings




Speech Synthesis Settings

You can set the text-to-speech options by tapping the  >  > **Settings > Language & input > Voice input & output > Text-to-speech settings**. Before you use this function, you should install the voice data.

Other Applications

Alarming

Set alarms



1. Tap the  >  > **Clock**.
2. Tap the screen and tap  to create a new alarm, then enter alarm details.
3. Tap one alarm and select the **Turn alarm on** check box to enable alarm. You can edit the alarm items such as **Time**, **Repeat**, **Ringtone**, **vibrate**, and **Label**.

Global Time

Global Time is used to view the time of major cities in the world.

Calculator

Open Calculator

Tap the  >  > **Calculator.**






Your calculator has basic and advanced views.

1. Enter a number.
2. Tap operation symbol.
3. Enter another number.
4. Tap =.
5. Tap **CLEAR** to reset the calculator.





Maps

You use Maps to find your current location; to view real-time traffic conditions; to get detailed directions by foot, public transportation, bicycle, or car.

1. Tap the  >  > **Maps**.
2. Tap the **Search Maps** search box on the top to find the location you need.
3. Tap  to find the place you need.


 

 
Places

Google Places helps you find all kinds of businesses near you.

1. Tap the  >  > **Settings** > **Location & security** > **Use GPS satellites**.
2. Tap the  >  > **Places**. Wait while you are being located. Your location, when found, is displayed at the bottom of the screen.
3. Select a business category and the information of that type of business near you will be displayed.
You can also use the **Find places** search box on the top to find the business you need.
Note: Tap **Add** to add new business categories.
4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Navigation



You can use **Google Navigation** to get turn-by-turn driving directions, both spoken and displayed on your screen.



1. Tap the  >  > **Settings > Location & security > Use GPS satellites.**
2. Tap the  >  > **Navigation.** Wait while you are being located.
Your location, when found, is displayed at the bottom of the screen.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends.

If you join Google Latitude, you can view your friends' locations on your maps and share your location and other information with them.

1. Tap the  >  > **Latitude**.
2. After signing in to your Google account, tap the **Menu Key > Join Latitude** to enable Latitude service.

Each time you launch Maps application, your location will be determined using GPS and your Latitude status will be updated. You can tap the **Menu Key > Latitude** in **Maps** or  >  > **Latitude** to see your status as well as that of your selected friends.

In Latitude, tap the **Menu Key** to refresh the friends' status, see them on Maps, add new friends, or change privacy settings.

Specifications

Dimension		Approx. 257mm×172mm×11.5mm
Weight		Approx. 700g (with battery)
Bearer		GSM/WCDMA support
Main Display dimension, resolution, color space		10.1inch, 1280*800 ,260K
Back Camera	Sensor Type	CMOS
	Still Image Capture Resolution	5M Pixels
Front Camera	Sensor Type	CMOS
	Still Image Capture	2M Pixels

	Resolution	
Total internal memory		1GB RAM + 16GB ROM
Removable memory card		Support microSD card
Maximum Capacity of memory card		32GB
Battery	Capacity	6800mAh
	Standby time	Approx. 350h (subject to network status)
WAP browser version		Support webkit