

## LEGAL INFORMATION

Copyright © 2012 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to correct typographical errors, misprints or update specifications in this guide without prior notice.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

The phone is manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

We offer self-service for our smart terminal device users. Please visit ZTE official website (at [www.zte.com.cn](http://www.zte.com.cn)) for more information on self-service and supported product models. Information subject to the website.

Version No.: R1.0

Edition Time: 2012.09

1

Managing Shortcuts and Widgets .....	28
Rearranging the Favorites Tray .....	29
Entering Text .....	29
Editing Text .....	32
Opening and Switching apps .....	33
<b>Connecting to Networks and Devices.....</b>	<b>34</b>
Connecting to Mobile Networks .....	34
Connecting to Wi-Fi .....	35
Connecting to Bluetooth Devices .....	37
Connecting to Your Computer via USB .....	39
Sharing Your Mobile Data Connection.....	40
Connecting to Virtual Private Networks .....	42
<b>Phone Calls.....</b>	<b>45</b>
Placing and Ending Calls .....	45
Answering or Rejecting Calls .....	46
Working with the Call Log .....	46
Calling Your Contacts .....	48
Checking Voicemail.....	49
Using Options During a Call.....	49
Managing Multi-Party Calls .....	50
Adjusting Your Call Settings .....	51
<b>People.....</b>	<b>57</b>
Opening Your Contact List .....	57
Adding a New Contact.....	58
Setting Up Your Own Profile .....	58

3

## What's Inside

<b>Getting Started .....</b>	<b>9</b>
Your Phone at a Glance.....	9
Knowing the Keys.....	10
Installing the SIM Card, microSD Card, and Battery.....	11
Charging the Battery .....	14
Powering On/Off .....	15
Locking/Unlocking the Screen and Keys .....	15
Using the Touch Screen .....	16
Getting to Know the Home Screen.....	17
<b>Personalizing.....</b>	<b>19</b>
Changing the System Language.....	19
Setting the Date and Time .....	19
Changing Ringtone and Notification Sound .....	19
Adjusting Volumes .....	20
Applying New Wallpapers .....	21
Changing Screen Brightness.....	21
Protecting Your Phone with Screen Locks.....	22
Protecting Your Phone with Encryption .....	23
<b>Knowing the Basics .....</b>	<b>25</b>
Monitoring the Phone Status .....	25
Managing Notifications .....	26

2

Importing, Exporting, and Sharing Contacts.....	58
Working with Favorite Contacts .....	60
Working with Groups .....	61
Searching for a Contact .....	63
Editing Contacts .....	63
<b>Accounts .....</b>	<b>64</b>
Adding or Removing Accounts.....	64
Configuring Account Sync .....	65
<b>Email .....</b>	<b>67</b>
Set Up the First Email Account.....	67
Checking Your Emails .....	68
Responding to an Email.....	68
Writing and Sending an Email .....	70
Adding a Signature to Your Emails .....	70
Adding and Editing Email Accounts.....	71
Changing General Email Settings .....	72
<b>Gmail™ .....</b>	<b>73</b>
Opening Your Gmail Inbox .....	73
Switching Accounts.....	73
Writing and Sending a Message.....	74
Adding a Signature to Your Gmail Messages.....	74
Replying to or Forwarding a Message .....	75
Working with Received Attachments.....	76
Searching for Messages .....	76
Working with Labels .....	77

4

Changing Gmail Settings .....	78
<b>Messages .....</b>	<b>79</b>
Opening the Messages Screen.....	79
Sending a Text Message.....	79
Sending a Multimedia Message .....	80
Replying to a Message.....	81
Forwarding a Message.....	81
Viewing Details About a Message.....	81
Deleting Messages or Threads .....	82
Changing Message Settings.....	82
<b>Calendar .....</b>	<b>83</b>
Viewing Your Calendars and Events.....	83
Creating an Event.....	85
Editing or Deleting an Event.....	86
Changing Calendar Settings .....	86
<b>Google Talk .....</b>	<b>87</b>
Signing in to See Your Friends.....	87
Adding a Friend .....	88
Changing Your Online Status.....	88
Chatting with Friends .....	89
Changing Google Talk Settings.....	90
<b>Google+ .....</b>	<b>90</b>
Organizing Your Contacts .....	91
Getting Updates .....	91
Chatting with Contacts.....	92

 
<b>Gallery .....</b>	<b>112</b>
Opening Gallery.....	112
Working with Albums .....	112
Working with Pictures.....	113
Working with Videos .....	116
<b>Playing Your Music.....</b>	<b>117</b>
Creating Playlists .....	118
<b>Video Player .....</b>	<b>120</b>
Opening the Video Library .....	120
Playing and Control Videos .....	120
Managing Video Files.....	121
<b>Sound Recorder.....</b>	<b>122</b>
<b>More Apps.....</b>	<b>123</b>
Alarm .....	123
Backup and Restore .....	124
Calculator.....	124
File Manager .....	124
News and Weather.....	125
Note Pad .....	125
Task Manager .....	126
YouTube.....	126
<b>Play Store .....</b>	<b>126</b>
Browsing and Searching for Apps .....	127
Downloading and Installing Apps .....	127

Checking Photos .....	92
Checking and Managing Your Profile.....	92
<b>Browser.....</b>	<b>94</b>
Opening the Browser.....	94
Working with an Opened Page.....	96
Using Multiple Browser Windows .....	97
Downloading Files .....	98
Using Bookmarks .....	98
Changing Browser Settings.....	99
<b>Maps, Navigation, Places, and Latitude.....</b>	<b>100</b>
Activating Location Services.....	100
Getting Your Location .....	101
Searching for a Location.....	101
Getting Directions to Your Destination .....	102
Sharing Location.....	102
<b>Google Search, Voice Search, and Voice Actions .....</b>	<b>104</b>
Searching with Text.....	104
Searching by Speaking .....	105
Using Voice Actions .....	105
Changing Search and Voice Search Settings.....	105
<b>Camera .....</b>	<b>106</b>
Capturing a Photo .....	106
Customize Camera Settings.....	108
Recording a Video.....	109
Customizing Camcorder Settings.....	110

Managing Your Downloads.....	128
<b>Settings .....</b>	<b>129</b>
Wireless and Networks .....	129
Call Settings.....	131
Device .....	131
Personal .....	133
System.....	136
<b>Troubleshooting.....</b>	<b>138</b>
<b>For Your Safety .....</b>	<b>144</b>
General Safety .....	144
Distraction .....	145
Product Handling .....	146
Electrical Safety.....	149
Radio Frequency Interference.....	150
Explosive Environments .....	152
Radio Frequency (RF) Energy .....	152
FCC Compliance .....	154
CITA Requirements.....	157

# Getting Started

## Your Phone at a Glance

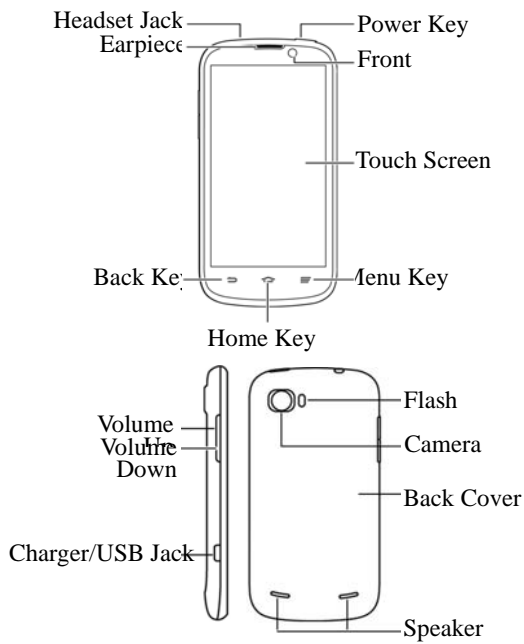

## Knowing the Keys

 
Key	Function
Power Key	<ul style="list-style-type: none"> <li>Press and hold to turn on your phone.</li> <li>Press and hold to turn on or off Silent, Vibration or Airplane mode, or to power off your phone.</li> <li>Press to switch your phone to Sleep mode.</li> <li>Press to wake up your phone.</li> </ul>
Volume Keys	Press or hold either end of the key to turn the volume up or down.
Menu Key	Touch to get the options for the current screen.
Home Key	<ul style="list-style-type: none"> <li>Touch to return to the Home Screen from any application or screen.</li> <li>Touch and hold to see recently used applications.</li> </ul>
Back Key	Touch to go to the previous screen.

10


## Installing the SIM Card, microSD Card, and Battery

Switch off your phone before installing or replacing the battery, SIM card or microSD card.

1. Remove the back cover.

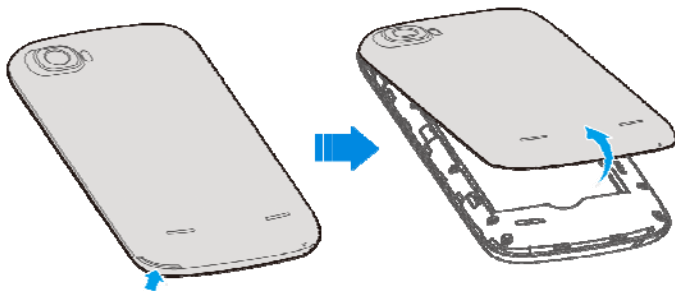

 
2. Hold the SIM card with the cut corner in the direction as shown and slide it into the card holder.

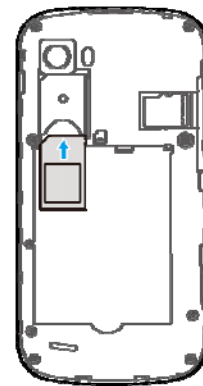

3. Hold your microSD card with the metal contacts facing down and slide it in.

11

 
12

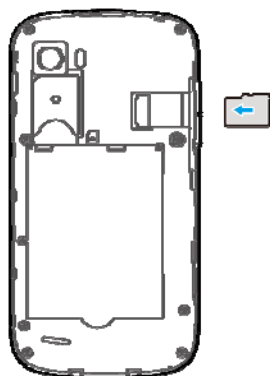

**NOTE:** *microSD* logo  is a trademark of the SD Card Association.

4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down the battery until it clicks into place.

 13

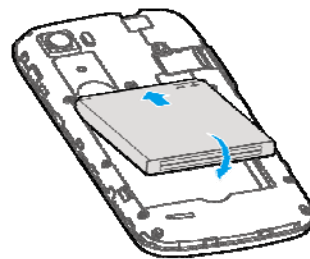


5. Press the cover gently back into place until you hear a click.

## Charging the Battery

 When you first get your new phone, you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

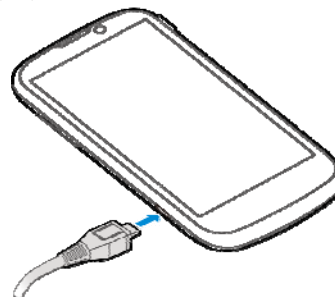


14

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

### How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

If the phone is on, you'll see this charging icon  appearing on the status bar.

## Powering On/Off

Make sure the SIM card is in your device and the battery is charged.

- Press and hold the **Power Key** to power on your phone.
- To power it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

## Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys when not in use, and to turn the screen back on and unlock it when you need it.


### To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power Key**.

15

**NOTE:** To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

### To unlock the screen and keys:

1. Press the **Power Key** to turn the screen on.
2. Long press the  icon to unlock the screen and keys.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter Settings – Personal – Security), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Touch**  
When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.
- **Touch and Hold**  
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- **Swipe or Slide**

16

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- **Drag**

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

- **Pinch**

 
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

- **Rotate the screen**

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

## Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

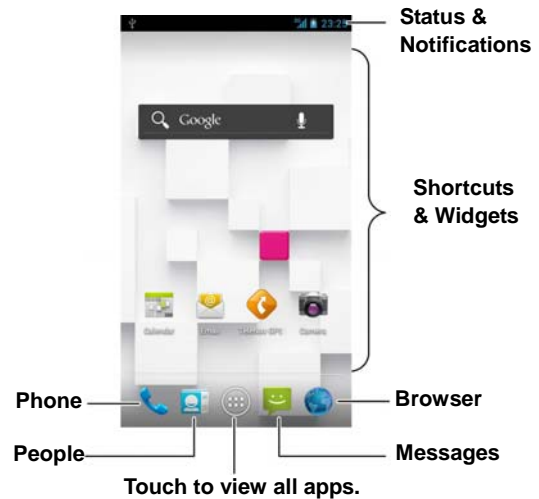

17

18

## Personalizing

### Changing the System Language

1. Touch the **Home Key > Menu Key > System settings > Language & input > Language**.
2. Select the language you need.

### Setting the Date and Time

1. Touch the **Home Key > Menu Key > System settings > Date & time**.
2. Clear the **Automatic date & time** and **Automatic time zone** check boxes if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

### Changing Ringtone and Notification Sound

You can customize the ringtone for incoming calls and the default notification sound quickly.

19

1. Touch the **Home Key > Menu Key > System settings > Sound**.
2. Touch **Phone ringtone** or **Default notification**.
3. Scroll through the ringtone list and select the ringtone you want to use.
4. Touch **OK**.

**NOTE:** To adjust the ringtone for an individual caller, go to that person's contact card in the People app, touch the Menu Key > Set ringtone for that card.


### Adjusting Volumes

1. Touch the **Home Key > Menu Key > System settings > Sound > Volumes**.
2. Adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.
3. Touch **OK** to save.



**TIP:** You can adjust the media volume by pressing the Volume Keys while using a media application. If no media application is active, press the Volume Keys to adjust ringtone volume (or the earpiece volume during a call).



#### To enable silent or vibration mode:

You can set the phone to silent or vibration mode by using one of the following methods.

- Press and hold the **Power Key** and then touch  to enable the

20

silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

- Press the **Volume Keys** down when no media application is active. When the  icon appears in the status bar, the phone is set to the vibration mode. When the  icon appears in the status bar, the phone is in the silent mode.
- Touch the **Home Key > Menu Key > System settings > Sound > Silent mode**, and touch **Off**, **Vibrate** or **Mute**.

## Applying New Wallpapers

You can set the wallpaper for the Home Screen or Lock Screen.

1. Touch the **Home Key > Menu Key > Wallpaper**.
2. Select a wallpaper source from **Gallery**, **Live Wallpapers**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
3. Touch **CROP** at the top of the screen (for Gallery images) or **Set wallpaper**.

## Changing Screen Brightness

1. Touch the **Home Key > Menu Key > System settings > Display > Brightness**.
2. Tick the **Automatic brightness** box to make the phone adjust the

21

screen brightness automatically, or clear the tick box to adjust the brightness manually.

3. Touch **OK**.

## Protecting Your Phone with Screen Locks

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch the **Home Key > Menu Key > System settings > Security**.
2. Touch **Screen lock**.
3. Touch **Pattern, PIN** or **Password**.
  - ▶ If you touch **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you're prompted to draw and redraw your own pattern.
  - ▶ If you touch **PIN** or **Password**, you're prompted to set a numeric PIN or a password you must enter to unlock your screen.

The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock it.

---

**IMPORTANT:** Screen lock options are listed in the approximate order of the strength of their security, starting with *None* and *Long Time Press*, which provide no security. A pattern provides minimal security,

22

---

*although it can be more convenient than the stronger options.*

## Protecting Your Phone with Encryption

You can encrypt all the data on your phone: Google Accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or password each time you power on your phone.

---

**WARNING!** Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

1. Set a lock screen PIN or password.
2. Charge the battery.
3. Plug in your phone.
4. Schedule an hour or more for the encryption process: you must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

23

5. Touch the **Home Key > Menu Key > System settings > Security > Encrypt phone**.
6. Read the information about encryption carefully.

The **Encrypt phone** button is dimmed if your battery's not charged or your phone's not plugged in.

If you change your mind about encrypting your phone, touch the **Back Key**.

---

**WARNING!** If you interrupt the encryption process, you will lose data.

7. Touch **Encrypt phone**.
8. Enter your lock screen PIN or password and touch **Next**.
9. Touch **Encrypt phone** again.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is complete, you're prompted to enter your PIN or password.




















Subsequently, you must enter your PIN or password each time you power on your phone, to decrypt it.

24

# Knowing the Basics

## Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status information on the right side. You can monitor the phone status by checking the following status icons.





 
 



 



 






	GPRS connected		Signal strength
	EDGE connected		No signal
	3G connected		Mobile data in use
	Flight mode		Ringer off
	Phone microphone off		Vibrate mode
	Battery low		Speaker on
	Battery partially drained		Bluetooth on
	Battery full		Connected to a Wi-Fi network
	Battery charging		Wi-Fi in use
	Alarm set		

25

## Managing Notifications

### Notification Icons

The status bar at the top of the home screen provides notification alerts on the left. You can view the following notification icons.

	New SMS		microSD card unmounted
	New MMS		microSD card unexpectedly removed
	New email		Upcoming event
	New Gmail message		New Wi-Fi network detected
	New Google Talk instant message		Downloading data
	Problem with SMS/MMS delivery		Sending data
	Missed call		USB tethering is on
	Call in progress		Portable Wi-Fi hotspot or Wi-Fi direct is on
	USB connected		GPS on
	Song is playing		Updates available

26


### Open/Close the Notification Panel


Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch the **Back Key**.

### Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications.


- To respond to a notification, just touch it.
- To remove a notification, swipe it sideways.
- To remove all notifications, touch  in the top right corner.

**TIP:** In the notification panel, touch  at the top of notifications list to get to the Settings menu quickly.

27

## Managing Shortcuts and Widgets


### Add Shortcuts and Widgets

- Touch the **Home Key** > .
- Touch **APPS** or **WIDGETS** to view the available apps and widgets.
- Touch and hold an item to add widget or shortcut to the Home Screen.

### Move Shortcuts or Widgets

- Touch and hold a widget or shortcut on the Home Screen.
- Drag it to the place you need.

### Remove Shortcuts or Widgets

- Touch and hold a widget or shortcut on the Home Screen.
- Drag it to  **Remove** to remove it.

### Adjust Widget Size

- Touch and hold a widget on the Home Screen and then release it.
- An outline appears on the widget. Drag the outline to resize the widget.

**NOTE:** Not all widgets can be resized.

28



## Rearranging the Favorites Tray

The Home Screen includes a customizable favorites tray visible from all extended Home Screens. You can drag apps, shortcuts, and other priority items in or out of the favorites tray for instant access from Home Screen.



### To remove items from the favorites tray:

Touch and hold an item in the favorites tray and drag it out of the tray.

### To add items to the favorites tray:


Touch and hold an item and drag it onto the favorites tray.

If the favorites tray is full, you need to remove an item in the tray.



 



## Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can touch the **Back Key** to hide the onscreen keyboard.

### Change Input Methods

1. When you use the onscreen keyboard to enter text, the icon 

29

 




- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more. Also, frequently used symbols are displayed on top of the keyboard.
- Touch  to start a new line.
- Touch  to use voice input.
- Touch and hold  to change the input languages or set up the Android keyboard.

### Swype Keyboard

Swype is a fast way to enter text. It lets you type a word by drawing through letters. Swype a word, then lift your finger.

Put your finger on the first letter of the word and draw a path from letter to letter, lifting up after the last letter.



- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in

 
31







appears on the notification panel.

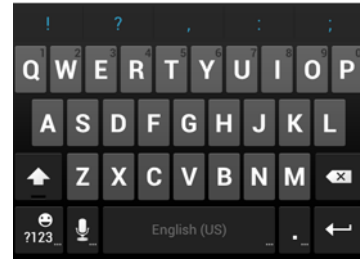2. Open the notification panel and touch **Select input method**.
3. Select an input method you need.

## Android Keyboard







The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter È, touch and hold  and the available accented letters and number 3 appear. Then slide to choose È.
- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.

30

uppercase.

- Touch  to change the language.
- Touch  to view the tips. Touch and hold to open settings menu.
- Touch  to select numbers and symbols.
- Touch  to delete the text before the cursor.
- Touch  to start a new line.
- Touch  to use voice input.

### Touch Input Settings

Choose the touch input settings by touching the **Menu Key > System settings > Language & input** from the Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.




## Editing Text

 
- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text.

32



The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.

- **Cut, copy, paste:** Select the text you want to manipulate. Then touch the Cut , Copy , or Paste  button:

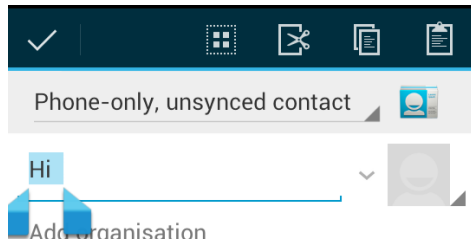

## Opening and Switching apps

### Open an App

1. Touch the **Home Key** > .
2. Slide left or right on the screen, and touch an app to open it.

### Switch Between Recently Opened Apps

1. Touch and hold the **Home Key**.  
A list of the names and thumbnails of apps you've used recently opens. If you've been using more apps than can fit on the screen, you can scroll the list up and down.

33

2. Touch a thumbnail to open that app.  
You can swipe a thumbnail sideways to remove it from the list.

# Connecting to Networks and Devices

## Connecting to Mobile Networks

### Select Network Operator

1. Touch the **Home Key** > **Menu Key** > **System settings** > **More** > **Mobile networks** > **Network operators**.
2. Touch **Search networks** to search for all available networks.
3. Touch a network in the network list to register manually.  
You can also touch **Select automatically** to select preferred network automatically.

### Control Mobile Data Use

To enable or disable data access:

1. Touch the **Home Key** > **Menu Key** > **System settings** > **More** > **Mobile networks**.
2. Tick the **Data enabled** check box to enable data access over the mobile network. Clear the check box to disable data access.

34

To get data services when roaming:

1. Touch the **Home Key** > **Menu Key** > **System settings** > **More** > **Mobile networks**.
2. Tick the **Data roaming** check box.

**IMPORTANT:** Data roaming may incur significant roaming charges.

### Use 2G Network Only to Save Power

1. Touch the **Home Key** > **Menu Key** > **System settings** > **More** > **Mobile networks**.
2. Tick the **Use only 2G networks** check box to save battery power.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

### Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.  
The Wi-Fi networks that your phone has detected are displayed with their names and security settings. If your phone finds a network that you connected to previously, it connects to it.
3. Touch a network name to connect to it.

35

**NOTE:** If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)

### Get Notified of Open Networks

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the **Menu Key** > **Advanced**.
4. Tick the **Network notification** check box.  
When Wi-Fi is on, you receive notifications in the Status bar when your phone detects an open Wi-Fi network. Clear the check box to turn off notifications.

### Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch **ADD NETWORK**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

36

## Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you have added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.


1. Touch the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the Wi-Fi network name and then touch **Forget**.

## Connecting to Bluetooth Devices

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

### Turning Bluetooth On/Off

1. Touch the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When Bluetooth is on, the  icon will appear in the Status bar.

### Making Your Phone Visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone 'visible' to them.

1. Touch the **Home Key > Menu Key > System settings >**

37

### Bluetooth.

2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch your device name on the top of the screen to make your phone visible or invisible.

---

*NOTE: Touch the Menu Key > Visibility timeout to set the Bluetooth visibility timeout of your phone.*

---

## Change the Device Name

When your phone is visible to other Bluetooth devices it will be seen by its name and you can assign it any name you want - like 'Ben's Phone'.

1. Touch the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch the **Menu Key > Rename phone**.
4. Edit the name and touch **Rename**.

## Pair with a Bluetooth Device

1. Touch the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch **SEARCH FOR DEVICES**. Your phone scans for and displays the IDs of all available Bluetooth devices in range.
4. Touch the device you want to pair with.

 
Follow the instructions to complete the pairing. If you're prompted to

38

enter a passcode, try entering 0000 or 1234 (the most common passcodes), or consult the documentation that came with the device.

## Unpair From a Bluetooth Device

You can make your phone forget its pairing connection with another Bluetooth device. To connect to the device again, you may need to enter or confirm a passcode again.


1. Touch the **Home Key > Menu Key > System settings > Bluetooth** and make sure Bluetooth is turned on.
2. In the list of paired devices, touch the icon  beside the Bluetooth device you want to unpair from.
3. Touch **Unpair**.

## Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSD card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

### Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification panel and touch the  icon.

39

3. Choose one of the following options:

- ▶ **Media device (MTP):** Transfer media files on Windows, or using Android File Transfer on Mac.
- ▶ **Camera (PTP):** Transfer photos using camera software, and transfer any files on the computers that don't support MTP.
- ▶ **Install driver:** Install the driver file of your phone in your computer.

## Disconnect Your Phone from the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Remove the microSD Card from Your Phone

If you need to remove the microSD card while the phone is on, you must unmount it first.

1. Touch the **Home Key > Menu Key > System settings > Storage**.
2. Slide down the screen and touch **Unmount SD card**.
3. You can now safely remove the microSD card from the phone.

## Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

40

## Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.

1. Connect your phone to your computer with a USB cable.
2. Touch the **Home Key > Menu Key > System settings > More > Tethering & portable hotspot**.
3. Tick the **USB tethering** check box. Your computer is now sharing your phone's data connection.
4. To stop sharing your data connection, uncheck **USB tethering**.

## Share Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. This feature needs data connection on a mobile network and may result in data charges.

---

*NOTE: When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's applications to access the Internet via its Wi-Fi connection. You still remain connected to the Internet via your mobile data network.*

---

1. Touch the **Home Key > Menu Key > System settings > More > Tethering & portable hotspot**.
2. Slide the **Wi-Fi hotspot** switch to the **ON** position. After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).

41

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

## Add a VPN

1. Touch the **Home Key > Menu Key > System settings > More > VPN**.
2. Touch **Add VPN network** and fill in the information provided by your network administrator.
3. Touch **Save**.

The VPN is added to the list on the VPN screen.

## Connect to a VPN

1. Touch the **Home Key > Menu Key > System settings > More > VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **Connect**.

When you are connected, the VPN connected icon appears in the Status bar.

## Modify a VPN

1. Touch the **Home Key > Menu Key > System settings > More > VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit network** and edit the VPN settings you want.

43

3. To stop sharing your data connection, slide the **Wi-Fi hotspot** switch to the **OFF** position.

## Rename or Secure Your Wi-Fi Hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure your portable Wi-Fi hotspot.

1. Touch the **Home Key > Menu Key > System settings > More > Tethering & portable hotspot > Configure Wi-Fi hotspot**.
2. Set your name and security options as follows:
  - ▶ **Network SSID:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - ▶ **Security:** Choose a security option: **Open** (not recommended), **WPA PSK** or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA PSK** or **WPA2 PSK**, touch the **Password** field to edit the security password.
3. Touch **Save** to save your settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

42

4. Touch **Save**.

## Delete a VPN

1. Touch the **Home Key > Menu Key > System settings > More > VPN**.
2. Touch and hold the VPN that you want to delete.
3. Touch **Delete network**.



 

44

# Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

## Placing and Ending Calls

### Place a Call by Dialing

1. Touch the **Home Key** > .
2. In the dialer tab , enter the phone number with the on-screen keypad. Touch  to delete wrong digits.  
**NOTE:** As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.
3. Touch the Phone icon  below the keypad to dial.

---



**TIP:** To make an international call, touch and hold the 0 key to enter the plus (+) symbol. Then enter the international prefix for the country, followed by the full phone number.

---


### End a Call

During a call, touch  on the screen.


45

To open the call log, you can touch the **Home Key** >  > .

### Place a Call from the Call Log


1. Open the call log.
2. Touch a number for more information about the call, or touch  beside it to call back.

---

 
**NOTE:** You can touch  on the bottom of the screen and select the call log type you want to view.

---

### Add a Call Log Number as a Contact

1. Open the call log.
2. Touch a number to view more call information.
3. Touch .
4. To add the number to an existing contact, touch a contact in the list. To add a new contact, touch **CREATE NEW CONTACT**.

### Take Other Actions on a Call Log Entry



1. Open the call log.
2. Touch a number to view more call information. While viewing the call details, you can:
  - ▶ Touch the number to call it.
  - ▶ Touch the **Menu Key** > **Edit number before call** to edit the number in the dialer before calling it.
  - ▶ Touch  to send a message.

47

## Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the caller ID and any additional information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

### Answer a Call



When you receive a phone call, drag  over  to answer the call.

---

**NOTE:** To silence the ringer before answering the call, press the Volume Keys up or down.

---

### Reject a Call

When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.

---


**TIP:** To edit the text response from within the Phone app, touch the **Menu Key** > **Settings** > **Quick responses**.

---


## Working with the Call Log

The Call log is a list of all the calls you've placed, received, or missed. It is a convenient way to redial a number, return a call, or add a number to your Contacts.

46

- ▶ Touch  to add the number as a contact.

### Delete the Call Log

1. Open the call log.
2. Touch the **Menu Key** > **Clear call log**.
3. Touch to select the call log(s) and then touch .
4. Touch **OK** to delete the selected call log(s).



---

**NOTE:** You can also touch a number in the call log screen, and touch the **Menu Key** > **Remove from call log** to delete the call log of the number.


---

## Calling Your Contacts

### Call a Contact

1. Touch the **Home Key** >  and then touch the Contact tab .
2. Flick the screen up or down to view all your contacts with phone numbers.

---



**TIP:** You can search for a contact by touching  on the bottom of the screen.

---


3. Touch a contact or number to call it.

48

## Call a Favorite Contact

1. Touch the **Home Key** >  and then touch the Contact tab .
2. Frequently called contacts or numbers are listed on the top of the screen. Touch a contact or number to call it.

## Checking Voicemail

1. Touch the **Home Key** > .
2. Touch and hold the **1 key** in the dialer.
3. Follow the voice prompts to listen to and manage your voicemail messages.



---

**NOTE:** To set your voicemail service, touch the **Menu Key** > **Settings** in the dialer and touch the voicemail settings you want to change. For detailed information, please contact your service provider.







---

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to turn on or off the speaker.
- Touch  to mute or unmute your microphone.

49

- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to switch to the dialer, for example to enter a code.
- Touch  to switch to another call in progress.
- Touch  to hold or unhold the current call.
- Touch  to merge separate calls as a single conference call.
- Touch  to end the current call.

---

**WARNING!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

---

## Managing Multi-Party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

---



**NOTE:** The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

---

### Switch Between Current Calls

When you're on a call, your phone screen informs you that another call is coming in and displays the caller ID.

**To respond to an incoming call while you're on a call:**

Drag  over  to answer the call. (This puts the first caller on

50




hold and answers the second call.)

**To switch between two calls:**


Touch  on the screen.

### Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialer screen, enter a number and touch .
2. Once you have established the connection, touch  and dial the second number. (This puts the first caller on hold and dials the second number.)
3. When you're connected to the second party, touch .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

## Adjusting Your Call Settings

### Use Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Call settings** > **Fixed Dialing Numbers**.

51

2. The following options are available:

- ▶ **Enable FDN:** Input the PIN2 code to enable the FDN feature.
- ▶ **Change PIN2:** Change the PIN2 code for FDN access.
- ▶ **FDN list:** Manage the FDN list.

---

**NOTE:** The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can cause the phone to lock. Contact the service provider for assistance.

---

### Edit Quick Response to Rejected Callers

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Call settings** > **Quick responses**.
2. Touch the text message to edit it.

### Set Voicemail

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Call settings**.
2. Touch **Voicemail service** to check. Voicemail service provided by your carrier is the default.
3. Touch **Voicemail settings** > **Voicemail number** to edit the voicemail number if necessary.

### Set TTY Mode

Your phone is a TTY compatible device. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone. Simply connect the TTY device to the phone's headset jack.

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Call**

52

### settings > TTY mode.

2. Select one of the following options.

- ▶ **TTY Off:** Users who can hear and talk can disable TTY support.
- ▶ **TTY Full:** Users who cannot talk or hear may use this mode to send and receive text messages through TTY device.
- ▶ **TTY HCO:** Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party, and respond via text messages.
- ▶ **TTY VCO:** Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.

## Turn on/off Hearing aids

Check the **Hearing aids** check box to turn on hearing aid compatibility, uncheck the check box to turn off it.

## Use Wi-Fi Calling

With Wi-Fi Calling you can send and receive calls and messages over a Wi-Fi network using your existing T-Mobile plan. Touch **Home Key > Menu Key > System settings > Call settings > Wi-Fi Calling > Help** or contact the service provider for details.

## Set IP dial

Check or uncheck the **IP dial** check box to enable/disable IP dial function. Touch **IP dialing number** to set up the IP dialing number.

53

unreachable) to enable it.

## Other Options

1. Touch the **Home Key > Menu Key > System settings > Call settings > Additional settings**.
2. Touch **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.

---

*NOTE: Please contact the service provider to check whether the caller ID and call waiting features are available.*

---

## Internet Call Settings

### To add an Internet calling account:

1. Touch the **Home Key > Menu Key > System settings > Call settings > Accounts**.
2. Touch **ADD ACCOUNT**.
3. Follow the instructions from your Internet calling service provider to configure the settings for your account.
4. Touch **SAVE**.

### To configure which calls use Internet calling:

You can configure your phone to place all calls using Internet calling (when you're connected to a Wi-Fi network), just calls to Internet calling addresses, or to ask each time you place a call.

1. Touch the **Home Key > Menu Key > System settings > Call settings**.

55

## Set Speed Dials

You can touch and hold the 1 ~ 9 key from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

### To assign a speed dial key:

1. Touch the **Home Key > Menu Key > System settings > Call settings > Speed dial**.
2. Touch a speed dial key.
3. Enter a phone number or select one from the contact list.
4. Touch **OK**.

## Bar Certain Calls

The call barring feature allows you to bar certain types of calls from your phone.

1. Touch the **Home Key > Menu Key > System settings > Call settings > Call barring settings**.
2. Set the restriction of specific types of calls from your phone.

## Forward Incoming Calls

The call forwarding feature allows you to forward your incoming calls to another phone number.

1. Touch the **Home Key > Menu Key > System settings > Call settings > Call forwarding**.
2. Touch an available option ( **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when**

54

2. Touch **Use Internet calling**.
3. Touch the Internet calling option you want.

### To configure your phone to receive Internet calls:

By default, your phone is configured to make Internet calls, but not to ensure that you will receive them. But you can configure your phone to accept Internet calls made to an Internet calling account you added to your phone.




1. Touch the **Home Key > Menu Key > System settings > Call settings > Accounts**.
2. Tick the **Receive incoming calls** check box. Checking this setting will reduce your battery life between charges.

56





# People

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, touch the **Home Key** > . From there, you can touch the tabs on the top of the screen to quickly switch to the contact groups  or frequently contacted contacts .

## Opening Your Contact List

1. Touch the **Home Key** >  and touch the all contacts tab  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.

---

*TIP: If you have many contacts stored, you'll see a slider when you touch the right side of the screen. To go directly to a letter, touch and hold the slider while dragging it to a letter.*

---


57

Bluetooth, Email or Messages, etc.

## Import Contacts From the SIM Card

1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Import from SIM card**.
3. Touch to select the contacts you need and then touch **OK**.

## Import Contacts From the microSD Card

1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Import from storage**.
3. Select to import one, multiple or all vCard files and touch **OK**.
4. Select the vCard file(s) and touch **OK**.

## Export Contacts to the SIM Card




1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Export to SIM card**.
3. Touch to select the contacts you need and then touch **OK**.
4. Read the promptness and then touch **OK**.

## Export Contacts to the microSD Card

1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Export to storage**.



59

## Adding a New Contact

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch  to add a new contact.
3. Touch the account field on the top of the screen to choose where to save the contact.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **DONE** to save the contact.

## Setting Up Your Own Profile

You can create your own name card in your phone.

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Scroll to the top of the screen and touch **Set up my profile**.
3. Edit your profile information and touch **DONE**.



## Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to your SIM or microSD card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using

58

3. The phone will prompt you with the name of the vCard file. Touch **OK** to create the file.

## Share Contacts



1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch the **Menu Key** > **Import/export** > **Share visible contacts**.
3. Choose a sending method. You can either send it via Bluetooth to another device, or as an attachment in an Email, a Gmail, or messages then follow the prompt.

## Working with Favorite Contacts

In the frequently contacted contacts  tab, you can find your favorite contacts and frequently contacted contacts.

## Add a Contact to Favorites




You can add the contacts used frequently to favorites, so you can find them quickly.

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch a contact and then touch  next to the contact name.

60





## Remove a Contact From Favorites




1. Touch the **Home Key** >  and touch the frequently contacted contacts tab .
2. Touch a favorite contact and then touch  next to the contact name.

## Working with Groups

### View Your Contact Groups



1. Touch the **Home Key** >  and touch the contact groups tab .
2. Scroll through the list to view the preset groups and the groups you create.
3. Touch a group to view its members.

### Add a New Group



1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch  to create a new group.
3. Touch the account field on the top of the screen to choose an account for the group.
4. Enter the group name and touch **DONE**.

61



## Add Members to a Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Menu Key** > **Edit**.
3. Touch **Type person's name**, and type the name of contacts you need to add. The corresponding person in the contacts will be displayed.
4. Touch the contacts you need as the group members.

### Delete a Group



1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Menu Key** > **Delete**.
3. Touch **OK** to disband the group. The contacts in the group will not be deleted.

### Edit a Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Menu Key**.
3. Touch **Edit** to edit the group name. Touch **Type person's name** to type the name of the contacts you need to add.


62

## Searching for a Contact


1. Touch the **Home Key** > .
2. Touch  on the bottom of the screen.
3. Input the contact name you want to search for. The contacts matched will be listed.

## Editing Contacts

### Edit Contact Details

1. Touch the **Home Key** > .
2. Touch a contact you need to edit and then touch the **Menu Key** > **Edit**.
3. Edit the contact and touch **DONE**.

### Set a Ringtone for a Contact

1. Touch the **Home Key** > .
2. Touch a contact you want to set a ringtone for and then touch the **Menu Key** > **Set ringtone**.
3. Select a ringtone you like and touch **OK**.


### Delete a Contact

1. Touch the **Home Key** > .

63

2. Touch a contact you want to delete and touch the **Menu Key** > **Delete**.
3. Touch **OK** to confirm.

### To delete several contacts, you can:

1. Touch the **Menu Key** > **Select item(s)** in the all contacts screen.
2. Touch to select the contacts you want to remove and then touch .
3. Touch **OK** to confirm.

## Accounts

### Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync accounts. You may also add other kinds of accounts, depending on the apps installed on your device.

### Add an Account

1. From the Home Screen, touch the **Menu Key** > **System settings** > **Accounts & sync**.
2. Touch **ADD ACCOUNT**.

64

3. Touch the type of account you want to add.
4. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or system administrator.
5. When the account is successfully added, it is displayed in the **Accounts & sync** list.


## Remove an Account

Removing an account will delete it and all information associated with it from your device, such as emails and contacts.

1. From the Home Screen, touch the **Menu Key > System settings > Accounts & sync**.
2. Touch the account.
3. Touch the **Menu Key > Remove account > Remove account**.

## Configuring Account Sync

### Configure Auto Sync Setting

1. Open the **Accounts & sync** settings screen.  
Your accounts and sync status are displayed.  turns green if automatic sync is enabled for some or all of the accounts data, and gray if automatic sync is disabled.
2. Touch the **ON/OFF** switch to turn on or off automatic sync.

65

- ▶ When automatic sync is turned on, changes you make to information on your device or on the web are automatically synced with each other.
- ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

## Sync Manually

1. Open the **Accounts & sync** settings screen.
2. Touch the account whose data you want to sync.
3. Touch the **Menu Key > Sync now**.

## Change an Account's Sync Settings

1. Open the **Accounts & sync** settings screen.
2. Touch the account whose sync settings you want to change. The Sync settings screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the device and the web will be kept in sync when auto-sync is turned on.

66


*servers. Please contact your mobile service provider and email service provider for more information.*

2. Set the email checking frequency, download options, account name and other settings. Touch **Next** when you finish.

Your phone will show the inbox of the email account and start to download email messages.

**TIP:** To add more email accounts, open **Email** to get the **Inbox** screen. Then touch the **Menu Key > Account settings** and touch **ADD ACCOUNT** at the top right of the screen.

## Email

Touch  in the Home Screen and select **Email**. Use it to read and send emails from services other than Gmail.

## Set Up the First Email Account


1. When you open **Email** for the first time, enter your email address and password and then touch **Next**.

**NOTE:** Your device will connect to the Internet and verify incoming and outgoing server settings before proceeding to the next step. If the email service provider is not a popular one, you need to select the type of your account and edit the settings for incoming and outgoing

67

## Checking Your Emails

Your device can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by touching  in any of the email account's boxes.

## Responding to an Email




You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.


## Rely to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.

68


- Do the following as you need:

To...	do...
Reply to the sender,	touch  > <b>Reply.</b>
Reply to the sender and all recipients of the original message,	touch  > <b>Reply all.</b>
Forward the message,	touch  > <b>Forward.</b>

- Edit your message and touch .


### Mark an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.


- While reading a message, touch the **Menu Key** > **Mark as unread.**
- While in a message list (for instance, the inbox), touch the checkboxes before the messages and then touch .

### Delete an Email




You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch  > **OK.**
- While in a message list (for instance, the inbox), touch the

69

checkboxes before the messages and then touch  > **OK.**

## Writing and Sending an Email

- Open your email Inbox.
- Touch  to open the compose screen.
- If you have more than one email account added on the device, touch the sender line to select the account you want to use for sending the message.
- Enter a contact name or email address in the 'To' field. Separate each recipient with a comma. You can also touch  to select recipients from your contacts.
- Enter the email subject and compose the email text.
- Touch **Menu Key** > **Attach file** to add audio files, images, videos and other types of files as attachment.
- Touch  at the top right of the screen to send the message.

## Adding a Signature to Your Emails

You can set a few lines of plain text as a signature for every outgoing email message from an account, such as your name and contact information.

- Open the **Email** app.
- Touch the **Menu Key** > **Account settings** and select the account

70

you want to add a signature to.

- Touch **Signature** and enter the text.
- Touch **OK.**

## Adding and Editing Email Accounts

### Add an Email Account

After setting up your first email account (see *Email – Set Up the First Email Account*), you can add more email accounts and manage them separately.

- Open **Email** to get the Inbox screen.
- Touch the **Menu Key** > **Account settings** and touch **ADD ACCOUNT** at the top right of the screen.
- Set up the account as you **set up** the first one.

### Edit an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, and details about the servers the account uses to send and receive mails.

- Open **Email** to get the Inbox screen.
- Touch the **Menu Key** > **Account settings** and touch the account whose settings you want to change.

71

- Make the changes you want and touch the **Back Key.**

### Remove an Email Account

- Open **Email** to get the Inbox screen.
- Touch the **Menu Key** > **Account settings** and touch the account you want to remove.
- Touch **Remove account** > **OK.**

## Changing General Email Settings


- General settings apply to all email accounts you add.
- Open **Email** to get the Inbox screen.
- Touch the **Menu Key** > **Account settings** > **General.**
- Make the changes you want and touch the **Back Key.**

72


After signing in to your Google account on the device, you can send and retrieve Gmail messages with the **Gmail** app.

**NOTE:** This feature may not be available in a certain region or with a certain service provider.

## Opening Your Gmail Inbox

Touch  in the Home Screen and select **Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Touch  at the bottom right of the screen to refresh your Inbox and download new messages.

## Switching Accounts




Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your device, you can switch accounts and view


73

2. Touch the **Menu Key** > **Settings** and select the account you want to add a signature to.
3. Touch **Signature** and enter the text.
4. Touch **OK**.

## Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.
2. Do the following as you need:

To...	do...
Reply to the sender,	touch  in the message header.
Reply to the sender and all recipients of the original message,	touch  in the message header > <b>Reply all</b> .
Forward the message,	touch  in the message header > <b>Forward</b> .



3. Edit your message and touch the send icon .

75

information in each account.

1. From your Inbox, touch the current account at the top of the screen.
2. From the drop-down menu, touch the account you want to see. The account's Inbox will open.

## Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Touch .
3. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach an image, touch the **Menu Key** > **Attach file** and select a file from the image gallery.
6. Touch  at the top right of the screen to send the message.

## Adding a Signature to Your Gmail Messages

You can set a few lines of plain text as a signature for every outgoing Gmail message. The signature you set on the device is independent of the signature you use for Gmail on the web.

1. Open the **Gmail** app.

74

## Working with Received Attachments

When a message has an attachment, Gmail displays information about that attachment at the top of the message.


Depending on the attachment type, the applications installed on your device, and on your settings, you may preview, view, play, save the attachment, or check information about the attachment.

**TIP:** For documents with multiple pages, touching the **Preview** option will only download the pages you view, while touching **View**, **Play**, or **Save** will download the entire file and cost more time and data.

## Searching for Messages

You can search for messages using words that appear in addresses, subjects, labels, or contents.

**NOTE:** If you search while the phone doesn't have an active Internet connection, only messages synchronized onto your device can be searched.

1. Open the **Gmail** app and touch .
2. Enter the words to search for and touch **Search** or the search icon on the screen keyboard.

76

As you type, suggestions may appear below the search field. You can touch a suggestion to search for it right away, or touch the arrow next to it to add its text to the search field.

 
3. In the search results, touch the message you need and work with it just as you would with any Gmail message.


## Working with Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

### To label or change labels:


1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to label.

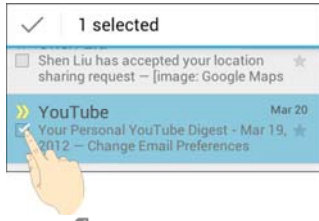


2. Touch the label icon  at the bottom of the screen.
3. Check or uncheck labels in the new screen and touch **OK**.

### To add stars to messages:

77

1. Open the **Gmail** app and touch in the message list the checkboxes before the messages you want to star.
2. At the bottom of the screen, touch .

### To view messages by label:

1. Open the **Gmail** app and touch the label icon  at the bottom of the message list without checking any message.
2. Touch the label to view messages with that label.

**TIP:** You can also touch the name of your account at the top of the screen. Then touch one of the labels listed in the **RECENT** section, below account names.

## Changing Gmail Settings


Touch **Menu Key > Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

78



## Messages

You can use Messages to exchange text messages (SMS) and multimedia messages (MMS).


### Opening the Messages Screen

Touch  in the favorites tray on the Home Screen.


The **Messages** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for message with keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.



### Sending a Text Message

1. On the **Messages** screen, touch  at the bottom.
2. Touch the **To** field, and enter the recipient's number or, if the recipient is stored in **People** as a contact, the first letters of the recipient's name. As matching contacts appear, you can touch a

suggested recipient.

3. Touch the **Type message** field, and enter the contents of your text message.
4. Touch .

### Sending a Multimedia Message

1. On the **Messages** screen, touch  at the bottom.
2. Enter the recipient and the text of the message, as you do when sending a text message.
3. Touch the **Menu Key > Add subject** to add a message subject.
4. Touch the paper clip icon  beside the message text box to open a menu where you can select the kind of media file to attach to the message.

<b>Pictures</b>	Select a picture to add to your message.
<b>Capture picture</b>	Take a photo and add to your message.
<b>Videos</b>	Select a video clip to attach to your message.
<b>Capture video</b>	Shoot a video clip and add to your message.
<b>Audio</b>	Select an audio file to add to your message.
<b>Record audio</b>	Record an audio file and add to your message.
<b>Slideshow</b>	Edit a slideshow and add to your message.



5. Touch .

79


80

## Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messages** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch .

## Forwarding a Message

1. On the **Messages** screen, touch the thread that has the message you want to forward.
2. Touch and hold the message.
3. Touch **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Touch .

## Viewing Details About a Message


1. Touch and hold a message in a thread.

81


2. Touch **View details** to see information about the message.

## Deleting Messages or Threads

### To delete messages in a thread:

1. On the **Messages** screen, touch a thread.
2. Touch the **Menu Key > Select item(s)**.
3. Touch the messages you want to delete. The ones you touch will have a check in the box in front of them.
4. Touch  at the bottom.
5. Touch **Delete**.

### To delete message threads:

1. On the **Messages** screen, touch and hold the thread you want to delete.
2. If there are more threads you want to delete, touch them one by one.
3. Touch  at the bottom.
4. Touch **Delete**.


## Changing Message Settings

Touch the **Menu Key > Settings** in the Messages screen to change Messages settings.

82

# Calendar

Calendar on the phone use the web-based Google Calendar service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch  in the Home Screen and select **Calendar**.

## Viewing Your Calendars and Events

### Change Calendars

1. Open the **Calendar** app.
2. Touch the **Menu Key > Calendars to display**.
3. In the new screen, touch the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

83

### Change Calendar Views

You can view your calendars in different forms. The app offers four view types: Month, Week, Day, and Agenda.

To change calendar views, touch the time shown at the top left and select the view you prefer.

You can also change to Day view from Month view by touching any day in the grid.




### TIPS:

- *In Month view, swipe vertically to see earlier months and later months.*
- *In Week or Day view, swipe horizontally to see earlier*

84



weeks/days and later weeks/days.

- When you are viewing earlier or later days, weeks, or months, touch  at the top to quickly switch to today.

## View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

## Creating an Event

1. In any Calendar view, touch the **Menu Key** > **New event** to open an event details screen for a new event.

You can also touch a spot in Day or Week view to highlight the spot, and then touch the spot again to add an event to that time spot.

2. Add details about the event.

Enter a name, location, time span, and other additional details about the event.

---

**NOTE:** If you have more than one calendar, you can choose the calendar to which you want to add the event by touching the current calendar above the Event name box.

---

3. Touch **DONE** at the top of the screen to save the new event.


85

## Google Talk

Google Talk is Google's instant messaging service. You can use it to communicate in real time with other people who also use Google Talk, on a phone, on the web, or with a desktop application.

## Signing in to See Your Friends

You must sign in to your Google account before you can use Google Talk.

Touch  in the Home Screen and select **Talk**. The first time you launch **Talk**, touch the account you want to sign in with. Your friends list is then displayed.

---




**NOTE:** You remain signed in to Google Talk after launching the Talk app even if you switch to other apps, until you explicitly sign out. To sign out, go back to your friends list and touch the **Menu Key** > **Sign out**.

---

87

## Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see *Viewing Your Calendars and Events – View Event Details* in this chapter).
3. Do one of the following as you need.

To...	do...
Edit the event,	Touch  at the top of the screen. Touch <b>DONE</b> to save your changes.
Delete the event,	Touch  at the top of the screen and then touch <b>OK</b> .
Share the event	Touch  at the top of the screen to share the event by MMS, Email or Bluetooth.


## Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda). Then touch the **Menu Key** > **Settings**.

You can change **General settings**, which apply to all accounts, or other settings that only apply to specific accounts.

86

## Adding a Friend

1. In the friends list, touch  at the top right of the screen.
2. Enter your friend's address and touch **DONE**.

Your friend's address in Google Talk is a Gmail or other email address that is configured to connect to Google Talk.

---

**NOTE:** If other people try to add you as a friend, you will receive a notification in the status bar and the invitation appears in your friends list. You can touch the invitation to **Accept**, **Decline**, or **Block**.

---

## Changing Your Online Status

1. Touch your own entry at the top of your friends list.
2. In the screen that opens, touch your current status to change it (or to sign out of **Talk**).

3. Enter a status message or if you already have one, edit it.




In addition to the standard status settings, you can also touch **Change to a recently-used status** to select a message that you've entered previously.

4. Touch the **Back Key** to return to your friends list.

88



## Chatting with Friends

1. Touch a friend in your friends list. The chat screen for that friend opens.
2. Enter your message and touch . You can also touch  or  to initiate a video chat or voice chat if the friend is online.

### Switch Between Active Chats

If you have more than one chat going, you can switch between these chats in one of the following ways.

- Touch the **Back Key** to return from one chat to the friends list. Then touch the other friend you want to chat with.
- While you are in one chat screen with a friend, swipe left or right to switch to the chat screen with the other friend.

### Use Group Chat


When you're chatting, you can invite additional friends to join a group chat.

1. On a chat screen, touch the **Menu Key > Add to chat**.
2. Touch the name of the friend to invite.

The friend you invited and the current participants receive an invitation to a group chat. Each friend who accepts the invitation joins the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your friends list,

89

## Organizing Your Contacts

1. Open the **Google+** app.
2. Touch **Circles**.
3. Touch **People > Find & invite people**.
3. Touch  next to a suggested person.
4. Touch an existing circle or select **Create a new circle**.

## Getting Updates

1. Open the **Google+** app.
2. Touch **Stream**.
3. Swipe left or right to see information shared with you by other users. Touch **Menu Key > Choose circles** to choose what groups of information are shown.
  - ▶ **NEARBY** shows posts shared with you by users near your current location.
  - ▶ **ALL CIRCLES, ACQUATANCES, FAMILY, FOLLOWING** and **FRIENDS** show updates from people you've added to your circles.
  - ▶ **WHAT'S HOT** shows popular posts on Google+.

91

with a group chat icon.

### End the Chat

While on a chat screen, touch the **Menu Key > End chat**.


You can also touch the **Menu Key > End all chats** while in the friends list to end all active chats.

## Changing Google Talk Settings

On any chat screen or the friends list, touch the **Menu Key > Settings** to change Google Talk settings for your account.

## Google+





Google+ is a social networking service offered by Google. The Google+ application on your device enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Touch  in the Home Screen and select **Google+**. The first time you open the Google+ app, select the instant upload and contact sync options.

90

## Chatting with Contacts

You can chat with your Google+ contacts through instant messaging, similar to sending a text with the Messages app.

1. Touch **Messenger** in the **Google+** app or touch from the Home Screen  **> Messenger**.
2. Touch  to create a new message.
3. Touch  to add recipients, they can be contacts or circles.
4. Enter the message.
5. Touch  to send the message.

## Checking Photos

You can see your own photo albums and those shared by other users. Touch **Photos** in the **Google+** app to see all available albums.

## Checking and Managing Your Profile

1. Touch **Profile** in the **Google+** app.
2. Swipe left or right to see your posts, personal info, and photos.


92

- ▶ Touch the **ABOUT** tab to change your profile photo.
- ▶ Touch the **PHOTOS** tab and open a photo. You can add comments to it, delete it, or set it as your profile photo.

# Browser


Use **Browser** to view web pages and search for information.

## Opening the Browser


Touch  in the favorites tray on the Home Screen.

Browser also opens when you touch a web link - for example, in an email or a text message.

### Open a Web Page or Search the Web

1. When you open Browser, the last web page you have viewed is displayed. If you have not used Browser recently, your home page opens. You can switch to another web page by doing the following.
2. Touch the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or enter terms you want to search for. As you enter text, your web search engine makes suggestions of web pages and queries. You can also touch the microphone icon  to search by voice.

4. Touch a suggestion or touch **Go** on the keyboard.  
If you touch a suggested page or enter an address and touch **Go**, that web page opens. If you touch a suggested query, your web search engine opens with the results.

**TIP:** Touch  to the left of the address box if you want to stop opening the page.

### Set the Homepage

Your home page opens when you open a new browser window, and when you start Browser after restarting your phone or after not using it for a while.

1. Open the page you want to set as your home page.
2. Touch the **Menu Key > Settings > General > Set homepage**.
3. Touch **Current page** or one of the following options.


<b>Blank page</b>	Open browser windows without opening a web page by default. This can make new Browser windows open more quickly.
<b>Default page</b>	Set the factory default URL as the homepage.
<b>Most visited sites</b>	Every new browser window displays a list of your most visited sites for you to choose from.
<b>Other</b>	Type a URL as the homepage.

### Get Information About the Current Page

Touch the page icon, to the left of the address box.

## Working with an Opened Page

While viewing most web pages, you can do the following operation.

Scroll	Swipe the screen in any direction.
Zoom out	Touch the screen with two fingers and pinch them together.
Zoom in	Touch the screen with two fingers and spread them apart.
Go back	Touch the <b>Back Key</b> to return to the page you've viewed previously in the same window.
Go forward	Touch the <b>Menu Key &gt; Forward</b> .
Refresh the page	Touch the <b>Menu Key &gt; Refresh</b> . Or touch the address box and then touch  .
Find text on the page	Touch the <b>Menu Key &gt; Find on page</b> and type the terms you search for.
Send the page URL to friends	Touch the <b>Menu Key &gt; Share page</b> and select how you want to send the URL.
Follow a link	Touch a link on the web page to open it.
Save the page for offline reading	Touch the <b>Menu Key &gt; Save for offline reading</b> .

#### TIPS:

- Some web sites may redirect you to the mobile version of their web pages, which mostly do not support scrolling or


*zooming. If you want to view the desktop version, touch the Menu Key and check Request desktop site.*

- *Besides links, Browser also recognizes some phone numbers, addresses, and similar information for you to act on. Try touching them and see what happens.*


## Using Multiple Browser Windows


You can open several browser windows at once and switch between multiple web pages.

### To open a new browser window:

1. Touch the tabs icon  to the right of the address box.
2. Touch + at the top right of the screen. A new browser window opens and the homepage is loaded.

### To switch between windows:

1. Touch the tabs icon  to the right of the address box.
2. Swipe vertically to scroll through the list of opened tabs.
3. Touch the thumbnail of the window you want to open.

**TIP:** *Swipe a thumbnail horizontally or touch its  to close the window.*

### To use incognito window for privacy browsing:

1. Pages you view in incognito windows won't appear in your

97

different account.

Touch the name beside **Add to** to change the place where the bookmark will be stored.

4. Touch **OK**.

### Edit a Bookmark

1. Touch the **Menu Key > Bookmarks**.
2. Touch and hold the bookmark to edit.
3. Touch **Edit bookmark**.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Touch **OK**.

### Delete a Bookmark


1. Touch the **Menu Key > Bookmarks**.
2. Touch and hold the bookmark to delete.
3. Touch **Delete bookmark**.
4. Touch **OK**.

## Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.


99

browsing history or search history. No trace will be left on your device once you close the window.

2. Touch the tabs icon  to the right of the address box.
3. Touch the **Menu Key > New incognito tab**.

## Downloading Files

Touch and hold an image or a link to a file or to another webpage. In the menu that opens, touch **Save image** or **Save link**.

The downloaded files are saved to your memory card. You can view or open them in the **Downloads** app ( > **Downloads**).

## Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, touch the **Menu Key > Bookmarks** in a browser window and then touch the bookmark.

### Bookmark a Web Page

1. Open the web page.
2. Touch the **Menu Key > Save to bookmarks**.
3. Edit the bookmark label and address if necessary, or choose a

98

To open the Browser settings screen, touch the **Menu Key > Settings**.

## Maps, Navigation, Places, and Latitude



### Activating Location Services

To use **Navigation**, **Places**, **Latitude**, and find your location on Google Maps, you must have location services activated on your device.

1. Touch the **Home Key > Menu Key > System settings > Location services**.
2. Select the location options you want to use.
  - ▶ Check **Google's location service** to use Wi-Fi and mobile networks to determine your approximate location.
  - ▶ Check **GPS satellites** to use GPS satellites to determine your location.
  - ▶ Check **Use assisted GPS** to use server to assist GPS.
  - ▶ Check **Location & Google search** to let Google use your location to improve search results and other services.



100

## Getting Your Location


1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the top right.

The map centers on a blue blinking dot that indicates your location.

## Searching for a Location

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the bottom.
3. Enter the place you're looking for in the search box at the top. You can enter an address, a city, or a type of business or establishment, for example, "museums in Shanghai." As you enter information, suggestions from your previous searches and from popular searches appear in a list below the search box. You can touch a suggestion to search for it.

---

**TIP:** You can also touch  beside the search box to use voice search.

---



4. Touch the search icon on the keyboard. Markers with letter labels indicating search results appear on the map.
5. Touch a marker to open a balloon that contains a label with summary information about the location.

101



6. Touch the balloon to open a screen with more information, as well as options for obtaining directions and more.

## Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the bottom.
3. Enter a start and end point and select the mode of transportation (car, public transit, or walking). If you have enabled My Location, this will appear in the start point field by default.
4. Touch **GET DIRECTIONS**. The directions to your destination are marked on the map. Touch the left or right arrow to see the direction step by step. You can also touch **DIRECTIONS LIST** to see your route displayed in a list.

---

**NOTE:** Touch  >  from the Home Screen to use **Google Maps Navigation (beta)** and get turn-by-turn voice directions.

---


## Sharing Location

Google Latitude lets you and your friends view each other's



102

locations on maps and share status messages with each other.

While using **Maps**, touch the top left of the screen and select the **Join Latitude**.

After you join in, you can always touch the top left of the screen in **Maps** and select **Latitude** or touch  > **Latitude** from the Home Screen to see your status as well as that of your selected friends.

In **Latitude**, you can do the following operations.



- Touch  to refresh friends' status.
- Touch **MAP VIEW** to see friends on **Maps**. You can touch the left/right arrow to switch between each friend and yourself.
- Touch  to add new friends to Latitude from contacts, via email addresses, or from suggested friends.
- Touch the **Menu Key** to show or hide stale friends, who haven't updated their location with you for a while.
- Touch the **Menu Key** > **Location Settings** to change Latitude settings or sign out of Latitude service.

103

## Google Search, Voice Search, and Voice Actions

You can search for information on the web or on your device using Google Search. You can also search the web or perform certain tasks by speaking.

## Searching with Text

1. Start the **Search** app in one of the following ways.
  - ▶ Touch  in the Home Screen and select **Search**.
  - ▶ Touch the Google Search box at the top of the Home Screen.
2. Enter the terms you want to search for and touch **Search** or , or touch a search suggestion.

104

## Searching by Speaking

1. Touch the microphone icon to the right of the search box.
2. Speak the terms you want to search for. When you're finished speaking, your speech is analyzed and the search is initiated.  
If Google Search didn't quite understand what you said, you are presented with a list of similar-sounding terms. Touch the correct term to start the search.

 
## Using Voice Actions

1. Touch the microphone icon to the right of the search box.
2. Speak the voice action you want to use. For example, say 'send a text'.  
Your speech is analyzed before the action is initiated.
3. Some voice actions need you to complete by speaking or typing more information. For example, a **send text** window appears after you say 'send a text'. You need to enter the recipient and message text by typing or speaking.

## Changing Search and Voice Search Settings

Open the **Search** app and touch the **Menu Key > Settings** to set

105

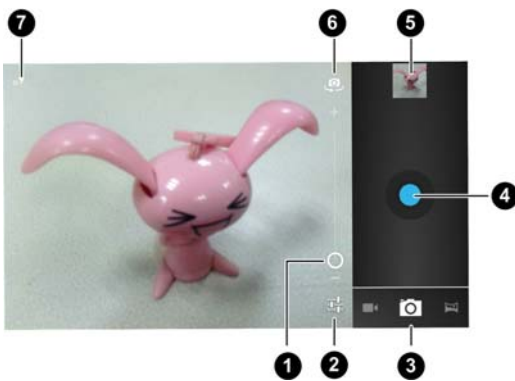

Number	Function
1	Hold the circle and slide to zoom in or out.
2	Change the camera settings.
3	Switch to the camcorder or to capture panorama.
4	Capture a photo.
5	View photos and videos you have captured.
6	Switch between the front and the back cameras.
7	Current flash mode.

3. Lightly touch the blue button

107

Searchable items.

To set Voice Search settings, touch in the Home Screen the **Menu Key > System settings > Language & input > Voice Search**.

## Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card or the phone's internal storage. You can copy them to your computer or access them in the **Gallery** app.

## Capturing a Photo

1. Touch in the Home Screen and select **Camera** to open the **Camera** app.
2. Aim the camera at the subject and make any necessary adjustment.

106


## Customize Camera Settings

 
Before taking a photo, you can touch to open the following camera setting options.

Brightness 	Set the brightness.
Flash mode 	Set flash mode as Auto, On or Off.
White balance 	Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors for your shots. Or allow the camera to adjust the white balance automatically.
Exposure 	Adjust the exposure. To let the camera set the exposure automatically, touch 0.
SCN 	Set Scene mode as Auto, Action, Night or Sunset.
Camera settings 	Set the store location, picture size, focus mode, faces detection, <b>grid</b> , <b>lag snapshot</b> , or restore default camera settings.

108

## Recording a Video

1. Touch  in the Home Screen and select **Camcorder**, or switch to the camcorder from the camera screen.
2. Aim the camera at the subject and make any necessary adjustment.

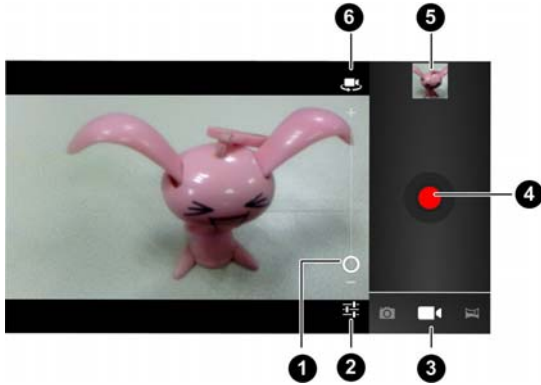

Number	Function
1	Hold the circle and slide to zoom in or out.
2	Change the camcorder settings.


109


Number	Function
3	Switch to the camera or to capture panorama.
4	Record a video.
5	View photos and videos you have captured.
6	Switch between the front and the back cameras.

3. Touch the red button  to start recording.
4. Touch  to stop recording.




**TIP:** While the recording is in progress, you can touch the screen to save the frame as a separate photo when you set video snapshot on.

## Customizing Camcorder Settings

 Before recording a video, you can touch  to open the following camcorder setting options.

White balance 	Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors for your videos. Or allow the camera to adjust the white balance automatically.
---	--


110

Time lapse interval 	Set the time lapse interval
Video quality 	Adjust video quality
Camera settings 	Set the store location, video snapshot or restore default camera settings.

111

## Gallery

### Opening Gallery

Touch  in the Home Screen and select **Gallery** to view albums of your pictures and videos.


### Working with Albums

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums. In addition, if you have selected to sync with your Picasa web albums, they are displayed as well.

#### To view album contents:


Touch an album to view the pictures and videos it contains.

#### To share albums:


1. Touch and hold an album until it is selected.
2. Touch more albums that you want to share.
3. Touch  at the top of the screen and select how you want to share the albums.

112

**To view details of an album:**

1. Touch and hold an album until it is selected.
2. Touch  > **Details**.

**To delete albums:**

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to delete.
3. Touch  > **Delete**.

**To download Picasa web albums:**

1. Touch the **Menu Key** > **Make available offline**.
2. Touch the Picasa web albums you want.
3. Touch **Done**.

## Working with Pictures

Touch a picture in an album to view the picture in full screen. Double-touch the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.



Number	Function
1	Touch to return to the album, where all its contents are displayed in a grid.
2	Thumbnails of all the pictures and videos in the album. Swipe horizontally to see more; touch a thumbnail to view it in full screen.
3	Share the picture.





Touch the **Menu Key** to delete the picture, browse the album contents in a slideshow, rotate the picture, view picture file detail, set it as contact icon or wallpaper, or edit it.



**NOTE:** All the options may not be available for certain albums or pictures.

## Retouch Your Pictures


You can edit any photos you took and some other pictures in **Gallery**. The changed picture is saved in the **Edited** album, while the original image is never affected.

1. Touch the **Menu Key** > **Edit** while viewing a picture in full screen to open the Edit interface.
2. Touch the icons along the bottom of the screen to edit the picture.

	Add fill light, highlight or shadows, or set to auto-fix.
	Apply effects such as cross-process, posterize, lomo, documentary, vignette, fisheye, and film grain.
	Apply color effects such as warmth, saturation, B&W, sepia, negative, tint, duo-tone as well as other effects including doodling on the picture.
	Crop, fix red eye, straighten, rotate, flip, or sharpen the picture.


3. To undo or redo the changes you've made to the picture, touch  or  at the top of the screen.
4. Touch **SAVE** to save the new picture to the **Edited** album.

## Share Your Pictures


1. Touch an album in the gallery and then touch a picture.
2. Touch  at the top of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the picture.

## Working with Videos

### Play Videos


1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the center to start playing.
3. Touch the video to view the playback controls.

### Share Videos

1. Touch an album in the gallery and then touch and hold the thumbnail of a video.
2. Touch  at the top of the screen.
3. Select how you want to share the video.

 


# Playing Your Music

Touch  in the Home Screen and select **Music** to play your digital audio files.

1. Select **Artists/Albums/Songs/Playlists** to find the songs you want to play.
2. Touch an item from the list to start playing.

**NOTE:** You can adjust the volume with the Volume Keys.

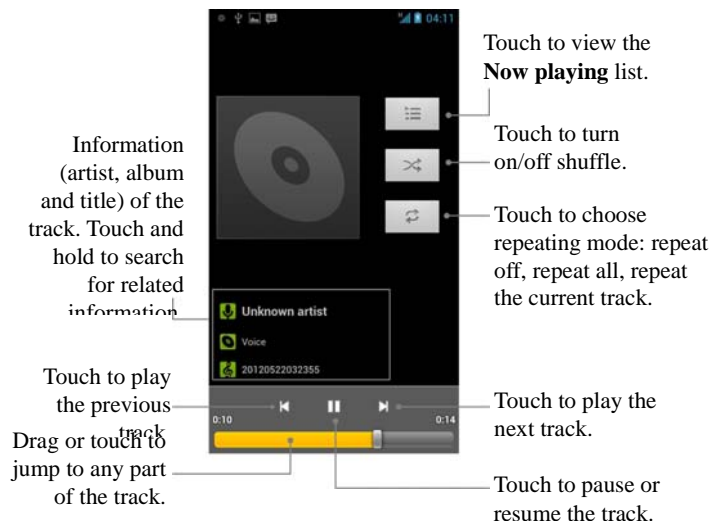

## Creating Playlists

Playlists help you organize your music files:

1. Select a song in **Music** you want to add to a new playlist.
2. Touch and hold the song until a shortcut menu pops up.
3. Touch **Add to playlist**.

117

118

4. Touch **New**.
5. Type the playlist name and touch **Save**.

## Managing Playlists

1. From the Music Screen touch **Playlists** to see them all.
2. Touch and hold the playlist you want to play or edit until a shortcut menu pops up.
3. Touch **Play**, **Delete** or **Rename**.

## Adding a Song to a Playlist

1. Open **Music** and find the song you need under **Artists**, **Albums**, **Songs** or **Playlists**.
2. Touch and hold the song until a shortcut menu pops up.
3. Touch **Add to playlist**.
4. Select a playlist.

## Setting a Song as Ringtone


1. Open **Music** and find the song you need under **Artists**, **Albums**, **Songs** or **Playlists**.
2. Touch and hold the song until a shortcut menu pops up.
3. Touch **Use as phone ringtone**.

119

# Video Player

Use the video player to play various kinds of videos.

## Opening the Video Library

Touch  in the Home Screen and select **Video Player** to view your video library.

Touch the tabs at the top of the screen to view the available videos.

- **ALL:** videos on your device.
- **LAST ADDED:** last added videos on your device.
- **CAMERA VIDEOS:** videos you have recorded with the device's camera.

## Playing and Control Videos

Touch a video in the video library to play it. Rotate the device on its side to watch the video in landscape view.


Touch the video to show the playback controls. You can pause and resume the playback, or jump to any part of the video. You can also

120


exit the video by touching  at the top left of the screen.

## Managing Video Files


### To delete videos:

1. Touch and hold a video in the video library. The video is highlighted.
2. To remove more videos, touch them.
3. Touch  > **Delete** at the bottom left of the screen.


### To share videos:

1. Touch and hold a video in the video library. The video is highlighted.
2. To share more videos, touch them.
3. Touch  at the bottom right of the screen and select how you want to share them.

### To rename a video:

1. Touch  next to the video you want to rename.
2. Touch **Rename**.
3. Type the new video name and touch **OK**.

### To view details of a video:

1. Touch  next to the video you want to view the details of.
2. Touch **Details**.


121

## More Apps

### Alarm


Set alarms or turn the device into a bedside clock.

#### Setting a New Alarm

1. Touch  in the Home Screen and select **Alarm**.
2. Touch a default alarm to configure it, or touch **Menu Key** > **Add alarm** at the bottom of the screen to create a new alarm.
3. Touch **Turn on alarm** and set up the alarm options, such as time, repeat, and ringtone.
4. Press the **Back Key** to save and exit.

#### Using Bed Clock

Bed clock displays the current time and the next alarm.





1. Touch  in the Home Screen and select **Alarm**.
2. If necessary, touch the **Menu Key** > **Preferences** > **Bed Clock Preferences** in the **Alarm** screen to set up bed clock options.

<b>Enable bed clock</b>	Turn on or off the bed clock function.
<b>Bed clock never</b>	Keep the bed clock screen turned on when


123

## Sound Recorder

**Sound Recorder** enables you to record voice memos and listen to them whenever you like.

1. Touch  in the Home Screen and select **Sound Recorder**.
2. Touch  to start recording.
3. Touch  to stop recording.
4. Touch  to play back the voice recording.
5. Touch **Done** to save the voice recording, or touch **Discard** to delete the recording.

---

**TIP:** You can find your recordings in  > **Music** > **Playlists** > **My recordings**.

---

122


---

<b>sleeps</b>	charging the device.
---------------	----------------------

---

3. Touch the **Menu Key** > **Bed Clock** to open the bed clock screen.

### Backup and Restore

Touch  in the Home Screen and select **Backup & restore**. You can back up your user data, such as contacts and messages, and installed applications to the memory card regularly. If the data get lost, restore it from the memory card.

Touch the **Menu Key** > **Help** to view detailed guide.

### Calculator

Touch  in the Home Screen and select **Calculator**.

---


**TIP:** Swipe left or right to switch between different panels.

---

### File Manager


Quickly access all of your images, videos, audio clips, and other types of files on your device and the memory card.

124

Touch  in the Home Screen and select **File Manager**. Touch the folder name at the top of the screen to switch between the memory card storage and the phone storage.


## News and Weather


**News & Weather** offers weather forecasts and news stories about common topics. You can also customize the news topics that are displayed.

Touch  in the Home Screen and select **News & Weather**. Swipe left or right to view weather forecasts and news headlines under different news topics.

Touch the **Menu Key** to refresh news and forecast data, or to change the settings.

## Note Pad

Touch  in the Home Screen and select **Note pad** to save and view your text notes.

Touch **NEW NOTE** to create a new note. Then enter your text and touch  to save it.


Touch a note to view its entire content. You can also delete it,

125

or rent music, books, movies, apps, and download them to your device.

## Browsing and Searching for Apps

You can browse apps by category and sort them in different ways. Touch a top-level category, such as **Games** and touch the app from any subcategory.

You can also search for apps using an app's name or description, or the developer's name. Just touch  and enter the search terms.

## Downloading and Installing Apps


When you find the app you are interested in through browsing or searching, touch it to open its details screen, where more information about the app is displayed.

1. Touch **Download** (free apps) or the price (paid apps) in the app details screen.
2. If the app is not free, you need to sign in to your Google Wallet account and select a payment method.
3. Touch **Accept & download** (free apps) or **Accept & buy** (paid apps) to accept the permissions for the app. Your app will start downloading immediately or once payment is successfully

127

share it, or change its title.

## Task Manager

Touch  in the Home Screen and select **Task Manager** to view or stop applications.


- Touch a task in the **Tasks** tab to switch to its screen, abort it, or see its detail.
- Touch the **Applications** tab to manage all the apps on your device.
- Touch the **Resources** tab to view the real-time system resources information.

## YouTube

Touch  in the Home Screen and select **YouTube**.

You can watch YouTube videos or upload your own.

## Play Store

Touch  in the Home Screen and select **Play Store**. You can buy

126

authorized.

## Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, **and configure** it to update itself automatically, and so on.

### View Your Downloaded Apps

1. On the Apps screen of **Play Store**, touch the **Menu Key > My Apps**.
2. Your list of installed apps opens, you can touch one to rate it, uninstall it, request a refund, and so on.

---

**TIP:** *Swipe left from the INSTALLED list to the ALL list, where you can view all the apps you downloaded previously on the device as well as other Android devices using the same Google account.*


---

### Uninstall an App

1. On the Apps screen of **Play Store**, touch the **Menu Key > My Apps**.
2. In the **INSTALLED** list, touch an app to open its details screen.
3. Touch **Uninstall > OK**.

128

# Settings

Touch  in the Home Screen and select **Settings**. The **Settings** app contains most of the tools for customizing and configuring your device.

## Wireless and Networks

### Wi-Fi

Turn on or off Wi-Fi and configure your Wi-Fi connections. See [Connecting to Networks and Devices – Connecting to Wi-Fi](#).

### Bluetooth

Turn on or off Bluetooth and configure your Bluetooth connections. See [Connecting to Networks and Devices – Connecting to Bluetooth Devices](#).

### Data Usage

Touch the **ON/OFF** switch to turn on or off mobile data. You can check how much data has been used during the time circle you set, set a mobile data limit and warning, see what app has been

129

### Wi-Fi Calling

Turn on or turn off the Wi-Fi Calling function. See [Phone calls – Adjusting Your Call Settings](#).

## Call Settings

Configure call related settings. See [Phone Calls – Adjusting Your Call Settings](#).

## Device

### Sound

Adjust volumes (see [Personalizing – Adjusting Volumes](#)), set up ringtone and notification sound (see [Personalizing – Changing Ringtone and Notification Sound](#)), and select system sounds.

Touch **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

### Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the Home Screen.
- **Auto-rotate screen:** Rotate the screen display as you rotate the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns

131

using mobile data, or restrict background data for individual apps.

### Airplane Mode

In the **Settings** app, touch **More** under Wireless & networks and check the box next to **Airplane mode**. All the device's radios that transmit voice or data are turned off.

### VPN

Set up and connect to virtual private networks. See [Connecting to Networks and Devices – Connecting to Virtual Private Networks](#).

### Tethering and Portable Hotspot

Share your device's mobile data connection with PCs or other devices via USB or Wi-Fi. See [Connecting to Networks and Devices – Sharing Your Mobile Data Connection](#).

### Mobile Networks

Control mobile data use, select mobile network and set access point names. See [Connecting to Networks and Devices – Connecting to Mobile Networks](#).

130

off.

- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.
- **Extra graphics acceleration:** Extra hardware graphics acceleration for selected applications.

### Storage

Check memory information for your memory card and internal storage.

**Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.

**Erase SD card:** Erase all data on the SD card.

### Battery

Check how much power remains for the battery and what has been using the battery.

### Apps

See apps installed on your device and manage them.

Touch an app in the **DOWNLOADED**, **ON SD CARD**, **RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.

132

## Personal

### Accounts and Sync

Manage your accounts and synchronization settings.

- Touch the **ON/OFF** switch to turn on or off auto-sync.
- Touch **ADD ACCOUNT** to sign in or create accounts on your device.
- Touch an account to set the sync settings for that account. You can then touch the **Menu Key > Sync now** to sync all checked items.
- Touch an account and then touch the **Menu Key > Remove account** to remove the account and all information related to it from your device.

### Location Services

Activate location services to determine your location. See [Maps, Navigation, Places and Latitude – Activating Location Services](#).

Select **Location & Google search** to improve Google search results and other services using your location information.

### Security

- **Screen lock:** Lock the screen with slide, pattern, PIN, or

133

### Language and Input

- **Language:** Select a language and region for your system.
- **Personal dictionary:** Add new words to the device's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. See [Knowing the Basics – Entering Text – Touch Input Settings](#).
- **Voice Search:**
  - ▶ **Language:** Select the language you use when entering text by speaking or searching by speaking.
  - ▶ **SafeSearch:** You can use Google SafeSearch filtering to block some results when you use Google search by voice.
  - ▶ **Block offensive words:** Replace offensive words with asterisk (\*) when you use Google voice recognition to transcribe your voice into text.
- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quick you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Pointer speed:** Select how fast the screen should scroll as you flick the screen.

135

password. See [Personalizing – Protecting Your Phone with Screen Locks](#).

- **Automatically lock:** Set the delay for the screen to automatically lock after the phone is turned to sleep mode.
- **Vibrate on touch:** Vibrate when touch the **Menu Key, Home Key and Back Key**.
- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect your privacy. See [Personalizing – Protecting Your Phone With Encryption](#).
- **Set up SIM card lock:**
  - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the SIM card.
  - ▶ **Change SIM PIN:** Change the PIN used to access the SIM card.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Tick the checkbox to permit installation of apps from sources other than the Play Store.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

134

### Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Set backup account.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your device to factory status. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.
- **Collect Diagnostics:** Collect diagnostics data for troubleshooting.

## System

### Date and Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

### Accessibility

Configure accessibility plug-ins on your device, such as using **Large text** for the visually-impaired.

136

## Developer Options

**Developer options** contains settings that are useful for developing Android applications.

## About Phone

View phone status and legal information. You can also check for system updates.

137

	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network trunk or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charged	The battery or battery charger is damaged.	Contact the dealer.

139

# Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.

138

	The phone's temperature is below 0°C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.

140













	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot switch your phone on	Battery power has been depleted.	Recharge the phone's battery.
(U)SIM card error	(U)SIM card malfunction or damage.	Take the (U)SIM card to your service provider for testing.
	(U)SIM card inserted improperly.	Insert the (U)SIM card properly.
	Debris on the (U)SIM card contacts.	Use a soft, dry cloth to clean the (U)SIM card contacts.
Unable to connect to the network	(U)SIM card invalid.	Contact your service provider.








	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
Cannot answer incoming calls	You have activated the Call barring feature.	Go to <b>Settings &gt; Call settings &gt; Call barring settings</b> , and then select Deactivate All.
You cannot make outgoing calls.	You have activated the Call barring feature.	Go to <b>Settings &gt; Call settings &gt; Call barring settings</b> , and then select Deactivate All.
	You have activated the Fixed dialing numbers.	Go to <b>Settings &gt; Call settings &gt; Fixed Dialing Numbers</b> and select <b>Disable FND</b> .

PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the (U)SIM card's PUK code, use the PUK code to unlock the (U)SIM card.
Unable to enter information into the phone book	The phone book's memory is already full.	Delete unnecessary data from the contacts.

## For Your Safety

### General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.

	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

145

- Do not carry your phone in your back pocket as it could break when you sit down.

### Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

### Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

### Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

### Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

147

## Product Handling

### General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care, and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.

146

### Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

### Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

### Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

148

## Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## Phone Heating

Your phone may become warm during charging and during normal use.

## Electrical Safety

### Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle's electrical system.

### Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

149

## Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

### Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

### Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

151

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

## Radio Frequency Interference

### General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

### Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

150

## Explosive Environments

### Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

## Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The

152

SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.737 W/kg and when worn on the body, as described in this user guide, is 1.11 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

**FCC ID: Q78-V9701**

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0cm from the body. Use of other enhancements may not ensure compliance with

153

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/ TV technician for help.

## Hearing Aid Compatibility (HAC) regulations for Mobile phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2007). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

155

FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.

## FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

154

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M3/T3 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

156

## CITA Requirements

- a) Do not disassemble or open crush, bend or deform, puncture or shred.
- b) Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- c) Only use the battery for the system for which it is specified.
- d) Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- e) Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- f) Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006.

Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- g) Promptly dispose of used batteries in accordance with local regulations
- h) Battery usage by children should be supervised.
- i) Avoid dropping the phone or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- j) Improper battery use may result in a fire, explosion or other hazard.

For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.