

ZTE-G X670

User Manual

Notice

Copyright © 2009 ZTE CORPORATION

All Rights Reserved

Your S by SFR 241 is made by ZTE CORPORATION.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of ZTE CORPORATION.

Trademarks

SFR and the SFR logos are trademarks of SFR.

Notice

The user manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Please read the safety precautions carefully to ensure the correct and safe use of your mobile phone. For detailed information, refer to the section “Important Safety Precautions”.

ZTE CORPORATION Address:

ZTE Plaza, Keji Road South, Hi-tech Industrial Park, Nanshan District, Shenzhen, P. R. China

Postal Code: 518057

V1.0

Important Safety Precautions

**Failure to comply with the following
precautions may be dangerous or illegal.**

Road safety

Full attention should be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving might cause distraction and lead to an accident. You should comply with local laws and regulations restricting the use of wireless devices while driving.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Aircraft

Mobile phones might cause interference. Consult airport and airline staff about the use of the phone on aircraft. Switch off the phone whenever you are instructed to do so.

Hospitals or healthcare facilities may have any equipment that might be sensitive to external radio frequency energy. Follow any regulations or rules in force.

All mobile phones may be subject to radio interference which could affect their performance.

Comply with special regulations in any area and switch off your phone when it is forbidden to use, or when it may cause interference or danger.

Waterproof

Your phone is not waterproof. Keep it dry.

Sensible use

Use only in the normal position (held to the ear).

Emergency calls

Key in the emergency number for your present location and then press the green Send key.

Keep your phone away from small children

Keep the phone and all parts, including accessories, out of reach of small children. The product contains small parts with sharp edges that may cause injury or may become detached and create a choking hazard.

Use the batteries and accessories authorized by ZTE only. Use of any unauthorized accessory could damage your phone or cause injury. Dispose of the used batteries according to the manufacturer's instructions.

At very high volume, prolonged listening to a mobile phone can damage your hearing.

Do not attempt to disassemble your phone or its accessories. Only qualified service personnel may repair your phone.

Health and safety information

SAR certification information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This model (FCC ID: Q78-X670) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.775 W/kg and when properly worn on the body is 1.142 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Precautions when using batteries

- Never use a damaged charger or battery.
- Use the battery only for its intended purpose.
- If you use the phone near a network base station, the phone shall require less power. Talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged hundreds of times, but it will gradually be worn out. When the battery's work time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use the batteries only authorized by ZTE, and recharge them only with ZTE-authorized chargers. Disconnect the charger from the power source when it is not in use.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A

phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).

- Do not short circuit the battery. Accidental short circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and - terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short circuiting the terminals may damage the battery or the object causing the short circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your mobile phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of mobile phones, one that every user must uphold. When driving a car, driving is your first responsibility. Using a phone while driving might cause distraction and lead to an accident. When using your mobile phone while driving, follow local regulations in the country or region.

Operating environment

Remember to follow any special regulations in force in the area where you are, and switch off your phone when it is forbidden to use, or may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the device should only be used in the normal operating position (held to your ear).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital mobile phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your

phone in healthcare facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions to turn off mobile phones and other radio equipment. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users must observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any mobile phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any mobile phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all mobile phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Click any blank space on the screen to enter dialing interface, key in the emergency number for your present location. Emergency numbers vary by location.
3. Press the green Send key.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all mobile phone equipment in your vehicle is mounted and operated properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the

same compartment as the phone, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Mobile phones might cause interference. Consult airport and airline staff about the use of the phone on aircraft. Switch off the phone whenever you are instructed to do so.
- Failure to follow these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care.

- Keep your phone and all its parts and accessories out of reach of small children and pets. They may inadvertently damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas above 60°C (140°F). High temperature can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove,

 
or radiator. The phone may explode when overheated.

- If the phone, battery or charger is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.







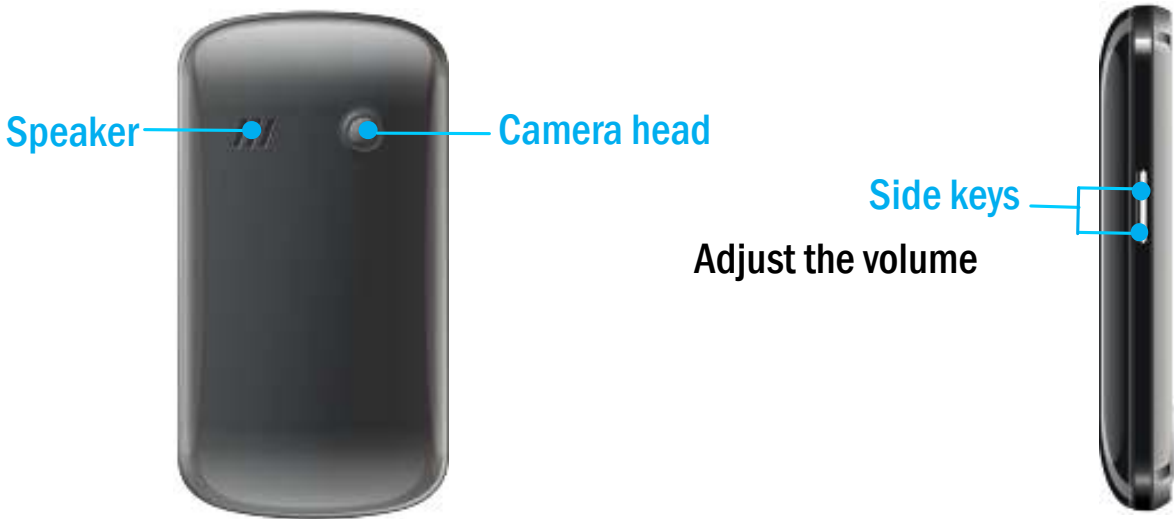






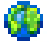





Your phone



Dial a number or answer a call. In standby mode, show the recent call history.



Interface icons

Icon	Description	Icon	Description
	Signal strength		Battery status
	Unread SMS		Unread MMS
	Call diverting		Calling or in call
	Hands-free		Alarm on
	Outdoor		Meeting
	Flight		Mute
	Self-defined		GPRS on
	Roaming		FM Radio on
	Unread Voicemail		Audio player on
	Stopwatch on		

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery performs best after performing a full charge/discharge 3 times.

Installing the battery

1. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment on the phone.
2. Push down on the right section of the battery until it clicks into place.
3. Replace the battery cover and press it gently until you hear a click.



Push down the battery



Press the cover until you hear a click

Removing the battery

1. Ensure that your mobile phone is switched off.
2. Remove the battery cover.
3. Pull the battery up and remove it from the mobile phone.



Pull up the cover



Pull up the battery from here

You want a mobile phone that is sophisticated yet easy to use and here it is in your hands! Naturally you are eager to start using it, but first you need to insert the SIM card.

Insert the SIM card as follows:

- Ensure that the phone is switched off and the charger is disconnected from the phone.
- Turn the phone over and remove the back cover.

- If the battery is already inside, remove it!
- Hold your SIM card with the cut corner oriented as shown and then slide it into the card holder face down.
- Replace the battery first.
- Replace the back cover.



Insert the SIM card



Pull out the SIM card

What is a SIM card?

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Your phone is powered by a rechargeable battery. The battery needs to be charged for at least 6-8 hours before you can make your first call.

- Insert the plug into the USB port at the bottom of the phone.
- Connect the other end of the cable to the charger then connect the charger to AC power socket.

Note: The side with arrow should be upright while connecting.

- If you are charging the battery when the mobile phone is switched on, the

display will show the battery icon with the bars moving from left to right. If charging the battery when the mobile phone is switched off, the display will show the battery charging animation.

- When the battery is fully charged, disconnect the charger.



How to insert the Memory Card

1. Turn off your mobile phone, remove the battery and disconnect the external power.
2. Open the clasp.
3. Insert the memory card into the slot.
4. Close the clasp.
5. Secure the clasp.



Follow the converse steps to remove the card. Turn off your mobile phone and remove SIM card before taking out the memory card.

Power on/ off your phone







Ensure that your SIM card is in your mobile phone and that the battery is charged.

Please hold the Power key to power on/off the phone. The phone will automatically search for the network.

Enter Main Menu

You can enter the main menu in two methods:

- Press **Centre** key.
- Sweep your finger on the screen from bottom to top or from top to bottom.

You will find four icons on the bottom of the screen. Click  to enter **Communication** interface, click  to enter **Entertainment** interface, click  to enter **Applications** interface, and click  to return to idle mode.

You can also sweep your finger on the screen from left to right, or press **Left/Right** key to switch the three interfaces.

After the keypad is locked, you could unlock it by sliding from left to right on the



icon with your finger.

Enter submenu

After you enter the main menu, click the icon to select the submenu, click Right Soft Key **Back** to return to the previous menu, and press End key to return to idle screen.

Shortcuts on the desktop

At the time display area on standby screen, use your finger to slide from left to right to view the shortcuts. Click the icon to enter the relevant interface. You could set these icons yourself. Select **Settings** → **Phone Settings** → **Display** → **Desktop Shortcuts**.

Menu tree

Communication

- 1. Call
- 2. Messages
 - 2.1 SMS
 - 2.2 MMS
- 3. Contacts
 - 3.1 Quick Search
 - 3.2 Search Entry
 - 3.3 Add New Contact
 - 3.4 Caller Group
 - 3.5 Copy All
 - 3.6 Delete All
 - 3.7 Preferred Storage
 - 3.8 Information
- 4. Call History
 - 4.1 Missed Calls
 - 4.2 Dialed Calls
 - 4.3 Received Calls
 - 4.4 Delete All
 - 4.5 Call Time


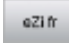
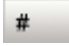



Entertainment

- 5. Music
 - 5.1 My Music
 - 5.2 FM Radio
 - 5.3 My Sounds
- 6. Games
 - 6.1 Magic Sushi
 - 6.2 Game Settings
- 7. Photos/Videos
 - 7.1 Camera
 - 7.2 My Video
 - 7.3 Album
 - 7.4 Video Camera
- 8. Live!

Applications

- 9. Settings
 - 9.1 Pen Calibration
 - 9.2 My Profiles
 - 9.3 Phone Settings
 - 9.4 Call Settings
 - 9.5 Network Settings
 - 9.6 Security Settings
 - 9.7 Restore Factory Settings
- 10. File Manager
- 11. Organizer
 - 11.1 Calendar
 - 11.2 Alarm
 - 11.3 Calculator
 - 11.4 Stopwatch
 - 11.5 Converter
 - 11.6 World Clock
- 12. Services
 - 12.1 STK
 - 12.2 Live!
 - 12.3 Data Account
 - 12.4 Voice Mail

Writing text

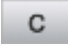
- Display virtual keyboard: click  to display the virtual keyboard.
- Change input method: click  or  to change the input method.
- Input Letters: in **ABC/abc** method, click the corresponding letters to input your desired letter. Each key is used to input multiple letters. Click the key quickly and repeatedly until your desired letter appears.
- Input Words: in **eZi ABC/eZi abc** method, click each key only once for every letter. The word changes after each key stroke. When you finish writing the word correctly, click the word to confirm. Predictive text input is based on a built-in dictionary.
- Input Digits: in **123** method, click the corresponding numbers on the screen to input your desired numbers.
- Input Symbol: click  to open the virtual keypad and select the corresponding symbols to input.
- Input Space: click  to input the space. It does not work in 123 method.
- Delete Character: press Right soft key **Clear** or click  to delete the previous character before the cursor.
- Delete all Characters: press and hold Right soft key **Clear** to delete all characters.
- Move Cursor: click the screen to move the cursor.

There are some phone numbers that you may want to call again and again so it makes sense to add these to your **Contacts**. You can then access these numbers quickly and easily.

- Go to **Contacts** → **Add New Contact**.
- Enter the contact's name and phone number.
- Press Left soft key **Save**.
- The contacts will be saved in SIM card by default. If you want to save the contacts in phone, please select **Contacts** → **Preferred Storage** → **Phone**.
- Back to **Add New Contact**, you could add the information such as **Home Number**, **Office Number**, etc. You could also classify the contact into different groups and set different ringtones for the contact.

You can also save a number right after you've made or received a phone call or a text message from someone who is not yet in your **Contacts**.

- To delete someone from your **Contacts**, first select the name, then press Left soft key **Options** and choose **Delete**.

In idle mode, click any blank space on the screen with touch-pen to display the dialing keyboard, click the numeric icons to input the number and click  to dial. One advantage of a mobile phone is that you can also store people's names and numbers in your mobile **Contacts** and call them more easily.

To call someone:

- Go to **Contacts** → **Quick Search**. From here use the **Up/Down** keys to find the name of the person you want to call. You can also type in the first letter of the name of the person you want to call.
- Now simply press the green Send key.
- End the call by pressing the red End key.
- Make sure you are in an area with sufficient coverage to make calls. The

strength of the network signal is indicated on top left corner of screen.

To answer a call:

You can press Send key to answer a call.

How to send and receive messages

You can use your mobile phone to send and receive text messages.

1. Go to **Messages** → **SMS** → **New Message**.
2. Write your message. For more information on writing, refer to Writing text.
3. Press the Left soft key **Options** and select **Send only**.

To send to a group, select **Send by Group**.

Select **Save and Send** to send the message and save it to **Outbox**.

Select **Save as Draft** to save it to **Drafts**.

4. Enter the recipient's number (You could select numbers from **Contacts** or **Call History**), and then select **Options** → **Send Now** to send the message to one person or more than one person.

Upon receiving a message, the mobile phone indicates with ringtone, prompt, or a new message icon.

1. Press Left soft key **Read** to open the new message. You can also go to **Inbox** to read the message.
2. Use **Up/Down** keys to read the message.
3. While the message is open, use Left soft key **Options** to **Reply**, **Delete**, or **Forward** the message.

How to use the phone as a U disk

As the phone is turned off, connect your mobile phone with PC through USB data cable. In this case, your mobile phone can be used as a U disk.

As the phone is turned on, connect your mobile phone with PC through USB data cable. If the memory card is inserted, you could select **Mass Storage**, then use the phone as a U disk.

Menu functions

Here are some brief instructions of the menu functions of the phone. The marked functions need the support from the operators.

Function	Description	Selection
Send text message	Send text messages to other mobile phones.	Messages→SMS→ New Message
Read text message	Read text messages (received, sent, drafts).	Messages→SMS→ Inbox/Outbox/Drafts
Delete text messages	Delete the text messages (inbox, outbox, drafts and all).	Messages→SMS→Delete Messages
Memory status	Check the memory status for text message in SIM card and Phone.	Messages→SMS →Message Settings→Memory Status
Preferred storage	Set the preferred storage for text message in Phone or SIM.	Messages→SMS →Message Settings→Preferred Storage
Text message counter	Check the number of sent messages and received messages.	Messages→SMS→ Text Message Counter
Send MMS	Send multimedia messages to other mobile phones.	Messages→MMS→ New Message
Templates	Select the template to send MMS.	Messages→MMS→Templates
Read MMS	Read multimedia messages (received, sent, drafts).	Messages→MMS→ Inbox/Outbox/Drafts
Memory status	Check the memory status for MMS.	Messages→MMS→Message Settings→Memory Status

Function	Description	Selection
Find contact	Search for a contact.	Contacts→Quick Search→type in the first letter of the name or Contacts→Search Entry
Edit	Edit a contact.	Contacts→Quick Search→Options→View→Edit
Add new contact	Save phone numbers and names.	Contacts→Add New Contact
Caller group	Divide the contacts into different groups. You could add/delete the members only when they are saved in Phone.	Contacts→Caller Group
Copy all	Copy all contacts from SIM to Phone or from Phone to SIM.	Contacts→Copy All
Delete all	Delete all contacts from SIM or Phone.	Contacts→Delete All
Preferred storage	Select the preferred storage as Phone or SIM .	Contacts→Preferred Storage
Owner number	Edit the Owner number.	Contacts→Information→Owner Number
Memory Status	Check the memory status for Contacts.	Contacts→Information→Memory Status
Recent calls	View all recent calls.	Call History→Missed Calls /Dialed Calls/Received Calls or press green Send key from the home screen
Delete call logs	Delete all call logs .	Call History→Delete All

Function	Description	Selection
Call time	View the duration of last call, dialed calls and received calls.	Call History→ Call Time
Audio player	Play an audio file.	Music→My Music
FM radio	Listen to FM radio.	Music→ FM Radio
Sound recorder	Record sound.	Music→ My Sounds
Games	The phone provides preset game. The detailed operation descriptions are in the game help.	Games
Camera	Take a photo.	Photos/Videos→Camera
Video player	Play a video file	Photos/Videos→My Video
Image viewer	View a photo.	Photos/Videos→Album
Video recorder	Record a video.	Photos/Videos→Video Camera
Pen calibration	Calibrate the screen to click more accurately.	Settings→Pen Calibration
Ringtone	Set ringtone.	Settings→My Profiles→ Select Profile (General/Meeting etc.)→Customise→Incoming Call Alert
Wallpaper	Set the standby animation on the screen.	Settings→ Phone Settings → Display→Wallpaper
Dedicated key	Set the shortcuts for navigation keys in idle mode.	Settings→ Phone Settings → Display→ Dedicated Key
Desktop Shortcuts	Set the shortcuts displayed on the standby screen in	Settings→ Phone Settings → Display→ Desktop Shortcuts

Function	Description	Selection
Key vibrate	idle mode. After this function is activated, your phone will slightly vibrate if you click the screen.	Settings→Phone Settings→Key Vibrate
LCD backlight	Set the backlight time and brightness.	Settings→Phone Settings→LCD Backlight
Time and date	Set time and date.	Settings→Phone Settings →Time and Date
Schedule power on/off	Power on/off according to the time you set.	Settings→Phone Settings→Schedule Power On/Off
Auto keypad lock	Auto keypad lock could prevent inadvertent key press.	Settings→Phone Settings →Auto Keypad Lock
Power Saving Mode	Select turn on or turn off Power Saving Mode.	Settings→Phone Settings →Power Saving Mode
Language	Set the default language.	Settings→Phone Settings→Language
Handwriting	Set the speed and color for touch pen.	Settings→Phone Settings→Handwriting
Auto update of date and time	Select whether or not update date and time automatically.	Settings→Phone Settings→Auto Update of Date and Time
Call waiting*	Hold the first call and answer the second call.	Settings→Call Settings→Call Waiting
Call divert*	Under certain circumstance, divert an incoming call to a designated phone number.	Settings→Call Settings→Call Divert
Speed dial	Edit 8 phone numbers and assign these numbers to the keys from 2 to 9.	Settings→Call Settings→Speed dial

Function	Description	Selection
	<p>Enter the dialing interface, hold the numeric key to quickly dial the corresponding phone number of the numeric key.</p>	
Blacklist	<p>You could edit the Black List. After you select “On” under “Mode”, the incoming call from the numbers in the Black List will be rejected.</p>	<p>Settings→ Call Settings → Black List</p>
Auto redial	<p>When selecting On for Auto redial, your phone will automatically redial after a while if the call is not answered.</p>	<p>Settings→ Call Settings→ Auto Redial</p>
Network setup	<p>Set network searching mode.</p>	<p>Settings→ Network Settings</p>
SIM lock	<p>SIM lock could prevent your SIM card from abuse. The default password to enter “Security Settings” is “0000”.</p>	<p>Settings→ Security Settings →SIM Lock</p>
Phone lock	<p>Phone lock could prevent your phone from abuse.</p>	<p>Settings→ Security Settings →Phone Lock</p>
Call barring*	<p>Set the type of call barring, such as incoming call barring or outgoing call barring.</p>	<p>Settings→ Security Settings→ Call Barring</p>
Fixed dial*	<p>After this function is activated, you could only dial the phone number in</p>	<p>Settings→Security Settings →Fixed Dial</p>

Function	Description	Selection
	Fixed dial list.	
Change password	Change PIN code, PIN2 code and Phone lock password.	Settings→Security Settings→Change password
Restore factory settings	Restore to original factory settings.	Settings→Restore Factory Settings
File manager	Check the files saved in phone and memory card.	File Manager
Calendar	View a full-screen monthly calendar.	Organizer→Calendar
Alarm	Set alarm alert time.	Organizer→Alarm
Calculator	Execute basic mathematical calculation.	Organizer→Calculator
Stopwatch	Time with a stopwatch	Organizer→Stopwatch
Unit converter	Perform conversions of basic units, such as weight, length, etc.	Organizer→Converter→Unit converter
Currency converter	Set the exchange rate and account foreign currency or vice versa.	Organizer→Converter→Currency converter
World clock	Check time in major cities.	Organizer→World Clock
WAP	Access WAP site.	Services→Live!
Voice Mail*	Let the other party to leave a message through voicemail, and check the voicemail to listen to the message.	Services→Voice Mail Enter the dialing interface and hold '1' to dial the voicemail number.

Note: When copying files from PC to Memory Card, please put the files in the relevant folder, e.g., put the music files in “My Music” folder and video files into “Video” folder.

Declaration of RoHS Compliance

To minimize the environmental impact and take more responsibility to the earth we live in, this document shall serve as formal declaration that the S by SFR 241 manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- (1) Lead (Pb)
- (2) Mercury (Hg)
- (3) Cadmium (Cd)
- (4) Hexavalent Chromium (Cr (VI))
- (5) Polybrominated biphenyls (PBB's)
- (6) Polybrominated diphenyl ethers (PBDE's)

(Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of the substances listed above are below the maximum level set by EU 2002/95/EC, or are exempt due to their application.)

The S by SFR 241 manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

