

ZTE-C X767

CDMA 2000 1X Digital Mobile Phone

User Manual

文档信息

版本	修订日期	修订人	软件版本	备注
V0.1	08年12月	丁雪璋		CTA
V1.0	09年1月	丁雪璋		送电信样品
V1.0	09年2月	丁雪璋	2月16号	
V1.0	09年2月	丁雪璋	2月24号	
V1.0	09年3月	丁雪璋	RH8C311	中国电信发货版本
V1.0	09年4月	丁雪璋		根据测试意见修改

ZTE中兴

CDMA 2000 1X Digital Mobile Phone

ZTE CORPORATION



The manual is applicable for **ZTE-C X767**

Copyright © 2009 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

Version 1.0, Mar., 2009

Contents

Before Use 1

Safety Instructions..... 1

Warnings and Precautions1

Parts Definition 7

Battery 10

Insert and Remove UIM Card
..... 12

Insert and Remove Memory
Card..... 13

Power On/Off..... 13

Enter 3D Interface..... 15

Service..... 16

E Surfing..... 16

Customer Service..... 16

My Document 16

ZTE Service..... 17

Communication 18

Dial 18

Make a call 18

Emergency Calls18

Answer calls.....19

Call Options.....19

Messages.....19

Send New.....19

View Message.....19

Settings20

Memory Info21

Voice Mail.....21

Contacts21

All List.....21

Find22

Add Name22

Groups22

Speed Dials23

Memory Status23

All Copy.....23

All Move23

Recent Calls.....23

Application.....24

Settings	24
Display.....	24
Call	24
Security	26
Extras	28
Pen Calibration.....	29
Profiles	29
Organizer.....	30
Games.....	30
Alarm.....	30
Scheduler	30
Phone Location	30
Stopwatch.....	30
Calculator	31
Unit Conversion.....	31
World Time	31
Multimedia	31
Media Player	31
ZTE Download.....	32
Camera.....	32
Camera Recorder..	32
Radio	33
Record.....	33

Dial-up Internet Access ..34

Input Method.....35

 Handwriting Input

 Virtual Keypad Input.....

Appendix.....38

 Clearance and Maintenance38

 Failure Analysis

Before Use

Thank you for choosing ZTE-C X767 digital mobile phone. (Shortly referred to as “Mobile Phone”)

To guarantee your mobile phone always in its best condition, please read this manual carefully and keep it for future use.

The pictures in this user manual are only used to demonstrate the mobile phone’s functions, so they are maybe different from what you see on your mobile phone. Please refer to your mobile phone if there are any differences.

Safety Instructions

If your mobile phone is lost or stolen, notify your network service provider immediately to prevent unauthorized use. To protect your mobile phone against abuse, take the following precautions:

- Set PIN code for UIM card and modify it from time to time
- Take your mobile phone with yourself as much as possible

Warnings and Precautions

Precautions for using the mobile phone



Traffic Security

- Pay attention to traffic security and follow all local relevant

laws and regulations while driving.



Interference

- Do not use your mobile phone near weak signal or high-precision electronic devices. Radio wave interference may cause electronic equipment to malfunction. Pay special attention when you use your mobile phone near audio phone, pacemaker and/or other medical electronic devices, fire detector, auto-door and/or other auto-control equipments. For details on the influence caused by your mobile phone on pacemaker or other medical electronic devices, please consult the manufacturer or your local distributor.
- Do not use your mobile phone near TV set, radio or office automated equipments to avoid mutual influence.



On Airplane

- Turn off your mobile phone on airplane where it's forbidden to use it. The mobile phone may affect the normal operation of electronic devices.



In Hospital

- Turn off your mobile phone in hospital where it's forbidden to use it. The mobile phone may affect the normal operation of medical apparatus.



In Gas Station

- Do not use your mobile phone in gas station. Turn off your mobile phone near fuels or chemicals.



Waterproof

- Keep your mobile phone away from water. This may cause overheating, electric leakage or failure if water or any other kind of liquid enters your mobile phone.



Disassemble

- Do not disassemble or reassemble your mobile phone because this might cause damage, electric leakage or circuit failure.



Antenna

- Do not use your mobile phone if your antenna is damaged because this may cause body injury.



Away from Children

- Keep your mobile phone from children. It may cause body injury when the mobile phone is used as a toy.



Original Accessories

- Use the original accessories or those authenticated by the manufacturer. Using non-original accessories may affect the mobile phone's performance, violate the warranty provisions or relevant national regulations about telecom terminals, or even cause body injury.




Explosion Areas

- Please strictly follow relevant laws and regulations to turn off your mobile phone in or near the explosion areas.



Emergency Calls

- Make sure your mobile phone is turned on and in the service area. Input the emergency number and press  key to dial. Let others know where you are, and do not hang up the call without permission.

Precautions for using the battery

- Put the battery in a cool and ventilated place where there is no direct sunshine.
- The battery life is usually limited, and it becomes shorter and shorter after the battery is charged over and over again. If the charging fails several times, this indicates that the battery is worn out and the replacement is advised.

- Dispose the worn-out batteries in designated places according to specified regulations rather than throw them into residential garbage.
- Do not throw the worn-out batteries into fire because this might cause fire or explosion.
- Do not press with great force when installing the battery because this may result in leakage, overheating, explosion or fire.
- Do not disassemble or reassemble the battery because this may result in leakage, overheating, explosion or fire.
- If the battery becomes hot, changes in color or gets deformed during the course of use, charging or storage, please immediately stop using and replace it.
- Keep the battery away from dampness to prevent overheating, smoldering or erosion.
- Do not keep charging the battery continuously over 24 hours.



Note:

 
 
If the battery is damaged, please avoid contacting the materials in it. If your skin has contacted those materials, flush your skin with lots of water and seek for help from doctors if necessary.

Precautions for using the charger

- Use the power voltage between 110VAC and 220VAC. Using the voltage beyond the range may cause leakage, fire or damage to the phone and charger.

- Do not short-circuit the charger because this might cause electric shock, smoldering or damage.
- Do not charge the battery in direct sunshine, near dampness, dust, vibration, TV set, or radio (may affect the image, sound), etc.
- Do not use the charger if the power cable is damaged because this might cause fire or electric shock.
- Do not place water containers near the charger to avoid water splashing.
- If water or any other kind of liquid splashes on the charger, immediately remove the charger from the power socket to avoid overheating, fire, electric shock or failure.
- Do not disassemble or reassemble the charger because this might cause body injury, electric shock, fire or damage.
- Do not touch any charger, power cable or power socket with wet hands to avoid electric shock.
- Do not place heavy objects onto power cables or refit power cable because this might cause electric shock or fire.
- Remove power plug from the socket before cleaning and maintenance.
- Hold the charger rather than pull the power cable while removing the plug from the socket because this might cause damage, electric shock or fire.

Parts Definition

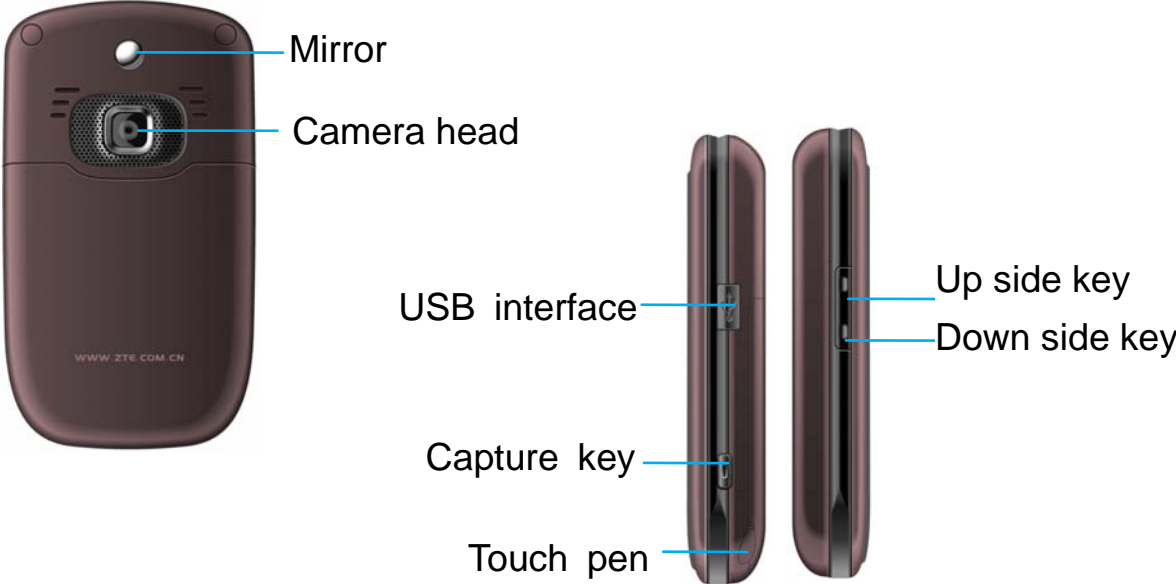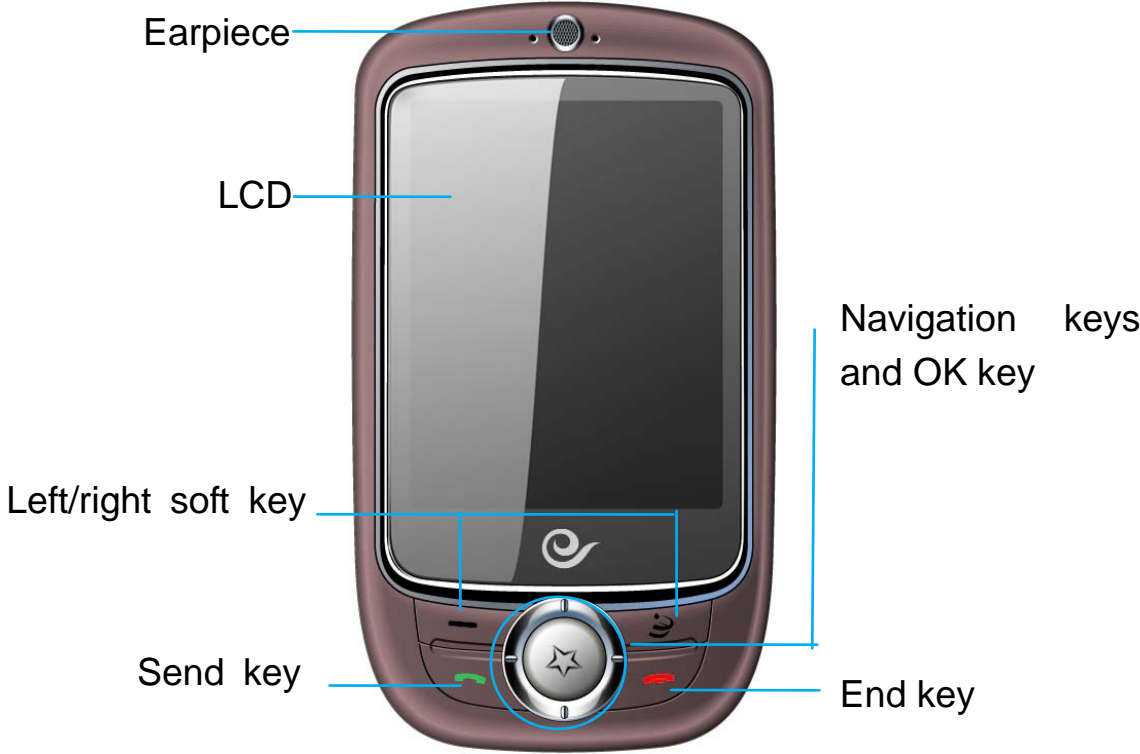
















Key Definitions

Keys	Descriptions
Left/right key	Move the cursor to the left/right; In idle mode, press left key to enter "Write Message", press right key to enter "Download". You could change the default settings;
Up/down key	Move up/down the cursor or highlighted bar; In idle mode, press up key to enter "User Profiles", press down key to enter "Inbox". You could change the default settings; In idle mode, press and hold down key to quickly activate or deactivate "Mute".
Left soft key	Execute the operations at the left-down corner of the screen. In idle mode, press this key to main menu; and hold this key to lock the keypad;
Right soft key	Execute the operations at the right-down corner of the screen. In idle mode, press this key to enter "Telephone Info. Service".
Send key	Dial a number or receive incoming calls; In idle mode, press the key to view all call history.
End key	Hang up a call or reject an incoming call; Hold this key to power on/off; In idle mode, press and hold this key to turn off or turn on the mobile phone. In other mode, press this key to return to idle mode. (except for some interface)
Side keys	Adjust the volume
Capture key	In idle mode, press this key to enter the camera interface.

OK Key	In idle mode, press OK key to activate “Browser” and connect to “ChinaVnet”; In most cases, OK key functions the same as left soft key.
--------	---

Descriptions of touch–screen shortcuts

Icons	Descriptions	Icons	Descriptions
	Signal strength		Battery capacity indication
	Unread SMS		Vibrate
	Ring and vibrate		Alarm ON
	Messages full		New voice message
	Mute		In roaming
	Insert the headset		1X Internet access
	Keypad locked		Calling or in a call
	Memory card inserted		



 **Note:**

  *In this user manual, “**press**” means pressing the key and then releasing; “**hold**” means pressing and holding the key for about 2 seconds or more; “**click**” means clicking the corresponding icon on the screen with touch-pen.*

Battery


Install the battery

1. Align the battery's contact points in the direction of the arrow as shown, and insert the battery into the slot;
2. Put on the battery cover, and push forward in the direction of the arrow as shown until it's locked.

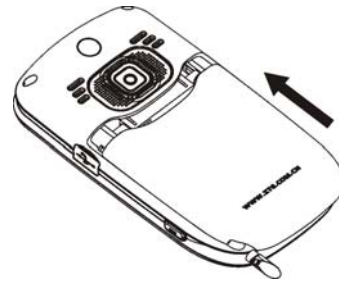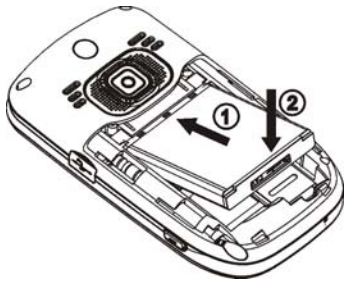

Remove the battery

 1. Push the battery cover in the direction of the arrow as shown and open the cover;
2. Pull the battery in the direction of the arrow as shown and take out the battery.

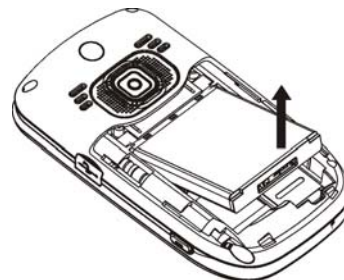


**Note:**

Please turn off your mobile phone before taking out the battery, otherwise your mobile phone might be damaged.

Charge the battery

The battery can be used directly after being taken out from the package. To make the battery always in its best condition, please exhaust the capacity of the battery and then fully recharge it for the first three times.

 1. Open USB interface cover at the right side of the phone, and insert the plug;
2. Connect the charger to 110V/220V power socket;

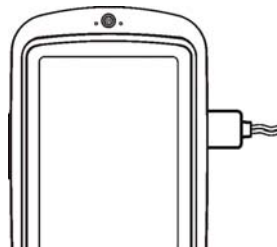

3. When the phone is powered on, the battery capacity bar on up-right corner of the screen keeps scrolling during charging; when the phone is powered off, there will be charging indication on the screen during charging. If the phone is used excessively without enough capability, the charging indication will not immediately appear on the screen of the phone when charging starts, and the phone might not be powered on within a few minutes after the charging starts.
4. When the phone is on, the battery is fully charged as the battery capacity indication is full and doesn't flicker any longer. When the phone is off, the battery is fully charged as

"Charging completed" appears on the screen. During the charging, the battery, mobile phone and charger may normally become hot.

5. Please disconnect the charger from your mobile phone and the socket when the charging is completed.



 
Note:

Put your phone in ventilated place under normal temperature during charging. Use the original charger or those authenticated by the manufacturer. Using non-original charger may cause danger and violate the warranty provisions. Charge your mobile phone in time when it is powered off automatically or prompts the lack of the power.

Insert and Remove UIM Card

Insert a valid UIM card into your mobile phone before use. All information regarding network connection and UIM phone book is saved in UIM card. In order to avoid the loss and damage of information saved in UIM card, please don't touch the metal surface and put UIM card far away from electricity or magnetism.


1. Turn off your mobile phone, remove the battery and disconnect the external power.
2. Put UIM card into the socket as shown in the figure.
3. Turn off your mobile phone and remove the battery before taking out UIM card.

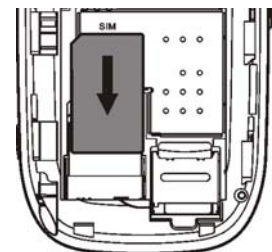

Follow the converse steps to remove UIM card.

Insert and Remove Memory Card

 1. Turn off your mobile phone, remove the battery and disconnect the external power;
2. Open the clasp in the direction of arrow as shown ;
3. Insert the memory card into the slot;
4. Close the clasp;
5. Secure the clasp in the direction of arrow as shown;

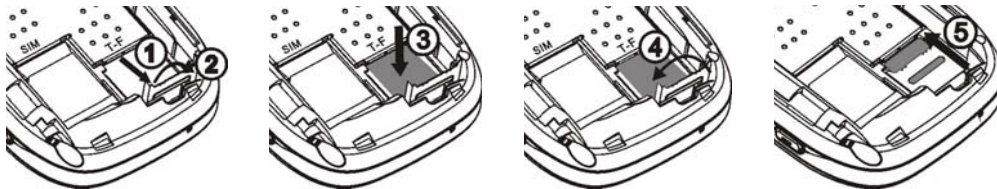

Follow the converse steps to remove the card. Turn off your mobile phone and remove UIM card before taking out the memory card.

Power On/Off

Hold End key until the power-on/off animation appears.

After you turn on your mobile phone, it will automatically check whether or not UIM card is inserted or usable, and shows the following information on the screen in turn:

- ◆ **Enter Phone Lock Code:** if you've set lock code.
- ◆ **Enter PIN Code:** if you've set PIN code for UIM card.



Note:

UIM card will be locked if you enter wrong PIN code three times. Then you need PUK code to unlock UIM

card. The PIN code may be provided to you together with UIM card. If not, contact your network service provider. The default PIN code is normally 1234. Please replace it with your own PIN code as soon as possible

- ◆ **Search:** The mobile phone will search for the available network.

Enter 3D Interface

Enter main menu

In idle mode, press Left Soft Key to enter the main menu, press left/right key to switch among “Communication”, “Application”, and “Service”, and press End key to return to idle screen.


You could also click the icons on the top of the main interface to switch among these three interfaces or return to idle screen.

Sweep your finger or touch pen on the screen from left to right switch among these three interfaces.

Enter submenu

After you enter the main menu, click the icon to select the submenu, press Right Soft Key to return to the previous menu, and press End key to return to idle screen.

Shortcuts on the desktop

In idle mode, click  to view the shortcuts. Click the icon to enter the relevant interface. You could set these icons yourself. Select “Settings” → “Additional Settings” → “Shortcuts”.

Service

E Surfing

Your mobile phone provides China Telecom's built-in services such as "Best Tone", "i Music", "Download", "UTK", "Vnet", etc.



Note:

The services under the menu are provided by the operator. For relevant information on the expense, please consult the operator.

Customer Service

There are built-in customer services of China Telecom, such as "Customer Hotline", "Mobile e-hall", "Calling Secretary", "My Subscription", "Phone Service Guide", etc.



Note :

The services under the menu are provided by the operator. For relevant information on the expense, please consult the operator.

My Document

You could view the directory and files in phone and memory card.

ZTE Service

ZTE Mobile Phone Club

ZTE Mobile Phone Club is a platform built for ZTE Mobile Phone users, providing product information, consultation, music and community information.

Sales Service Number







The built-in customer hotline of our company is provided to you for consultation and complaint.

Communication

Dial

Make a call


In idle mode, click or press any blank space on the screen to display the dialing keyboard.

- ◆ Direct dial: click or press the numeric buttons to input the phone number and click or press  to dial.
- ◆ Dial from phonebook: click or press  to enter the list of contacts, press Up/down key to move the cursor, select the desired contact and click or press  to dial.
- ◆ Dial from call history: click or press  to enter the list of call history, press Up/down key to select the desired record, and click or press  to dial.
- ◆ IP dial: click or press the numeric buttons to input the phone number, and click  to start IP dialing. For information on IP access number, please refer to “Settings” → “Call Settings” → “IP Dial”.

Emergency Calls

You could make emergency calls without UIM card as long as you are in the area covered by the network.

Answer calls

Press  key to answer the call.

Call Options

During the conversation, press “Options” to enter “Phonebook”, “SMS”, “Dial”; Press “OK” to enter Hands-free function and press it again to return to normal state; press “Mute” to make local voice calls silent, and press it again to return to normal state.

Messages

Send New

1. Enter “Send New”, input the recipient’s phone number, and press OK key to input the phone number of multiple recipients. Press “Options” and select “Contact” to select the recipient from Phonebook.
2. Press Down key to enter the text editing interface, and input the message text. Press “Options” and select “Save to Drafts”, “Quick Text”, “Signature”, “Network Symbol”, and “Message Priority”.
3. Press “OK” key to directly send the message.

View Message

- ◆ Select “Inbox” to view the received messages.
- ◆ Select “Outbox” to view the unsent messages.

- ◆ Select “Drafts” to view the saved messages.
- ◆ Select “Sent” to view the sent messages.
- ◆ Select “Saved” to view the saved messages.
- ◆ Select “UIM Card” to view the messages saved in UIM card.

Settings

Message Settings

- ◆ Save to Sent Box: select “Auto Save”, “Prompt” or “Do Not Save”.
- ◆ Auto Delete Inbox: If it is selected “On”, your mobile phone will automatically delete the read messages as the memory space is not enough.
- ◆ Default Entry Mode: select the default input method for message.
- ◆ Delivery Report: select “On” or “Off”.
- ◆ Save Location: Select to save the received messages to UIM card or Phone.
- ◆ Validity Period: set the validity period for the message.
- ◆ Signature: edit the signature and manually add the signature into the message text.
- ◆ Callback Number: set the callback number of recipient.

Quick Text Settings

There are some common short messages predefined in your mobile phone. You could select edit and use it when writing a message.

Memory Info

Check the memory status of the messages.

Voice Mail

When you are unable to answer the call, you could let the other party leave a message for you through voice mail server. You could visit voice mail server to listen to the message later.

Press  to dial the voice mail number.



Note:

Make sure to apply for the service before use because it requires network support.

Contacts

In phone book, you could save the contact's name, telephone number, etc. The numbers could be saved either in Phone or UIM card.

All List

Check all contacts. Press left/right key to switch among the contacts in each group and UIM card. Input the first letter of the contact's name to quickly search the contact.

Find

Select “Find Name”, “Find Number” or “Find Group”.

Add Name

Name

You could add new entry “UIM” or “Phone”.

If you want to add new entry to UIM, you need input “Name” and “Number” only.

If you want to add new entry to Phone, besides “Name”, “Home Number”, “Mobile Number”, “Office Number”, “Home Address”, “Email”, “Web Address”, “Memo”, you can set “Default Number”, “Group”, “Call Image”, “Call Alert”, and “SMS Alert”.

Existing Name

You could modify the existing phone record.

Groups


Your mobile phone supports caller grouping function, which allows you to add the group members, set the group call ringtone and message ringtone.



Note :

You could add/delete the members only when they are saved in Phone.

Speed Dials

You could edit 8 phone numbers for numeric keys 2~9. In idle mode, click any space on the screen to display the dialing interface, input any number from 2 to 9, and press  key to dial the corresponding number.

Memory Status

You could check the memory status of both phone and UIM.

All Copy

Select “Copy UIM to Phone” to copy all entries from UIM card to Phone, or select “Copy Phone to UIM” to copy all entries from Phone to UIM card.

All Move

Select “Move UIM to Phone” to move all entries from UIM card to Phone, or select “Move Phone to UIM” to move all entries from Phone to UIM card.

Recent Calls

In Call History, you could select “All Calls”, “Missed Calls”, “Received Calls”, “Dialed Calls”, “Call Duration” or “Delete All Calls”.

Application

Settings

Display

- ◆ Wallpaper: select the wallpaper of the phone in idle screen.
- ◆ Backlight: select the time of backlight.
- ◆ Keypad Light: select the time of keypad light.
- ◆ Intensity: press left/right key to adjust the LCD brightness.
- ◆ Time Format: select the time format.
- ◆ Date Format: select the date format.
- ◆ Language: select the language.

Call

Call Forwarding

This function allows you to divert incoming call to another designated number under certain circumstance. Please contact your network provider for details.

Call Waiting

After this function is activated, the system will inform you if there is another incoming call. Please contact your network provider for details.

Any key Answer

If this function is set “ON”, press any key except End key & Right Soft Key to answer the call.

Voice Privacy

Set the type of voice privacy.

International Call

Select “Auto” or “Manual” when dialing international calls.

Call Timer

If this is selected “ON”, the call duration will be displayed on the screen during the conversation.

Call Connect Alert

If this is selected “ON”, there will be alert when the call is connected.

Fire Proof

- ◆ Friend List: edit the list of friends.
- ◆ Black List: edit the black list.
- ◆ Current Settings: set the type of answering calls, including “Bar All”, “Bar Black List”, “Bar All Except

Friend List” and “Cancel All”.

IP-Dial Setting

You could edit 5 IP numbers. Select one number, press “Options” to select “Set Defaulted” to set the current number as IP number.

Incoming Call Location

Select “Show” and your mobile phone will prompt the incoming call location upon an incoming call.

Security

Perform the security settings to prevent your mobile phone or UIM card against illegal use.

You need to input the phone password to enter “Security Settings”. The default password is 0000. Please change it as soon as possible.

PIN Lock

PIN Lock could be used to prevent your UIM card against illegal use.

If you select “ON”, you need input correct PIN code to unlock your UIM card as you turn on your mobile phone next time.



Note :

Your UIM card will be locked if you enter wrong PIN code continuously for three times. In this case you need PUK code to unlock your UIM card.

The PIN code, PUK code and UIM card may be provided to you all together. If not, contact your network provider. The default PIN code is normally 1234. Please change to your own PIN code as soon as possible.

Handset Lock

Handset Lock could be used to prevent your mobile phone against illegal use. If you select "ON", you need input correct phone password to unlock your phone as you turn on your mobile phone next time.

Reset

You could select "Clear All Names", "Restore Settings" and "Reset Phone".



Note :

There might be no reaction to your phone screen when you restore to factory settings. This is normal because it takes a few seconds for the backstage to restore the factory settings.

Extras

Key Guard

When this is selected “ON”, you can edit the time used to lock the keypad, and activate the keypad lock function. In idle mode, hold Left Soft Key to quickly lock the keypad. Press “Unlock” and then Right Soft Key to unlock the keypad.

Alert

Set if there is any alert under the following circumstance:

- ◆ Service: as the phone arrives or leaves the service area.
- ◆ Remind Minute: When the time is up to one minute during the conversation.
- ◆ Missed call: when there is any missed call.

U Disk Set

When this is selected “ON”, you can use the memory card as U disk.


Wap Settings

Select “Access Point” and “Proxy Settings”. “Proxy 1” is the default setting, which can not be revised.


Shortcut Key

You could set the shortcut key in idle mode.

Shortcut desktop

In idle mode, you could set the shortcuts displayed on the desktop after you click or press  button.

Pen Calibration

As you feel your mobile phone doesn't react properly after you use the touch-pen to click relevant option or icon, you need calibrate the touch screen. Click  with the touch-pen until the calibration is completed. If the calibration is still not accurate as you make sure to click the center every time, you should refer to **Restore Factory Settings**.

Profiles

Your mobile phone provides multiple profiles, including "Silent", "General", "Outdoor" and "Meeting". Press "Options" → "Setup" to confirm your selected profile. Select one profile and press "Options" → "Profile Edit" to perform personalized settings of "Alert Type", "Ring Tone", "Ringer Volume", "Earpiece Volume", "Key Beep Volume" and "Message Alert" according to different occasions.

In idle mode, hold down key to quickly enter or exit Silent profile.

Organizer

Games

Your mobile phone provides two types of classical games. Enter the menu and view the operation descriptions.

Alarm

Your mobile phone could set multiple alarms, and the alarm still works as your mobile phone is turned off.

Scheduler

Enter "Scheduler", the calendar in current month will be displayed on the screen and the current date will be marked by a background box in special color.

You could press navigation keys to browse.

Press "Options" to select "Lunar Calendar" to view the information; select "Add Event" to add a new event.

Phone Location

Input the mobile phone number or regional code of long-distance call to check the location.

Stopwatch

Select "Start" to start calculating the time; select "Pause" to stop calculating the time; select "Clear" to clear all records.

Calculator

Your mobile phone provides a calculator to perform simple calculations. You could add, subtract, multiply or divide, and select M+, M-, MR, and MC to perform relevant operations.



Note :

The calculator is limited to precisions, therefore it might generate errors.

Unit Conversion

Your mobile phone provides unit converters for Length, Temperature, Power, Velocity, Weight, Area, Volume, Capacity, Energy, Pressure, etc.

World Time

Press left/right navigation key to view the time of different cities.

Multimedia

Media Player

Under this menu, you could play audio file and video file.

Enter the menu and press “Options” to select:

- ◆ View Current: display the list of current files, press “Select” to play the file.
- ◆ Select List: Press “Options” → “Edit

List" → "Options" → "Add one by one" to add the file into the list.

- ◆ Recycle: select "Recycle Close", "Single Recycle", "Order Play", "All Recycle" or "Random Recycle".
- ◆ Effect: set the music effect.
- ◆ Help: view the help document about media player.

ZTE Download

You could download the images and ring tones through Internet.

Camera

1. Select "Camera" to enter the camera interface.
2. Press left/right key to switch among Focus, Brightness, Contrast and Color, and press up/down key to adjust the value.
3. Press "Options" and select "Settings" to set "Resolution", "Black/white", "Snapshot", "Shutter Sound", "Save Location", "Timer Duration", "Banding", etc.
4. Press "OK" key to capture, and press "Save" to save the photos.
5. Press "Options" to select "Photo Browser" to view the photos you've taken.

Camera Recorder

Select "Camera Recorder" to enter the interface, press "OK" key to start recording, and press "Stop" to stop recording. Press "Options" and select "Movie Browser" to view the videos you've

recorded.

Radio



Note:

You could listen to the radio only as the headset is inserted into the mobile phone.

Enter the menu, press up/down key to listen to different saved channels, and press left/right key or side keys to adjust the volume.

Record

Press “Start” to start recording; press “Pause” to stop recording; press “Continue” to continue recording; press “Stop” to end recording; press “Save” to save the recorded files.

Dial-up Internet Access

You could use your mobile phone as Modem after connecting it and PC with the data cable. For details, please refer to <User Guide to Dial-up Software> in CD.

Input Method

Your mobile phone supports touch handwriting input. The input methods include abc/ABC Input method, 123 Input method and Symbol Input method.

You could use the touch-pen or click the virtual keypad to enter the inputs. Under handwriting input mode.

Handwriting Input


Adopting advanced character recognition technology, your mobile phone supports the handwriting of numbers, and English letters.

You could click the prompt bar above the editing interface to switch the input method. After the input method is selected, you could use touch-pen to write message. After you input manually and pause for while, the recognized results will be displayed on the screen for you to select. If there is no character you want on the screen, you could click one of the selected.




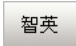
1. Click the handwriting prompt bar at the right-up corner of the screen to switch among different input methods.
2. After the input method is selected, you could use the touch-pen to write message. After you input manually and pause for while, the recognized results will be displayed on the screen for you to select.
3. If the character displayed on the screen is not what you want, click the candidate character to replace.

Virtual Keypad Input

Display/Hide Virtual Keypad

Click  at the left-up corner of the screen to display or hide the virtual keypad.


Input English letters and words

1. Click “EN” on the virtual keypad to switch to abc/ABC Input method.
2. Click    to switch among them.
3. Under abc/ABC Input method, press the keys to input the letters. Each key is used to input multiple letters. Quickly and repeatedly click the key until your desired letter appears.
4. Under  Input method, press the corresponding key of the word to input, and your mobile phone can display the candidate words according to the input letter. Select your desired word.


Input Numbers

1. Click “123” on the virtual keypad to switch to “123” input method.
2. Click the numbers on the virtual keypad to input.

Input Symbols

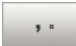Under other mode except for “123” input method, click  to input symbols.

Input Space

Click  to input the space.

Delete Inputs

Click  to delete the inputs.

Appendix

Clearance and Maintenance

Please maintain your mobile phone with good care since it is delicately designed and manufactured. The following advice might help you extend the life of your mobile phone.

- Clean your mobile phone, battery and charger with a soft dry cloth.
- Do not clean your mobile phone with the liquor such as alcohol, dilution agent or benzene.
- Clean the socket from time to time because a dusty socket might cause disconnection, power failure, or even charging failure.
- Do not press keys with needles, pen points or other sharp objects to avoid damage or inadvertent operation.
- Keep tiny metal objects such as thumb pins away from the phone receiver. The phone speaker is magnetic and thus magnetizes those metal objects, which may hurt people or damage the phone.
- Keep your mobile phone dry. Rain, moisture or any kind of liquid containing minerals might corrupt the circuit.
- Do not touch the mobile phone with wet hands because this might cause electric shock, which would hurt people or damage the phone.
- Don't use and put your mobile phone in a dusty or dirty environment because this might damage the phone

components.

- Please don't place your mobile phone in a place where the temperature is too high or too low.
- Don't put your mobile phone in or on the heating devices (microwave oven, toaster oven or radiator) because overheating might result in explosion.
- The color of the waterproof label in the phone will be changed if the phone or battery gets wet. In this case, the warranty provisions will become void even if the warranty period doesn't expire.
- Please send your mobile phone to the nearest service center for inspection if there is anything wrong with your mobile phone, battery, charger or accessories. The service center staff will provide you help.

Failure Analysis

Symptoms	Possible Causes	Solutions
Unable to turn on the phone	Inadequate battery capacity	Charge the battery
	Poor contact	Reinstall the battery
Automatic power-off	Seriously poor battery capacity	Recharge the battery
Inadequate standby time	Decreasing of battery performance	Replace the battery
	Poor network signal	Turn off the phone as the signal is poor.
Unable to connect the network	Poor network signal	Move to other places
	Out of the service area	Make sure your phone is in network service area
Call drop	Poor network signal	Move to other places
Do not ring upon incoming calls	“Silent” profile or minimum volume selected.	Enter “User Profile” to change the profile or check the ringing volume.
Prompt to input PUK	UIM card locked due to the continuous entering of wrong PIN code for three times.	Contact your network operator.

FCC Regulations:

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information (SAR)

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the

emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.09 W/kg and when worn on the body, as described in this user guide, is 0.634 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model

phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-X767.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.