

***movilnet***

**X992**  
**CDMA 1X Digital Mobile**  
**Phone**  
**Manual De Usuario**

Copyright © 2009 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for you reference only. Please check the product model before purchasing.

---

**ZTE中兴** ZTE Corporation

ZTE Plaza, Keji Road South, Hi-tech Industrial Park, Nanshan District, Shenzhen, P.R.China

Zip Code: 518057 [Http://www.zte.com.cn](http://www.zte.com.cn)

Service Hotline: +86-755-26779999

E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

Manual No. 079584500xxx

## Contents

 
 




<i>Know your Phone</i> .....	3
<i>Key Instruction</i> .....	4
<i>Interface Icons</i> .....	7
<i>Insert and Extract UIM Card</i> .....	8
<i>Remove and Install the Battery</i> .....	9
<i>Charge the Battery</i> .....	10
<i>Power on/ off Your Phone</i> .....	10
<i>Make and Answer a Call</i> .....	11
<i>Menu Tree</i> .....	11
<i>Voice Mail</i> .....	13
<i>Text Input</i> .....	13
<i>Message</i> .....	14
<i>Menu Functions</i> .....	14
<i>Phone Lock</i> .....	18
<i>PIN Code and PUK Code</i> .....	18
<i>Warning and Maintenance</i> .....	19








<i>Warranty Terms</i> .....	20
<i>Limitation of Liability</i> .....	20
<i>FCC Regulations:</i> .....	21
<i>RF Exposure Information (SAR)</i> .....	23

# *Know your Phone*


 
## Key Instruction













Key	Function Description
	<ul style="list-style-type: none"><li>◆ Make or answer a call.</li><li>◆ Press <b>Send key</b> in standby mode to enter all recent calls list.</li><li>◆ Press <b>Send key</b> two times directly to redial the last number.</li></ul>
	<ul style="list-style-type: none"><li>◆ End an active call or reject a call.</li><li>◆ Long press to Power on/Power off.</li><li>◆ Exit from any interface to standby mode.</li></ul>
	<ul style="list-style-type: none"><li>◆ Enter main Menu in standby mode.</li><li>◆ Confirm the commands and options selected as OK key.</li><li>◆ Switch to the options of left bottom submenu.</li></ul>
	<ul style="list-style-type: none"><li>◆ Erase character(s) while editing.</li><li>◆ Cancel or stop operation, exit to previous window.</li></ul>
	<ul style="list-style-type: none"><li>◆ Enter main Menu in standby mode.</li><li>◆ Press <b>OK key</b> to confirm the commands and options selected.</li><li>◆ Confirm the character chosen while character inputting.</li><li>◆ Switch to Play and Pause in audio player.</li></ul>
	<p>Up/Down Key</p> <ul style="list-style-type: none"><li>◆ Scroll the cursor up and down.</li><li>◆ Used as selection key up and down for keying in commands and selecting options shown on the display.</li><li>◆ In standby mode, press <b>Down key</b> to enter Messages Inbox</li></ul>

	<p>menu , press <b>Up key</b> to enter Shortcuts menu.</p> <ul style="list-style-type: none"> <li>◆ Adjust volume in conversation.</li> <li>◆ Used as direction key in games.</li> </ul>
	<p>Left /Right key</p> <ul style="list-style-type: none"> <li>◆ Scroll the cursor left and right.</li> <li>◆ Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display.</li> <li>◆ In standby mode, press <b>Left key</b> to enter Neo Application menu, press <b>Right key</b> to Neo Navigation.</li> <li>◆ Adjust volume in conversation.</li> <li>◆ Used as direction key in games.</li> </ul>
  	<ul style="list-style-type: none"> <li>◆ Key in numbers or characters.</li> <li>◆ Make a Speed Dial call (2-9); and hold 1 key to enter Voice Mail defaultly.</li> </ul>
 	<p># key:</p> <ul style="list-style-type: none"> <li>◆ Hold <b># key</b> in standby mode to switch the silent and general mode.</li> </ul> <p>* key:</p> <ul style="list-style-type: none"> <li>◆ Hold <b>* key</b> in standby mode to lock phone's keypad.</li> </ul>
	<ul style="list-style-type: none"> <li>◆ Enter the symbols selection interface when editing</li> </ul>













- ◆ Switch input method when editing

## *Interface Icons*

 Icon	Indication
	Signal strength
	Earphone in use
	Keypad locked
	Power indicator
	New message
	Unread alarm
	Unread schedule
	Missed calls indicator
	Ring for incoming call
	Ring before vibration for incoming call
	Ring + Vibration for incoming call
	Vibration for incoming call



	Silence for incoming call
	Music&FM background
	Alarm
	USB mode
	Connecting Bluetooth Earphones
	Bluetooth Open
	Bluetooth Transmission
	Push message
	T-flash Card inserted
	New MMS

## *Insert and Extract UIM Card*

 
- ◆ Power off the phone, remove the battery and other external power.
- ◆ Insert UIM card into UIM card slot in the phone, or remove UIM card out of slot, as shown in picture .




## *Remove and Install the Battery*

The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

**Remove:** (1) Put finger on the top finger grip in back-cover, and then slide the back-cover of the phone down to release and remove. (2) Put finger on the finger grip, and then lift up the battery to remove the battery.

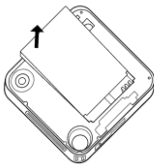


 **Install:** (1) Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted. (2) Put the back-cover of the phone flatly upon the body of phone. Push the back-cover of the phone to lock the cover into its place.

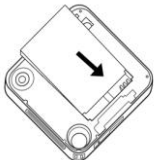

## *Charge the Battery*

 - ◆ Plug out rubber away from the jack on the side of the handset and connect the lead from the charger to the socket on the side of the phone. (Note: The side with arrow should be upright while connecting).
- ◆ Connect the charger to a standard wall AC socket.
- ◆ When the charging animation on the screen stops, the charging is completed. The charging takes usually up to 2~3 hours. During charging, it is a normal phenomenon that the battery, phone and charger may get hot.
- ◆ After the completion of charging, disconnect the charger from the phone and AC socket.

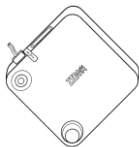

## *Power on/ off Your Phone*

Please hold **End key** to power on/off the phone. The phone will automatically search for the network.

Besides sending and receiving calls in standby mode, you can also do:

- Press **OK key** to enter main **Menu**.
- Press **Left select key** to enter main Menu.
- Press **Right select key** to enter **Contacts** menu.
- Press **Up key** to enter **Shortcuts** menu.
- Press **Down key** to enter **Messages inbox** menu.
- Press **Left key** to enter **Neo Application** menu.

- Press **Right key** to **User Neo Navigation** menu.
- Press **Send key** to enter **Call history** list.
- Hold **\* key** to lock the keypad.
- Hold **# key** to switch the silent and general mode.

**Note:** To “press” key in this manual means to press the key and release it. To “hold” key means to keep pressing the key for two seconds or more.

## ***Make and Answer a Call***

- *Make a call*  
Enter the phone number  
Press **Send key** to make the call.  
Press **End key** to end the call.
- *Answer a call*  
Press **Send key** to answer the call.  
Press **End key** to end the call.

## ***Menu Tree***

### **1. Settings**

- 1.1 Phone Setup
- 1.2 Display Setup
- 1.3 Call Setup
- 1.4 Security Setup
- 1.5 Restore Factory Settings
- 1.6 Connect Settings
- 1.7 Show Version

### **2. Call History**

- 2.1 Missed Calls

### **7. Amusement**

- 7.1 Snake
- 7.2 Russia Block

### **8. Contacts**

- 8.1 All Contacts
- 8.2 Search Entry
- 8.3 Add New Entry
- 8.4 Delete
- 8.5 Caller Group
- 8.6 Memory Status

- 2.2 Received Calls
- 2.3 Dialed Calls
- 2.4 Delete Log
- 2.5 Call Time
- 3. My File**
  - 3.1 Card
  - 3.2 Music
  - 3.3 Picture
  - 3.4 Video
  - 3.5 Other
- 4. Multimedia**
  - 4.1 Video Player
  - 4.2 Audio Player
  - 4.3 Voice Recorder
  - 4.4 FM
- 5. Neo Application**
- 6. Camera**
  - 6.1 Mode Select
  - 6.2 Base Option
  - 6.3 Photo Browse
  - 6.4 Frame Options
  - 6.5 Default Config
  - 6.6 Switch to Camcorder
- 8.7 Create All.vcf
- 9. User Profiles**
  - 9.1 General
  - 9.2 Meeting
  - 9.3 Outdoors
  - 9.4 Indoors
  - 9.5 Silence
- 10. Neo Navigation**
- 11. Messages**
  - 11.1 SMS
    - 11.1.1 Write Message
    - 11.1.2 My Movilnet Space
    - 11.1.3 Inbox
    - 11.1.4 Outbox
    - 11.1.5 Sentbox
    - 11.1.6 Draftbox
    - 11.1.7 Setting
    - 11.1.8 Delete
    - 11.1.9 Templates
    - 11.1.10 Voice Mail
  - 11.2 MMS
- 12. Tools**
  - 12.1 Alarm
  - 12.2 Calculator
  - 12.3 Stopwatch
  - 12.4 World time
  - 12.5 Calendar
  - 12.6 Notepad

## Voice Mail

Before using **Voice Mail** box, please consult with service provider to confirm that the voice mailbox has been activated.

The system automatically sends a message to your phone informing a new voice message. Select **Connect to Voice** to read the message and then dial voice mail box number to listen to your voice message.

Select **Edit Number** to set the voice mail number.

## Text Input

Your phone offers text input modes: Multitap Input (**Abc/abc/ABC**), Numbers Input (**123**), eHiText Input (**ES/es**), and Symbol Input (**Symbols**).

Operation	Method
Input Letters	<b>Multitap</b> Input—"Abc/abc/ABC" press corresponding letter key till the letter appears.
Input Words	<b>EHiText</b> Input—"ES/es", press any key once to key in any word.
Input Digits	<b>Numbers</b> Input—"123", press digit key once.
Input Symbol	<b>Symbols</b> Input —Press <b>SYM</b> key to enter the symbols mode and press corresponding digit key.
Input Space	Press " <b>_</b> " key, except for being in numbers mode.
Erase Character	Press <b>Right select key</b> .
Move cursor left	Press <b>Left/Right key</b> .

or right	
Move cursor up or down	Press <b>Up/Down key</b> .
Change input mode	Press <b>NEXT key</b> to select another text mode.
Capitalization	Press <b>NEXT key</b> to switch between capitalization and lowercase.

## *Message*

1. Select **Messages** in Main Menu.
2. Select **Write Message** to write and edit message text.
3. Select **Option** and press **OK key** to **Send** message or **Save** message in Outbox. The maximum of receivers not exceed 10 persons.
  - Select **Inbox** to view messages received.
  - Select **Outbox** to view the sent and saved messages.
  - Select **Settings** to set the messages' functions.

## *Menu Functions*

Hereinafter are brief instructions on menu functions of the phone.

<b>Function</b>	<b>Selection</b>	<b>Description</b>
Send SMS	Menu→Messages→SMS→Write Message	Send SMS to other mobile phones' number. The message could be send to multi-receivers.
Send MMS	Menu→Messages→MMS→Write	Send MMS to other mobile

	Message	phones' number. The message could be send to multi-receivers.
Read message	Menu→Messages→Inbox/Outbox	Read messages in Inbox/Outbox.
Voice mail	Menu→Messages→Voice Mail	Set the voice mail No. and dialing voice mail number, you could listen to voice message.
Message Setting	Menu→Messages→Setting	Set SMS save position, report status, expire, message priority and view memory status.
Templates message	Menu→Messages→Templates	Some common used messages preformatted in phone.
Add contact	Menu→Phonebook→Add new entry	Add a new entry in phonebook in phone or UIM card.
Find contact	Menu→Phonebook→Search entry	Search for a phonebook entry.
View record	Menu→Phonebook→All Contacts	View the corresponding records in all lists.
Edit group	Menu→Phonebook→Caller Group	Rename the group name and select the ringer for the group.
Memory status	Menu→Phonebook→Memory Status	Number of entries saved and maximum number of entries capacity in phone and UIM card.
Vcard	Menu→Phonebook→Create All.vcf	Create phonebook in .vcf format.
Call history	Menu→CallHistory→ Missed /Received/ Dialed Calls	View and dial recent calls.
Call time	Menu→Call History→Call time	View and reset call duration of calls



Ring volume	Menu→User profiles→option→Volume Setup	Set phone's ring/earpiece/key beep volume
Ring tone	Menu→User profiles→option→Tone Setup	Set the phone's ring tone for incoming Caller Ring/Alarm/Power on/Power off/SMS/Key
Alert type	Menu→User profiles→option→Alert type	Set alert type of the phone.
Wall Paper set	Menu→Settings→Display Setup →Wallpaper	Set wall papers as background in idle state.
Backlight	Menu→Settings→Display Setup→LCD Backlight	Set backlight duration.
Brightness	Menu→Settings→Display Setup→Brightness	Adjust Brightness.
Themes	Menu→Settings→Display Setup→Themes	Set Themes in idle state
Language	Menu→Settings→Phone Setup→Language	Select language available.
Speed Dial	Menu→Settings→Phone Setup→Speed Dial	View the speed dial list. In standby mode, key in speed dial number and send, or hold the number key to dial the corresponding call.
Greeting	Menu→Settings→Phone Setup→Greeting	Set greeting.
Dedicated Key	Menu→Settings→Phone Setup→Dedicated Key	Set Dedicated Key function.
Shortcuts	Menu→Settings→Phone	Set functions in shortcuts menu.

	Setup→Shortcuts	
Auto Answer	Menu→Settings→Call Setting→Auto Answer	Answer incoming call automatically when earpiece inserted.
Time Reminder	Menu→Settings→Call Setup→Time Reminder	Phone alert for optional time reminding
Call Forwarding	Menu→Settings→Call Setup→ Call Divert	Forward an incoming call to a designated number.
Call waiting	Menu→Settings→Call Setup →Call Waiting	Answer the second call, hold the first call.
Call restriction	Menu→Settings→Call Setup→Black List	Restrict calls in list.
UIM Lock	Menu→Settings→Security Setup→UIM Lock	Set or change the UIM lock.
Handset Lock	Menu→Settings→Security Setup→Phone Lock	Set or change the handset lock.
Keypad Lock	Menu→Settings→Security Setup→Keypad Lock	Set or change the keypad lock.
Call History Lock	Menu→Settings→Security Setup→Call History Lock	Set or change the call history lock.
Restore setting	Menu→Settings→Security Setup→ Restore Factory Settings	Restore factory default.
Version Query	Menu→Settings→Show Version	Show the SW Version and SID/NID
USB Connection	Menu→Settings→Connect Setting→Startup USB Connection	Enable the USB connection when USB is connected with PC.
Bluetooth	Menu→Settings→Connect	Enable the Bluetooth connection

	Setting→Bluetooth	and do some Bluetooth settings and operations.
Calendar	Menu→Tools→Calendar	View calendar and make schedule events.
Alarm clock	Menu→Tools→Alarm	Set alarm alert time.
Calculator	Menu→Tools→Calculator	Execute basic math calculation.
World Time	Menu→Tools→World Time	View world time.
Notepad	Menu→Tools→Notepad	View/edit/delete notepad.
Stopwatch	Menu→Tools→Stopwatch	Stopwatch timing.

## *Phone Lock*

Phone lock could prevent your phone from illegal use. The default handset password is 1234. Please change it to your own phone password as soon as possible.

## *PIN Code and PUK Code*

**PIN Code:** PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when opening the handset again.

**PUK Code:** Consecutive inputting wrong PIN code for three times can cause locking of UIM card. To unlock, you need PUK code.

**Note:** PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator. Please change default PIN code to your own as soon as possible.

## *Warning and Maintenance*

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Please use original accessories or accessories that are authorized by the manufacturer.
- Please keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments. Do not attempt to dismantle the mobile phone and battery by yourself.
- Power off your phone before you clean the phone. Please use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Beware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## ***Warranty Terms***

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

End user shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

## ***Limitation of Liability***

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection

with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

## ***FCC Regulations:***

- This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## ***RF Exposure Information (SAR)***

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency



bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.911 W/kg and when worn on the body, as described in this user guide, is 0.626 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-X992.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.