

Z820

**Mobile Phone
User Manual**

LEGAL INFORMATION

Copyright © 2012 ZTE Corporation.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Version No.: R1.0

Edition Time: 2015.05.08

Contents

For Your Safety	8
General Safety	8
Distraction	9
Driving	9
Operating Machinery	9
Product Handling	10
General Statement on Handling and Use.....	10
Small Children	11
Demagnetization	12
Electrostatic Discharge (ESD).....	12
Antenna	12
Normal Use Position.....	12
Air Bags	12
Seizures/ Blackouts.....	12
Repetitive Motion Injuries	12
Emergency Calls	13
Loud Noise	13
Phone Heating.....	13
Electrical Safety	14
Accessories	14
Connection to a Car	14
Faulty and Damaged Products.....	14
Interference.....	15
General Statement on Interface	15

Pacemakers	15
Hearing Aids	15
Medical Devices.....	15
Hospitals	16
Aircraft.....	16
Interference in Cars	16
Explosive Environments	17
Petrol Stations and Explosive Atmospheres	17
Blasting Caps and Areas	17
FCC Compliance	17
Health and safety information.....	18
Radio Frequency (RF) Energy	18
Getting Started	23
Keys Explanation.....	23
Starting up	24
Installing the SIM/SD Card.....	24
Removing the SIM/SD Card.....	26
Charging the Battery	26
Switching Your Phone On/Off	27
Setting Up Your Phone for the First Time	27
Switching to Sleep Mode	27
Waking Up Your Phone	27
Getting Around Your Phone	28
Touch Control	28
Home Screen	28
Status and Notification Icons	30

Using the Notification Panel	30
Phone Calls	31
Making Calls	31
Calling from the Phone	31
Calling from Your Contacts	31
Calling from Your Call History	32
Calling from a Text Message.....	32
Receiving Calls	32
Answering a Call	32
Rejecting a Call	32
Muting a Call	33
Turning the Speakerphone On/Off	33
Contacts	33
Creating a Contact.....	33
Searching for a Contact.....	34
Messaging	34
The Message Box.....	34
Sending a Message	34
Message Settings	35
Touch Input Settings.....	35
Adding a New Network Connection	36
Turning On Wi-Fi.....	36
Connecting to a Wi-Fi Network	36
Checking the Wi-Fi Network Status	37
Mobile HotSpot	37





Enabling USB tethering.....	37
Disabling USB tethering.....	37
Enabling the Wi-Fi hotspot.....	38
Disabling the Wi-Fi Hotspot	38
Browsing the Internet	38
Browsing Options	39
Using Bookmarks	39
Editing a Bookmark.....	39
Deleting a Bookmark.....	40
Changing Browser Settings	40
Bluetooth	40
Making the Most of Multimedia.....	41
Taking Pictures with Your Camera.....	41
Shooting Video with Your Camcorder	41
Playing Your Music.....	42
Opening Your Gallery	42
Making Voice Memos	42
Using Your Google Applications	43
Gmail	43
Using Google Talk.....	43
Sorting out Your Phone Settings.....	44
Setting Date and Time.....	44
Display Settings.....	44
Sound Settings	44

Language Settings	45
Switching Network Modes	45
Switching Networks	45
Setting Access Point Names	45
Security Settings	46
Protecting Your Phone with a Pattern	46
Protecting Your Phone with a PIN or Password	47
Disabling Screen Unlock Security	47
Protecting Your SIM Card with a PIN	47
Setting up Credential Storage	48
Managing Your Device Memory	49
Privacy: Reset to Factory Settings	49
Applications	49
Installing an Application	49
Removing an Application	50
Moving an Application	50
Managing Other Settings	51
Accessibility	51
Text-to-speech output	51
Other Applications	51
Alarms	51
Calculator	52

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.

	<p>Switch off when near explosive materials or liquids.</p>		<p>Only use approved accessories.</p>
	<p>Don't rely on your phone for emergency communications.</p>		<p>To prevent possible hearing damage, do not listen at high volume levels for long periods.</p>

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum [0] and maximum + [45] degrees Celsius.

- The phone's normal operating temperature is 0°C ~ 45°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.
- Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.
- The product shall only be connected to a USB interface of version USB2.0.
- **CAUTION** : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer

to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'Airplane mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Health and safety information

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.08W/kg and when worn on the body, as described in this user guide, is 0.88W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this

model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: SRQ-Z820

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.

Hearing Aid Compatibility (HAC) regulations for Mobile phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some

wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

 
M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M4/T3 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

Getting Started

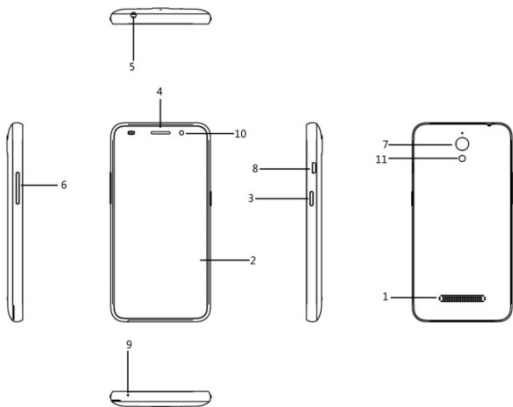

Keys Explanation

Key	Function
1.Speaker	Put a voice outside.
2.Touch Screen	Display user interface.


Key	Function
3.Power Key	<ul style="list-style-type: none"> • Press to switch your phone to Sleep mode. • Press to wake up your phone.
4.Earphone	Receiving sound during a call.
5.Headphone Interface	External headphone cable.
6. Volume Keys	Press or hold to turn the volume up or down.
7.Rear Camera	Photographed using parts.
8.USB Interface	External USB data cable.
9.Microphone	Send voice during a call.
10.Front camera	Photographed using parts.
11.Flash Light	Instant illumination in low light situations.

Starting up


Installing the SIM/SD Card

Switch off your phone before installing or replacing the SIM, or memory card.

 
1. Remove the back cover.

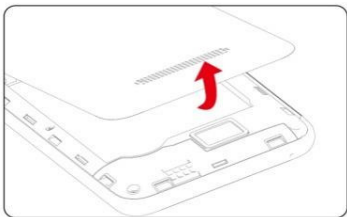

 2. Hold the SIM card with the cut corner oriented as shown, and slip it into the card holder.

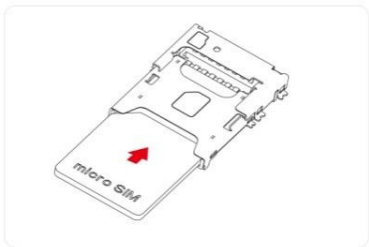

 3. Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position.

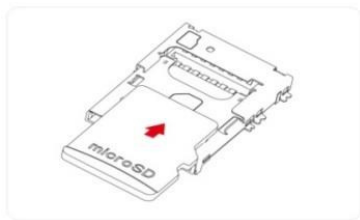

4. Press the cover gently back into place until you hear a click.

Removing the SIM/SD Card

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Slide the SIM card out.
4. Slide the SD card out.

Charging the Battery

When you first get your new phone, you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
2. Connect the charger to a standard AC wall outlet.

3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** and then **Power off**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings, you need to do some settings before using it.

Tap **Menu Key** in the standby mode, then select **System settings > Language & input > Language** to change the language you want to use, if needed.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

1. Press **Power Key** to activate your screen display.

2. Touch the screen and slide up to unlock the screen.

NOTE: If you have set an unlock pattern, PIN or password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Hold and drag to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image. Pinch on with two fingers to zoom in/out a web page.

Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Extended Home Screen


The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your

finger to the left or right.

Choosing Your Wallpaper

1. Press **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper**.
3. Tap **Desktop Wallpapers, Live Wallpapers, Gallery , Photos, Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
4. Tap **Set wallpaper**.

Adding Items to Your Home Screen















1. Press **Home Key** > tap  to enter the Application Program Interface.
2. In the list of applications, touch and hold the icon until its vibration, when the main screen appears, move the application icon to the idle position, release the finger.

Removing Items from Your Home Screen

1. Press **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the **Remove** appears on the screen.
3. Drag the item to the remove icon and release your finger when the item turns red.

Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength
	No signal		New message
	Battery charge		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		Vibrate mode
	Bluetooth icon		New Wi-Fi network detected

Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

Open Recently-Used Applications

1. Hold **Menu Key** from any screen. The phone will display thumbnails of applications you used recently.




2. Tap the application you want to open.

Phone Calls

Making Calls



There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone



1. Press **Home key** > tap  > **Phone** or tap  on the Home Screen.
2. Enter the phone number using the on-screen keypad.
Tap  to delete wrong digits.
3. Tap the dial icon.

TIPS: To make international calls, hold the 0 key to enter the “+”.

Calling from Your Contacts


1. Press **Home key**> tap  > **Contacts**.
2. Slide your finger to scroll the contacts list and tap the contact you want to call.
You can search for a contact by tapping  > **Search** in the top of the screen.
3. Tap the phone number in search box.

Calling from Your Call History

1. Press **Home key** > tap  > **Phone**.
2. Tap  > **Call History** to open the call log.
3. Touch a contact to view more call information. You can:
 - ▶ Touch **CALL BACK/REDIAL** to call it.
 - ▶ Touch **DETAILS** to view contact details.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home key** > tap  > **Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

Receiving Calls

Answering a Call



Drag  over  to answer the call.

Rejecting a Call



Drag  over  to reject the call.


Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap  to turn your microphone off. To turn your microphone back on, tap  again.


Turning the Speakerphone On/Off

Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone ending a Call


Tap  to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.


To see your contacts, Press **Home key** > tap  > **Contacts**.

Creating a Contact


1. Tap  from the Contacts Screen.
2. Touch the account field near the top of the screen to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.

3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact

1. Tap  > **Search** in the bottom of the Contacts Screen.
2. Input the contact name you want to search for. The contacts matched will be listed.



Messaging

Your SMS and MMS (multimedia messaging service) are combined into one menu in **Home Key** > tap  > **Messaging**.


The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.


Sending a Message


1. Press **Home key** > tap  > **Messaging**.
2. Tap  to create new message.
3. Enter the recipient's number or name. As you type,




matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap  to select recipients from the contacts.

4. Tap **Type text message** and type your message.

Tap **Menu Key** to insert quick text or contact and tap  of the input to insert smiley.

If you are sending an MMS, tap **Menu Key** to add a subject, or tap  to attach pictures, videos, audio, or slideshow.


5. Tap  to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.


Touch Input Settings

Choose the touch input settings by tapping **Home key > tap**  **> Settings > Language & input**

In the **Keyboard & input methods** section, you can choose the settings that you need.




Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your provider to get the necessary information.


You can view settings by pressing **Home key** > tap  > **Settings** > **More** > **Cellular networks** > **Access Point Names**.

Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.


1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.
2. Click  on the top of the screen you can turn on the Wi-Fi function, click  you can turn off the Wi-Fi function.

Connecting to a Wi-Fi Network

1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.
When the WIFI is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.
2. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

Mobile HotSpot

Share your phone's data connection via USB or as a Mobile HotSpot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem. Connect the PC and device with a USB cable.

Press **Home Key** > tap  > **Settings** > **More** > **Mobile HotSpot** and tick the **USB tethering** check box.

Disabling USB tethering



Press **Home Key** > tap  > **Settings** > **More** > **Mobile HotSpot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.



Enabling the Wi-Fi hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

NOTE:


- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:
 1. Press **Home Key** > tap  > **Settings** > **More** > **Mobile HotSpot** and Click  next to the **Wi-Fi hotspot** menu to turn it on.
 2. Tap **Mobile HotSpot settings** and tap **Configure Mobile HotSpot** to set up & manage portable Wi-Fi hotspot.
 3. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

 
Press **Home Key** > tap  > **Settings** > **More** > **Mobile HotSpot** and click  you can turn off the **Wi-Fi hotspot** function.

Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap  > **Chrome**.

There are different ways to open web pages:


- Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.

Browsing Options

When you browse the Web, you can also do the following:

- Press **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.
- Press **Menu Key** > **Settings** to configure browser settings.

Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it press **Menu Key** and tap . Give the bookmark a name and save it.

Editing a Bookmark

1. Open a Browser window.
2. Tap **Menu Key** > **Bookmarks**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name, and then tap **Save** to save it.

Deleting a Bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark**.


Changing Browser Settings


Tap **Menu Key > Settings** from a browser window to change browser settings.

Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key > tap**  **> Settings > Bluetooth**.

Click  on the top of the screen.

When Bluetooth is on, the  icon will appear in the status bar.

2. Your phone will show all visible Bluetooth devices in range.
3. Tap the device you want to pair with and operate


according to the message prompt.


When the owner of the device to be paired accepts the connection, the pairing is completed.

TIPS: Tap your device name to make your phone discoverable if other devices try to pair with your phone.

Making the Most of Multimedia



Taking Pictures with Your Camera




Your phone has camera function. Open it by pressing **Home Key** > tap  > **Camera**.

Tap  to take a shot. To view it, just tap the picture in the right corner of the screen.

NOTE: Before taking a picture, click the corresponding icon on camera screen to complete the camera-related settings.


Shooting Video with Your Camcorder

Open the camcorder by pressing **Home Key** > tap  > **Camera** > tap 


Then tap  to pause, and tap  to start shooting. Tap  to stop and save video. Select the picture in the right corner of the screen to view the video you've just shot.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.





1. Press **Home Key** > tap  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

Opening Your Gallery

Press **Home Key** > tap  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.

Making Voice Memos

Sound Recorder enables you to record your voice memos.

1. Press **Home Key** > tap  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Save the voice recording after stop, or tap **DISCARD** to delete the recording.

Using Your Google Applications

Signing into your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.


1. Tap a Google application that needs a Google account, such as **Play Store**.
2. If you've got a Google account, enter your username and password. Then Follow the instructions. (Or tap **Or create a new account** if you don't have a Google account.)

Gmail

Gmail is a web-based email service that's configured when you sign into your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:


Open **Gmail** by Pressing **Home Key** > tap  > **Gmail**.

Using Google Talk


Google Talk is Google's instant messaging program, which enables you to communicate with other people who also use it. Press **Home Key** > tap  > **Hangouts**

Sorting out Your Phone Settings

Setting Date and Time


1. Press **Home key** > tap  > **Settings** > **Date & time**.
2. Click the **Automatic date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

Display Settings

Press **Home key** > tap  > **Settings** > **Display**, you can adjust the display settings as you like:


- **Wallpaper**: Choose wallpaper.
- **Brightness level**: Adjust brightness of the screen.
- **Sleep**: Set the delay for the screen to automatically turn off.
- **When device is rotated**: *Rotate the contents of the screen or Stay in portrait view.*

Sound Settings


By pressing **Home Key** > tap  > **Settings** > **Sound & notification**, you can select the profile, adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings


You can change the language of your phone system in two simple steps.

1. Press **Home key** > tap  > **Settings** > **Language & input** > **Language**.
2. Select a language from the list given.

Switching Network Modes


1. Press **Home key** > tap  > **Settings** > **More** > **Cellular networks** > **Preferred networks type**
2. Select one of the following: **LTE On(Automatic LTE/4G/3G/2G)**, **LTE OFF(Automatic 4G/3G/2G)**, or **2G only**.

Switching Networks

1. Press **Home key**> tap  > **Settings** > **More** > **Cellular networks** > **Network operators**. The phone automatically searches for all available networks.
2. Tap a network to register manually, or tap **Choose automatically**.

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN)

Press **Home key**> tap  > **Settings** > **More** > **Cellular**


networks > Access Point Names.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern

Creating Your Screen Unlock Pattern


1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock** > **Pattern**.
2. Drag your finger to connect at least four dots, draw the pattern.
3. Touch **Continue**.
4. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
 2. Draw the pattern you set to unlock the screen.
- If you make a mistake, your phone will tell you **Wrong Pattern** and then try again.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password


1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Tap **PIN** or **Password**.
3. Read the instructions and according to this instruction to complete your PIN or password settings.

Unlocking the Screen with Your PIN or Password

1. Press **Power Key** to wake up the phone.
2. Enter the PIN or password you set.

Disabling Screen Unlock Security


If you have created an unlock pattern, PIN or password, you can disable it.

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created.
3. Tap **None**.

Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card


as soon as you can.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Click the **Lock SIM card** check box.
3. Enter the PIN you've been given and tap **OK**.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

Changing Your SIM PIN


You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Make sure you already tick the **Lock SIM card** check box.
3. Tap **Change SIM PIN**.

Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Deleting Secure Credentials

1. Press **Home Key** > tap  > **Settings** > **Security**.
2. Tap **Clear credentials** to clear credentials if have.

Managing Your Device Memory

Press **Home Key** > tap  > **Settings** > **Storage**.

You can view the space information of the SD card as well as the phone storage.

- **Unmount SD card:** You can unmount the SD card to safely remove it.
- **Erase SD card:** Erase all data on the SD card.

Privacy: Reset to Factory Settings


Press **Home key** > tap  > **Settings** > **Backup & reset** > **Factory data reset** > **RESET PHONE** > **ERASE EVERYTHING**.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

Applications


Press **Home Key** > tap  > **Settings** > **Apps**.

Installing an Application

You can install an application from the Play store (**Home Key** > tap  > **Play Store**).


You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type

before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** > tap  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.


Removing an Application

1. Press **Home key** > tap  > **Settings** > **Apps** .
2. Select the application you want to delete.
3. Tap **UNINSTALL** and **OK** to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.


1. Press **Home key** > tap  > **Settings** > **Apps** .
2. Click the application you want to move on the

Downloaded tab.

Managing Other Settings

Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key** > tap

 > **Settings** > **Accessibility**.




Text-to-speech output

You can set the text-to-speech and voice recognition options by pressing **Home Key** > tap  > **Settings** > **Language & input** > **Text-to-speech output**.

NOTE: You need to download voice data in order to use the text-to-speech function.


Other Applications

Alarms

1. Press **Home key** > tap  > **Clock**  .
2. Tap the default alarm to configure it. Or to create a new alarm, tap .
3. Set up the alarm options.

Calculator

You can use the phone directly perform simple mathematical calculations.

1. Press **Home Key** > Tap  > **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Sliding from right to left to use scientific calculation.