

ZTE Blade L5
Quick Start Guide

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Just click **Support > Manuals** from the home page and then select your location, product type, and name to search for related support information.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc. The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



microSDHC Logo is a trademark of
SD-3C, LLC.

 
 
Other trademarks and trade names are the
property of their respective owners.

Version No.: R1.0

Edition Time : November 18, 2015

Manual No. : 079584501118

Getting to Know Your Phone

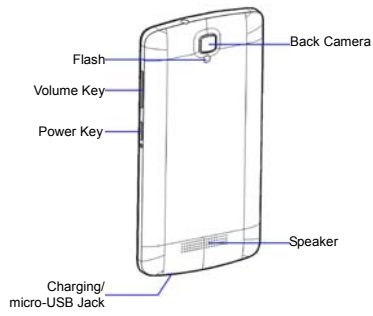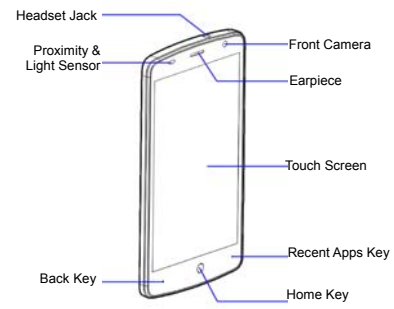

Key	Function
Power Key	• Press and hold to turn on or off airplane mode, power off or reboot the phone. • Press to turn off or on the screen display.
Home Key	• Touch to return to the home screen. • Touch and hold to open Google Search.
Back Key	Touch to go to the previous screen.
Menu Key	• Touch to view the options for the current screen. • Touch and hold to see recently used applications.
Volume Key	Press or hold either end of the key to turn the volume up or down.

Installing the micro-SIM Card and

Battery

 
Power off your phone and remove the battery before installing or removing the micro-SIM card. And power off your phone before removing or replacing the battery.



WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.


1. Insert your fingernail into the slot at the bottom right of the back cover and lift it up gently.

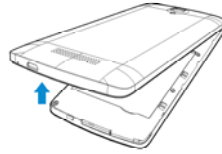

2. Hold the micro-SIM card with the cut corner oriented as shown and slip it into the card slot.



 3. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

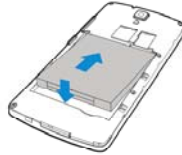


4. Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

Installing the microSDHC™ Card (Not Included)

A microSDHC card can be installed or removed while the phone is turned on. You need to unmount the microSDHC card before removing it.

 1. Remove the back cover.

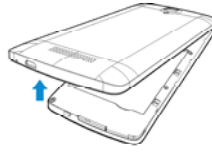

2. Hold your microSDHC card with the metal contacts facing down and slide it in.



**NOTE:**

Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

3. Replace the back cover.

Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

**WARNING!**

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

 
**CAUTION:**

Do not remove or change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

1. Connect the adapter to the charging jack.
Ensure that the adapter is inserted in the correct direction.



2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.



NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Ensure that the battery is charged.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

Waking Up Your Phone

Your phone automatically goes into sleep mode when it is not in use for some time. The display is turned off to save power and the keys are locked to prevent accidental operations.

You can wake up your phone by turning on the display and unlocking the keys.

1. Press the **Power Key** to turn the screen on.
2. Touch swipe the screen upside.
 - or -
 - Touch and hold an application shortcut at the bottom of the screen to unlock the screen and open the application quickly.

 NOTE:

If you have set a voice lock, an unlock pattern, a PIN or a password for your phone, you'll need to speak the voice command, draw the pattern, or enter the PIN/password to unlock your phone.

Using the Touch Screen

Your phone's touch screen enables you to control actions through a variety of touch gestures.

- **Touch**
When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.



- **Touch and Hold**
To open the available options for an item (for example, a message or link in a web page), touch and hold the item.



- **Swipe or Slide**
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



 
- **Drag**
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until

you have reached the target position.



- Pinch

In some apps (such as Maps, Browse, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

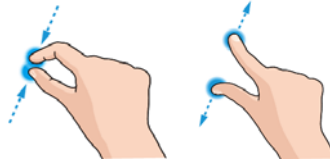

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Product Safety Information

	Don't make or receive phone calls while driving. Never text while driving.
	For body-worn operations, maintain a separation of 10 mm.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airport.
	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.

	Do not attempt to disassemble your phone.
	Only use approved accessories.
	Don't rely on your phone as a primary device for emergency communications.

Note:

§ 15.19 Labeling requirements.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure info – SAR

The device complies with the RF specifications when the device is used near your ear or at a distance of 1.0 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.0 cm away from your body to meet the requirement earlier mentioned.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of

tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.68 W/kg, and when properly worn on the body is 1.38 W/kg and hotspot mode is 1.48W/kg.

WiFi channel selection (cut out from ATCB011816)

North America edition is limited using channel 1-11. This limited operation can be only set by software and was done before the product down from the product line. All the products for North America marketing were embedded this limited before shipping. Customers have no way to choose the channel 12 & 13.

ZTE Uses the inner tool Web GUI to perform this limited operation and set method is as below: The US code to set in wifi advanced options will county code set to the United States, click "apply" button, and then back to the wifi basic page, Channel show for 1- 11. Limited by local law regulations, version for North America does not have region selection option."