



**ZTE C160**

**CDMA 1X Digital Mobile Phone**

**User Manual**

---

Copyright © 2006 by ZTE Corporation

All rights reserved.


No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Edition: 1<sup>st</sup> edition, June, 2006

---

# Content

<b>1</b>	<b>General Information .....</b>	<b>1</b>
1.1	Welcome.....	1
1.2	Security .....	1
1.3	Safety Warnings  .....	2
1.4	Limit Warranty .....	7
1.5	Limitation of Liability.....	8
<b>2</b>	<b>Know Your Phone.....</b>	<b>9</b>
2.1	Keypad .....	9
2.2	Instruction of Interface Icon.....	11
2.3	Technical Parameters.....	12
2.4	Battery.....	13
2.4.1	Remove and Installation of Battery.....	13
2.4.2	Charging the Battery .....	14
2.5	Connecting to the Network .....	16
2.5.1	UIM Card .....	16
2.5.2	Insertion and Extraction of UIM Card .....	16
2.5.3	Power on/off Phone.....	17
2.5.4	PIN Code.....	17
2.5.5	Connecting to the Network .....	18

---

<b>3 Basic Operations.....</b>	<b>19</b>
3.1 Making a Call.....	19
3.2 Answering a Call.....	20
3.3 Silence in Conversation.....	21
<b>4 Functions Menu.....</b>	<b>22</b>
4.1 Menu Functions.....	22
4.2 Contacts.....	23
4.2.1 Finding .....	23
4.2.2 Adding New .....	25
4.2.3 ADD to R-UIM .....	25
4.2.4 Viewing Contacts .....	26
4.2.5 Speed Dial List.....	28
4.2.6 Memory Status .....	28
4.3 Messages .....	28
4.3.1 Creating Messages .....	29
4.3.2 Received Messages and Saved Messages .....	30
4.3.3 Sending to Multi.....	31
4.3.4 Erasing Messages .....	31
4.3.5 Preformatted Msg.....	31
4.3.6 Reading Voice Mail.....	32
4.3.7 Message Settings.....	32
4.4 Recent Calls .....	33
4.5 Settings.....	34

---

4.5.1 Auto Key Guard .....	34
4.5.2 Supp.Services .....	34
4.5.3 Sound .....	35
4.5.4 Display .....	35
4.5.5 Alert.....	36
4.5.6 Call Timers .....	36
4.5.7 Security .....	37
4.5.8 Accessories.....	38
4.6 Extra.....	38
4.6.1 Games.....	38
4.6.2 Stopwatch.....	39
4.6.3 Alarm.....	39
4.6.4 Calendar .....	40
4.6.5 Calculator .....	40
4.7 VAS .....	41
<b>5 Text Input.....</b>	<b>43</b>
5.1 Multitap Input .....	44
5.2 Numbers.....	44
5.3 eZiText Input.....	45
5.4 Symbols Input.....	45
<b>6 Troubleshooting.....</b>	<b>46</b>

---

# 1 General Information

## 1.1 Welcome

Thank you for using ZTE C160 CDMA 1X Digital Mobile Phone.

To guarantee the mobile phone always in its best condition, please read this manual carefully and keep it for further use.

The pictures, symbols and contents in this manual are just for your reference. They might not be completely identical with your phone. Please subject to the real object. ZTE operates a policy of continuous development and reserve the right to update and modify the technical specifications in this document at any time without prior notice.

## 1.2 Security

- If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost UIM card and phone, which will protect you from economic losses resulted from unauthorized use.

You need to provide the phone's ESN number labeled. You can see ESN number after removing the battery. Please keep ESN number for future use.

- To protect your mobile phone from illegal use, please take the security measures as follows:

- 
- Set PIN code of the UIM card.
  - Take it with you as you can.

### 1.3 Safety Warnings

#### To the owner

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer on the device before using the phone if necessary.
- Operating of mobile phone may interfere with medical devices like hearing aides and pacemakers. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on.
- The phone with internal antenna has been tested for compliance with FCC RF Exposure (SAR) limits and is complied with FCC RF exposure compliance requirements.
- Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer on the medical device before using the phone.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, turn off your phone if

---

required.

- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Store the phone out of the reach of little children. The phone may cause injury if used as a toy.
- The phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) The phone may not cause harmful interference, and (2) the phone must accept any interference received, including interference that may cause undesired operation.

**Mobile Phone**

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which



---

affects the function of the phone.

- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to disassemble the mobile phone and battery by yourself. Changes and modifications made to the phone without the approval of manufacturer could void your authority to operate this phone.
- Do not charge the mobile phone without battery.
- On occasion of emergent calling, keep your phone in status of power on and in area of service. In the condition of standby, press the key to enter emergency phone number, and then press **Call key** to make a phone call.

#### **Battery Use**

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of your phone in a fire to avoid explosion.

- 
- Never use any charger or battery damaged or worn out.
  - Return the wear-out battery to the provider or put it in the appointed recycle place

**Warning:** If the battery is broken, keep away from the content. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

#### **Safety and General Use in Vehicles**

- Before making or answering a call, you should pay attention to the local laws about the use of wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, inner spark may cause fire.

#### **Exposure to radio frequency energy**

Radio wave exposure and Specific Absorption Rate (SAR) information

- The handset is designed to comply with safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using a standardized method with

---

the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various ZTE phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended is 1.6W/kg averaged over one(1) gramme of tissue.
- The highest SAR value for this model phone tested by MORLAB for use at the head is 0.972 W/kg(1g)
- The highest SAR value for this model phone tested by MORLAB for use at the body is 0.761W/kg(1g)

SAR compliance for body-worn operations is restricted to belt-clips, holsters, or similar accessories that have no metallic component in the assembly and which provide at least 1.5 cm separation between the device, including its antenna, and the users body

#### **In Aircraft**

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please turn off your mobile phone before the airplane takes off. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

---

## 1.4 Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product
- (c) Water or any other liquid damage
- (d) Any unauthorized repair or modification
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE' s reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers
- (g) Any other cause beyond the range of normal usage for Products.

End User shall have no right to reject, return, or receive a refund for any Product from ZTE under the above-mentioned situations.

This warranty is end user' s sole remedy and ZTE' s sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

---

### **1.5 Limitation of Liability**


ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.





*All Confidential*





## 2 Know Your Phone

### 2.1 Keypad




Key	Tip	Function Description
	Call key	<ul style="list-style-type: none"> <li>◆ Make and answer a call.</li> <li>◆ Press <b>Call key</b> in standby mode to enter All Recent Calls list.</li> <li>◆ Press <b>Call key</b> two times directly in standby mode to redial the last number.</li> </ul>

	End key	<ul style="list-style-type: none"> <li>◆ End an active call or reject a call.</li> <li>◆ Power on/power off.</li> <li>◆ Exit from any submenu to standby mode.</li> </ul>
	Clear key	<ul style="list-style-type: none"> <li>◆ Erase character(s) while editing.</li> <li>◆ Cancel operation, exit to previous pop-up window.</li> <li>◆ In standby mode, hold <b>Clear key</b> to lock keypad.</li> </ul>
	OK key	<ul style="list-style-type: none"> <li>◆ Enter main Menu in standby mode.</li> <li>◆ Switch to options of submenu.</li> <li>◆ Confirm selection.</li> <li>◆ Confirm the character chosen while character inputting.</li> </ul>
	Up/Down Left/Right key (Scroll key)	<p><b>Up/Down key:</b></p> <ul style="list-style-type: none"> <li>◆ Scroll the cursor up and down.</li> <li>◆ Used as selection key up and down for keying in commands and selecting options shown on the display.</li> <li>◆ In standby mode, hold <b>Up key</b> to set Silence All; Press <b>Down key</b> to enter Messages menu.</li> <li>◆ Adjust volume in conversation.</li> </ul>



 

 
 

		<ul style="list-style-type: none"> <li>◆ Used as direction key in games.</li> </ul> <p><b>Left/Right key:</b></p> <ul style="list-style-type: none"> <li>◆ Scroll the cursor left and right.</li> <li>◆ Used as selection key left and right for keying in commands and selecting options shown on the display.</li> <li>◆ In standby mode, press <b>Left key</b> to enter Extra and Press <b>Right key</b> to view All Contacts.</li> <li>◆ Used as direction key in games.</li> </ul>
 	0~9 Number key	<ul style="list-style-type: none"> <li>◆ Key in numbers or characters.</li> <li>◆ Make a speed Dial call.</li> </ul>
 	*key, #key	<ul style="list-style-type: none"> <li>◆ Functions differ in different mode, option or function menu.</li> </ul>

**Note:** To “press” key in this manual means to press the key and release it. To “hold” key means to keep pressing the key for two seconds or more.

## 2.2 Instruction of Interface Icon

Icon	Indication
	Signal strength



	Incoming call or calling
	Keypad locked
	Roaming
	New message
	Vibration
	Silence All
	Alarm
	Power indicator

### 2.3 Technical Parameters

Handset		
Type		ZTE C160
Dimensions		(Width×Height×Thickness) 44mm×107mm×19mm
Weight		78g(Battery Included)
Battery		
Continuous standby time		About 80h~160h (Subject to Network)
Continuous talk time		About 2h~4h (Subject to Network)

**Note:** For other parameters about battery and charger, Please refer to the real objects.

---

## 2.4 Battery

 
The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

### 2.4.1 Remove and Installation of Battery


- ◆ Remove: (1) Push the back cover release button upwards. Break off the bottom of the back cover to remove from the release button side. (2) Push downward from the up end of the battery and raise it up, then remove the battery.



- ◆ Installation: (1) Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted. (2) Put the back-cover of the phone flatly upon the body of phone. Direct the back cover towards the locking catches on the both side of the phone and press the back-cover of the phone flatly to fix the cover.

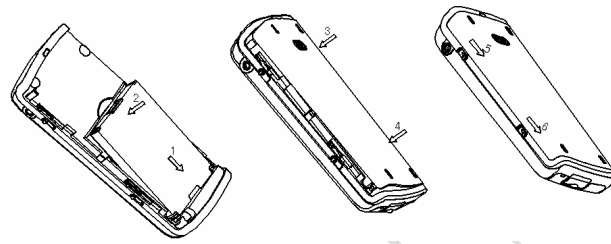

#### 2.4.2 Charging the Battery

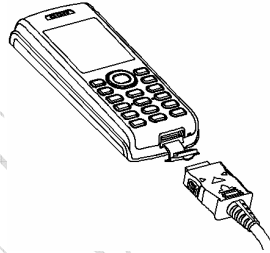 

- ◆ Plug out rubber away from the jack on the bottom of the phone and connect the lead from the charger to the socket on the bottom of the phone. (Note: The side with arrow should be upright while connecting).
- ◆ Connect the charger to a standard AC socket.
- ◆ Meanwhile, the charging indicator in the up-right corner of the display flops cyclically, indicating the charging is going. In

---

power-off mode while charging, the display only shows the charge indicator. If the battery is completely flat, in storage or used up, it may take for a while before the charging indicator appears on the display or any calls can be made.

- ◆ When the charging indicator on the screen stops flopping, the charging is completed. The charging takes usually up to 2~3 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get into hot accordingly.
- ◆ After the completion of charging, disconnect the charger from the phone and AC socket.

**Note:**

- When it is in charge, place the phone on condition of good ventilation and temperature between  $-5^{\circ}\text{C} \sim +45^{\circ}\text{C}$ . Ensure to use the charger offered by the manufacturer. Using unauthorized charge may cause danger and violate the authorization of the phone and the guarantee.
- When the phone automatically is switched off or indicates the alarm information of power shortage, please charge the battery in time.
- The duration time of the standby status or conversation of the phone is based on ideal working environment. In practice, the working time of battery varies in the network condition, working environment and application methods.

---

## 2.5 Connecting to the Network

### 2.5.1 UIM Card

Before using the phone, please insert effective UIM (User Identity Module) card into the phone.

 
All the information related to the network connection is recorded in the metal plane area of UIM card together with the information you stored in your Contacts in the UIM card. The UIM card can be inserted into any CDMA phone to use (new phone automatically reads UIM card).

Please do not touch the metal plane area of the card to avoid the missing and damaging information in the card and put UIM card in the place far away from electricity and magnetism.

**Warning:** Please turn off the phone before taking out UIM card. It is prohibited to insert or taking out UIM card in the condition of connecting with external power.

### 2.5.2 Insertion and Extraction of UIM Card

- ◆ Power off the phone, remove the battery and other external power.
- ◆ Insert UIM card into UIM card holder inside the phone.
- ◆ Put finger on the finger grip of UIM card holder, pull out UIM card and then remove UIM card away from UIM card holder, as shown in picture hereinafter.

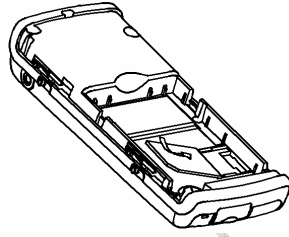

### 2.5.3 Power on/off Phone

Please hold **End key** to power on/off the phone.

After powering on the phone, it will automatically check whether the UIM card is inserted or it is usable or not, and then the indication screen will appear following prompt in sequence:

**Enter PIN** —— When the PIN lock is set **On**.

**Searching** —— Search for appropriate connecting network.

### 2.5.4 PIN Code

To set PIN code (personal identification number) can avoid the illegal usage of UIM card.

The methods of unlocking UIM card are: input password, press **OK key** to finish. If inputting wrong password three times continuously, UIM card will be locked by network and phone will inquire the PUK code.

**Note:** Your network supplier will design a standard Pin code (four to eight digits) for your UIM card. You should change your personal password as soon as possible.

---

### 2.5.5 Connecting to the Network

After powering on and inputting PIN code, the phone automatically searches the network available to be in state of standby mode.




Besides sending and receiving calls, you can also do:

- ◆ Press **OK key** to enter main Menu.
- ◆ Hold **Clear key** to lock phone's keypad.
- ◆ Hold **Up key** to set the phone in **Silence All**.
- ◆ Press **Down key** to enter **Messages** menu.
- ◆ Press **Left key** to enter **Extra** menu.
- ◆ Press **Right key** to view **All Contacts**.
- ◆ Press **Send key** to enter **All Recent Calls**.

---

## 3 Basic Operations

### 3.1 Making a Call

Please ensure that you are in the place where the signal can be received. Examine network signal strength icon  on the screen.



The more the indication bars, the stronger the intensity of receiving signal is. If there is no bar, please move to the place where the intensity of receiving signal is better. Sometimes, you only need to change the direction.

◆ **Making a National Call**

Press **Number key** to key in phone number, and add area code when making a long distance call (no need to add area code when dialing local number in some area). Press **Call key** to call out. Press **End key** to end the call and conversation.

◆ **Making an International Call**

Enter the country code, area code (without the leading 0) and the complete telephone number you want to dial, press **Call key** to call out.

Before the country code, hold a certain number key, e.g. "**0**" **key**



---

to enter the international prefix “+” (the “+” character replaces the international access code) or key in international prefix e.g. “00” of international call directly.

**Country code + Area code + Telephone number**

0086   755   26770000

◆ **Making Recent Calls**


All calls you recently dialed, received or missed are saved in your phone. All numbers are grouped as Missed Calls, Incoming Calls and Outgoing Calls. When the list is full, the oldest numbers will be erased automatically when new record is coming.


◆ You can check the list as follows:

- ✧ In standby mode, press **Call key** to view All Recent Calls.
- ✧ The number listed can be directly dialed by pressing **Call key**.

### 3.2 Answering a Call

When a call is incoming in standby mode, the phone will offer corresponding ringer or vibration to prompt according to your settings. With the number already saved in Contacts, the phone also shows the name of caller meanwhile.

- Press  to answer an incoming call.

- 
- Press  to end a call and the call duration is temporarily displayed.

See “4.5.8 Accessories” or refer to other ways of answering calls for your option.

### 3.3 Silence in Conversation

During conversation, you can select **Menu** or **Mute** displayed. Select **Mute** to let the other party temporarily not hear your voice; Select **Unmute** back to normal. You can also enter **Menu** in a conversation.

Press **Up/Down key** to adjust volume of Earpiece during a call.

---

## 4 Functions Menu

### 4.1 Menu Functions

◆ Main Menu Function:

1. In standby mode, press **OK key** to enter main Menu.
2. Scroll with **Up/Right key** or **Left/Right key** through the menu and select functions according to the prompt on the screen.
3. If the menu contains submenus and further submenus, select options and submenu you want according to the prompt on the screen.
4. Press **OK key** or **Clear key** to set or return to the previous menu. Press **End key** to exit to standby mode.

◆ Bottom Menu Function:

If options are displayed on the bottom of the screen, press **OK key** and then **Left/Right key** to select. Press **OK key** or **Clear key** to set or exit.

◆ Setting **Menu Format**:

The display can be changed from Large Icons to Small Icons. To alternate between large and small icons:

- Press **OK key** in standby mode.
- Scroll to **Settings** then press **OK key**.

 
- 
- Select **Display**.
  - Select **Menu Format**.

The functions of phone are mainly grouped in main **Menu: Contacts, Messages, Recent Calls, Settings, Extra** and **VAS**.

Please refer to the text hereinafter in this manual in detail.

**Note:** The picture used in this manual are with small icons.

## 4.2 Contacts

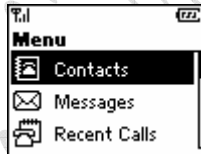

You can save contacts in the phone and UIM card. Each contact has three phone numbers, one e-Mail, one address and one personal web page. Select **Memory Status** to view memory of the phone and UIM card.

### 4.2.1 Finding

You can search for a name or number in **Contacts** in pop-up window by choosing:

◆ **View All**

1. Press **OK key**, and select **Contacts**.
2. Select **View All**. You can key in the first characters of the name

---

you are searching for to view contact directly in All Contacts.

3. Press **Up/Down key** to scroll through the corresponding name(s) and records in the list. Scroll to the name you want, and press **OK key** to view the details.

◆ **Find**

1. Press **OK key**, and select **Contacts**.

2. Select **Find**. You can key in total or any part of the the name you are searching for. You can also switch between **Find**, Text input mode (**Abc, etc.**), **Cancel** by pressing **OK key** and **Right /Left key**. And then press **OK key** to find.

3. Press **Up/Down key** to scroll through the corresponding name(s) and records in the list. Scroll to the name you want, and press **OK key** to view the details.

◆ **In Standby Mode:**

To quickly find phone number in **Contacts** in standby mode, press **Right key** or directly key in total or any part of the phone number and select **Find**, and /or scroll to the name you want.

All the contacts will be list by the letter of the name. If no contact in the list, "No contacts found" will be displayed.

**Note:** You can also reedit contact information under the name or

---

number selected in Contacts. Press **Options** and select **Add New** (not for UIM card), **Edit Name**, **Classify Contact** (not for UIM card), or **Erase Contact** to add new contact, edit the name, number, or text and press **OK key**.

#### 4.2.2 Adding New

Select **Add New** in **Contacts** menu to store the information in phone.

- ◆ Select option: **Phone**, **Email**, **Address**, or **Web Page**, enter corresponding information.
- ◆ Select **Next** and enter the name of the contact, press **OK key** to move to bottom menu and select Text mode of **Abc**, **Num**, **eZitext** or **Symbols** to input.
- ◆ After the completion of entering:  
Select **Option** to add further information: **Add New**, **Edit Name**, **Classify Contact** and **Erase Contact**.

Select information you just added, you can do further settings.

**Note:** In standby mode, enter phone number, press **Left/ Right key** to select **New/To Existing** to save the number.

#### 4.2.3 ADD to R-UIM

Select **Add to R-UIM** in **Contacts** menu to store corresponding information in R-UIM card.

- ◆ Entering phone number.
- ◆ Select **Next** and enter the name of the contact, press **OK key** to

---

move to bottom menu and select Text mode of **Abc**, **Numbers**, **eZiText** or **Symbols** to input.

- ◆ After the completion of entering:

Select **Option** to add further information: **Edit Name**, and **Erase Contact**.

Select information you just added, you can do further settings.

**Note:** In standby mode, enter phone number, press **Left/ Right key** to select **New/To Existing/To R-UIM** to save the number.

#### 4.2.4 Viewing Contacts

Select **View All** in Contacts to view all the contacts, select **R-UIM** to view contacts saved in R-UIM card, select **Personal**, **Business** to view the corresponding group contacts.

- ◆ Press **Up/Down key** to scroll in the list.
- ◆ Press **Call key** to call the selected contact. If there are several phone numbers in the same contact record, the first phone number will be dialed out as default.
- ◆ Pressing **OK key** to view details of the contact such as phone number, e-mail, web page, and address.
- ◆ After you select one of contacts, select **Option** and press **OK key**, you can:
  - ◇ **Add New:** Add other information (Not appear when contact is saved in R-UIM card).
  - ◇ **Edit Name:** Edit name of the contacts.

- 
- ◇ **Classify Contact:** Classify records into personal group or business group (Not appears when contact is saved in R-UIM card).
  - ◇ **Erase Contact:** Erase this record.
  - ◆ When you select one phone number and press **OK key**, you can:
    - ◇ **Edit:** Edit the number of the contact.
    - ◇ **Erase:** Delete the number (Not appears when contact is saved in R-UIM card).
    - ◇ **Send SMS Message:** Send message to this number.
    - ◇ **Number Type:** Set number's type (Not appears when contact is saved in R-UIM card).
    - ◇ **Save to R-UIM:** Save the number to R-UIM card (Appear when contact is saved in the phone).
    - ◇ **Add to Speed Dial:** Assign a speed dial number to the phone number.
    - ◇ **Save to Phone:** Save the phone number to handset (Appear when contact is saved in R-UIM card).
  - ◆ When you select **Email, Address** or **Web Page** and press **OK key**, you can:
    - ◇ **View Address:** View the **Email, Address** or **Web Page** in detail.
    - ◇ **Edit:** Edit the **Email, Address** or **Web Page**.
    - ◇ **Erase:** Erase the **Email, Address** or **Web Page**.



---

#### 4.2.5 Speed Dial List

When you select one phone number in the **Speed Dial List**, you can press **Call Key** to dial. You can also make a call by entering speed dial number in the standby mode.

Method 1: Enter speed dial number, press **Call key** to dial.

Method 2: Directly hold the Speed Dial Number digit key. If the Speed Dial Number is one-digit, directly hold the digit key. If the Speed Dial Number is two-digit, press first digit key and then hold the second one. For example: If the Speed Dial Number is 25, you should press 2 key firstly, and then hold 5 key, thus the phone can dial directly.

**Note:** Some handset may not support method 1. Some handset support only one-digit speed dial number, some support both one-digit and two-digit speed dial number.

#### 4.2.6 Memory Status

You can view in **Contacts** the number of entries saved and maximum number of entries capacity in phone and R-UIM.

### 4.3 Messages



You can send/receive text/voicemail messages freely if the

---

network supports this service. Contact your service provider for details.

Select **Messages** in **Menu** or press **Down key** in standby mode to enter Messages menu.

Messages submenu: **Create Message, InBox, OutBox, Send To Multi, Erase Messages, R-UIM, Preformatted Msg, Voice Mail, and Message Settings.**

When a new message is coming, your phone will ring and/or vibrate to prompt. The message will be saved in the handset. The messages' storage depends on the capacity of phone memory or R-UIM card.

You can enter **InBox** to read new messages.

#### 4.3.1 Creating Messages

- ◆ Select **Create Message**. Enter the recipients' phone number or select it from **Contacts** (press **Down** and **Left/Right key** to enter).
- ◆ Select **Continue**, input message text (Press **OK key** and **Right key** to select text mode or **Priority**). See "5 Text Input" for more instructions for writing text and character.
- ◆ Select **Continue**, then select **Send** to send the message, select **Save** to save. Select **Send to multireceiver** to send to multi recipients. See "4.3.3 Sending to Multi" for details.

**Note:** SMS centers of some cities and regions do not support

---

messages longer than 160 characters.

#### 4.3.2 Received Messages and Saved Messages

- ◆ Select **InBox** to view messages received, select **OutBox** to view messages saved in outbox. Select **R-UIM** to view messages saved in R-UIM card.
- ◆ In the message list, press **Ok key** to view the message. You can press **Left/Right key** to select **Options** to do as follows:
  - ◇ **OK:** Return to the list (Available only in Outbox and R-UIM).
  - ◇ **Erase:** Erase the message.
  - ◇ **Send:** Send the message ( Available only in Outbox).
  - ◇ **Forward:** Send the message to other recipients.
  - ◇ **Next:** View the next message (Available only in Inbox).
  - ◇ **Edit:** Edit and send the message (Available only in Outbox).
  - ◇ **Reply:** Reply the short messages to the sender (Available only in Inbox).
  - ◇ **Sender:** (Available only in InBox and R-UIM) Select **Call** to call the sender; Select **Reply** to reply message to the sender; Select **New** to save the phone number in the phone; Select **To Existing** to save the number into existed contact. Select **To RUIM** to save the phone number UIM Card
  - ◇ **Move to R-UIM :** Move the message into UIM Card (Available only for message in InBox).

- 
- ◇ **Move to Inbox:** Move this message into InBox (Available only for message in UIM card).

#### 4.3.3 Sending to Multireceiver

- ◆ Select **Send to multi** and **Add Receiver's** phone number to the list or you can select number from **Contacts**. If you add them successfully, numbers can be list in the multireceiver list.
- ◆ Select **List OK**, you can send message to all the numbers in the list.
- ◆ Select a phone number in the list, you can edit, **Delete** or change it to the number selected from Contacts.

#### 4.3.4 Erasing Messages

Select **Erase Messages**, press **OK key** and select:

- ◇ **No:** Return to **Messages**.
- ◇ **Entire InBox:** Erase all messages in InBox.
- ◇ **Entire OutBox:** Erase all messages in OutBox.
- ◇ **Entire R-UIM:** Erase all messages saved in UIM Card.
- ◇ **Old InBox:** Erase all the read messages.

#### 4.3.5 Preformatted Msg

Some default common **Preformatted** words and sentences, such as "Call me", "Can I call you?" which be stored in phone are for you to write messages quickly. You can select one to edit or send directly.

---

#### 4.3.6 Reading Voice Mail

Before using **Voice Mailbox**, please consult with service provider to confirm that the voice mailbox has been activated.

If you get a new voice message, the system will automatically send a message to your phone. Read the message and then dial voice mail box number to listen to your voice message.

To read your voice mail, please hold “**1**” **key** to dial voice mail box number in stanby mode.

**Note:** The function needs network support.

#### 4.3.7 Message Settings

◆ **Voice Mail Number:** You can edit the voice mail number. Please consult with network service provider for details.

◆ **Message Alert:** Set the alert mode for new message.

◇ **Alert Once:** Mobile phone alerts once.

◇ **Alert & Remind:** Mobile phone alerts once every one minute till the message(s) to be read.

**Note:** The SMS alert type depends on the **Alert Type** in **Settings** menu. To select either “**Vibre+ Ringer**” or “**Vibration**” in Settings menu, the phone alerts as vibration without ringing for a new message. “**Vibre+ Ringer**” is only applicable for an incoming call.

◆ **Auto Erase Inbox :** **Disable** or **Enable** your phone automatically to erase messages read already when memory is not enough.

---

## 4.4 Recent Calls



In standby mode, select **Menu** and enter **Recent Calls** menu. Or press **Call key** in standby mode to view All Recent Calls list directly.

- ◆ Select **Missed Calls**, **Incoming Calls**, **Outgoing Calls**, **All Recent Calls** to enter corresponding list.

Scroll to one record listed, press **Call key** to dial, press **OK key** to enter **Options** menu.

- ◆ **Call Information:** Indicate caller's number, calling time and duration.
- ◆ **Delete Entry:** Erase the number from Recent Calls.
- ◆ **Send SMS Message:** Send message to the number.
- ◆ **Save New:** Save the number to Contacts as a new record.
- ◆ **Save To Existing:** Add the number into the existed record in Contacts.
- ◆ **Save To R-UIM:** Save the number in UIM Card.
- ◆ **Delete Recent Calls:** Delete all Recent Calls records.

---

## 4.5 Settings



### 4.5.1 Auto Key Guard

Select **Off** to let the keypad not to be locked automatically. Or select options to let the keypad to be locked automatically when the keypad is inactivity for **30 seconds/ 2 minutes/ 5 minutes**.

### 4.5.2 Supp.Services

These supplement functions need network support. Please contact with your network carrier to activate these services.

◆ **Call Waiting:**

- ◇ **Activate:** Activate Call Waiting.
- ◇ **Deactivate:** Disable Call Waiting.
- ◇ **Cancel:** Exit to previous pop-up window.

This function enables you to answer or dial the second call putting the first call on hold. And you can switch between the two calls.

◆ **Call Forwarding:**

The service of call forwarding allows you to forward an incoming call to another preset phone number.

Select options as follows:

- 
- **All:** Divert all calls.
  - **Busy:** Divert calls when the phone is busy.
  - **No Answer:** Divert calls when you miss the call.
  - **Default:** When the phone is unreachable, divert. The service provider offers.
  - **Cancel All:** Cancel All Call Forwarding.
  - **Number:** Input the designated number to which the call to be forwarded.

#### 4.5.3 Sound

- ◆ **Volume:** Press **Up/Down key** or **Left/Right key** to adjust the volume of **Ringer**, **Earpiece** and **Key Beep**.
- ◆ **Alert Type:** Set alert type of phone as **Off**, **Ringer**, **Vibration**, or **Vibra+Ringer**.
- ◆ **Ringer Type:** Select the ringer type of phone.
- ◆ **Key Beep:** Select **Tones** or **Off** to set key beep with sounds or mute.
- ◆ **Key Tone Length:** Adjust the tone length of pressing keys.
- ◆ **SMSRinger Type:** Ringer type of new message.
- ◆ **ClockRinger Type:** Ringer type of alarm.

#### 4.5.4 Display

- ◆ **Backlighting:** Select turn **Off** backlighting or keep it for **10s**, **30s** or **10s and in call** (Backlighting in conversation or for 10 seconds after last key-pressing), **30s and in call**.



- 
- ◆ **Banner:** View and edit the phone's greeting to which appears on the display to your own.
  - ◆ **Language:** **English** is available.
  - ◆ **Contrast:** Press **Up/Down key** or **Left/Right key** to adjust the contrast.
  - ◆ **Menu Format:** Set the Menu format as **Large Icons** or **Small Icons**.
  - ◆ **Time Format:** Select the format as **AM/PM**, or **24HR**.
  - ◆ **Screensaver:** Set the **Type** and the **Timeout** of screensaver.

#### 4.5.5 Alert

You can select **Enable** or **Disable** to set the alert.

- ◆ **Missed Call:** When there are missed calls, alerts.
- ◆ **Roaming:** When the state of roam changes, alerts.
- ◆ **Minute Alert:** During conversation, alerts ten seconds ahead of every minute.

#### 4.5.6 Call Timers

Your phone can record call time of dialing and answering call.

1. Select an option on display and press **OK key**.

- ◆ **Outgoing Calls:** Indicate call time of all dialed call. The timer can be reset.
- ◆ **Incoming Calls:** Indicate call time of all answered call. The timer can be reset.
- ◆ **All Calls:** Indicate call time of all dialed and answered call. The

---

timer can not be reset.

2. Select **Reset** to clear data, the timer is set to zero.

#### 4.5.7 Security

Input right PIN code to enter **Security**. The default PIN code is 1234.

- ◆ **Erase All Contacts:** Erase all contacts saved in the handset.
- ◆ **Erase All Recent Call List:** Erase all recent calls saved in the handset.
- ◆ **Phone Reset:** The factory will provide some default settings in the phone. You may change some settings when using the phone. By selecting this menu, you can restore changed settings to the default. Some setting, e.g. alarm, cannot be restored.
- ◆ **PIN Lock:** Select **On** to active PIN lock.
- ◆ **PIN Change:** Change PIN code to a new one (PIN code, the phone's security option prevent others to avoid illegal use or acquire your phone's personal information).

**Note:** Consecutive inputting wrong PIN code for several times can cause locking of UIM Card. To unblock, you need PUK. PIN code and PUK Code may be offered together with the UIM Card. If not, please contact with network operator.

---

#### 4.5.8 Accessories

- ◆ **Headset Ringing:** Select **ON** to set alert tone utter from earpiece when mobile phone connects with earpiece (to be purchased separately).
- ◆ **Headset Autoanswer:** Select **Off** to disable the function or set the phone be automatically connected **2 seconds/5 seconds/10 seconds** after the ringer tone alerts.
- ◆ **Any Key Answer:** Set **On**, you can press any key to answer call when there is an incoming call, except for **End Key**.

#### 4.6 Extra



**Extra** offers two games of **BlackJack** and **Video Poker** and tools as **Stopwatch**, **Alarm**, **Calendar**, and **Calculator** etc.

##### 4.6.1 Games

###### 4.6.1.1 BlackJack

Play BlackJack and follow the guide on the screen.

Select options to start a **New Game** or **Continue** the last game.

- 
- ◆ **Deal:** To begin a game. The display shows the status of Cash in your pocket and your Bet amount.
  - ◆ **Bet:** To bet for the game.

#### 4.6.1.2 Video Poker

Play Video Poker and follow play guide indicated on the screen. You can select **New** to begin a new game or **Continue** the last game.

- ◆ **Deal:** To begin a game.
- ◆ **Bet:** To bet for the game.
- ◆ **Payout:** Display the payout award for different cards on your hand.

#### 4.6.2 Stopwatch

- ◆ Select **Start** to begin stopwatch timing.
- ◆ Select **Stop** to stop timing. Select **Start** again to continue timing.
- ◆ Select **Reset** to clear the existed time record.

#### 4.6.3 Alarm

Set alarm alert at a certain time. Alarm alerts only when the phone is in power on.

- ◆ **Disable/Enable:** Disable or enable the alarm.
- ◆ **Set:** Set Alarm time (press **Up/Down** key or key in digits, and press **Left/Right key** to move the cursor), alarm type (**Once**, **Daily** and **Weekdays**) according to the prompt, and press **OK**

---

**key** to confirm.

When alarm rings, select **Off** to close alarm. Or select **Snooze** to postpone alarming time. Alarm rings again 10 minutes later.

#### 4.6.4 Calendar

1. Press **Left/Right key** or **Up/Down key** to select exact date you want to view in pop-up calendar window. Press **OK key**.

2. Scroll **Left/Right key** to select:

✧ **Query:** Press **OK key** to view date info in detail.

✧ **Prev Month:**

- Press **OK key** once or several times to view date info in previous month(s).

- To adjust date, press **Up key** to move cursor back to Calendar, press **Left/Right key** or **Up/Down key** to exact date in calendar you want. Press **OK key** and select **Query** to view new date info in detail.

✧ **Next Month:**

- Press **OK key** once or several times to view date info in next month(s).

- To adjust date, press **Up key** to move cursor back to Calendar, press **Left/Right key** or **Up/Down key** to exact date in calendar you want. Press **OK key** and select **Query** to view new date info in detail.

#### 4.6.5 Calculator

Use calculator to execute basic math calculation.

Use **0~9 number key** to enter digits. Press **Left/Right key** to scroll to the symbol you want, press **OK key** to select.

÷	Division Sign
-	Subtraction Sign
=	Equal Sign
+	Plus Sign
x	Multiply Sign
.	Decimal Point
C	Clear all input digits and reset to Zero
±	Change digit to positive number or negative

Press **Clear key** to erase digit one by one and exit to previous window, press **End key** to exit to **Menu** display.

**Note:** This calculator has a limited accuracy and is designed for simple calculations.

#### 4.7 VAS



This function needs network support by service provider. If your UIM card can also support, menu of **VAS** appears on the display. If UIM Card and network provider don't support, the function is invalid. The

---

application of this function may ask for extra fee. Please contact with network provider to acquire more information.

*All Confidential*

---







## 5 Text Input

Your phone offers text input modes: Multitap Input, Numbers Input, eZiText Input, and Symbols Input. In addition, Multitap mode includes capital letter and lowercase mode.

You can key in letters, digits, characters and symbols while writing text or editing contact record information in **Contacts** or **Messages** etc., following the common instructions in hereinafter table.

Operation	Method
Input Letters	<b>Multitap</b> Input—"Abc", press corresponding letter key till the letter appears.
Input Digits	<b>Numbers</b> Input—"Num", press digit key once.
Input Words	<b>eZiText</b> Input—"eZi", press any key once to key in any word.
Input Symbol	<b>Symbols</b> Input—"Symbols", enter the symbols by pressing corresponding digit key. <b>Multitap &amp; eZiText</b> Input—"Abc & eZi", press "1" key till the symbol (common



	symbol) apperars.
Input Space	Press <b># key</b>  , except for being in Numbers mode.
Erase Character	Press <b>Clear key</b>  .
Erase all the characters	Hold <b>Clear key</b>  till all the characters be erased.
Move the cursor to left or right	Press  <b>Left/Right key</b> .
Change input mode	Under current mode, press <b>OK key</b>  and <b>Left/Right key</b> to pop-up window of Text Input and press <b>Up/Right key</b> to select any text input mode and press <b>Ok key</b> .
Capitalization	Press <b>* key</b>  to shift between capitalization and lowercase.

### 5.1 Multitap Input

Select **Multitap (Abc)** — Each key stands for multiple letters. Press key till your letter appears. When the cursor moves, enter the next letter.

### 5.2 Numbers

Select **Numbers (Num)** — Press the corresponding key to input

---

the number. In Numbers input mode, you can not enter space.

 
### 5.3 eZiText Input

Select **eZiText (eZi)** —Predictive word input is based on a built-in dictionary. Single press the digit key corresponding to each letter till the word appears on the screen.

If the word displayed is not the word you want, press **Up/Down key** to look for other matching word. Then press **OK key** to confirm.

### 5.4 Symbols Input

Select **Abc & eZi**:

- Press  to input till the symbol appears. Most common punctuation marks and special characters are available.

Or select **Symbols**:

- Press **Up/Down key** to page down. And press digit key to enter corresponding symbol.

---

## 6 Troubleshooting

If your phone appears following phenomenon in the process of application, please read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When the phone is powered on, it prompts "Enter PIN: ".	Please input your PIN code of the R-UIM card. If you have changed PIN code, please enter new PIN code. You can also disable PIN code under <b>Security</b> menu. Please refer to the part of "4.5.7 Security".
When the phone is powered on, it prompts "Insert card and restart phone".	Please check whether a valid R-UIM card is inserted or not.
No key beep on pressing keys.	Please check the setting of key beep in <b>Settings</b> .
When there is an incoming call, the prompt ringer not rings.	Please check the setting of Silence, sound Alert Type and ringer Volume in <b>Settings</b> .

---

No prompt tone at alarm time.	Please check relative sound setting (Silence All, sound Alert Type and ringer Volume in <b>Settings</b> ).
Messages cannot be sent.	Please check the signal of network.

ALL CONFIDENTIAL