



ZTE C362

CDMA 1X Digital Mobile Phone

User Manual

Copyright © 2008 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version: Release 1.0

Date: July 2008

Manual number:

Declaration


We, ZTE Corporation, declared that:

- The product is installed with battery separately in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.
- Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications
- Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific

organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless fixed phoned employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting as its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.

The Highest SAR Values for this model phone when tested for use on the Head was 0.397W/Kg, on body was 0.157w/Kg

Content

1	General Information	7
1.1	Welcome	7
1.2	Security	7
1.3	Safety Warnings 	8
1.4	Limit Warranty	11
1.5	Limitation of Liability	12
2	Know Your Phone.....	13
2.1	Keypad	13
2.2	Instruction of Interface Icon	16
2.3	Technical Parameters	17
2.4	Battery.....	18
2.4.1	Remove and Installation of Battery	18
2.4.2	Charging the Battery.....	19
2.5	Memory Card.....	21
2.5.1	Insert the microSD Memory Card	21
2.5.2	Remove the MicroSD memory Card	21
2.6	Connecting to the Network	22
2.6.1	Power on/off Phone	22
2.6.2	Connecting the Network.....	22

3	Basic Operations	24
3.1	Make a Call.....	24
3.2	Answer a Call.....	26
3.2.1	Set Any Key Answer	26
3.2.2	Incoming Call Silence	26
3.3	In Conversation.....	27
3.3.1	Adjust Volume in Conversation.....	27
3.3.2	Select Options in Conversation	27
3.4	Menu Functions	27
4	Names.....	29
4.1	Add Name	29
4.1.1	Add New Entry.....	29
4.1.2	Edit Existing Name	31
4.2	Find Records	31
4.3	Select Group	32
4.4	Set Speed Dial.....	33
4.5	View and Make Speed Dial.....	33
4.6	Memory Status	34
5	Messages.....	35
5.1	Send a New Message	35
5.2	Album On Line	37
5.3	Receive Incoming Call while Editing Message.....	37

5.4 Read Message	37
5.5 View Outbox, Drafts, Sent or Saved	38
5.6 Erase Messages	38
5.6.1 Delete a Message.....	39
5.6.2 Erase All Messages.....	39
5.7 Read and Set Voice Mail	39
5.7.1 Read Voice Mail	39
5.7.2 Set Voice Mail Number	40
5.8 Message Settings.....	40
5.9 Edit Preformatted message.....	41
5.10 Memory Status	42
6 Call History.....	43
6.1 Viewing Recent Calls	43
6.2 Erasing Recent Calls List	44
6.3 Call Duration.....	44
7 Settings.....	45
7.1 Profiles.....	45
7.2 Display	46
7.2.1 Set Wallpaper.....	46
7.2.2 Set Backlight	46
7.2.3 Set Keypad Light.....	46
7.2.4 Set Intensity.....	47

7.2.5 Set Contrast	47
7.2.6 Set Language	47
7.2.7 Set Time Format	47
7.2.8 Chang Banner	48
7.2.9 Idle Format	48
7.2.10 Theme Style.....	48
7.3 Call.....	48
7.3.1 Call Forwarding.....	48
7.3.2 Call Waiting.....	49
7.3.3 Set Any Key Answer	50
7.3.4 Voice Privacy.....	50
7.3.5 International Call.....	50
7.3.6 Call Timer.....	51
7.3.7 Call Connect Alert.....	51
7.3.8 Fire Proof.....	51
7.4 Security Setting.....	52
7.4.1 Setting Phone Lock.....	53
7.4.2 Restore Settings.....	53
7.5 Extras	54
7.5.1 Key Guard	54
7.5.2 Alert.....	54
7.5.3 Version.....	55
7.5.4 U-disk Set.....	55
7.5.5 WAP Setting	55

7.5.6 Own Number	55
8 Organiser	56
8.1 Games	56
8.2 Radio.....	57
8.3 Alarm	58
8.4 Scheduler	58
8.5 Voice Memo	59
8.5.1 Record in Normal	59
8.5.2 Record in Conversation	60
8.5.3 Record with Incoming Call/Message.....	60
8.6 Stopwatch.....	61
8.7 Calculator.....	61
8.8 Unit Conversion	62
8.9 World Time	62
8.10 Flashlight	63
9 Camera.....	64
10 Multimedia.....	66
10.1 Camera.....	66
10.2 Media Play	66
10.3 File Manager	67
10.3.1 Phone File Manager.....	67
10.3.2 MicroSD Card File manager.....	68

11 Brew	70
12 WAP	71
13 Text Input	73
13.1 Multitap Input	74
13.2 Numbers Input	74
13.3 eHiText Input	74
13.4 Symbols Input	75
14 Troubleshooting	76

1 General Information

1.1 Welcome

Thank you for choosing C362 CDMA 1X Digital Mobile Phone.

To guarantee the mobile phone always in its best condition, please read this manual carefully and keep it for future use.

The pictures, symbols and contents in this manual are just for your reference. They might not be completely identical with your phone. Please subject to the real object. ZTE operates a policy of continuous development and reserves the right to update and modify the technical specifications in this document at any time without prior notice.

1.2 Security

- If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost UIM card and phone, which will protect you from economic losses resulted from unauthorized use.

You need to provide the phone's ESN number labeled. You can see ESN number after removing the battery. Please keep ESN number for future use.

- To protect your mobile phone from illegal use, please take the security measures as follows:
 - Set PIN code of the UIM card.

-
- Take it with you as you can.

1.3 Safety Warnings

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer on the device before using the phone if necessary.
- Operating of mobile phone may interfere with medical devices like hearing aides and pacemakers. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer on the medical device before using the phone.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Store the phone out of the reach of little children. The phone may


cause injury if used as a toy.

Mobile Phone

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral

equipments.

- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.
- Do not charge the mobile phone without battery.
- On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press

Send key  to make a phone call.

Battery Using

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Warning: If the battery is broken, keep away from content. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

Safety and General Using in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them

into account in practical use.

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

In Aircraft

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

1.4 Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.

(c) Water or any other liquid damage.

(d) Any unauthorized repair or modification.

(e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.

(f) Use of the product with any unauthorized third party products such as generic chargers.

(g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.






1.5 Limitation of Liability



ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.




 
2 Know Your Phone

2.1 Keypad




Key	Tip	Function Description
	Send Key	<ul style="list-style-type: none"> ◆ Make or answer a call. ◆ Press Send key in standby mode to enter Dialed record list. ◆ Press Send key two times directly to redial the last number.
	End key	<ul style="list-style-type: none"> ◆ End an active call or reject a call. ◆ Power on/power off. ◆ Exit from any interface to standby mode.
	Left Select Key	<ul style="list-style-type: none"> ◆ Enter main menu in standby mode. ◆ Switch to the options of left bottom submenu.
	Right Select Key	<ul style="list-style-type: none"> ◆ Enter All list in Names in standby mode. ◆ Switch to the options of right bottom submenu.
	OK Key	<ul style="list-style-type: none"> ◆ Confirm the commands and options selected. ◆ Confirm the character chosen while character inputting. ◆ Enter Main menu shop in standby mode.










	<p>UP /Down key (Scroll key)</p>	<ul style="list-style-type: none"> ◆ Scroll the cursor up. ◆ Used as selection key up for keying in commands and selecting options shown on the display. ◆ In standby mode, hold Up key to power on/off the LED light. ◆ In standby mode, hold Down key to enable or disable the phone in Silence. ◆ Press Up key to enter Camera Menu. ◆ Press Down key to enter Messages menu. ◆ Used as direction key in games.
	<p>Left/Right key (Scroll key)</p>	<ul style="list-style-type: none"> ◆ Scroll the cursor left and right. ◆ Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display. ◆ In standby mode, press Left key to enter MobileShop, press Right key to enter WAP menu. ◆ Adjust volume in conversation. ◆ Used as direction key in games.

 ~ 	0~9 Number key	<ul style="list-style-type: none"> ◆ Key in numbers or characters. ◆ Make a Speed Dial call. ◆ Hold 0 Key to input + in standby mode. ◆ Hold 1 Key to enter Voice Mail in standby mode.
 	*key, #key	<p># key:</p> <ul style="list-style-type: none"> ◆ Press # key to select text input mode. ◆ Hold # key in standby mode to enable/disable vibration. <p>* key:</p> <ul style="list-style-type: none"> ◆ Hold * key in standby mode to to lock the keypad. ◆ In text mode, press * key once to enter Symbols mode.

Note: To “press” the key in this manual means to press the key and release it. To “hold” the key means to keep pressing the key for two seconds or more.

2.2 Instruction of Interface Icon

Icon	Indication
	Signal Strength

	Roaming
	New Voice Mail
	New SMS
	Ringer with Vibration
	Vibration
	Key Lock
	Silence Mode
	Alarm
	Power Indication

2.3 Technical Parameters

Handset		
Type	ZTE C362	
Dimensions	(Width×Height×Thickness) 47mm*108.2mm*15mm	
Weight	About 85g(Battery Included)	
Battery		
Continuous standby time	About 80h~240h (Subject to Network)	
Continuous talk time	About 2h~4h (Subject to Network)	

 
Note: Please refer to the real phone for other relative parameters of the battery and charger.

2.4 Battery


The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

2.4.1 Remove and Installation of Battery


- ◆ Remove: (1) Press and push the back-cover of the phone down to release and remove it off the phone. (2) Put finger on the side finger grips, and then lift up the battery from the finger grips to remove the battery.

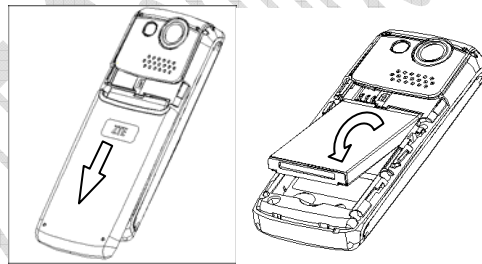

 - ◆ Installation: (1) Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted. (2) Put the back-cover of the phone flatly upon the body of phone. Direct the back cover towards the locking catches on the both sides of the phone and push the back-cover of the phone upward to lock the cover into its place.

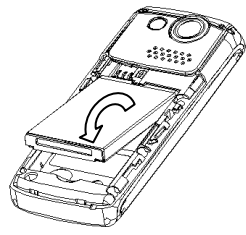

 2.4.2 Charging the Battery

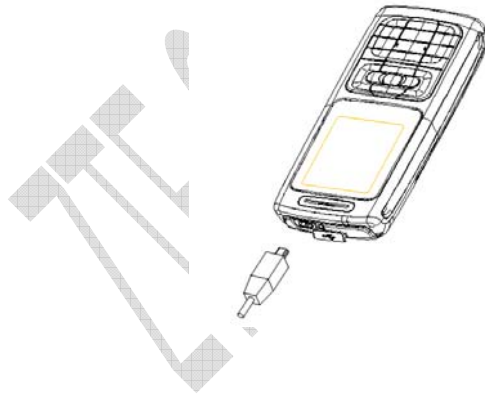

-
- ◆ Plug out rubber away (turn 180° as shown in the picture) from the jack on the bottom of the handset and connect the lead from the charger to the socket on the bottom of the phone. Connect the charger to a standard wall AC socket.
 - ◆ Meanwhile, the charging indicator in up-right corner of the display flops cyclically, indicating the charging is going. In power-off mode while charging, the display only shows the charge indicator. If the battery is completely flat in storage or used up, it may take for a while before the charging indicator appears on the display or any calls can be made.
 - ◆ When the charging indicator on the screen stops flopping, the charging is completed. The charging takes usually up to 2~3 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get into hot accordingly.
 - ◆ After the completion of charging, disconnect the charger from the phone and AC socket.

Note:

- When it is in charge, place the phone on condition of good ventilation and temperature between -5 ~ +45 . Ensure to use the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.

-
- When the phone is automatically switched off or indicates the alarm information of power shortage, please charge the battery in time.
 - The duration time of the standby status or conversation of the phone is based on ideal working environment. In practice, the working time of battery varies with network condition, working environment and application methods.

2.5 Memory Card

Your phone allows you to use a microSD memory card to expand the phone's available memory space. This digital card allows you to easily exchange images, music and voice data quickly between SD compatible devices.

Note: Maximum Memory Card capacity supported is 2 GB. Your phone may work with a microSD of greater capacity, but even if so, it may not be able to access beyond the 2 GB limit.

2.5.1 Insert the microSD Memory Card

1. Open the rubber MicroSD access door and rotate it 90 degree.
2. Firmly insert the microSD card into the slot until it clicks into place.
3. Close the rubber memory card access door.

2.5.2 Remove the MicroSD memory Card

1. Open the rubber microSD access door and rotate it 90

degrees.

2. Push the memory card downwards to release it from the slot.
3. Pull the memory card completely out of the microSD slot on the handset.
4. Close the rubber memory card access door.

Note: Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or phone. If possible, insert and remove the memory card while the phone is powered off.

2.6 Connecting to the Network

2.6.1 Power on/off Phone

Press and hold **End key** to power on/off the phone. The phone will check whether UIM card inserted well or not. And then follow the prompt indication on the display:

Searching——Search appropriate network connected.

2.6.2 Connecting the Network

After powering on, the phone automatically searches the network available and in state of standby mode.


Besides sending and receiving calls, you can also do:

- ◆ Press **Left select key/OK key** to enter main **Menu**.
- ◆ Press **Right select key** to enter **All list in Names**.
- ◆ Hold *** key** to lock the keypad.

-
- ◆ Hold **Up key** to power on/off LED Light.
 - ◆ Hold **Down key** to enable/disable the phone in Silence.
 - ◆ Hold **# key** to enable/disable vibration mode.
 - ◆ Press **Up key** to enter **Camera** menu.
 - ◆ Press **Down key** to enter **Messages** menu.
 - ◆ Press **Left key** to enter **MobileShop**.
 - ◆ Press **Right key** to enter **WAP** menu.
 - ◆ Press **Send key** to enter **Dialed** list.

3 Basic Operations

3.1 Make a Call

Please ensure that you are in the place where the signal can be received. Examine network signal strength icon  on the screen.

The more the indication bars, the stronger the intensity of receiving signal is. If there is no bar, please move to the place where the intensity of receiving signal is better. Sometimes, you only need to change the direction.

◆ **Make a National Call**

Press **Number key** to key in phone number, and add area code when making a long distance call (no need to add area code when dialing local number in some area). Press **Send key** to call out. Press **End key** to end the call and conversation.

◆ **Make an International Call**

Enter the country code, area code (without the leading 0) and the complete telephone number you want to dial, press **Send key** to call out.

Before the country code, hold **0 key** to enter the international prefix “+” (the character “+” replaces the international access

code) or key in international prefix e.g. "00" of international call directly.

Country code + Area code + Telephone number

0086 755 26770000

◆ **Make Recent Calls**

All calls you recently dialed, received or missed are saved in your phone. All numbers are grouped as Missed Calls, Received Calls and Dialed Calls. When the list is full, the oldest number will be erased automatically when new record is coming.

You can check the list as follows:

- ✧ In standby mode, press **Send key** to view Dialed Calls.
- ✧ The number listed in can be directly dialed by pressing **Send key**.



◆ **Make Pause Calls**

You can make use of pause call to dial an extension or voice service call.

E.g. Key in phone number, press **OK key** to select "P" on the display (character "P" added accordingly), and then key in number afterwards. Press **Send key** to dial the first number, when connected, press **Send key** again to dial the second number automatically. "P" can be used for not once only.

3.2 Answer a Call

When a call is incoming in standby mode, the phone will offer corresponding ringer or vibration to prompt according to your Setting. With the number already saved in Names, the phone also shows the name of caller meanwhile.

- Press **Send key**  to answer an incoming call.
- Press **End key**  to end a call and the call duration is temporarily displayed.

See “7.3 Call Setting” or refer to other ways of answering calls for your option as follows.

3.2.1 Set Any Key Answer

- Select **Menu**→ **Settings**→ **Call** → **Anykey Answer**.
- Select **On/Off**, and press **OK key**.

An incoming call can be answered by pressing any key except **End key**, **Left /Right select key** when you select **On**.

3.2.2 Incoming Call Silence

- When a call is coming, press **Right select key** to **Mute** the ringer tone.
- This function silences the current incoming call only. The phone will ring normally as next call coming.

3.3 In Conversation

3.3.1 Adjust Volume in Conversation

Press **Left/Right key** to adjust volume of Earpiece during a call.

3.3.2 Select Options in Conversation

During a call, press **Left/Right select key** to select options of **Option (Names, Messages, Record), Mute/Unmute, etc.**

- ✧ Select **Mute** to let other party temporarily can not hear your voice, select **Unmute** back to normal.
- ✧ Select **Option** for selection in Menu, such as **Names, Messages, and Record** with no worry about the ending of conversation.
- ✧ Press **OK key** to open speaker phone, and press **OK key** again back to normal.

3.4 Menu Functions

- ◆ Main Menu Function:
 - ii. In standby mode, press **Left select key/OK key** to enter main Menu. Scroll **Up/Down** or **Left/Right key** through the menu and select functions according to the prompt on the screen.
 - iii. If the menu contains submenus and further submenus, select options and submenu you want according to the prompt on the screen.
 - iv. Press **OK key** or **Right select key** to set or return to the previous

menu. Press **End key** to exit to standby mode.

◆ **Bottom Menu Function:**

If options are displayed on the bottom of the screen, press **Left/Right select key** to select. Press **OK key** or **Right select key** to set or exit.

The functions of phone are mainly grouped in main **Menu**: **Call History**, **Names**, **Multimedia**, **Messages**, **BREW**, **WAP**, **Settings**, **Camera**, and **Organiser**.

Please refer to the text hereinafter in this manual in detail.

4 Names

You can save Names in phone and UIM card. Each contact in phone's memory has three phone numbers, home number, mobile number and work number, and each contact in UIM card only has one phone number.

4.1 Add Name

4.1.1 Add New Entry

1. Select **Menu**→ **Names**→ **Add Name**→ **Name**.

2. Press **Up/Down key** to relative item,

- ✧ **Name:** Add the persons name. See "13 Text Input" more instructions for writing text and character.
- ✧ **Home Number/Mobile Number/Office Number:** write the call number by keying the Number key.
- ✧ **Default Number:** Press **Left/Right key** to set the **Home Number, Mobile Number** or **Office Number** as default number.
- ✧ **Group:** Press **Left/Right key** to set the names group as **No Group, Family, Relatives, Friends, Business, Colleagues, School, Club, or VIP**.

-
- ◇ **Photos:** Press **OK key** and you can choose the photos from **Phone(Photo, WAP or BREW)** or **Card**.
 - ◇ **Call Alert:** Press **OK key** to set specific ring for the calling of the names.
 - ◇ **Sms Alert:** Press **OK key** to set specific ring for the SMS of the names.

3. After the completion of writing, press **Left select key** to save the contact.

4. Scroll to just input phone number, press **OK key** or **Left select key**, Further operation can be executed, such as:

- ◇ **Edit:** Edit the names.
- ◇ **Send message:** Send message to this number.
- ◇ **Make a call:** Make a call to the default number of this names.
- ◇ **Send Name:** Send SMS of this number information to others.
- ◇ **Delete:** Delete the number.
- ◇ **Set to speed dial:** Assign a speed dial number to the phone number.
- ◇ **Default Number:** Set the number as the default number.
- ◇ **Add to Black List:** Add the number to black list.

Note: In standby mode, key in phone number, press **Left select key** to **Save** or **Send Message**.

If you save the same number again, the phone prompts to remind

you this number is already exist.

4.1.2 Edit Existing Name

1. Select **Menu** → **Names** → **Add Name** → **Existing Name**.
2. Press **Left/Right key** to different Groups, press **Up/Down key** to the record you want edit.
3. Press **OK key** and scroll to the phone number (**Home Number**, **Mobile Number** or **Office Number**) you want edit, press **OK key/Left select key**. You can enter into the phone number you select. Press **Right select key** to erase the characters, input the characters you want input (See 13. Text input for more information). And press **Up/Down key** to move the cursor you can make other changes of the names. Select **Save** to save the modification.

4.2 Find Records

◆ In All List

1. Select **Menu** → **Names** → **All List**.
2. Press **Up/Down key** to scroll though the corresponding name(s) and records in the list, or press the characters of the names.
3. Scroll to the record you are finding,
 - ◇ Select **Option**, you can **Add New Entry**, **View**, **Edit**, **Send Message**, **Make a Call**, **Delete**, **Delete All**, or **Send Name**.
 - ◇ Press **OK key**, you can see the detail phone numbers.

◆ **Search**

1. Select **Menu** → **Names** → **Find**.
2. Press **Up/Down Key** to select **Find Name**, **Find Number** or **Find Group**.
3. Input the name or number you want find, or select the group you want find and press **OK key**.
4. Press **Up/Down key** to scroll though the corresponding name(s) and records in the list. Scroll to the name you want, and press **OK key** to view the details or select **Option**.

All the Names will be list by the letter of the name. If no contact in the list, "No Record" will be displayed.

Note: In standby mode, press **Right select key** to enter **All** in **Names** directly.

4.3 Select Group

There are nine groups, no group, family, relatives, friends, business, colleagues, school, club and VIP preset in your phone, you can rename them and set ringer for the different group.

1. Select **Menu** → **Names** → **Find Groups**.
2. Scroll to the group you want to edit, **No group**, **Family**, **Relatives**, **Friends**, **Business**, **Colleagues**, **School**, **Club**, or **VIP**. Press **Left select key** or **OK key**. Further operation can be executed, such as:

- ◇ **View Members**: view the all members of the group.

-
- ◇ **Set Ring Tone:** Set the personal call ringer for the group. You can select ring from the list set already in phone or download ring by yourself.
 - ◇ **Set Msg Tone:** Set the personal message ringer for the group. Press Up/Down key to select the SMS ring.
 - ◇ **Edit Title:** press **OK key** and you can rename the name of group.

Note: For the group of **No Group**, you can only **View Members**.

4.4 Set Speed Dial

1. Select **Menu**→ **Names**→ **Speed Dials**.
2. Select one **Empty** slot in list and press **Left select key** or **OK key**.
3. Select **Delete All** to erase all speed dial record. Select **Assign** to set a phone number to this slot. Press **Up/Down key** to one contact record listed in phone's memory and scroll to the number you select.
4. Press **OK key** twice to set the speed dial.
5. Press **Right select key** back to previous menu.

4.5 View and Make Speed Dial

View:

1. Select **Menu**→ **Names**→ **Speed Dials** to see the speed dial.
2. Scroll to one speed dial, and press **OK key**, you can **Replace**, **Delete**, **Delete All**, or go to **Next Empty**.

Dialing:

You can also make a call by entering speed dial number in the standby mode.

Method 1: Enter speed dial number, press **Send Key** to dial.

Method 2: Directly hold the Speed Dial Number digit key. If the Speed Dial Number is one-digit, directly hold the digit key.

4.6 Memory Status

1. Select **Menu**→**Names**→**Memory Status**.

3. View the number of saved entries and maximum number of entries saved in phone.

For example: 8/500, indicating that 500 records entries in Max., out of which 8 have be saved in phone.

5 Messages

This is introduction of how to send, receive and erase the messages in your phone.

Note: The function introduced hereinafter may differ with different service offered in your area. Please consult with your service provider for more detailed information.

5.1 Send a New Message

Please consult with the service provider to support the network service of sending message.

1. Select **Menu**→ **Messages**→ **Send New**.
2. Input the receiver's phone number. Press **OK key** to add new number. Press **Left select key** to,
 - ◇ **Send:** Send the message.
 - ◇ **Contact:** select the receiver's number from **Contact**,
 - ◇ **Save To Drafts:** Save the message in Drafts.
 - ◇ **Cc/Bcc/Sub.** Add receiver that you want your message Cc or Bcc to. And write the subject of the message.
3. Press **Down key** to write message text. See "13. Text Input" more instructions for writing text and character. Press **Left select key**, you can
 - ◇ **Insert:** You could insert the files from **MyImages, Mytunes**

or **MyVideos**.

- ✧ **Slide:** You can make slide. Select **Add Slide** to add the new page of the slide, select **Delete Slide** to delete the page, select **Previous Slide** to go to the previous page, select **Next Slide** to go to the next page, select **Slide Timing** to set the time of the page display.
- ✧ **Preview:** View the message you have written.
- ✧ **Delete Item:** Delete the picture or tunes you have inserted.
- ✧ **Cc/Bcc/Sub:** Press **Up/Down key** to select Cc, Bcc or Subject of the message. Key in receiver's number or select the receiver number from **Contact** in **Option**, press **OK key** to add new receiver's number that you want Cc or Bcc. Write the **Sub** of the message. Select **Done** back to previous step.
- ✧ **Save To Drafts:** Save the message in **Drafts**.
- ✧ **Quick Text:** To select template sentence.
- ✧ **Signature:** Add the signature to the message.
- ✧ **Message Priority:** To set the SMS or MMS messages priority as **Normal, High**.

4. Press **OK key** to send the message.

Note:

1. You may send a SMS or MMS to a maximum of 30 recipients, including of the **To, Cc, Bcc** fields. These fields can each contain a maximum of 10 recipients.
2. You can send the message to an email address. In address

input 6245. In message text, input email address, space and then you can input the contents.

3. The SMS centers of some cities and regions do not support messages longer than 160 characters.

5.2 Album On Line

You can send SMS or MMS to the mail server. This function are network services. Please consult with network service provider to get corresponding service application.

5.3 Receive Incoming Call while Editing Message

- If you do not want to receive the incoming call, press **End key**.
- If you want to receive the incoming call, press **Send key**. After receiving the call, you can continue to edit and send the message.

5.4 Read Message

On receipt of a new message, the phone prompts you by vibration or ringer (up to silence and ringer in **Profiles** in **Settings**). The display indicates "Messages" and "1 Received". Press **View** to view the list in **Inbox**, and press **OK key** to view detail. Please erase old messages to keep space for new messages.

1. Select **Menu** → **Messages** → **Inbox**.
2. Scroll to the message you want to read.
3. Press Left select key, you can make the corresponding operation. Press **OK key** to read message. You can also press

Up/Down key to scroll.

4. After reading, press **Left select key** to select:

- ✧ **Use Highlight Object:** Save the highlighted object to file, or set as ringtone or wallpaper (MMS only).
- ✧ **Delete:** Delete this message.
- ✧ **Forward:** Forward the message to other recipients.
- ✧ **Reply All:** Reply the message to all the numbers in the message.
- ✧ **Reply:** Reply message to sender.
- ✧ **Message Details:** View the detail message information.
- ✧ **Move To Saved:** Move the message to the **Saved**.
- ✧ **Use sender's number:** Save, send message or call the sender's number.

5.5 View Outbox, Drafts, Sent or Saved

1. Select **Menu**→ **Messages**→ **Outbox/Drafts/Sent/Saved**.
2. Press Up/Down key to scroll Message List.
3. Press **Left select key** to make the corresponding operation.

5.6 Erase Messages

Delete and erase old messages to release space for phone's SMS memory. You can select erasing messages when sending or reading messages; erase messages one by one or all in **Inbox, Outbox, drafts, Sent or Saved**.

5.6.1 Delete a Message

1. Select **Menu**→ **Messages**.
2. Select messages location: **Inbox, Outbox, Drafts, Sent** or **Saved**.
3. Press **Up/down key** to select to-be-erased messages.
4. Press **Left select key** and select **Delete** in option. “Do you want to delete the message” appears.
5. Press **OK key/Left select key** to delete this message.

5.6.2 Erase All Messages

1. Select **Menu**→ **Messages**
2. Select **Inbox, Outbox, Draft, Sent** or **Saved** that you want to delete all.
3. Press **Left select key** and select **Delete all** in Option, “Do you want to delete all messages” appears.
5. Press **OK key/Left select key** to delete all messages in **Inbox, Outbox, Drafts, Sent** or **Saved**.

5.7 Read and Set Voice Mail

5.7.1 Read Voice Mail

Before using **Voice Mailbox**, please consult with network provider to confirm that the function of voice mail box has been activated. After your successful setting, network will automatically transfer incoming call(s) to your voice mail box, and send message(s) to your phone.

Select **Menu**→ **Messages**→**Voice Mail**→**Check Voicemail** to dial voice mail box number to listen to the leaving message following guide prompt.

Note: The function needs network support.

Hold **1 Key** in standby mode to dial voice mail box number directly.

5.7.2 Set Voice Mail Number

1. Select **Menu**→ **Messages**→**Voice Mail**→**Set Call Number**.
2. Set Voice Mail Number.

5.8 Message Settings

You can set your message box before you use it.

1. Select **Menu** → **Messages** → **Settings**→**Message Settings**.

2. Press Up/Down key to set the following item.

- ◇ **Save To Sent Box:** Press **Left/Right key** to select **Do Not Save**, **Auto Save** the message to sent box, or **Prompt** when sending the message.
- ◇ **Auto Delete Inbox:** Press **Left/Right key** to select **On/Off** to delete the inbox automatically or not when inbox is full.
- ◇ **Default Entry Mode:** Press **Left/Right key** to select default input text mode as **ITAP**, **abc**, **ABC**, or **123**.
- ◇ **Auto Download:** Press **Left/Right key** to select **On/Off** to set the preference for downloading MMS messages.

On: Download the MMS automatically.

OFF: Manually download the attachment when viewing the MMS.

- ◇ **Delivery Report:** Press **Left/Right key** to select **On/Off** for your phone can or can not automatically receive message from network informing whether you have sent message successfully.
- ◇ **Picture Talk Alert:** Press **Left/Right key** to select **On/Off**. When select **On**, if editing MMS, alert.
- ◇ **Callback:** When you send the message, callback number could be sent out automatically. You can change callback number.
- ◇ **Signature:** Write the signature, and press **Right select key** to erase the characters.

5.9 Edit Preformatted message

The phone has a group of some common built-in phrases and sentences, such as, "Please call me immediately", "I am busy now, call you later." etc. You can edit them.

1. Select **Menu**→ **Messages**→ **Settings**→ **Quick Text Settings**.
2. Scroll to the message you want to edit and press **OK key/Left select key**.
3. Press **Right select key** to erase the character and input the new contents. Press **OK key/Left select key** to save.

5.10 Memory Status

1. Select **Menu**→ **Messages**→**Memory Info**.
2. View the memory information of your phone.

TE Compendia

6 Call History

6.1 Viewing Recent Calls

Information of **All Calls, Missed Calls, Received Calls, Dialed Calls, Call Duration, Clear All** including name, phone number, and call time and conversation duration is saved in the **Call History**.

1. Select **Menu**→**Call History**.
2. Select **All Calls, Missed Calls, Received Calls, Dialed Calls**.
3. Press **OK key/Left select key**.
4. Select one entry of the records and press **Left select key**.
5. Select option:
 - ◇ **Call Information** : Indicate name, number, time and conversation duration information.
 - ◇ **SMS**: Send message to this number.
 - ◇ **Save**: Save the number in Names.
 - ◇ **Delete**: Erase the number from the list of Call History.
 - ◇ **Edit**: Edit the number.
 - ◇ **Black List**: Add this number to the Black List.

If the UIM Card does not support the function of Incoming Call Indication, you can only see part of the above-mentioned options.

6.2 Erasing Recent Calls List

1. Select **Menu**→**Call History**→**Clear All**.
2. Select **Erase Missed, Erase Received, Erase Dialed**.
3. Press **OK key/Left select key** to delete all the numbers from the list.

6.3 Call Duration

1. Select **Menu**→ **Call History**→ **Call Duration**.
2. Select an option from the list and press **OK Key**.
 - ◇ **Last Dialed Call:** Indicate the talk time of the last dialed call. The time can be reset.
 - ◇ **All Dialed Calls:** Indicate the talk time of all dialed call. The time can be reset.
 - ◇ **Incoming Calls:** Indicate the talk time of all incoming calls. The time can be reset.
 - ◇ **All Calls:** Indicate the talk time of all dialed and received call. The time can be reset.
 - ◇ **Reset Call Duration:** To reset the call duration.

7 Settings

Your phone has different functions in Setting to meet your requirement. They are: **Profiles, Display, Call, Security** and **Extras**.

7.1 Profiles

You can personalize your phone. There are many ways to change the sound and feel of your phone.

1. Select **Menu** → **Profiles**.
2. Press **Up/Down key** to select an option from the list.
 - ❖ **Silent**: Set the phone in silence mode
 - ❖ **General**: Set the phone in ringer mode.
 - ❖ **Outdoor**: Set the phone in ringer with vibration mode.
 - ❖ **Meeting**: Set the phone in vibration mode.
 - ❖ **Headset**: Set the phone in earphone mode.
3. Press **OK key/Left select key**, you can
 - ❖ **Setup**: Set the current mode as the phone mode.
 - ❖ **Profile Edit**: Press **Up/Down key** to select **Alert Type, Ring Tone, Ringer Volume, Earpiece Volume, Key Beep Volume, and Message Alert** (in **Headset**, it is **Alert Type, Ring Tone, Ringer Volume, Headset Volume, Key Beep Volume, Message Alert** and **Auto Answer**) to make specific setup.
 - ❖ **Rename**: Edit the new name for the current mode.

7.2 Display

7.2.1 Set Wallpaper

You can select different wall papers as background in idle state.

1. Select **Menu**→ **Settings**→ **Display**→**Wallpaper**.

2. Press **Up/Down key** to select **Preset Wallpaper** or **Custom Wallpaper**.

3. Press **Up/Down key** or **Left/Right key** to scroll the list and press **OK key/Left select key** to confirm.

7.2.2 Set Backlight

During a call or pressing keys, the display lights on. You can set lighting duration and type.

1. Select **Menu**→ **Settings**→ **Display**→**Backlight**.

2. Select an option in pop-up window:

— **10 Sec**: Keep backlighting for 10 seconds after last pressing.

— **30 Sec**: Keep backlighting for 30 seconds after last pressing.

3. Press **OK key/Left select key** to confirm.

Note: In conversation, backlighting consumes the power quickly and shortens continues conversation and standby time.

7.2.3 Set Keypad Light

When pressing keys, the lights on. You can set lighting duration and type.

1. Select **Menu**→ **Settings**→ **Display**→**Keypad Light**.

-
2. Select an option in pop-up window:
 - **Always On:** Always light on when pressing keys.
 - **Night Time:** Light on only when pressing keys in night.
 - **Custom Time:** Input the start time and end time. When pressing keys, the light on only in the time defined by you.
 3. Press **OK key/Left select key** to confirm.

7.2.4 Set Intensity

1. Select **Menu**→ **Settings**→ **Display**→ **Intensity**.
2. Press **Left/Right key** to adjust Intensity, and press **OK key/Left select key** to confirm.

7.2.5 Set Contrast

1. Select **Menu**→ **Settings**→ **Display**→ **Contrast**.
2. Press **Left/Right key** to adjust contrast, and press **OK key/Left select key** to confirm.

7.2.6 Set Language

1. Select **Menu**→ **Settings**→ **Display**→ **Language**.
2. Select **English** or **Spanish** as the language, and press **OK key/Left select key** to confirm.

7.2.7 Set Time Format

1. Select **Menu**→ **Settings**→ **Display**→ **Time Format**.
2. Select **AM/PM** or **24 HR**, and press **OK key/Left Select Key** to

confirm.

7.2.8 Chang Banner

View and edit phone's greeting to which appears on the display to your own.

1. Select **Menu**→ **Settings** → **Display** → **Banner**.
2. Press **OK key/Left select key** to **Edit**.
3. Key in character(s) and press **Right Select key** to erase character(s).
4. Press **OK key/Left select key** to **Save**.

7.2.9 Idle Format

1. Select **Menu**→ **Settings**→ **Display**→ **Idle Format**.
2. Select **Default** or **Simple** to set the format of the phone in idle, and press **OK key/Left select key** to confirm.

7.2.10 Theme Style

1. Select **Menu**→ **Settings**→ **Display**→ **Theme Style**.
2. Select **Theme Style 1** or **Theme Style 2** to change the color of the display, and press **OK key/Left select key** to confirm.

7.3 Call

7.3.1 Call Forwarding

Use Call Forwarding to forward the incoming call to a designated

phone number. After setting of call forwarding, phone will automatically dial network to set the function in active.

1. Select **Menu**→ **Settings**→ **Call** → **Call Forwarding**.

2. Set type of Call Forwarding, press **OK key**.

- ◇ **Immediate**: All is diverted immediately in all conditions.
- ◇ **Busy**(Divert when busy): When the phone is busy, divert.
- ◇ **No Answer**(Divert when no answer): When there is no answer, divert.

3. Select **Enabled** to activate Call Forwarding function. Select **Other Number** to activate forwarding call to other number, input the number or select from names to which the phone will forward. And select **Save**.

E.g. To forward incoming call to 12345678, input: 12345678, press **OK key** to confirm.

4. **Disabled**: To deactivate Call Forwarding function.

7.3.2 Call Waiting

During a call, use Call Waiting to answer the waiting call prompted by the network; Or dial another call meanwhile putting the first call on hold. These calls can be shifted while you have calls in conversation.

Call Waiting lets you enjoy three-party conversation without missing call.

1. Select **Menu**→ **Settings**→ **Call** → **Call Waiting**.

2. Select Option:

- **Enabled:** To activate the Call Waiting function. The network will notify you of an incoming call while you have a call in progress. You can press **Send key** to get through the waiting call and switch one call to another.

- **Disabled:** To cancel the Call Waiting function.

7.3.3 Set Any Key Answer

1. Select **Menu** → **Settings** → **Call** → **Anykey Answer**.
2. Select **On/Off**, and press **OK key**.

An incoming call can be answered by pressing any key except **End key**, **Left /Right select key**.

7.3.4 Voice Privacy

1. Select **Menu** → **Settings** → **Call** → **Voice Privacy**
2. Select **On** or **Off** to set voice encryption in Standard or set voice encryption Enhanced.
3. Press **OK Key/Left select key**.

7.3.5 International Call

ZTEC362 has two solutions for international country code prefix, either for standard based area or for network where standard based solution is not implemented.

1. Select **Menu** → **Settings** → **Call** → **International Call**
2. Select option,
 - **Auto:** "Do you want to activate this function" display and press

OK key to confirm. In standard based area, to activate international prefix “+” function instead of keying in international call prefix, e.g. “00”, otherwise, select “No”. See “3.1 Making a Call” for detail description.

- **Manual:** To set and edit the certain digit number(s) as the international prefix. As in some area, the network standard based solution is not implemented.

7.3.6 Call Timer

1. Select **Menu**→ **Settings**→ **Call** → **Call Timer**.
2. Select **On** or **Off** to set call timer on display or not when finishing the call.
3. Press **OK Key/Left Select Key**.

7.3.7 Call Connect Alert

1. Select **Menu**→ **Settings**→ **Call** → **Call Connect Alert**.
2. Select **On** or **Off** to set the phone alert when call connected.
3. Press **OK key/Left select key**.

7.3.8 Fire Proof

You can set Incoming calls bar in **Fire Proof** submenu including **Friend List, Black List, Current Settings**.

◆ **Friend List**

All the Names will be listed by the letter of the name.

1. Select **Menu**→ **Settings** → **Call** → **Fire Proof** → **Friend List**.
2. Select options or scroll to one contact listed and select options:

-
- ✧ **Add:** Add new contact in Friend List.
 - ✧ **Edit:** Edit this contact in Friend List.
 - ✧ **Delete:** Delete this contact in Friend List.
 - ✧ **Clear All:** Delete all the Names in Friend List. If there is no contact in the list, "List Empty" will be displayed.

◆ **Black List**

All the Names will be listed by the letter of the name.

1. Select **Menu** → **Settings** → **Call** → **Fire Proof** → **Black List**.

2. Select options or scroll to one contact listed and select options:

- ✧ **Add:** Add another new contact in Black List.
- ✧ **Edit:** Edit this contact in Black List.
- ✧ **Delete:** Delete this contact in Black List.
- ✧ **Clear All:** Delete all the Names in Black List. If there is no contact in the list, "List Empty" will be displayed.

◆ **Current Settings**

You can set barring applications as follows:

- ✧ **Bar All:** Bar all incoming calls.
- ✧ **Bar Black List:** Only bar numbers listed in Black List.
- ✧ **Bar All Except Friend List:** Only numbers listed in Friend List are not blocked.
- ✧ **Cancel All:** Cancel barring setting.

7.4 Security Setting

Introduction to phone's security options preventing others to avoid

illegal use or acquire your phone's personal information. The default phone password is 1234, please change it to your own phone password as soon as possible.

7.4.1 Setting Phone Lock

1. Select **Menu**→ **Setting**→ **Security**.
2. Input your phone password, press **OK key/Left select key**.
3. Move to **Handset Lock**, select **On**, **Off** or **Change Lock**, press **OK key/Left select key**.

7.4.2 Restore Settings

Your phone offers factory default phone setting. You may modify some options when you use phone. You can also Restore Factory Default to renew some modified options to the origin.

1. Select **Menu**→ **Setting**→ **Security**.
2. Input your phone password, press **OK key/Left select key**.
3. Move to **Reset**. Select **Clear All Names**, **Reset Settings**, or **Reset Phone**.
4. Select **OK** to revert to confirm resetting or restoring factory default or select **Cancel** to exit.

Note: Restoring the phone do not influence your phone password, Recent Calls, Names, InBox and OutBox.

Some setting, e.g. alarm, cannot be restored.

7.5 Extras

7.5.1 Key Guard

1. Select **Menu**→ **Settings**→**Extras**→ **Key Guard** to set phones' key lock and time.

2. Select an option in pop-up window:

– **Off**: Deactivate the function of phones' key lock.

– **On**: Activate the function of phones' key lock, and you can input the key guard time from 5S to 900s.

3. Press **OK key/Left select key** to confirm.

Note:

- Hold *** key** to lock the keypad directly in standby mode.

- In state of key lock, to make use of phone, unlocking code should be input prompted by phone on the display.

7.5.2 Alert

1. Select **Menu**→ **Settings** →**Extras**→ **Alert**.

2. Select an option on display and press **OK key**.

– **Service**: When there is service available.

– **Remind Minute**: During a call, ten seconds ahead of every minute, alert.

– **Missed Call**: When there are missed calls, alert.

– **Roaming**: When roam in active and handoff between service areas or states occurs, alert.

For the function mentioned above, select **On** to operate; select **Off** to cancel alert.

7.5.3 Version

1. Select **Menu** → **Settings** → **Extras** → **Version**.
2. See the information of **PRL** (Personal Roaming List) **Version**, **SW Version** or **HW Version**.

7.5.4 U-disk Set

1. Select **Menu** → **Settings** → **Extras** → **U-disk Set**.
2. When you select **On**, the T card of the handset could use as U-disk.

7.5.5 WAP Setting

1. Select **Menu** → **Settings** → **Extras** → **WAP Setting**.
2. You can set **Access Point** or make **Proxy Settings**. For detail information, please contact with service provider.

7.5.6 Own Number

1. Select **Menu** → **Settings** → **Extras** → **Own Number**.
2. The display will show your phone number.

8 Organiser

8.1 Games

8.1.1 Brick attack

In this game, paddle the bar to rebound the ball and attack bricks with skill. And then enter next stage.

1. Select **Menu**→**Organiser**→ **Games**→ **Brick attack**.
2. Press **Left Select key** or **OK key**, the display shows greeting and play guide.
3. Select **New Game** to start, press **Left/Right key** to move the paddle bar left/right. Press **Right select key** to pause the game..
4. As passing a stage, select **Continue** to next stage, select **Exit** to exit the game.

8.1.2 Push Box

In this game, pushing boxes with skill and locating them to stated locations. And then enter next stage.

1. Select **Menu**→**Organiser**→ **Games**→ **Push Box**.
2. Press **OK key**, the display shows greeting and play guide.
3. Select **New Game** to start, select **Stage** and key in stage level. Press **OK key** to start.
4. As passing a stage, select **Replay** to replay again, select **Next**

to enter next stage.

8.2 Radio

ZTE C362 supports Radio function.

1. Select **Menu**→**Organiser**→**Radio**.
2. Insert earphone and then the phone notify on the display “Radio On!”, so the radio is activated.
3. Press **Up/Down key** to select the channel. Press **Left/Right key** to adjust the volume. And press **Left select key** to select any of the Option as follows:

- ◇ **Save Channel:** Input Channel Name and select one channel from Channel List.
- ◇ **Auto Tuning:** Press **Up/Down key** to search automatically the channel available.
- ◇ **Manual Tuning:** Press **Up/Down key** to search manually the channel available.
- ◇ **Set Frequency:** Set certain frequency as default for a specific channel. Press **Up/Down key** to shift between integer and fraction, and press **Left/Right key** to move the cursor and input digit number of frequency.

Note: Be sure of erasing original digit number of frequency before your new inputting.

- ◇ **Rename:** Reedit the channel name.
- ◇ **Delete:** Delete the channel list.

-
- ◇ **Speaker:** Set the speaker of the phone on/off.
 - ◇ **Off:** Turn off the radio.

8.3 Alarm

Set alarm alert at a certain time.

1. Select **Menu** → **Organiser** → **Alarm**.
2. Select **Set alarm** to set, and press **OK key**. Select **Alarms List** to view the settings. Select **Set Rest Day** to set the date of alarm not work. Select **Delete All** to delete all setting.
3. When alarm rings, select **OK** to stop alarming or select **Again** to postpone alarming time. Alarm rings again 5 minutes later.

8.4 Scheduler

1. Select **Menu**→**Organiser**→ **Scheduler**.
2. Press **Left/Right key** or **Up/Down key** to select exact date you want to view in pop-up calendar window. Press **OK key/Left select key**.
3. Scroll **Up/Down key** to select options.
 - ◇ **Add Event:** Add new schedule.
 - ◇ **View By Day:** View the schedule lists of the current day.
 - ◇ **View All:** View all schedule lists.
 - ◇ **Erase Old:** Delete the old schedule lists.
 - ◇ **Erase All:** Delete all schedule lists.
 - ◇ **Erase To Date:** Input the date, your phone delete all

schedule lists early than that date.

- ✧ **Go To Date:** Input the date, your phone go to the calendar window indicating the date you input.
- ✧ **Go To Today:** Go to the calendar window indicating today.
- ✧ **Setting:** Set the start day of week.

8.5 Voice Memo

ZTEC362 supports Voice Memo function either in or not in conversation with a capacity of saving 5 pcs records in max. When there is no space in Voice Memo or Voice Memo is full, the phone prompts.

8.5.1 Record in Normal

1. Select **Menu** → **Organiser** → **Voice Memo**.

2. Scroll **Up/Down key** to select:

- ✧ **Record** – When you are not in conversation, select **Start** to begin a new recording. Select **Stop** or **Pause/Resume** to stop, pause or resume the recording. After record ended, select **Option** to **Review**, **Re-record** or **Save** the file.
- ✧ **Record List** – see the **Record List**, select one record list, press **OK key/Left select key** to display. After display, select **back** to previous menu, select **Option** or **OK key** to:
 - **Delete:** Delete the record.

- **Info**: Indicate the title, length, size, and time information of the record.

- **Delete all**: Delete all record lists.

✧ **Delete All**: Delete all record lists.

8.5.2 Record in Conversation

When you are in conversation, select **Record** to pop-up window of **Voice Memo** and select **Start** to begin a new Recording, or **Stop**, **Pause/Resume** recording, without ending the call.

The record will be saved automatically when the call is ended without finishing recording, and exit back to interface of ending call.

8.5.3 Record with Incoming Call/Message

✧ **With Incoming Call**

While recording in state of non-conversation, receive a call will stop recording. The record of phone will be saved automatically and return to call interface.

✧ **With Message**

While recording in state of non-conversation, receive a message won't stop recording. The phone prompts message alert without display message interface.

✧ **With Others**

- **Alarm**: Prompts later.

- **Alert**: Prompts later.

- **Power off automatically while recording**. Save record

automatically.

Note: In state of non-conversation, record voice via MIC; In state of conversation, record voice via earpiece.

8.6 Stopwatch

1. Select **Menu** → **Organiser** → **Stopwatch**.
2. Select **Start** to make stopwatch timing.
3. Select **Stop** to stop timing.
4. Select **Reset** to clear the time record.
5. Select **Back** to return to previous menu.

8.7 Calculator

Use calculator to execute basic math calculation.

1. Select **Menu** → **Organiser** → **Calculator**.

Key in digits. Press **Left/Right key** or **Up/Down key** to choose “+” “-” “x” “/” according to the prompt. Press **# key** to input decimal point, and press *** key** to change digit to positive number or negative. Press **OK key** to display the result.

/	Division Sign
-	Subtraction Sign
=	Equal Sign
+	Plus Sign
x	Multiply Sign
.	Decimal Point

Press **Right Select key** to erase digit one by one and exit to previous window, press **Left Select key** to erase all digits and reset, press **End key** to exit to standby mode.

Note: This calculator has a limited accuracy and is designed for simple calculations.

8.8 Unit Conversion

1. Select **Menu**→ **Organizer**→ **Unit Conversion**.
2. Select **Legth, Temperature, Power, Volicity, Weight, Area, Volume, Capacity, Energy, or Pressure** and press **OK key** to make conversion.
3. Key in numbers the original unit which is from. And press **Left/Right key** to select the original unit which is **From** and equals **To**. Press **OK key** to get the result which equals to.

8.9 World Time

1. Select **Menu**→ **Organiser**→ **World Time**.
2. Press **Left/Right key** to check the different cities time.
3. Press **Left select key/OK key** you can select the following

Option:

- ◇ **Local City:** Select the local city.
- ◇ **Query Others Time:** Press **Up/Down key** to move the cursor up and down. Press **Left/Right key** to select the city of **base** and **aim**. Press **Number key** to change the time of base city. Select **Query** to check the aim city time.

8.10 Flashlight

Provide information of how to power On/Off the flashlight.

TEC Confidential

9 Camera

C362 provide the function of take photos or movies. Select **Menu** → **Camera**. You enter the **Camera** menu. Press **OK key** to take photos or press **Left select key** to choose the **Option**.

- ◇ **Settings:** make various setting of taking photos.
 - Resolution:** set the resolution as 480x640, 240x320, or 128x160.
 - Fun Frames:** Press **OK key** and then **Left/right key**, you can view and select the various fun frames for the photos.
 - Black/White:** Select **On** or **Off** to set the phones as black/white or colors.
 - Multishot:** Set Multishot **Off**, **3 shots**, **6 shots** or **9 shots**.
 - Shutter Sound:** Select the shutter sound.
 - Save Location:** Select save location as **Phone** or **T Card**.
- ◇ **Photo Brower:** enter the File manager of photos in phone or T Card. Select one file,
 - press **OK key** to see the photos. Select **Option**, you can view **Full Screen**, make **Image Delete**, **Set As Wallpaper**, **Send Via MMS**, **Set As Contact Image** or see **Help** information.
 - Press Left select key, you can **Browse**, **Rename**, **Delete** or

Delete all the phone.

✧ **Take Movie:** press OK key to make movie, press Left select key to make option,

-**Resolution:** Set the resolution as 144x76.96x128 or 80x96.

-**Time Limited:** Set the movie time as 6 sec, 12 sec or 3 min.

-**Take photo:** take photos.

-**Movie Browser:** view the movie saved in the phone.

-**T Card info:** View the usage information of MicroSD card.

-**Save Location:** Set the save location of photos as phone.

10 Multimedia

ZTE362 provide the function of taking pictures and listening music.

10.1 Camera

1. Select **Menu**→**Multimedia**→**Camera Recorder**.
2. Press **OK key** to take photos.
3. Select **Option**, press **Up/Down key** to select a following option.
 - ◇ **Resolution**: set the resolution as 144x176, 96x128, or 80x96.
 - ◇ **Time Limited**: Set the movie time as 6 sec, 12 sec or 3 min.
 - ◇ **Take photo**: take photos.
 - ◇ **Movie Browser**: view the movie saved in the phone.
 - ◇ **Fun Frames**: select the various fun frames.
 - ◇ **T Card info**:The information of T card.
 - ◇ **Save Location**: Set the save location of photos as **Phone** or **T Card**.

10.2 Media Play

1. Select **Menu**→**Multimedia**→**Media Play**.
2. Press **OK key** to play Playlist.
3. Select **Option**, press **Up/Down key** to select a following option.

-
- ◇ **Play list:** When **Play list** is empty, select **Add**, your phone display music files, press **OK key** to select files, and press **Left select key** to confirm.

In **Play List**, press **Left select key** you can make the following option:

- Play:** play the play list.
- Add New Music:** add new music from music file to play list.
- Delete From Playlist:** delete the file from the playlist.
- Clear Playlist:** delete all files from the playlist.
- ◇ **View All The Music:** View all music files.
- ◇ **View All The Video:** View all Video files.
- ◇ **Repeat:** Select **Off**, **Repeat** or **Repeat All** to set repeat one files, all files or not repeat play.
- ◇ **Random:** Select **On** or **Off** to open or close random.
- ◇ **Sound Effect:** Press **Up/Down key** to set the sound effect.
- ◇ **Speaker:** Select **On** or **Off** to open or close the speaker.
- ◇ **Help:** See the help information.

10.3 File Manager

10.3.1 Phone File Manager

1. Select **Menu**→**Multimedia**→**File Manager**.
2. Press **Up/Down key** to select an option from the pop-up windows,

-
- ◇ **Picture:** include picture in the file of **Photo, WAP, BREW.**
 - ◇ **Music:** include music files in the file of **Record, WAP, BREW.**
 - ◇ **Video:** Include video files in **Record movie** and **WAP.**
 - ◇ **User:** include the user's others files.
3. Select one file folder, select option you can
- ◇ **Open:** Open the file folder. You can see all files name in the file folder. Select one file, press Left select key you can make the corresponding operation.
 - ◇ **Property:** show the information of file folder name and the create time.
 - ◇ **Memory Info:** See the phone total information and free information.

10.3.2 MicroSD Card File manager

Your handset is equipped with a Micro SD card slot to expand the phone's available memory up to 2GB. You can store images, videos, music files, voice data etc on your Micro SD card.

1. Select **Menu**→**Multimedia**→**File Manager.**
2. Press the **Right key** to navigate to the TFlash card. You can see all your folders and files that are stored on the card.
3. Select a folder and press the **Left select key** for Options:
 - ◇ **Open:** Create a new folder.
 - ◇ **Rename:** You can rename the selected folder
 - Delete:** You can delete the selected folder.
 - ◇ **Delete all:** You can delete all the folders.

-
- ◇ **Property:** Show information about the selected folder.
 - ◇ **Memory Info:** Show the usage information of handset and MicroSD Card.
 - ◇ **Format:** Format the MicroSD Card.
 - ◇ **New Folder:** Create a new folder

4. Press **OK key** to open a folder and select a file. Press **OK key** to play or view the file, press **Left select key** for Options:

- ◇ **Play(Browse):** Play or browse the file.
- ◇ **Rename:** You can rename the selected file.
- ◇ **Send Via MMS:** Send the file via MMS. (the picture has no this function)
- ◇ **Delete:** You can delete the file.
- ◇ **Delete all:** You can delete all files in the folder.
- ◇ **Copy to:** Copy the file to other folder.
- ◇ **Move to:** Move the file to other folder.
- ◇ **Property:** Show the information of the selected file.
- ◇ **Memory Info:** Show the usage information of handset and MicroSD Card.
- ◇ **Format:** Format the MicroSD Card.
- ◇ **New Folder:** Create a new folder.

Note: The handset only support the TFlash card with format of FAT, FAT32. TFlash card with NTFS format are not supportable by the handset.

11 Brew

This function needs network support by service provider. If your phone can also support, menu of **Brew** appears on the display. If your phone and network provider don't support, the function is invalid. The application of this function may ask for extra fee. Please contact with network provider to acquire more information.

12 WAP

The browser feature on your phone allows you to view internet content. You can view specially designed versions of popular websites which include sports, weather, news, stock quotes and many others. As well, you can download ringtones, wallpaper, and games from your service provider. To access the WAP standby mode, select **Menu**→**WAP**. You can Launch and Navigate the Browser.

When you choose WAP menu, you will be connected to the service provider's homepage automatically. Press **Right select key**, you can input the URL to open the web site. Press **Left select key**, you can make the following options,

- ✧ **Home:** Go to the homepage.
- ✧ **History:** Browse the web addresses you have viewed.
- ✧ **Bookmarks:** All previously accessed addresses can be saved as bookmarks on your phone. This function allows you to edit and manage accessed sites frequently.

-**Open Bookmarks:** Access the bookmark list and organize favorite bookmarks.

-**Mark current site:** Add a bookmark for the current site.

Push message: This shows a list of all the messages pushed to your browser. Not all network providers use this feature.

-
- ◇ **Reload:** To reload the web site.
 - ◇ **Save:** Save the image or background.
 - ◇ **Snapshots:** Allows you to manage your snapshots
 - **View Snapshot:** view previously saved snapshot.
 - **Take Snapshots:** Take a snapshot of the current web page.
 - ◇ **Show URL:** Show the detail information of current URL.
 - ◇ **Advanced:** view the advanced menu for the Browser.
 - Restart Browser:** Display the default home web site.
 - Multimedia:** allows setting preferences for display pictures and background music.
 - Clear:** Allows clearing of the stored cookies, cache, etc.
 - Scroll Mode:** Setting for the scroll mode and scroll speed of web pages.
 - Send Referrer:** Enable or disable adding “referrer” field into HTTP request head.
 - Connection Timeout:** Set the duration of the connection timeout.
 - Key press Timeout:** Set the duration of the key press timeout.
 - Security:** set the security options.

13 Text Input

Your phone offers text input modes: Multitap Input (**abc/ABC**), Numbers Input (**123**), eHiText Input (**eng**). Input mode includes capital letter and lowercase mode.

You can key in letters, digits, characters and symbols when writing text or editing contact record information in **Names** or **Messages** etc., following the common instruction in hereinafter table.

Operation	Method
Input Letters	Multitap (abc/ABC) Input—"abc/ABC", press corresponding letter key till the letter appears.
Input Words	eHiText Input—"eng", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —Press * key to enter the symbols mode and press corresponding digit key. Or press "1" key till the symbol (common symbols) appears except for Numbers

	Input mode.
Input Space	Press " 0 " key , except for being in numbers mode.
Erase Character	Press Right select key .
Move cursor left or right	Press Left/Right key .
Change input mode	Press # key to select another text mode.

13.1 Multitap Input

Select **Multitap** Input (**abc/ABC**) — Each key stands for multiple letters. Press key till your letter appears. When the cursor moves, enter the next letter.

13.2 Numbers Input

Select **Numbers** Input (123) — Press the corresponding key once to input the number. In Numbers input mode, you can not enter space.

13.3 eHiText Input

Select **eHiText** Input (**eng**) — Predictive word input is based on a built-in dictionary.

One letter asks for pressing only once.

Press the digit key corresponding to the letters once till the word appears on the screen.

If the word displayed is not the word you want, press **Left/Right** to look for another matching word. Then press **OK key** to confirm.

13.4 Symbols Input

-Press **1 key** to input till the symbol appears. Most common punctuation marks and special characters are available.

Or select **Symbols** mode by pressing *** key**:

- Press **Up/Down key** to page down. And press digit key to enter corresponding symbol.

TEL Confidential

14 Troubleshooting

If your phone appears following phenomenon in the process of application, please read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts "Enter PIN".	Please input your PIN Code which offered with UIM Card together. If you have changed PIN code, please input new PIN Code. You can also set PIN code deactivated, see "6.3 Security Setting".
When switching on the phone, it prompts "Insert card and restart phone".	Please check whether valid UIM card is inserted or not.
No key beep on pressing keys.	Please check the setting of Key Beep in Setting .
When there is an incoming call, the prompt ringer not rings.	Please check the setting of sound Alert Type and ringer Volume in Setting .

No prompt tone at alarm time.	Please check relative sound setting (Alert Type and ringer Volume in Profiles).
Messages cannot be sent.	Please check the signal of network.

TEConfidential