



ZTE C362+

CDMA 1X Digital Mobile Phone

User Manual

Copyright © 2008 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version: Release 1.0

Date: Feb. 2008

Manual number:

Declaration

We, ZTE Corporation, declared that:

- The product is installed with battery separately in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and

- (2) this device must accept any interference received, including interference that may cause undesired operation.

- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.

- Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The


standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless fixed phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power. The Highest SAR Values for this model phone when tested for use on the Left cheek were 0.996 mW/g.

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20cm or as far as you can from TV set, radio and other automated office equipment so as to avoid interference.
- For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the handset.
- NOTE: This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Content

1	General Information	1
1.1	Welcome.....	1
1.2	Security	1
1.3	Safety Warnings 	2
1.4	Limit Warranty	5
1.5	Limitation of Liability.....	6
2	Know Your Phone.....	7
2.1	Keypad.....	7
2.2	Instruction of Interface Icon.....	10
2.3	Technical Parameters.....	11
2.4	Battery.....	12
2.4.1	Remove and Installation of Battery	12
2.4.2	Charging the Battery.....	13
2.5	Connecting to the Network	15
2.5.1	UIM Card	15
2.5.2	Insertion and Extraction of UIM Card.....	15
2.5.3	Power on/off Phone	16
2.5.4	PIN Code	16
2.5.5	Connecting the Network.....	17

3	Basic Operations.....	18
3.1	Making a Call.....	18
3.2	Answering a Call.....	20
3.2.1	Setting Any Key Answer	20
3.2.2	Reject the Call by Sending SMS	20
3.2.3	Incoming Call Silence	21
3.3	In Conversation.....	21
3.3.1	Adjusting Volume in Conversation.....	21
3.3.2	Selecting Options in Conversation	21
3.4	Menu Functions	21
4	Names	23
4.1	Add Name	23
4.1.1	Add New Entry.....	23
4.1.2	Edit Existing Name	24
4.2	Find Records	25
4.3	Selecting Group	26
4.4	Set Speed Dial.....	27
4.5	View and Make Speed Dial.....	27
4.6	Memory Status	28
5	Messages.....	29
5.1	Sending a New Message	29
5.2	Receiving Incoming Call while Editing Message	30

5.3 Reading Message	30
5.4 Viewing Outbox	31
5.5 Erasing Messages	31
5.5.1 Deleteing a Message.....	32
5.5.2 Erasing All Messages	32
5.6 Reading and Setting Voice Mail	32
5.6.1 Reading Voice Mail	32
5.6.2 Set Voice Mail Number	33
5.7 Set Proformatted message	33
5.8 Set Message Groups.....	33
5.9 Message Setting	34
5.9.1 Msg Priority.....	34
5.9.2 Delivery Acknowledging.....	34
5.9.3 Auto Save	35
5.9.4 Msg Signature.....	35
5.9.5 Automatically Erasing Inbox	35
5.9.6 Save Position	36
5.9.7 Validity Period.....	36
5.9.8 Edit SMS on Call Reject.....	36
5.9.9 Fire Proof.....	36
5.9.10 Memory Status.....	38
6 Settings	39
6.1 Display	39

6.1.1 Set Wallpaper.....	39
6.1.2 Set Backlight	39
6.1.3 Set Keypad Light.....	40
6.1.4 Set Intensity.....	40
6.1.5 Set Contrast	40
6.1.6 Set Language	40
6.1.7 Set Time Format	41
6.1.8 Chang Banner	41
6.1.9 Set Date Format.....	41
6.2 Call.....	41
6.2.1 Call Forwarding.....	41
6.2.2 Call Waiting.....	42
6.2.3 Setting Any Key Answer	43
6.2.4 Voice Privacy.....	43
6.2.5 International Call.....	43
6.2.6 Call Timer.....	44
6.2.7 Call Connect Alert	44
6.2.8 Fire Proof.....	44
6.2.9 IP-Dial Setting.....	46
6.3 Security Setting	46
6.3.1 Set PIN Code	46
6.3.2 Setting Phone Lock.....	47
6.3.3 Restore Settings.....	47
6.4 Extras	47

6.4.1 Auto Key Guard.....	47
6.4.2 Alert.....	48
6.4.3 Version.....	48
6.4.4 Wap Settings.....	49
7 Organiser	50
7.1 Scheduler	50
7.2 Voice Memo	50
7.2.1 Recording in Normal.....	50
7.2.2 Recording in Conversation	51
7.2.3 Recording with Incoming Call/Message.....	51
7.3 Alarm	52
7.4 Stopwatch.....	52
7.5 Calculator.....	53
7.6 Unit Conversion	54
7.7 World Time	54
7.8 Sales service.....	54
8 Profiles.....	55
9 Call History.....	56
9.1 Viewing Recent Calls.....	56
9.2 Erasing Recent Calls List.....	57
9.3 Call Duration.....	57
10 U-MAX.....	58

11 Multimedia.....	59
11.1 Camera	59
11.2 Multimedia.....	60
11.3 File Manager	61
12 Games.....	62
13 Text Input.....	63
10.1 Multitap Input	64
10.2 Numbers Input	64
10.3 eHiText Input	64
10.4 Symbols Input	65
14 Troubleshooting.....	66

Explanation for Mobile Phone with/without UIM Card

There are two types of ZTE CDMA Mobile phone, one need UIM card inserted and another does not need. Sections or functions in this manual are for the phone with UIM card. If your phone could be used without UIM card, please pay attention to the following items:

1. You can use your phone without inserting the UIM card.
2. Some functions are only available with UIM and won't display, such as,
 - You can save the new contact only in Phone, not in UIM.
 - You can save the new message only in Phone, not in UIM.
 - The message in Inbox can not be moved to UIM.
 - There is no PIN Lock function in Security Setting.

1 General Information

1.1 Welcome

Thank you for choosing C362+ CDMA 1X Digital Mobile Phone.

To guarantee the mobile phone always in its best condition, please read this manual carefully and keep it for future use.

The pictures, symbols and contents in this manual are just for your reference. They might not be completely identical with your phone. Please subject to the real object. ZTE operates a policy of continuous development and reserves the right to update and modify the technical specifications in this document at any time without prior notice.

1.2 Security

- If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost UIM card and phone, which will protect you from economic losses resulted from unauthorized use.

You need to provide the phone's ESN number labeled. You can see ESN number after removing the battery. Please keep ESN number for future use.

- To protect your mobile phone from illegal use, please take the security measures as follows:
 - Set PIN code of the UIM card.

-
- Take it with you as you can.

1.3 Safety Warnings

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer on the device before using the phone if necessary.
- Operating of mobile phone may interfere with medical devices like hearing aides and pacemakers. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer on the medical device before using the phone.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Store the phone out of the reach of little children. The phone may

cause injury if used as a toy.

Mobile Phone

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral

equipments.

- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.
- Do not charge the mobile phone without battery.
- On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press

Send key  to make a phone call.

Battery Using

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Warning: If the battery is broken, keep away from content. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

Safety and General Using in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them

into account in practical use.

- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

In Aircraft

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

1.4 Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.

-
- (c) Water or any other liquid damage.
 - (d) Any unauthorized repair or modification.
 - (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
 - (f) Use of the product with any unauthorized third party products such as generic chargers.
 - (g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.






1.5 Limitation of Liability



ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.





2 Know Your Phone

2.1 Keypad




Key	Tip	Function Description
	Send Key	<ul style="list-style-type: none"> ◆ Make or answer a call. ◆ Press Send key in standby mode to enter all Records list. ◆ Press Send key two times directly to redial the last number.
	End key	<ul style="list-style-type: none"> ◆ End an active call or reject a call. ◆ Power on/power off. ◆ Exit from any interface to standby mode.
	Left Select Key	<ul style="list-style-type: none"> ◆ Enter main menu in standby mode. ◆ Switch to the options of left bottom submenu.
	Right Select Key	<ul style="list-style-type: none"> ◆ Enter Contacts in standby mode. ◆ Switch to the options of right bottom submenu.
	OK Key	<ul style="list-style-type: none"> ◆ Confirm the commands and options selected. ◆ Confirm the character chosen while character inputting. ◆ Enter Mobile shop in standby mode










	<p>UP /Down key (Scroll key)</p>	<ul style="list-style-type: none"> ◆ Scroll the cursor up. ◆ Used as selection key up for keying in commands and selecting options shown on the display. ◆ In standby mode, hold Up key to power on/off the LED light. ◆ In standby mode, hold Down key to enable or disable the phone in Silence. ◆ Press Up key to enter Messages Menu. ◆ Press Down key to enter Ring Tone. ◆ Used as direction key in games.
	<p>Left/Right key (Scroll key)</p>	<ul style="list-style-type: none"> ◆ Scroll the cursor left and right. ◆ Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display. ◆ In standby mode, press Left key to enter Camera, press Right key to enter Media Play. ◆ Adjust volume in conversation. ◆ Used as direction key in games.

 	0~9 Number key	<ul style="list-style-type: none"> ◆ Key in numbers or characters. ◆ Make a Speed Dial call. ◆ Hold 0 Key to input + in standby mode. ◆ Hold 1 Key to enter Voice Mail in standby mode.
 	*key , #key	<p># key:</p> <ul style="list-style-type: none"> ◆ Press # key to select text input mode. ◆ Hold # key in standby mode to lock the keypad. <p>* key:</p> <ul style="list-style-type: none"> ◆ Hold * key in standby mode to enable/disable vibration. ◆ In text mode, press * key once to enter Symbols mode.

Note: To “press” the key in this manual means to press the key and release it. To “hold” the key means to keep pressing the key for two seconds or more.

2.2 Instruction of Interface Icon

Icon	Indication
	Signal Strength

	Roaming
	New Voice Mail
	New SMS
	Ringer with Vibration
	Vibration
	Key Lock
	Silence Mode
	Alarm
	Power Indication

2.3 Technical Parameters

Handset		
Type		ZTE C362+
Dimensions	(Width×Height×Thickness)	46.5mm*107.5mm*13.8mm
Weight		About 80g(Battery Included)
Battery		
Continuous standby time		About 80h ~ 240h (Subject to Network)
Continuous talk time		About 2h ~ 4h (Subject to Network)

 
Note: Please refer to the real phone for other relative parameters of the battery and charger.

2.4 Battery


The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

2.4.1 Remove and Installation of Battery


- ◆ Remove : (1) Press and push the back-cover of the phone down to release and remove it off the phone. (2) Put finger on the side finger grips, and then lift up the battery from the finger grips to remove the battery.

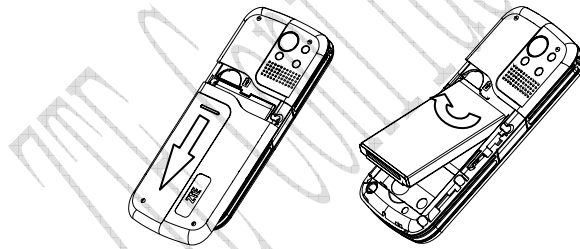

 - ◆ Installation : (1) Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted. (2) Put the back-cover of the phone flatly upon the body of phone. Direct the back cover towards the locking catches on the both sides of the phone and push the back-cover of the phone upward to lock the cover into its place.

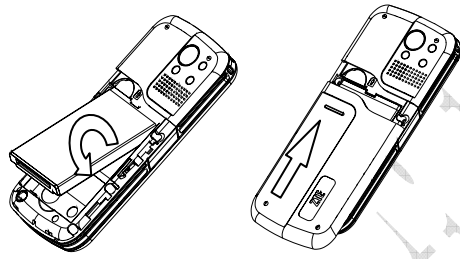

 2.4.2 Charging the Battery

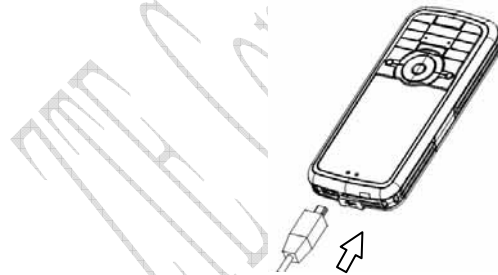

- ◆ Plug out rubber away (turn 180° as shown in the picture) from the jack on the bottom of the handset and connect the lead from the charger to the socket on the bottom of the phone. (Note: The side with arrow should be upright while connecting).
- ◆ Connect the charger to a standard wall AC socket.

-
- ◆ Meanwhile, the charging indicator in up-right corner of the display flops cyclically, indicating the charging is going. In power-off mode while charging, the display only shows the charge indicator. If the battery is completely flat in storage or used up, it may take for a while before the charging indicator appears on the display or any calls can be made.
 - ◆ When the charging indicator on the screen stops flopping, the charging is completed. The charging takes usually up to 2 ~ 3 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get into hot accordingly.
 - ◆ After the completion of charging, disconnect the charger from the phone and AC socket.

Note :

- When it is in charge, place the phone on condition of good ventilation and temperature between $-5 \sim +45$. Ensure to use the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.
- When the phone is automatically switched off or indicates the alarm information of power shortage, please charge the battery in time.
- The duration time of the standby status or conversation of the phone is based on ideal working environment. In practice, the working time of battery varies with network condition, working

environment and application methods.

2.5 Connecting to the Network

2.5.1 UIM Card

Before using the phone, please insert effective UIM (User Identity Module) card into the phone.

All the information related to the network connection is recorded in the metal plane area of UIM card together with the information you stored in your Contacts in the UIM card. The UIM card can be inserted into any CDMA phone to use (new phone automatically reads UIM card).

Please do not touch the metal plane area of the card to avoid missing and damaging information in the card and put UIM card in place far away from electricity and magnetism.

Warning : Please power off the phone before taking out UIM card. It is prohibited to insert or taking out UIM card in the condition of connecting with external power.

2.5.2 Insertion and Extraction of UIM Card

Power off the phone, remove the battery and other external power.

Insert UIM card into UIM card slot in the phone , or pull out UIM card out of slot, as shown in picture hereinafter.



2.5.3 Power on/off Phone

Press and hold **End key** to power on/off the phone. The phone will check whether UIM card inserted well or not. And then follow the prompt indication on the display:

Enter PIN——Key in PIN code of UIM card if it is set.

Searching——Search appropriate network connected.

2.5.4 PIN Code

To set PIN code (personal identification number) is to avoid the illegal usage of UIM card.

To input PIN code of UIM card and press **OK key** to confirm to start on using phone. If inputting wrong PIN three times continuously, UIM card will be locked by network.

Note : The network provider offers you PIN code (four to eight digits). You should change PIN code as soon as possible for security.

To set PIN code, see “6.3 Security Setting”.

2.5.5 Connecting the Network


After powering on and inputting PIN code, the phone automatically searches the network available and in state of standby mode.

Besides sending and receiving calls, you can also do:

- ◆ Press **Left select key** to enter main **Menu**.
- ◆ Press **Right select key** to enter **Find**.
- ◆ Hold *** key** to lock the keypad.
- ◆ Hold **Up key** to power on/off LED Light.
- ◆ Hold **Down key** to enable/disable the phone in Silence.
- ◆ Hold **# key** to enable/disable vibration mode.
- ◆ Press **Up key** to enter **Messages** menu.
- ◆ Press **Down key** to enter **Ring Tone**.
- ◆ Press **Left key** to enter **Camera**.
- ◆ Press **Right key** to enter **Media Display**.
- ◆ Press **Send key** to enter **Dialed** list.

3 Basic Operations

3.1 Making a Call

Please ensure that you are in the place where the signal can be received. Examine network signal strength icon  on the screen.

The more the indication bars, the stronger the intensity of receiving signal is. If there is no bar, please move to the place where the intensity of receiving signal is better. Sometimes, you only need to change the direction.

◆ **Making a National Call**

Press **Number key** to key in phone number, and add area code when making a long distance call (no need to add area code when dialing local number in some area). Press **Send key** to call out. Press **End key** to end the call and conversation.

◆ **Making an International Call**

Enter the country code, area code (without the leading 0) and the complete telephone number you want to dial, press **Send key** to call out.

Before the country code, hold **0 key** to enter the international prefix “+” (the character “+” replaces the international access

code) or key in international prefix e.g. "00" of international call directly.

Country code + Area code + Telephone number

0086 755 26770000

◆ **Making Recent Calls**

All calls you recently dialed, received or missed are saved in your phone. All numbers are grouped as Missed Calls, Received Calls and Dialed Calls. When the list is full, the oldest number will be erased automatically when new record is coming.

You can check the list as follows:

- ◇ In standby mode, press **Send key** to view Dialed Calls.
- ◇ The number listed in can be directly dialed by pressing **Send key**.



◆ **Making Pause Calls**

You can make use of pause call to dial an extension or voice service call.

E.g. Key in phone number, press **OK key** to select "P" on the display (character "P" added accordingly), and then key in number afterwards. Press **Send key** to dial the first number, when connected, press **Send key** again to dial the second number automatically. "P" can be used for not once only.

3.2 Answering a Call

When a call is incoming in standby mode, the phone will offer corresponding ringer or vibration to prompt according to your Setting. With the number already saved in Names, the phone also shows the name of caller meanwhile.

- Press **Send key**  to answer an incoming call.
- Press **End key**  to end a call and the call duration is temporarily displayed.

See “6.3 Call Setting” or refer to other ways of answering calls for your option as follows.

3.2.1 Setting Any Key Answer

- Select **Menu**→ **Settings**→ **Call** → **Anykey Answer**.
- Select **On/Off**, and press **OK key**.

An incoming call can be answered by pressing any key except **End key**, **Left /Right select key** when you select **On**.

3.2.2 Reject the Call by Sending SMS

When a call is incoming is standby mode, you can press Left select key to select SMSReject. The phone will send a SMS to the caller without receiving the call. The message contents could be edit in **Messages** → **Msg Settings** → **General** → **Edit SMS on Call Reject**.

3.2.3 Incoming Call Silence

- When a call is coming, press **Right select key** to select **Mute** the ringer tone.
- This function silences the current incoming call only. The phone will ring normally as next call coming.

3.3 In Conversation

3.3.1 Adjusting Volume in Conversation

Press **Left/Right key** to adjust volume of Earpiece during a call.

3.3.2 Selecting Options in Conversation

During a call, press **Left/Right select key** to select options of **Option (Names, Message, Record), Mute/Unmute**, etc.

- ✧ Select **Mute** to let other party temporarily can not hear your voice, select **Unmute** back to normal.
- ✧ Select **Option** for selection in Menu, such as **Contacts, Message, Record** with no worry about the ending of conversation.
- ✧ Press **OK key** to open speaker phone, and press **OK key** again back to normal.

3.4 Menu Functions

- ◆ Main Menu Function:
 - i. In standby mode, press **Left select key/OK key** to enter main

-
- Menu. Scroll **Up/Down** or **Left/Right key** through the menu and select functions according to the prompt on the screen.
- ii. If the menu contains submenus and further submenus, select options and submenu you want according to the prompt on the screen.
 - iii. Press **OK key** or **Right Select Key** to set or return to the previous menu. Press **End key** to exit to standby mode.
- ◆ Bottom Menu Function:
- If options are displayed on the bottom of the screen, press **Left/Right select key** to select. Press **OK key** or **Right select key** to set or exit.

The functions of phone are mainly grouped in main **Menu: Organiser, Profiles, Call History, Messages, Names, Settings, U-MAX, Multimedia, and Games.**

Please refer to the text hereinafter in this manual in detail.

4 Names

You can save contacts in phone and UIM card. Each contact in phone's memory has three phone numbers , home number, mobile number and work number, and each contact in UIM card only has one phone number.

4.1 Add Name

4.1.1 Add New Entry

1. Select **Menu**→ **Names**→ **Add Name**→ **Name**.
2. Select the save position you want same, **Phone** or **UIM**.
3. Press **Up/Down key** to relative item,
 - ❖ **Name**: Add the persons name. See "13 Text Input" more instructions for writing text and character.
 - ❖ **Home Number/Mobile Number/Office Number**: write the call number by keying the Number key.
 - ❖ **Default Number**: Press **Left/Right key** to set the **Home Number, Mobile Number** or **office Number** as default number.
 - ❖ **Group**: Press **Left/Right key** to set the names group as **No Group, Family, Relatives, Friends, Business,**

Colleagues, School, Club, or Vip.

- ◇ **Photos:** Press **OK key** to choose the photos from File Manager.
- ◇ **Call Alert:** Press **OK key** to set specific ring for the calling of the names.
- ◇ **SMS Alert:** Press **OK key** to set specific ring for the SMS of the names.

(Note: when you same the name in **UIM**, there are only **Names** and **Numbers** to input.)

4. After the completion of writing, press **Left Select key/OK key** to save the contact.

4.1.2 Edit Existing Name

1. Select **Menu**→ **Names**→ **Add Name**→ **Existing Name**.
2. Press **Left/Right key** to different Groups, press **Up/Down key** to the record you want edit.
3. Scroll to the phone number you want edit, press **OK key** or select **Option**. “**? Modify**” will appear on display, press **OK key**, you can enter the name record, press **Right Select** to Erase the characters, input the characters you want input (See 13. Text input for more information). Select **Save** to save the modification.
4. Scroll to just modify number, press **OK key** or **Left select key**,

Further operation can be executed, such as:

- ◇ **Edit:** Edit the names.
- ◇ **Send message:** Send message to this number.
- ◇ **Make a call:** Make a call to the default number of this names.
- ◇ **Send Name:** Send SMS of this number information to others.
- ◇ **Erase:** Delete the number.
- ◇ **Copy to Phone/UIM:** Copy the contact to Phone/UIM.
- ◇ **Move to Phone/UIM:** Move the contact to Phone/UIM.
- ◇ **Set to speed dial:** Assign a speed dial number to the phone number. (When the contacts saved in UIM, there is no this function.)
- ◇ **Default Number:** Change the default number.

Note: In standby mode, key in phone number, press **Left select key** to save.

If you save the same number again, the phone prompts to remind you this number is already exist.

4.2 Find Records

1. Select **Menu** → **Names** → **All List**.
2. Press **Up/Down key** to scroll though the corresponding name(s) and records in the list, or press the characters of the names . Scroll to

the record you are finding, and press **OK key** to view the details.

◆ **Search**

1. Select **Menu** → **Names** → **Find**.
2. Press **Up/Down Key** to select **Find Name, Find Number** or **Find Group**.
3. Input the name or number you want find, or select the group you want find and press **OK key**.
4. Press **Up/Down key** to scroll though the corresponding name(s) and records in the list. Scroll to the name you want, and press **OK key** to view the details or select Option.

◆ **In Standby Mode:**

To quickly find phone number in **Names** in standby mode, press **Right select key** to find the record you want.

All the contacts will be list by the letter of the name. If no contact in the list, "No Record" will be displayed.

4.3 Selecting Group

There are tenm groups, no group, family, relatives, friends, business, colleagues, school, club, VIP and UIM preset in your phone, you can rename them and set ringer for the different group.

1. Select **Menu**→ **Names**→ **Groups**.
2. Scroll to the Group you wantd edit, **no group, family, relatives, friends, business, colleagues, school, club, VIP** or **UIM**.

Press **Left select key** or **OK key**. Further operation can be executed, such as:

- ✧ **View Numbers:** view the all numbers of the group.
- ✧ **Set Ring Tone:** Set the personal call ringer for the group. You can select ring from the list set already in phone or download ring by yourself.
- ✧ **Set Msg Tone:** Set the personal Msg ringer for the group. Press Up/Down key to select the sms ring.
- ✧ **Edit Title:** press **OK key** and you can rename the name of group.

Note: For the group of UIM and no Group, you can only see view numbers.

4.4 Set Speed Dial

1. Select **Menu**→ **Names**→ **Speed Dial**.
2. Select one **Empty** slot in list and press Left select key or OK key.
3. Select **Erase All** to erase all speed dial record. Select **Assign** to set a phone number to this slot. Press Up/Down key to one contact record listed in phone's memory and scroll to the number you select.
4. Press **OK key** twice to set the speed dial.

4.5 View and Make Speed Dial

View :

Select **Menu**→ **Names**→ **Speed Dial** to see the speed dial.

Dialing :

You can also make a call by entering speed dial number in the standby mode.

Method 1: Enter speed dial number, press **Send Key** to dial.

Method 2: Directly hold the Speed Dial Number digit key. If the Speed Dial Number is one-digit, directly hold the digit key. If the Speed Dial Number is two-digit, press first digit key and then hold the second one. For example: If the Speed Dial Number is 25, you should press 2 key firstly, and then hold 5 key, thus it can dial directly.

Note: Some handset may not support method 1. Some handset support only one-digit speed dial number, some support both one-digit and two-digit speed dial number.

4.6 Memory Status

1. Select **Menu**→**Names**→**Memory status**.

3. View the number of saved entries and maximum number of entries saved in phone and UIM card.

For example: phone: 8/500, UIM Card: 4/200, indicating that 500 records entries in Max., out of which eight have be saved in phone. And 200 entries in Max., out of which four have been saved in UIM Card. Please consult with service supplier for storage capacity of UIM card.

5 Messages

This is introduction of how to send, receive and erase the messages in your phone.

Note : The function introduced hereinafter may differ with different service offered in your area. Please consult with your service provider for more detailed information.

5.1 Sending a New Message

Please consult with the service provider to support the network service of sending message. You can only send message to the mobile phone which can receive message.

1. Select **Menu** → **Messages** → **Write**.
2. Write message text. See "13. Text Input" more instructions for writing text and character..
3. Press **OK key/ Left Select key** to
 - ◇ **Send** : Send message. Input the recipients' Phone Number. Press **Left select key** to select phone number from **SMS Groups** or **Names**. Hold **# key** to input ";", you can input the multi-receivers' phone number. Or press left select key to select phone number directly from **SMS Groups** or **Names** to sent the message to multi receivers.

Note: your phone support to sent SMS messages to less than

20 receivers.

- ✧ **Save:** Save the message in **Drafts**.
- ✧ **Template:** To select template sentence.
- ✧ **Names:** To input the Names information.
- ✧ **Priority:** To set the SMS messages priority as **Normal**, **Urgent** or **Emergency**.
- ✧ **Delivery Ack:** Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether you have sent message successfully.

Note: The SMS centers of some cities and regions do not support messages longer than 160 characters.

5.2 Receiving Incoming Call while Editing Message

- If you do not want to receive the incoming call, press **End key**.
- If you want to receive the incoming call, press **Send key**. After receiving the call, you can continue to edit and send the message.

5.3 Reading Message

On receipt of a new message, the phone prompts you by vibration or ringer (up to silence and ringer in **Setting**). The display indicates "Messages" and "1 Received". Press **List** to view the the list in **Inbox**, and press **OK key** to view detail. Please erase old messages to keep space for new messages.

1. Select **Menu** → **Messages** → **Inbox**.
2. Scroll to the message you want to read.

3. Press **OK key** to read message. You can also press **Up/Down key** to scroll.

4. After reading, press **Left select key** to select:

- **Reply** : Reply message to sender

- **Forward** : Forward the message to other recipients.

- **Erase** : Erase this message.

- **Voice Call** : Call back to sender.

- **Save the number** : Select sender's number or the phone number in the message to save to names, select **Name** to save the new number in **Phone** or **UIM**, and select **Existing Name** to replace the existing number.

- **Copy to UIM/Phone** : Copy the message to UIM card or Phone.

5.4 Viewing Outbox

1. Select **Menu** → **Messages** → **Outbox**.

2. Select **Sent** or **Unsent** to read the sent or unsent message.

3. Scroll Message List.

3. Press **OK key** to read message.

4. Press **Right Select Key** to return to the list. Select **Option** or press **OK Key** to **Erase**, **Forward**, **Resend** the message. (The sent message have no resend function.)

5.5 Erasing Messages

Delete and erase old messages to release space for phone's SMS memory. You can select erasing messages when sending or reading

messages; erase messages one by one or all in **Inbox, Outbox**.

5.5.1 Deleteing a Message

1. Select **Menu**→ **Messages**.
2. Select messages location: **Inbox, Outbox, Drafts**.
3. Press **Up/down key** to select to-be-erased messages.
4. Select **Left select key** to **Erase** messages. "Delete" appears.
5. Select **OK key/Left select key** to delete this message.

5.5.2 Erasing All Messages

1. Select **Menu**→ **Messages**→**Erase Msgs**.
2. Select to-be-erased messages in **Inbox, Outbox, Draft, or all Messages**.
3. Press **Left select key/OK key** to **Erase all** the message(s) in **Inbox, Outbox, Draft, or all Messages**. "Delete all" appears.
5. Select **OK key/Left select key** to delete all messages in **Inbox, Outbox, Draft, or all Messages**.

5.6 Reading and Setting Voice Mail

5.6.1 Reading Voice Mail

Before using **Voice Mailbox**, please consult with network provider to confirm that the function of voice mail box has been activated. After your successful setting, network will automatically transfer incoming call(s) to your voice mail box, and send message(s) to your phone.

Select **Menu**→ **Message**→**Voice Mail**→**Call Voicemail** to dial voice mail box number to listen to the leaving message following guide prompt.

Note: The function needs network support.

5.6.2 Set Voice Mail Number

1. Select **Menu**→ **Message**→**Voice Mail**→**Voice Mail Number**.
2. Set Voice Mail Number.

5.7 Set Proformatted message

The phone has a group of some common built-in phrases and sentences, such as, "Please call", "I am busy now, call you later." etc.

1. Select **Menu**→ **Messages**→ **Templates**.
2. Scroll to the message you want to send and press **OK key**.
3. Select **Edit** to edit the message, the template message could be changed. Select **View** to see the message, pls see "5.1 Sending a new message" in detail. Select **Send** to send the message.

5.8 Set Message Groups

You can send messages to grouped mobile phone which can receive message meanwhile.

1. Select **Menu**→ **Messages**→ **Msg Groups**.
2. Select any SMS Groups (1-5), and select Option to
 - ◇ **View:** See the detail information of SMS Groups. Select

option you can:

- **Send:** Send message to the recipient selected.
- **Send To All:** Send messages to all the recipients in group.
- **Replace:** Reedit the number in group.
- **Remove Member:** Erase the recipients in group.
- **Clear Group:** Clear all the recipients' information in group.
- **Add:** Add new recipient in group.
- ◇ **Rename:** Rename the Msg Group.
- ◇ **Clear Group:** Erase the SMS group.
- ◇ **Clear All Groups:** Erase all SMS group.
- ◇ **Send:** Send messages to the SMS group.

The maximum of receivers not exceed 20 persons.

5.9 Message Setting

You can set your message box before you use it.

5.9.1 Msg Priority

1. Select **Menu** → **Messages** → **Msg Settings** → **Text Msg Settings** → **Msg Priority**.
2. Select **Normal**, **Interactive**, **Urgent**, **Emergency** for sending message.

5.9.2 Delivery Acknowledging

1. Select **Menu** → **Messages** → **Msg Settings** → **Text Msg**

Settings→ Delivery Ack.

2. Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether you have sent message successfully.

5.9.3 Auto Save

1. Select **Menu** → **Messages** → **Msg Settings** → **Text Msg Settings** → **Save Sent Msg.**

2. Select **On** or **Off** for your phone can or can not automatically save sending message.

5.9.4 Msg Signature

1. Select **Menu** → **Messages** → **Msg Settings** → **Text Msg Settings** → **Signature.**

2. Select **On** or **Off** for your phone can add signature automatically when you write the message. When select **On**, you can edit the signature.

5.9.5 Automatically Erasing Inbox

Set erasing the last read message in Inbox automatically when Inbox is full.

1. Select **Menu**→ **Messages**→**Msg Settings**→**General**→**Auto Delete Inbox.**

2. Select **On** or **Off** and press **OK key/Left select key.**

5.9.6 Save Position

1. Select **Menu**→ **Messages**→ **Msg Settings**→**General**→**Save Position**.
2. Select **UIM** or **Phone** and press **OK key** to save message in UIM card or phone.

5.9.7 Validity Period

1. Select **Menu**→ **Messages**→ **Msg Settings**→**General**→**Validity Period**.
2. Select Msg validity period as **1 Hour**, **12 Hour**, **1 Day**, **1 Week**, **Maximum**.
3. Press **OK key**.

5.9.8 Edit SMS on Call Reject

1. Select **Menu**→ **Messages**→ **Msg Settings**→**General**→**Edit SMS on Call Reject**.
2. Edit the information of SMS when you SMS reject a call. Press Right select key to erase the characters. For input character, please see text input for more information.

5.9.9 Fire Proof

You can set Incoming SMS bar in **Fire Proof** submenu including **Friend List**, **Black List**, **Current Settings**.

◆ **Friend List**

All the contacts will be listed by the letter of the name.

1. Select **Menu**→**Messages**→**Msg Settings**→**General**→**Fire Proof**→**Friend List**.

2. Press **OK key** and select options:

- ✧ **Add:** Add new contact in Friend List.
- ✧ **Edit:** Edit this contact in Friend List.
- ✧ **Delete:** Delete this contact in Friend List.
- ✧ **Clear all:** Delete all the contacts in Friend List. If there is no contact in the list, "List Empty" will be displayed.

◆ **Black List**

All the contacts will be listed by the letter of the name.

1. Select **Menu**→**Messages**→**Msg Settings**→**General**→**Fire Proof**→**Black List**.

2. Press **OK key** and select options:

- ✧ **Add:** Add another new contact in Black List.
- ✧ **Edit:** Edit this contact in Black List.
- ✧ **Delete:** Delete this contact in Black List.
- ✧ **Clear all:** Delete all the contacts in Black List. If there is no contact in the list, "List Empty" will be displayed

◆ **Current Settings**

You can set barring applications as follows:

- ✧ **Bar All:** Bar all incoming calls.
- ✧ **Bar Black List:** Only bar numbers listed in Black List.
- ✧ **Bar All Except Friend List:** Only numbers listed in Friend

List are not blocked.

✧ **Cancel All:** Cancel barring setting.

5.9.10 Memory Status

Select **Menu**→ **Messages**→**Msg Settings**→**General**→**Memory Status**.

View the number of saved messages and maximum number of messages saved in phone and UIM card.

ALL CONFIDENTIAL

6 Settings

Your phone has different functions in Setting to meet your requirement. They are: **Display, Call, Security** and **Extras**.

6.1 Display

6.1.1 Set Wallpaper

You can select different wall papers as background in idle state.

1. Select **Menu**→ **Settings**→ **Display**→**Wallpaper**.
2. Press **Up/Down Key** to select **Preset Wallpaper** or **Custom Wallpaper**.
3. Press **Up/Down Key** to scroll the list and press **OK key/Left Select Key** to confirm.

6.1.2 Set Backlight

During a call or pressing keys, the display lights on. You can set lighting duration and type.

1. Select **Menu**→ **Settings**→ **Display**→**Backlight**.
2. Select an option in pop-up window:
 - **10 Sec** : Keep backlighting for 10 seconds after last pressing.
 - **30 Sec** : Keep backlighting for 30 seconds after last pressing.
3. Press **OK key** to confirm.

Note : In conversation, backlighting consumes the power quickly

and shortens continues conversation and standby time.

6.1.3 Set Keypad Light

When pressing keys, the lights on. You can set lighting duration and type.

1. Select **Menu**→ **Settings**→ **Display**→**Keypad Light**.
2. Select an option in pop-up window:
 - **Always off**: No Light when pressing keys.
 - **5 Sec** : Keep light for 5 seconds after last pressing.
 - **10 Sec** : Keep light for 10 seconds after last pressing.
3. Press **OK key** to confirm.

6.1.4 Set Intensity

1. Select **Menu**→ **Settings**→ **Display**→ **Intensity**.
2. Press **Left/Right key** to adjust Intensity, and press **OK key/Left Select Key**.

6.1.5 Set Contrast

1. Select **Menu** **Settings** **Display**→ **Contrast**
2. Press **Left/Right key** to adjust contrast, and press **OK key**.

6.1.6 Set Language

1. Select **Menu**→ **Settings**→ **Display**→**Language**.
2. Select **English** as the language, and press **OK key**.

6.1.7 Set Time Format

1. Select **Menu**→ **Settings**→**Display**→ **Time Format**.
2. Select **AM/PM** or **24 HR**, and press **OK key**.

6.1.8 Chang Banner

View and edit phone's greeting to which appears on the display to your own.

1. Select **Menu** **Settings**→**Display**→ **Banner**.
2. Press **OK key** to **Edit**.
3. Key in character(s) and press **Right Select key** to erase character(s).
4. Press **OK key** to **Save**.

6.1.9 Set Date Format

1. Select **Menu**→ **Settings**→ **Display**→ **Date Format**.
2. Select **MM/DD/YYYY**, **YYYY/MM/DD** or **DD/MM/YYYY**, and press **OK key**.

6.2 Call

6.2.1 Call Forwarding

Use Call Forwarding to forward the incoming call to a designated phone number. After setting of call forwarding, phone will automatically dial network to set the function in active.

1. Select **Menu**→ **Settings**→ **Call** → **Call Forwarding**.

-
2. Set type of Call Forwarding, press **OK key**.
 - **Immediate**: All is diverted Immediately in all conditions.
 - **Busy**(Divert when busy): When the phone is busy, divert.
 - **No Answer**(Divert when no answer): When there is no answer, divert.
 - **Disable All** : Cancel All Call Forwarding.
 3. Select **Enabled** to activate Call Forwarding function. Select option,
 - **Voice Mail** to activate forwarding call to voice mail.
 - **Other Number** to activate forwarding call to other number, input the number or select from names to which the phone will forward. And then select **Save**.
E.g. To forward incoming call to 12345678, input: 12345678, press **OK key** to confirm.
 4. **Disable**: To deactivate Call Forwarding function.
 5. **Edit Feature Code**: To edit the number to activate or deactivate the call forwarding.

6.2.2 Call Waiting

During a call, use Call Waiting to answer the waiting call prompted by the network; Or dial another call meanwhile putting the first call on hold. These calls can be shifted while you have calls in conversation.

Call Waiting lets you enjoy three-party conversation without missing call.

1. Select **Menu**→ **Settings**→ **Call** → **Call Waiting**.

2. Select Option:

- **Enable**: To activate the Call Waiting function. The network will notify you of an incoming call while you have a call in progress. You can press **Send key** to get through the waiting call and switch one call to another.

- **Disable**: To cancel the Call Waiting function.

- **Edit Feature Code**: To edit the number to activate or deactivate Call Waiting.

6.2.3 Setting Any Key Answer

1. Select **Menu**→ **Settings**→ **Call**→ **Anykey Answer**.

2. Select **On/Off**, and press **OK key**.

An incoming call can be answered by pressing any key except **End key**, **Left /Right select key**.

6.2.4 Voice Privacy

1. Select **Menu**→ **Settings**→ **Call** **Voice Privacy**

2. Select **Enhanced** or **Standard** to set voice encryption in Standard or set voice encryption Enhanced.

3. Press **OK Key**.

6.2.5 International Call

1. Select **Menu**→ **Settings**→ **Call** **International Call**.

ZTEC362+ has two solutions for international country code prefix, either

for standard based area or for network where standard based solution is not implemented.

1. Select **Menu**→**Settings**→**Call**→**International Call**

2. Select option,

- **Auto:** “Do you want to activate this function?” display and press OK key to confirm. In standard based area, to activate international prefix “+” function instead of keying in international call prefix, e.g. “00”, otherwise, select “No”. See “3.1 Making a Call” for detail description.

- **Manual:** To set and edit the certain digit number(s) as the international prefix. As in some area, the network standard based solution is not implemented.

6.2.6 Call Timer

1.Select **Menu**→ **Settings**→ **Call** **Call Timer**.

2.Select **On** or **OFF** to set call timer on display or not when finishing the call.

3. Press **OK Key/Left Select Key**.

6.2.7 Call Connect Alert

1.Select **Menu**→ **Settings**→ **Call** **Call Connect Alert**.

2.Select **On** or **OFF** to set the phone alert when call connected.

3. Press **OK Key/Left Select Key**.

6.2.8 Fire Proof

You can set Incoming calls bar in **Fire Proof** submenu including

Friend List, Black List, Current Settings.

◆ Friend List

All the contacts will be listed by the letter of the name.

1. Select **Menu**→ **Settings**→**Call** →**Fire Proof**→**Friend List**.

2. Select options or scroll to one contact listed and select options:

- ◇ **Add:** Add new contact in Friend List.
- ◇ **Edit:** Edit this contact in Friend List.
- ◇ **Delete:** Delete this contact in Friend List.
- ◇ **Clear All:** Delete all the contacts in Friend List. If there is no contact in the list, "List Empty" will be displayed.

◆ Black List

All the contacts will be listed by the letter of the name.

1. Select **Menu**→ **Settings**→**Call** →**Fire Proof**→**Black List**.

2. Select options or scroll to one contact listed and select options:

- ◇ **Add:** Add another new contact in Black List.
- ◇ **Edit:** Edit this contact in Black List.
- ◇ **Delete:** Delete this contact in Black List.
- ◇ **Clear All:** Delete all the contacts in Black List. If there is no contact in the list, "List Empty" will be displayed.

◆ Current Settings

You can set barring applications as follows:

- ◇ **Bar All:** Bar all incoming calls.
- ◇ **Bar Black List:** Only bar numbers listed in Black List.
- ◇ **Bar All Except Friend List:** Only numbers listed in Friend

List are not blocked.

✧ **Cancel All:** Cancel barring setting.

6.2.9 IP-Dial Setting

1. Select **Menu** → **Settings** → **Call** **IP-Dial Setting**.

2. Select **Option**

- **Add:** Add new IP code.

- **Browse:** to view all IP code you have received. Scroll to one number list and press **OK key**, you can **Edit**, **Delete** or **Set Defaulted**.

6.3 Security Setting

Introduction to phone's security options preventing others to avoid illegal use or acquire your phone's personal information. Please input right phone Password and PIN code to enter.

Note : Consecutive inputting wrong PIN code for several times can cause locking of UIM Card. To unlock, you need PUK. PIN code and PUK Code may be offered together with the UIM Card. If not, please contact with network operator. The default phone password is 0000, the default PIN code is 1234, please change it to your own PIN code and phone password as soon as possible.

6.3.1 Set PIN Code

1. Select **Menu** → **Setting** → **Security**.

2. Input your phone password, press **OK key**.

3. Move to **PIN Lock**, select **On**, **Off** or **Change Lock**, press **OK**

key.

6.3.2 Setting Phone Lock

1. Select **Menu**→ **Setting**→ **Security**.
2. Input your phone password, press **OK key**.
3. Move to **Handset Lock**, select **On**, **Off** or **Change Lock**, press

OK key.

6.3.3 Restore Settings

Your phone offers factory default phone setting. You may modify some options when you use phone. You can also Restore Factory Default to renew some modified options to the origin.

1. Select **Menu**→ **Setting**→ **Security**.
2. Input your phone password, press **OK key**.
3. Select **Clear All Names**, **Reset Settings**, or **Reset Phone**.
4. Select **Ok** to revert to confirm resetting or restoring factory default or select **Cancel** to exit.

Note : Restoring the phone do not influence your phone password, PIN code, Recent Calls, Contacts, InBox and OutBox.

Some setting, e.g. alarm, cannot be restored.

6.4 Extras

6.4.1 Auto Key Guard

1. Select **Menu**→ **Settings**→**Extras**→ **Key Guard** to set phones'

key lock and time.

2. Select an option in pop-up window:

- **Off** : Deactivate the function of phones' key lock.
- **On** : Deactivate the function of phones' key lock.

3. Press **OK key/Left select key** to confirm.

Note :

- Hold **# key** to lock the keypad directly in standby mode.
- In state of key lock, to make use of phone, unlocking code should be input prompted by phone on the display.

6.4.2 Alert

1. Select **Menu**→ **Settings**→**Extras**→ **Alert**.

2. Select an option on display and press **OK key**.

- **Service** : When there are service available.
- **Remind Minute** : During a call, ten seconds ahead of every minute, alert.
- **Missed Call** : When there are missed calls, alert.
- **Roaming** : When roam in active and handoff between service areas or states occurs, alert.

For the function mentioned above, select **On** to operate; select **Off** to cancel alert.

6.4.3 Version

- ◆ **PRL Version**: Shows present PRL (Personal Roaming List) version of phone.

-
- ◆ **SW Version:** Shows present software version of phone.
 - ◆ **HW Version:** Shows present hardware version of phone.

6.4.4 Wap Settings

1. Select **Menu**→ **Settings**→**Extras** → **Wao Settings**.
2. Select an option on display and press **OK key**.
 - **Access Point** : Set access point.
 - **Proxy Settings:** to set proxy settings as **Proxy 1** or **Proxy 2**.

7 Organiser

7.1 Scheduler

1. Select **Menu**→**Organiser**→**Scheduler**.
2. Press **Left/Right key** or **Up/Down key** to select exact date you want to view in pop-up calendar window. Press **OK key**.
3. Scroll **Up/Down key** to select options.

7.2 Voice Memo

ZTEC362+ supports Voice Memo function either in or not in conversation with a capacity of saving 5 pcs records in max. When there is no space in Voice Memo or Voice Memo is full, the phone prompts.

7.2.1 Recording in Normal

1. Select **Menu**→**Organiser**→**Voice Memo**.
2. Scroll **Up/Down key** to select:
 - ◇ **Record** – When you are not in conversation, select **Start** to begin a new **Recording**, or **Stop/ Pause** recording. After Record ended, select **Option** to **Review**, **Re-record** or **Save** the file.
 - ◇ **Record List** – see the **Record** list, press OK key to

display. Select Option to

Erase: to erase the record.

Info: the title, length, size, and time information of the record.

Erase all: to erase all record list.

✧ **Erase all:** Erase all record.

Note: The record saved in normal will be listed in **Profiles**→ **Vibrate/Silent/General/Outdoor/Meeting/Handset**→ **Profile Edit** →**Ring Tone**→ **Ring Type**→ **Record Ring** as a kind of ringer tone. You can select it or not as you like as ring of the phone. The record can not be deleted as if it is activated as the ringer, unless you cancel the record as the ring of the phone.

7.2.2 Recording in Conversation

When you are in conversation, select **Record** to pop-up window of **Voice Memo** and select **Start** to begin a new Recording, or **Stop**, **Pause/Resume** recording, without ending the call.

The record will be saved automatically when the call is ended without finishing recording, and exit back to interface of ending call.

7.2.3 Recording with Incoming Call/Message

✧ **With Incoming Call**

While recording in state of non-conversation, receive a call will stop recording. The record of phone will be saved automatically and return to call interface.

◇ **With Message**

While recording in state of non-conversation, receive a message won't stop recording. The phone prompts message alert without display message interface.

◇ **With Others**

- **Alarm:** Prompts later.

- **Alert:** Prompts later.

- **Power off automatically while recording.** Save record automatically.

Note: In state of non-conversation, record voice via MIC; In state of conversation, record voice via earpiece.

7.3 Alarm

Set alarm alert at a certain time. Alarm alerts only when the phone is in power on.

1. Select **Menu**→**Organiser**→**Alarm**.
2. Select **Set alarm** to set, and press **OK key**. Select **Alarms List** to view the settings. Select **Set rest day** to set the date of alarm. Select **Delete** all to delete all setting.
3. When alarm rings, select **OFF** to stop alarming or select **Snooze** to postpone alarming time. Alarm rings again 10 minutes later.

7.4 Stopwatch

1. Select **Menu**→**Organiser**→**Stopwatch**.

-
2. Select **Start** to make stopwatch timing.
 3. Select **Stop** to stop timing.
 4. Select **Reset** to clear the time record.

7.5 Calculator

Use calculator to execute basic math calculation.

1. Select **Menu**→ **Organiser**→ **Calculator**.

Key in digits. Press **Left/Right key** or **Up/Down key** to choose “+” “-” “x” “/” according to the prompt. Press **# key** to input decimal point, and press *** key** to change digit to positive number or negative. Press **OK key** to display the result.

/	Division Sign
-	Subtraction Sign
=	Equal Sign
+	Plus Sign
x	Multiply Sign
.	Decimal Point

Press **Right Select key** to erase digit one by one and exit to previous window, press **Left Select key** to erase all digits and reset, press **End key** to exit to standby mode.

Note : This calculator has a limited accuracy and is designed for simple calculations.

7.6 Unit Conversion

1. Select **Menu**→ **Organiser**→ **Unit Conversion**.
2. Select **Length, Temperature, Power, Volicity, Weight, Area, Volume, Capacity, Energy, or Pressure**.
3. Press **OK key** to make conversion.

7.7 World Time

1. Select **Menu**→ **Organiser**→ **World Time**.
2. Press **Left/Right key** to check the different cities time.
3. Press Left select key you can select the following Option:
 - Local City**: Select the local city.
 - Query other time**: Press **Up/Down key** to move the cursor up and down. Press **Left/Right key** to select the city of **base** and **aim**. Press **Number key** to change the time of base city. Select **Query** to check the aim city time.

7.8 Sales service

Provide the telephone number of sales service.

8 Profiles

You can personalise your phone. There are many ways to change the sound and feel of your phone.

1. Select **Munu** → **Profiles**.
2. Press **Up/Down key** to select.
 - **Silent**: to set the phone in silence mode
 - **General**: to set the phone in ringer mode.
 - **Outdoor**: to set the phone in ringer with vibration mode.
 - **Meeting**: to set the phone in vibration mode.
 - **Handset**: to set the phone in earphone mode.
3. Select an option from the list and press **OK Key**.
 - **Set**: to set the current mode as the phone mode.
 - **Profile Edit**: press Up/Down key to select **Ring Type**, **Ring Tone**, **Ringer Volume**, **Earpiece Volume**, **Key Beep Volume**, and **Message Alert** to make specific setup.
 - **Rename**: make the new name for the current mode.

9 Call History

9.1 Viewing Recent Calls

Information of **All Calls, Missed Calls, Received Calls, Dialed Calls, Call Duration, Clear All** including name, phone number, and call time and conversation duration is saved in the **Call History**.

1. Select **Menu**→**Call History**.
2. Select **All Calls, Missed Calls, Received Calls, Dialed Calls**.
3. Press **OK key/Left select key**.
4. Select one entry of the records and press **Left select key**.
5. Select option:
 - **Call Information** : Indicate name, number, time and conversation duration information.
 - **SMS** : Send message to this number.
 - **Save** : Save the number in Names.
 - **Delete** : Erase the number from the list of Call History.
 - **Edit**: Edit the number.
 - **Black List** : Add this number to the Black List.

If the UIM Card does not support the function of Incoming Call Indication, you can only see part of the above-mentioned options.

9.2 Erasing Recent Calls List

1. Select **Menu**→**Call History**→**Clear All**.
2. Select **Erase Missed, Erase Received, Erase Dialed**.
3. Press **OK key/Left select key** to delete all the numbers from the list.

9.3 Call Duration

1. Select **Menu Call History Call Duration**.
2. Select an option from the list and press **OK Key**.
 - **Last Dialed Call** : Indicate the talk time of the last dialed call. The time can be reset.
 - **All Dialed Calls** : Indicate the talk time of all dialed call. The time can be reset.
 - **Incoming Calls**: Indicate the talk time of all incoming calls. The time can be reset.
 - **All Calls** : Indicate the talk time of all dialed and received call. The time can be reset.
 - **Reset Call Duration** : To reset the call duration.

10 U-MAX

This function needs network support by service provider. If your UIM card can also support, menu of **U-MAX** appears on the display. If UIM Card and network provider don't support, the function is invalid. The application of this function may ask for extra fee. Please contact with network provider to acquire more information.

11 Multimedia

ZTE362+ provide the function of taking pictures and listening music.

11.1 Camera

1. Select **Menu**→**Multimedia**→**Camera**.
2. Press **OK key** to take photos.
3. Select Option, press **Up/Down key** to select a following option.
 - ◇ **Settings**: make various setting of taking photos.
 - Resolution**: set the resolution as 480x640, 240x320, or 128x160.
 - Fun Frames**: select the various fun frames.
 - Black/White**: Select On or Off to set the photos as black/white or colours.
 - Multishot**: Set Multishot Off, 3 shots, 6 shots or 9 shots.
 - Shutter Sound**: Select the shutter sound.
 - Save Location**: Set the save location of photos as phone.
 - ◇ **Photo Browser**: enter the File manager of photos. Select one file, press OK key to see the photos.
 - ◇ **Take Movie**: press OK key to make movie, press Left select key to make option,
 - Resolution**: Set the resolution as 144x76.96x128 or 80x96.

-Time Limited: Set the movie time as 6 sec, 12 sec or 3 min.

-**Take photo**: take photos.

-**Movie Browser**: view the movie saved in the phone.

-**Save Location**: Set the save location of photos as phone.

11.2 Multimedia

1. Select **Menu**→**Multimedia**→**Multimedia**.

2. Press **OK key** to play Plasy List.

2. Select Option, press **Up/Down key** to select a following option.

- ◇ **Play list**: When **Plsy list** is empty, select Add, your phone display music files, press **OK key** to select files, and press **Left select key** to confirm.

In Play List, press Left select key you can make the following option:

-**Play**: play the play list.

-**Add New Music**: add new music from music file to play list.

-**Delete From Playlist**: delete the file from the playlist.

-**Clear Playlist**: delete all files from the playlist.

- ◇ **View All The Music**: View all music files.
- ◇ **View All The Viedo**: View all Video files.
- ◇ **Repeat**: Select **Off**, **Repeat** or **Repeat All** to set repeat one files, all files or not repeat play.
- ◇ **Random**: Select **On** or **Off** to open or close random.

-
- ◇ **Sound Effect:** Press Up/Down key to set the sound effect.
 - ◇ **Speaker:** Select **On** or **Off** to open or close the speaker.
 - ◇ **Help:** See the help information.

11.3 File Manager

1. Select **Menu**→**Multimedia**→**File Manager**.
2. Press Up/Down key to select an option from the pop-up windows,
 - ◇ **picture:** include picture in the file of **photo, WAP, BREW**.
 - ◇ **music:** include music files in the file of **record, WAP, BREW**.
 - ◇ **video:** Include video files in record **movie** and **WAP**.
 - ◇ **user:** include the user's others files.
3. Select one file folder, select option you can
 - ◇ **Open:** Open the file folder. You can see all files name in the file folder. Select one file, press Left select key you can make the corresponding operation.
 - ◇ **Property:** show the information of file folder name and the create time.
 - ◇ **Memory Info:** See the phone total information and free information.

12 Games

12.1 Brick attack

In this game, paddle the bar to rebound the ball and attack bricks with skill. And then enter next stage.

1. Select **Menu**→ **Games**→ **Brick attack**.
2. Press **Left Select key** or **OK key**, the display shows greeting and play guide.
3. Select **Newgame** to start, press **Left/Right key** to move the paddle bar left/right. Press **Right select key** to pause the game..
4. As passing a stage, select **Continue** to next stage, select **Exit** to exit the game.

12.2 Push Box

In this game, pushing boxes with skill and locating them to stated locations. And then enter next stage.

1. Select **Menu**→ **Games**→ **Push Box**.
2. Press **OK key**, the display shows greeting and play guide.
3. Select **New Game** to start , select **Stage** and key in stage level. Press **OK key** to start.
4. As passing a stage, select **Replay** to replay again, select **Next** to enter next stage.

13 Text Input

Your phone offers text input modes: Multitap Input (**abc/ABC**), Numbers Input (**123**), eHiText Input (**eng**). Input mode includes capital letter and lowercase mode.

You can key in letters, digits, characters and symbols when writing text or editing contact record information in **Contacts** or **Messages** etc., following the common instruction in hereinafter table.

Operation	Method
Input Letters	Multitap (abc/ABC) Input—"abc/ABC", press corresponding letter key till the letter appears.
Input Words	eHiText Input—"eng", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —Press * key to enter the symbols mode and press corresponding digit key. Or press "1" key till the symbol (common symbols) appears except for Numbers Input mode.

Input Space	Press " 0 " key , except for being in numbers mode.
Erase Character	Press Right select key .
Move cursor left or right	Press Left/Right key .
Change input mode	Press # key to select another text mode.

10.1 Multitap Input

Select **Multitap** Input (**abc/ABC**) — Each key stands for multiple letters. Press key till your letter appears. When the cursor moves, enter the next letter.

10.2 Numbers Input

Select **Numbers** Input (123) — Press the corresponding key once to input the number. In Numbers input mode, you can not enter space.

10.3 eHiText Input

Select **eHiText** Input (**eng**) — Predictive word input is based on a built-in dictionary.

One letter asks for pressing only once.

Press the digit key corresponding to the letters once till the word appears on the screen.

If the word displayed is not the word you want, press **Left/Right** to look for another matching word. Then press **OK key** to confirm.

10.4 Symbols Input

-Press **1 key** to input till the symbol appears. Most common punctuation marks and special characters are available.

Or select **Symbols** mode by pressing *** key**:

- Press **Up/Down key** to page down. And press digit key to enter corresponding symbol.

ALL CONFIDENTIAL

14 Troubleshooting

If your phone appears following phenomenon in the process of application, please read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts "Enter PIN".	Please input your PIN Code which offered with UIM Card together. If you have changed PIN code, please input new PIN Code. You can also set PIN code deactivated, see "6.3 Security Setting".
When switching on the phone, it prompts "Insert card and restart phone".	Please check whether valid UIM card is inserted or not.
No key beep on pressing keys.	Please check the setting of Key Beep in Setting .
When there is an incoming call, the prompt ringer not rings.	Please check the setting of sound Alert Type and ringer Volume in Setting .

No prompt tone at alarm time.	Please check relative sound setting (Alert Type and ringer Volume in Profiles).
Messages cannot be sent.	Please check the signal of network.

ALL CONFIDENTIAL