

ZTE C88

CDMA 1X Digital Mobile Phone
User Manual

Copyright © 2007 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated, or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation operates a policy of continuous development. ZTE Corporation reserves the right to make changes and improvements to any of the products described in this document without prior notice.

For your safety	7
General Care	7
Aircraft Safety	8
Hospital Safety	8
General Guidelines	8
Road Safety	8
Vehicles Equipped With an Air Bag	9
Third Party Equipment	9
Efficient Use	9
Radio Frequency (RF) Energy	9
Emergency Services	9
Copyright Notice	9
 Introduction	 10
Overview	10
What's included	10
C88 Technical Specifications	10
Phone at a glance	10
Key Definitions	11
 Set up Your Phone	 12
Battery	12
Installing the Battery	12
Charging the Battery	12
Removing the Battery	13
Powering On/Off your Phone	13
Unlocking Your Phone	13
Connecting to the Network	13
Activating Your Phone	13
 Basic Operations	 14
Making Voice Calls	14
Using the Keypad	14
Using the Contacts list	14
Using the last number dialed	14
Using a number from the Call History	14
Using Speed Dials	14
Using Voice Dials	14
Answering Voice Calls	15
In-Call Features	15
Three-Way Call	15
Call Waiting	15

Entering Text.....	16
Key Functions	16
Text Input Modes	16
Contacts.....	17
Contact List	17
New Contact	17
Groups	17
Voice Dials	18
Speed Dials	18
Calls	19
All Calls	19
Missed Calls	19
Incoming Calls	19
Outgoing Calls	19
Call Timers	19
Messaging	20
Send New	20
Insert	20
Slide	20
Preview	20
Erase Item	20
Cc/Bcc/Sub	21
Save to Drafts	21
Quick Text	21
Signature	21
Inbox	21
Reading a message	21
Replying to a message	21
Inbox Options	21
Outbox	22
Drafts	22
Sent	22
Saved	22
Voice Mail	22
Web Alerts	22
Settings	22
Message Settings	23
Quick Text Settings	23
Memory Info	23

Brew	24
Web Wireless	25
Launching and Navigating the Browser	25
Music & Media	26
Tunes	26
Playing your tones	26
Managing your Tunes	26
Images	26
View your image	26
Managing your Images	26
Camera	26
Take pictures and videos	26
Viewing your photo and video	27
MyStuff	27
MyTunes	27
MyImages	27
MyVideos	27
Memory Info	27
Games	28
Tools	29
Calculator	29
Alarm Clock	29
Edit an alarm	29
Alarm options	29
Calendar	29
Adding an appointment	30
Viewing an appointment	30
Calendar Options	30
Tip Calc	30
World Clock	30
Voice Memo	30
Recording a Voice Memo	30
Listen to a Voice Memo	30
Settings	31
Sound Setting	31
Ringers	31
Keypad Tone	31
Volume	31

Power On/Off Tone	31
Alerts	31
Display Setting	31
Language	32
Bluetooth	32
Bluetooth Manager:	32
Bluetooth Device:	32
Pairing with a new Bluetooth device	32
GPS	33
System	33
Call Setup	33
Memory Info	33
Phone Info	33
System Settings	33
TTY Mode	33
Security	34
Airplane Mode ON/OFF	34
Glossary	35

General Care

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do **NOT** allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do **NOT** immerse it in any liquid.
- Do **NOT** place the handset alongside computer disks, credit cards, travel cards or other magnetic media. The information contained on the disks or cards may be affected by the handset.
- Do **NOT** place anything inside the folded handset.
- Do **NOT** paint the handset.
- Do **NOT** leave the handset or battery in places where the temperature could exceed 140°F, e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.
- Do **NOT** remove the handset battery while the handset is switched on.
- Take care **NOT** to allow metal objects, such as coins or key rings to contact or short circuit the battery terminals.
- Do **NOT** dispose of batteries in fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point.
- Do **NOT** put the handset's battery in your mouth, as battery electrolytes may be toxic if swallowed.
- Do **NOT** attempt to dismantle the handset or any of its accessories.
- This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer.
- There is risk of explosion if the battery is replaced with an incorrect battery type. Dispose of the used battery in accordance with the manufacturer's instructions.
- Do **NOT** put a battery into a microwave oven, dryer or high-pressure container.
- Do **NOT** contact battery directly into an electric outlet or cigarette lighter charger. Use only authorized chargers.
- Do **NOT** puncture the battery with a sharp object such as a needle.
- When the battery is disposed, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.
- Do **NOT** disassemble or modify the battery.
- Do **NOT** drop, throw, or subject the handset to rough treatment.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge or storage.
- In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes and skin. If the leakage does come into contact with the eyes or skin, flush thoroughly with clean water and consult with a doctor.
- Do **NOT** use with a damaged or deformed battery.
- Do **NOT** solder the battery directly.
- Remove the battery whose life cycle has expired from equipment immediately.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration may cause the handset to move.
- Be careful not to place the handset near heat sources (such as a heater).
- Use a damp or anti-static cloth to clean the handset. Do **NOT** use an ordinary dry cloth or electrostatic cloth. Do **NOT** use chemical or abrasive cleaners as these could damage the casing.
- Third party equipment: The use of third party equipment, cables, or accessories, not made or authorized by ZTE, may invalidate the warranty of your phone and also adversely affect the phone's safety and operation.
- Remember to make backup copies of all important data on your handset.
- Remember to recycle: The cardboard packing supplied with this handset is ideal for recycling.

Aircraft Safety

- Switch off your phone or activate the airplane mode when inside or near an aircraft. Use of handsets in an aircraft may be dangerous to the operation of the aircraft and may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of phone service to the offender, or legal action, or both.
- Airplane mode allows you to use many of your phone's features, such as games, calculator, voice memos, and many others when you are in an airplane or other area where wireless signals may cause interference. In the airplane mode, you are prohibited from making or receiving voice/data calls, however you may still attempt calls to your local emergency number.

Hospital Safety

- Switch off your phone and remove its battery in areas where handset use is prohibited.
- Follow the instructions given by any respective medical facility regarding the use of cellular handsets on their premises.

General Guidelines

- Many jurisdictions have laws and regulations about taking pictures in public or private areas regarding the processing and further use of such pictures. ZTE encourages its customers to obey all laws and to honor the personal rights of others.
- Check the roaming agreement availability with your network operator.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers, and airplanes. The user is responsible to power-off the device. If there is any uncertainty, the battery should be removed.
- Observe any signs that indicate to power off your handset, such as those near gas stations, or explosives and power off the handset/device upon them.
- If you have a heart condition, be careful with the setting of call vibration or tone volume.
- Do **NOT** allow children to play with the handset, charger or batteries.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any Caution signs and the manufacturer's recommendations.
- Take care not to put your phone in the back pocket of your pants and then sit on the phone. Also, do not put your phone at the bottom of a bag where it may be subject to excessive weight or pressure as this may damage the LCD and camera lens and cause them to malfunction.
- Your phone contains metal, which may cause you to develop an itch, rash or eczema depending on your physical condition.
- Do **NOT** leave the phone discharged or without a battery for a long period of time. Otherwise some data may be erased.

Road Safety

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so. Check if local laws and/or regulations restrict the use of cellular phones while driving.
- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in emergency situations.
- Switch off your handset at a refuelling point, such as a gas station, even if you are not refuelling your own car.
- Do **NOT** store or carry flammable or explosive materials in the same compartment as the handset.

- Electronic systems in vehicle, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment may advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by the radio transmitter in handset, consult your dealer and do not switch on the handset until your handset has been checked by a qualified technician.

Vehicles Equipped With an Air Bag

An airbag inflates with great force. Do **NOT** place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of the handset and also adversely affect the handset's operation. For example, use only the ZTE charger supplied with the handset.

Efficient Use

For optimum performance with minimum power consumption, do **NOT** cover the antenna area (It's on the bottom of your phone) with your hand. Covering the antenna affects the call quality, may cause the handset to operate at higher power levels than needed, and may shorten talk and standby times.

Radio Frequency (RF) Energy

Your handset is a low-power radio transmitter and receiver. When it is turned on, it intermittently receives and transmits Radio Frequency (RF) energy in radio waves to handle and control the power level at which the handset transmits.

Emergency Services

To make an emergency call in any country:

1. Ensure your handset is **ON** and in service.
2. Press the **End** key as many times as needed to clear the display and ready the device for calls.
3. Enter a local emergency number.
4. Press the **Send** key to dial the number. Follow instructions received and do **NOT** end the call until told to do so.

When the dial lock function is on, press the Right soft key and then enter a local emergency number. Press the **Send** key or **OK** key to dial the number.

Note: Tell the operator which service you require: Police, Ambulance, Fire Engine, Coastguard or Mountain Rescue Service. Give your position, and if possible, remain stationary and maintain contact. Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed. You should never rely on any wireless device for essential communication like medical emergencies.

Copyright Notice

The video/audio recordings you make/download are protected by copyright laws. They are for personal use only and must **NOT** be otherwise used without the permission of the copyright owner.

Overview

Thank you for purchasing the ZTE C88 Mobile Phone. The C88 is capable of making voice calls and data connections to CDMA 1x networks. This phone provides many functions which are practical for daily use, including a camera, video recorder, wireless internet browser etc. It can also be connected to Bluetooth wireless devices and accessories. To guarantee this mobile phone is always in its best condition, read this manual carefully and keep it for future reference. To ensure your safety, read the section *For Your Safety* thoroughly before using this handset for the first time.

What's included

 
Your ZTE C88 Mobile Phone package contains the following components. Check the box carefully to ensure all items are present.

- C88 Handset
- Battery
- User Manual and literature pack
- AC Travel Charger

C88 Technical Specifications

Handset Type	C88
Dimensions (Lx W x H)	98X48X17mm (3.86X1.89X0.67in)
Weight	Less than 100 g (including battery)
Continuous Standby Time	130 hours.(subject to the net work)
Continuous Talk Time	216 minutes(subject to the network)

Phone at a glance

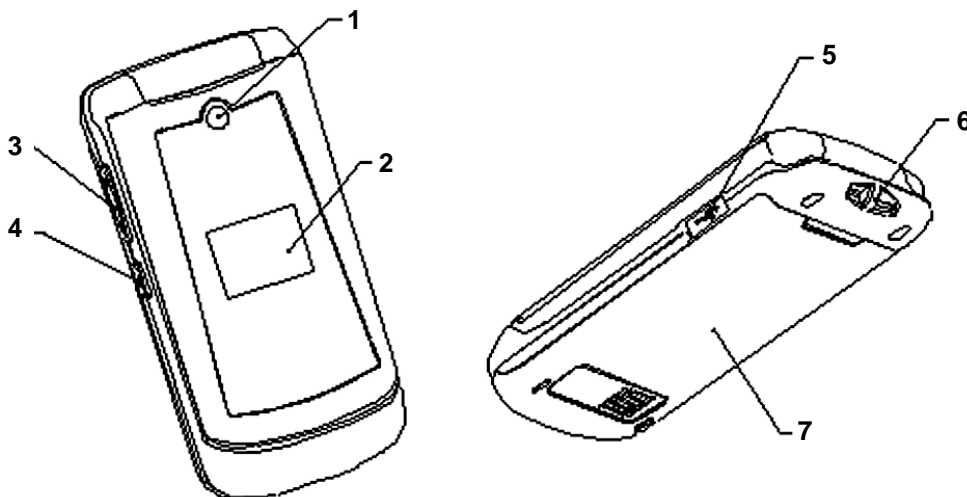

- [1] Camera Lens
- [2] Outer Display
- [3] Volume Key
- [4] Camera Key

- [5] USB Charger Port
- [6] Strap Holder
- [7] Battery Cover

Key Definitions:



Left Soft Key – Execute prompts that appear in the lower-left corner of the screen, directly above the button. These prompts change according to the screen content.



Right Soft Key – Execute prompts that appear in the lower-right corner of the screen, directly above the button. These prompts change according to the screen content.



Send Key – Make and answer calls. This button is also a short cut key to “All Calls” from the idle screen.



 
End Key – End calls and close applications. Holding this key for a while in the idle screen, it will power off the handset.



Camera Key – Holding this key for a while will launch the camera function when flip open.



Vol. up / Vol. down: Adjusts the volume during calls.

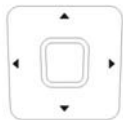

Navigation Keys – These keys (up, down, left and right) allow for navigation through menu options and quick accessing to some function menus.



OK Key – Confirm actions and make selections. This key also executes prompts that appear on the lower-middle button on the screen, above the key. These prompts change according to screen content.



0-9 Number/Alphabetic Keys – These keys are used for entering numbers and letters to a text, dialing a speed call, and selecting options while navigating menus. Press 1 key in standby mode to launch Voice Mail for shortcut.



and * Keys – These keys have different functions, depending on the mode or function menu. Hold the * key for a while in standby mode to switch between standard mode and vibration mode of your phone.



Back Key – Deletes characters during text entry. This key returns to the previous page during menu navigation and web browsing.



 
Speaker Key – Activates and de-activates the speakerphone function during voice calls.

This chapter outlines the steps required to set up your phone, power-on and activate on your service provider's network. Follow the procedure below step-by-step to get started.

Battery

Please switch off your phone and disconnect the charger with it before remove the battery. Avoid touching electronic components on the battery and battery compartment of the phone.

Installing the Battery

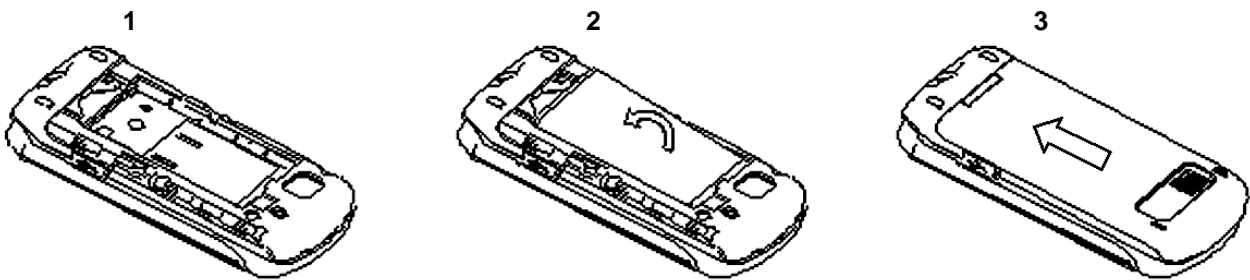


1. Insert battery to the plastic retainer clip. Make sure the + and – terminals on the battery be lined up with the metallic points in the battery compartment.
2. Push down on the bottom section of the battery until it clicks into place. It should be aligned with the bottom of the phone.
3. Place the battery cover so that it covers the entire battery. Slide the cover until it locks into position. Make sure the battery cover is secure.

Charging the Battery

Your phone is powered by a rechargeable battery. The battery is not fully charged when you purchase your phone, but there may be enough power in the battery to turn the phone on. Charge the battery with the procedure indicated below.

 Note: For maximum battery performance, it is recommended that you completely charge the battery before using the phone for the first time. A new battery's full performance is achieved only after three complete charge and discharge cycles.

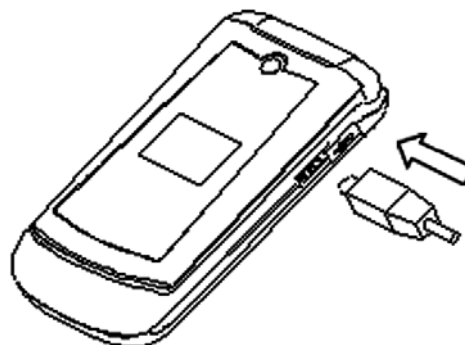


1. Pull the rubber USB cover out of the USB port and rotate it 90 degrees.
2. Insert the charger's USB adapter into the USB port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the USB port.

Note: Make sure plug the AC charger into a standard AC outlet box when you begin charging the battery.

Removing the Battery

 If you need to remove your phone's battery, please follow the procedure indicated below:

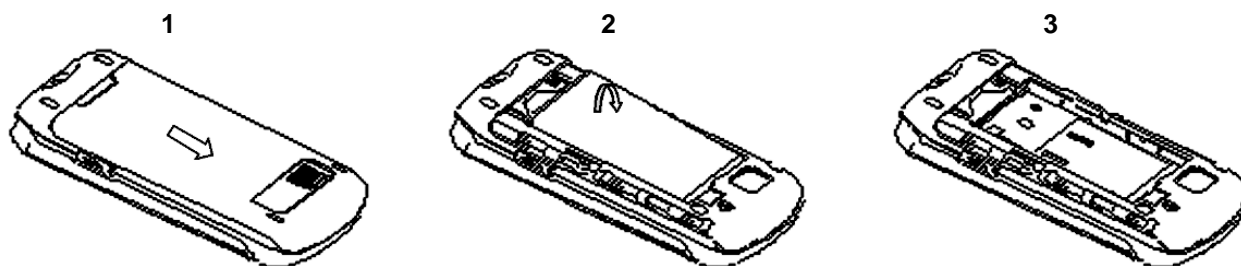

1. Slide the back cover toward the bottom of the phone and lift off the back cover.
2. Insert your fingernail into the finger grip slot on the bottom of the battery. Lift the bottom of the battery away from the handset.
3. Remove the battery from the battery compartment.

Powering On/Off your Phone

To power on the phone, press and hold the **End** key for a while. If the handset lock code has been activated, the phone will prompt to enter the code. The default password is 1234.

To power off the phone, press and hold the **End** key for a while from the idle screen.

Warning: Do not power the phone on when wireless phone use is prohibited, or when it may cause interference or danger.

Unlocking Your Phone

By setting the handset lock code, you can protect your phone against unauthorized use. To unlock the phone, enter the handset lock code and then press the **OK** key.

Connecting to the Network

After your phone is unlocked, it will automatically search for the network.

Activating Your Phone

Before placing a call with your new phone, you must activate the phone on the network. To activate the phone, dial provisioning number from the idle screen and follow the step-by-step instructions. Once the display indicates that programming is successful, the handset will restart automatically. You may then place a call with your handset.

Making Voice Calls

Using the Keypad

1. Enter a phone number including the full area code by using the numeric keypad. If an incorrect character is entered, use the **Back** key to delete the digit. Pressing the **Back** key for a while will erase all digits before the cursor.
2. Press the **Send** key to make the voice call.
3. Press the **End** key to end the call, or to cancel the call attempt.

Note: To make an emergency call, enter the emergency number and press the **Send** key. If possible, remain stationary and keep the line connected.

Using the Contacts list

You can also make a call by choosing a record from your Contacts. To place a call from the contact list:

1. Choose the **Contacts** menu to display your contact list.
2. Scroll to the desired entry and press the **Send** key to make a call.

Using the last number dialed

Your phone can re-dial the last number that was called. To dial the last number:

1. Press the **Send** key from the standby mode.
2. Press the **Send** key again to dial the first entry.

Using a number from the Call History

Generally, all calls you have made or received are saved in a list on the phone. All numbers are grouped into Outgoing Calls, Incoming Calls, and Missed Calls. To dial a number from your call history:

1. Select **Menu→Calls** from the standby mode.
2. Navigate through the menu and press **OK** to select Outgoing, Incoming or Missed calls.
3. Select the phone number you want to dial from the list and press the **Send** key to place the call.

Using Speed Dials

Your phone is capable of storing 9 Speed Dial numbers that can be quickly dialed from the standby mode. Among the nine digit buttons, the 1 is assigned to Voice Mail function. To use the Speed Dialing feature:

1. Press and hold the number key for the Speed Dial entry you would like to call.
2. The call will be connected automatically.
3. Press the **End** key to end the call, or to cancel the call attempt.

Note: If you have not already assigned a Speed Dial to the selected key, the phone will prompt that no Speed Dial has been assigned. You may click **Yes** to add a Speed Dial immediately. For more information on creating Speed Dials, Refer to section 6 in this manual.

Using Voice Dials

Your phone is capable of dialing a call by voice commands. To dial a contact using your voice:

1. Press and hold the **Send** button from the standby mode.
2. When prompted, say the name of the desired contact.
3. The phone will locate the contact associated to your voice entry and display it on the screen. Press **Yes** to call the contact.
4. Press the **End** key to end the call, or to cancel the call attempt.

Note: See section 6 – *Voice Dials*, for more information and instructions on adding voice tags to contacts.

Answering Voice Calls

When you receive a call, the ring tone, illumination or vibration function will be activated, depending on your current settings. If the Caller ID function has been activated by the caller, the caller's phone number will be displayed. If the calling party use the service hiding their phone number, your phone will show that the phone number has been withheld.

To answer the call, open the flip and press the **Send** or **OK** key. You can disconnect the call by pressing the **End** key or closing the phone's flip.

Note: You can also enable the phone to answer calls automatically when the flip is opened, or by pressing any key on the keypad. The default setting can be changed in **Menu**→**Settings**→**System**→**Call Setup**→**Call Answer**.

If your phone is connected to a compatible Bluetooth headset, you can answer or end the call by pressing the **Send/End** button.

In-Call Features

Volume

During a call, you can adjust the earpiece volume by pressing the volume key on the side of the phone.

Mute

You can mute your voice during the call by pressing the **Mute** button, located on the right soft key. Pressing the **Unmute** button will allow the caller to hear your voice again.

Speakerphone

Your phone has a speakerphone function that allows you to talk hands-free with the use of the phone's external speakers. To talk with speakerphone, press the **Speaker** button on the keypad after the call has been connected. Press the **Speaker** button again to return to the standard call mode.

Advanced Features

When a call in, you phone has the following advanced features during the call.:

- **Call the Third Party:** Calls another number to activate the 3-way calling feature.
- **Message:** Switches to the Message interface during a call.
- **Contacts:** Switches to the Contacts interface during a call.

Note: The 3-way calling feature requires network support and may result in additional charges. Contact your service provider for more information.










Three-Way Call

Your phone has a three-way calling feature, which enables you to have conference calls with two parties.

Call Waiting






Your phone can accept phone calls while another call is active.

Key Functions

Key	Function	Description
	Left soft key	Execute prompts that appear in the lower-left corner of the screen, directly above the button
	Right soft key	Execute prompts that appear in the lower-right corner of the screen, directly above the button
	OK key	Confirm actions and makes selections. This key also executes prompts that appear on the lower-middle button on the screen, above the key.
	Navigation Key	Move the cursor up and down, left and right during text editing.
	* key	Enter to Symbol mode
	# key	Switch among the text input modes
	End key	Exit
	0-9 keys	Enter characters 0-9 and the alphabets from a-z. In text input mode, use key 0 to enter a space in text input mode. In Word Mode, use key 1 to enter punctuations and symbols.
	Back key	Delete the previous character during text editing. Long pressing the Back key erases all text.

Text Input Modes

During text entry, press the # key to switch among alpha mode, numeral mode and the word mode for predictive text entry. The current mode is indicated in the screen.

Display Symbol	Text Entry Mode
	Lowercase word predictive text mode
	Lowercase Alpha mode
	Uppercase Alpha mode
	Numeral mode
	Symbol mode

Note: To enter symbols, press the * key.

Your phone has an address book capable of storing 500 contacts containing phone numbers, E-mail addresses, etc. This menu allows you to save and manage contact address information. In Contacts, you can add a new address, or search saved contact addresses by name.

Contact List










Select List Entries to view the listing of all contacts stored on your phone. You may scroll up or down the list using the **Up/Down** button, and press **OK** to view the desired contact information. For each list entry, it will have the following functions:

1. **New Contact:** Add a new contact.
2. **Send Message:** Send a message or E-mail to the contact.
3. **Send Bus. Card:** Send the name, number and e-mail address of the record via Bluetooth to another Bluetooth compatible mobile phone.
4. **Delete:** Delete the selected record.
5. **Groups:** Display the groups interface.
6. **Set Speed Dial:** Assign the current number to one of the Speed Dial dialing keys. Speed dialing allows you to press and hold a number key in standby mode to call the stored phone number.
7. **Delete All:** Delete all records.
8. **Memory Info:** View the amount of Used, Available and Total records information.

You may also search for a contact from the List Entries screen. Type the name of the desired contact. Your input will be displayed at the bottom of the contact list. The phone will automatically scroll to the name that most closely matches your input.

New Contact

The New Entry menu allows you to add a new contact record. The following information can be stored for each contact:

-  **Name:** Contact name.
-  **Mobile1:** Mobile phone number.
-  **Home:** Home phone number.
-  **Office:** Office phone number.
-  **Mobile2:** Mobile phone number.
-  **Email:** Email address.
-  **Groups:** Contact group (ie. Family, Business, VIP, etc.)
-  **Ringtone:** Ringtone to be played when receiving calls from the contact.
-  **Notes:** Other information about the contact.

Groups

The Groups menu allows you to add contacts to any of the five caller groups. The following are available from the Groups menu:

- **Edit:** Rename the selected group
- **Msg:** Switch to the contacts list for the desired group. You can mark recipients from the group to whom you can send an MMS or SMS message.
- **Select:** Switch to the contacts list of the current group

Voice Dials

The Voice Dials menu allows you to view the list of numbers preset with voice dialing, or add a voice command to a number already stored in your contacts. In this menu, the following functions are available:

- **New Contact:** Add a new Voice Dial to the entry.
- **Record Again:** Edit the record voice of the Voice Dial entry.
- **Delete:** Delete the selected voice tag
- **Delete All:** Delete all voice tags

Shortcut: In standby mode, press and hold the **Send** key to activate the voice dialing option. The phone will prompt for you to say the name that you wish to dial.

Speed Dials

The Speed Dials menu allows you to view the current list of speed dials and add new entries. Use the **UP/DOWN** button to navigate to a desired Speed Dial number. Navigate an empty Speed Dial number to add a new Speed Dial,

Your phone has a call history feature that automatically stores information about incoming, outgoing and missed calls. You may navigate through the Calls interface with the **UP/DOWN** button and press **OK** key to view the information below:

All Calls

List of all incoming, outgoing and missed calls

Missed Calls

Displays calls received but not answered

Incoming Calls

Displays calls received by the phone

Outgoing Calls

Displays calls made from the phone

Call Timers

The Call Timers feature allows you to view the approximate duration of your calls, as well as data transferred and data connection time. You can find the following functions' time lists in the Call Timers interface:

- **Last Call:** Duration of the last call made or received by the phone
- **Recent Calls:** Total duration of all calls made or received since last resetting the call timer. You can reset Recent Calls by selecting **Reset** button on the soft key.
- **Lifetime:** Total duration of all calls made or received in the phone's lifetime. This value is not cleared when the **Reset** button is selected.
- **Data Transferred:** Total data bytes uploaded and downloaded by the phone
- **Connection Time:** Total time spent transferring data

Note: The call timers are not intended for billing purposes. The actual invoice for calls and service provider may vary depending on network features, rounding off for billing, rates and so forth.

You can reset the information such as Last call, Recent calls, Data transferred and Data connection Time by selecting the **Reset** button on the soft key.

Your phone has the functionalities of sending and receiving text messages(SMS)–multimedia messages(MMS) and voice mail messages.

Send New

The Send New selection is used to create and send a message with the composer. Enter a phone number in the **To** field. You may also add recipients from your contact list by pressing the **Options**→**Contact** button. Use the **UP/DOWN** keys to highlight the desired contact, and press the **Mark**→**Select** button to select the contact. Scroll down to select multiple recipients then press **OK** button.

Note: You may send an SMS to a maximum of 10 recipients, and an MMS to a maximum of 30 recipients, inclusive of the To, Cc and Bcc fields. These fields can each contain a maximum of 10 recipients.

When you have finished entering all recipients, press the **DOWN** key twice to move the cursor to the lower window for creating your message text. For more information about text entry, Refer to Section 5 – Entering Text.

Press the **Send** button to send the message. You can also save your message at any time by selecting **Options**→**Save** to Drafts.

Note: The maximum size of an MMS message is 350kB, and it may contain:
text, audio and photos
text and video

The subject can include at most 40 characters, and if the message is an SMS, the subject will be included as part of the message body.

Your phone allows you to perform a variety of other functions within the messaging window. Select Options to access the following features:

Insert

Your phone also allows you to add pictures, audio files or videos to your message. From the messaging composition screen, select Insert to display the following options:

- **Image:** Add an image from the folder lists
- **Audio:** Add an audio clip from the folder lists
- **Video:** Add a video from the folder lists
- **New Image:** Start the camera to take a photo and insert it into the message
- **New Audio:** Start the sound recorder to create a new audio file, and insert it into the message
- **New Video:** Start the camcorder to create a new video file, and insert it into the message

Slide

Enter the slide interface

- **Add Slide:** Switch to the slide interface.
- **Delete Slide:** Delete the current slide
- **Previous Slide:** View the previous slide
- **Next Slide:** View the next slide, when more than one slide has been added.
- **Slide Timing:** Set the duration (in seconds) for each slide

Note: When editing an MMS message, you can add at most 10 slides to the message.

Preview

Preview the message

Erase Item

Erase the selected image, audio or video item from the message

Cc/Bcc/Sub

View and enter the cc/bcc recipients and subject text.

Save to Drafts

Save the message to the Drafts folder

Quick Text

Quick Text messages are used to enter common responses to questions from a pre-defined dictionary. Select Quick Text, locate a desired phrase and click OK to add the text to the current message. For more information about Quick Text, Refer to Settings - Quick Text settings.

Signature

Input your pre-defined signature. See Settings – Signature for information on how to create a customized signature.

Inbox

The Inbox folder contains all of your received text and multimedia messages. From this folder you can review your received messages, reply or forward messages to another recipient. To access the inbox from standby mode, select **Menu→Messaging→Inbox**.

Reading a message

1. Use the **UP/DOWN** keys to select the desired message
2. Press the **View** button.
3. If the message is an SMS message, it will be displayed on the screen immediately.
4. If the message is an MMS message, an MMS notification will be displayed.
5. Highlight the downloaded message and press the **View** button. The message will be displayed on the screen.
6. You may press the **Reply** button to respond to the original recipient.

Replying to a message

1. Highlight the desired message and press the **Reply** or **View→Reply**.
2. Compose your reply message. For more information about creating messages, Refer to *Send New*.

Note: When replying to a message, the To: field will automatically be filled with the original sender's number. The Cc and Bcc fields will be blank. The message type (SMS or MMS) will depend on the content of the message.

Inbox Options

To select your inbox options, press the **Options** button located on the left soft key. The following selections are available:

- **Delete:** Delete the selected message
- **Delete All:** Delete all messages in the Inbox
- **Forward:** Forward a copy of the message to another recipient
- **Reply All:** Reply to the sender and all recipients of the highlighted message (MMS only)
- **Messages Details:** Display information about the message such as date, time, size, priority, etc. (MMS only)
- **Move to Saved:** Allows you to move the message to the Saved folder.
- **Reject:** Discard to read the new MMS (This function is available only with Push message unread).

Note: The functions **Reply All** and **Message Details** are only available for MMS messages. To change the MMS download options, Refer to the section Messaging–Settings –Message Settings – Auto Download.

Outbox

The Outbox folder contains all messages that are waiting to be sent, or were unsuccessfully sent during the last attempt. From this folder you can edit or re-send your messages.

To edit a message before sending, press the **Edit** button. This will display the composer interface where you can edit your message. Select **Send** from this screen to send the message.

You can also send a message directly from the Outbox by pressing the **Send** button.

Drafts

The Drafts folder contains drafts, unfinished or unsent text and multimedia messages. From this folder you can complete and re-send your messages. Select the **Edit** button to open the message, and press **Send** in the composer to send the message.

You may delete a highlighted message by pressing the **Delete** button located on the right soft key.

Sent

The Sent folder contains messages that have been successfully sent by your phone. Press **Edit** to open the composer interface to edit or re-send your message. Select **Delete** to delete selected messages from the Sent box

Saved

The Saved folder contains saved text and multimedia messages. From this folder you can edit and resend your messages.

Voice Mail

When the Voice Mail function is available, all unanswered calls to your phone can be transferred to your voice mailbox, even if your phone is disuse or powered off. You should set up your voice mailbox and personal greeting as soon as your phone is activated. For more information, Contact your service provider.

To check your voice mailbox, select **Call** from the Voice Mail interface. The phone will automatically place a voice call to the Voice Mail center. You may clear the new Voice Mail indicator by pressing the **Reset** button, located on the right soft key.

Shortcut: To quickly access your voice mailbox from standby mode, press and hold the 1 key. Your phone will automatically place a voice call to the Voice Mail center.

Web Alerts

Your phone is capable of receiving Web Alerts from online providers. For more details, Contact your service provider.

To access your Web Alerts:

1. From standby mode, select **Menu→Messaging→Web Alerts**
2. Follow the on-screen instructions.

Settings

There are several options associated with your text and multimedia messages. This menu allows you to customize the options to fit your preferences. The following are the instructions of some menus.

Message Settings

- **Save to Sent Box:** Sets whether messages are saved to the Sent folder

Prompt: Prompts you to save a copy of the outgoing message

Do Not Save: Sent messages are not saved in the Sent box

Auto Save: Sent messages are automatically stored in the Sent box

- **Auto Delete Inbox:** Selects whether messages are automatically deleted after being read
 - On:* Automatically delete read messages
 - Off:* Do not delete read messages
- **Default Entry Mode:** Sets the default entry mode
 - Word:* Text entry with a predictive dictionary
 - Alpha:* Each character is typed individually
- **Auto Download:** Sets the preference for downloading MMS messages
 - On:* Download the MMS automatically
 - Off:* Manually download the attachment when viewing the MMS
- **Message Priority:** Changes the message priority between Low, Normal and High.
- **Delivery Report:** Enables and disables the MMS delivery report
- **Read Report:** Selects whether read reports are requested for MMS messages
- **Callback:** Sets the callback number that is sent along with SMS and MMS messages
- **Signature:** Allows you to input and save your message signature. The saved signature is appended to all outgoing messages.

Quick Text Settings

The Quick Text Settings is a list of phrases that are commonly used in short messaging. To view or edit the phrase, press the **Edit** button. For more information on adding Quick Text to your message, Refer to *Send New*.

Memory Info

The Memory Info menu displays the amount of memory available for text and multimedia messages. Press the **OK** key to exit from the menu.

Your phone has a MobileShop menu that allows you to purchase music, ringtones, images, games and a variety of applications. In the user interface you can enable the BREW application via the right soft key in idle mode.

Navigate the navigation keys to get into the menu you desired. The MobileShop text shall be displayed at the bottom of the screen upon selection of the Shopping Cart icon. Once the MobileShop has been selected, the following options shall be displayed:

- **Catalog**
- **Search**
- **About Download**

Follow the on-screen instructions to download and manage the desired files. The **Help** menu gives more information about the mobile shop of buying applications.

The following categories is the standard settings for C88 BREW enabled devices:

Order Apps shall allow the user to select the order of the apps.

Move Apps shall allow the user to move apps from one folder to another.

Manage Apps shall allow the user to find out how much storage space is left, how many uses of an application remain, and the application's expiration date, if any. The following options shall be displayed when the user selects an application:

- **View Properties**
- **Set Folder**
- **Lock Apps**
- **Remove**
- **Upgrade Check**

Main Menu View shall allow the user to change the icon size of an app's appearance or have the icons presented in list form.

View Log shall allow the user to view the application status, as well as any application errors that may have occurred.

The browser feature on your phone allows you to view internet content. You can view specially designed versions of popular websites which include sports, weather, news, stock quotes and many others. As well, you can download ringtones, wallpaper, and games from your service provider.

Launching and Navigating the Browser

When you choose Web Wireless menu, you will be connected to the service provider's homepage automatically. You may press the **Options** key to access the browser submenu. The following selections are available in the Options menu:

- **Home:** Go to the homepage
- **Forward:** Go back and reload the web page from where the **Back** button was last pressed
- **Go To URL:** Switch to the URL screen where web addresses can be input
- **Bookmarks:** All previously accessed addresses can be saved as bookmarks on your phone. This function allows you to view and edit frequently accessed sites.
 1. **Open Bookmarks:** Access the bookmark list and organize favorites.
 2. **Mark Current Site:** Add a bookmark for the current site.
- **History:** Browse previously viewed web addresses
- **Screenshot:** Allows you to manage your snapshots
 1. **View Snapshots:** View previously saved snapshots
 2. **Take Snapshots:** Take a snapshot of the current web page
- **Use URL:** Provides URL related options
 1. **Send Link:** Send a message with the current URL
 2. **Show URL:** Show the current URL
- **Search web:** Search via the search engine defined by your service provider.
- **Advanced:** View the advanced menu for the Browser
 1. **Home:** Clear the cache memory and reload the browser
 2. **Multimedia:** Allows setting preferences for display pictures and background music
 3. **Clear:** Allows clearing of the stored cookies, cache, etc
 4. **Scroll Mode:** Settings for the scroll mode and scroll speed of web pages
 5. **Send Referrer:** Enable or disable adding "referrer" field into HTTP request head
 6. **Connection Timeout:** Set the duration of the connection timeout
 7. **Key press Timeout:** Set the duration of the key press timeout
 8. **Security:** Set the security options
- **Exit: Exit Web Wireless and return to standby screen.**
- **About: Show the version of Web explore.**

Note: To go to the previous page while browsing the internet, press the **Back** button located on the keypad.

Your phone has the capability of playing multimedia content such as audio, Image and downloadable audios and Images.

Tunes

To access your Tunes from standby mode, select **Menu→Music & Media→Tunes**.

Playing your tones

After you highlight a tone, you can play it by pressing **Play** key.

Managing your Tunes

Set the tones as Caller ID Ringtone, Unknown Calls Ringtone, Roaming Ringtone, Alarm Ringtone and Contact Ringtone.via **Set As**

Images

To access the Images menu from standby mode, select **Menu→Music & Media→Images**.

View your image

When you highlight a file, press the View key to view it. In viewing interface you can view it with full screen by press **Full scr.** You can operate the image through the following **option** menu:

- **Send:** Send the image by MMS.
- **Set As:** Set the image as the wallpaper or contact image.
- **File Info:** View the file information of the image.

Managing your Images

Set the image as wallpaper via **Set As**.

Camera





To access your camera, select **Menu→Music & Media→Camera** from standby mode.

Shortcut: You can quickly access the Camera application by holding the **Camera** button located on the left side of the phone for a while in standby mode.

Take pictures and videos

To capture an image, press the **Capture** button located on the middle soft key. You may also press the **Camera** button on the left side of the phone.

You can use the right and left navigation keys to view your image settings while shooting. Use the **UP** and **DOWN** keys to adjust the level for each of the following settings:

-  **Brightness:** Adjust the brightness level of the image
-  **Contrast:** Adjust the contrast of the image
-  **Zoom:** Adjust the zoom level
-  **Effect:** Change the effect among Normal, Black & White and Sepia

For more shooting options, select the **Options** button to display the following:

1. **Self Timer:** Set the self timer.
2. **Image Size:** Choose among image sizes.
3. **Image Quality:** Select the image quality.
4. **White Balance:** Choose white balance.
5. **Shutter Sound:** Select the shutter sound.
6. **Video Camera:** Switch to video recording mode.

Viewing your photo and video

You can view your previously taken images and videos by selecting the **Album** button located on the right soft key.

MyStuff

The MyStuff folder is a convenient way to organize all the tones, images and videos captured by your handset. You can easily handle the tones and images recorded by yourself as the wallpaper and a special ring tone of the handset. To access the MyStuff folder from standby mode, select **Menu→Music & Media→MyStuff**. In this folder you will be able to access the folders MyTunes, MyImages, and MyVideos.

MyTunes

You can view and manage the tones and voice recorded with the recorder of **Voice Memo** in this folder. You can manage the desired file by highlighted it. The following operations are available:

- **Play:** Play the highlighted tunes
- **Mark:** Mark the highlighted tunes
- **Options:** Display the additional options listed below:
 - Set As:** Set the highlighted file as Caller ID Ringtone, Unknown Calls Ringtone, Roaming Ringtone, Alarm Ringtone and Contact Ringtone.
 - File Info:** Allow you view the file information.
 - Delete All:** Delete all the files in the folder
 - Delete:** Delete the highlighted tunes
 - Rename:** Rename the highlighted tunes
 - Send Message:** Send the tunes by MMS.

MyImages

You can view and manage the images captured with the **camera** in this folder. You can manage the desired image by highlighted it. The follow operations are available:

- **View:** View the highlighted image on the screen.
- **Mark:** Mark the highlighted images.
- **Options:** Display the following list below.
 - Set As Wallpaper:** Set the highlighted image as the current wallpaper.
 - File Info:** View the highlighted information of the image.
 - Delete All:** Delete all the images in the folder.
 - Delete:** Delete the highlighted images
 - Rename:** Rename the highlighted images
 - Send Message:** Send the images by MMS.

MyVideos

You can view and manage the videos recorded with **camera** in this folder. You can manage the desired videos by highlighted it. The following operations are available:

- **Play:** Play the highlighted video
- **Delete:** Delete the highlighted video
- **Options:** Display the additional options listed below:
 - File Info:** Allow you view the file information.
 - Delete All:** Delete all the videos in the folder

Memory Info

The Memory Info selection allows you to view the details about the space used and available memory. To view the memory information from standby mode, select **Menu→Music & Media→Memory Info**.

Your phone is capable of playing a variety of games that are available through your service provider. You can download games and store them on your phone for future use. To access the Games folder from standby mode, select

Menu→Games.

Please follow the instructions on the screen to play the game.

The Tools menu provides helpful software applications to assist with daily tasks, such as a calculator, alarm clock, voice memos, world clock etc. To access the Tools folder, select **Menu→Tools** from standby mode.

Calculator

Your mobile phone comes with a built-in calculator capable of performing addition, subtraction, multiplication and division. To access the calculator from standby mode, select **Menu→Tools→Calculator**.








1. Enter a number with the keypad
2. If necessary, press the right soft key to insert a decimal point
3. Use the navigation keys to select a mathematical function
 - a. **Up key**: add
 - b. **Down key**: subtract
 - c. **Left key**: multiply
 - d. **Right key**: divide
4. Enter the next number with the keypad
5. Press **OK key** to view the result

Alarm Clock

The alarm function allows you to set up multiple separate alarms. To access the alarm clock function, select **Menu→Tools→Alarm clock** from standby mode.

Edit an alarm

To edit an alarm, highlight the desired alarm, select **Option -Edit Alarm** then press the **OK** key or create a new alarm by pressing **New**, You may set the alarm options described below:

-  **Type**: Set the alarm type .
-  **Date**: Select the alarm date.
-  **Time**: Enter the time for the alarm in HH:MM am/pm format.
-  **Ring**: Set the alarm sound as on or off.
-  **Ringtone**: Select the Ringtone that will be played when the alarm sounds. .
-  **Status**: Enable or disable the alarm
-  **Remark**: Enter a comment about the alarm

You can save the alarm by pressing the **Save** key.

Alarm options

To access the alarm settings, press the **Options** button located on the left soft key. The following options are available:

- **Edit Alarm**: Edit the highlighted alarm entry
- **Set Rest Days**: Set the days that the alarm is enabled. Highlight the day and press **Mark** to set the rest day, or **Unmark** to remove the rest day. Press **OK** to save the settings.
- **Delete All**: Delete all the alarms set.

Other alarm operations:

If there are alarms existed, select **View** can view the alarm info. Press **Delete**, if you want to cancel. And press **Edit**, if you want to edit the alarm.

Calendar

The Calendar allows you to conveniently access and modify your agenda. Simply store your appointment with a reminder and your phone will alert you on the time and date selected. You can access the Calendar by selecting **Menu→Tools→Calendar**.

Adding an appointment

To add an appointment to the Calendar, press the **Add** button located on the right soft key. You may select to add a Meeting, Memo or Anniversary from the list.

Viewing an appointment

When you open your Calendar, it will automatically navigate to the current date. You may click the left and right navigation buttons to view appointments on a different date. To view the details of an appointment, highlight the desired appointment and press the **View** button. This will display various parameters such as the time, date, subject and location.

Calendar Options

To access the Calendar settings, press the **Options** button located on the left soft key. The following options are available:

- **Go To Date:** Input a date and press **OK** to jump to the specified date
- **Settings:** Set the alarm tone and default calendar view.
- **Memory Info:** Displays the number of used, available and total calendar entries

Tip Calc

The tip calculator function allows you to quickly and easily calculate the tip amount based on the tip rate and bill. You can access the Tip Calculator from standby mode by selecting **Menu→Tools→Tip Calc**. To calculate a tip:

1. Enter the Bill amount. Press the **Decimal** button to enter a decimal point.
2. Enter the Tip percentage.
3. Press **OK**.
4. The Tip and Total will be displayed.

You may press the **Reset** button to clear the bill and tip amount.

World Clock

The world clock displays the time in twenty-four different time zones around the world, together with one or more cities, states, regions or countries in each time zone. To access the World Clock, select **Menu→Tools→World Clock** from standby mode. Press the left and right navigation keys to display different time zones.

You may press the **DST** button to enable or disable daylight savings time. The **Cities** button sets the default time zone for the phone.

Voice Memo

You can use your phone to record brief memos to remind yourself of important events, phone numbers or other information. To access the voice memo from standby mode, select **Menu→Tools→Voice Memo**.

Recording a Voice Memo

You may press the **Record** button to record a memo. Once the recording has started, press the **Stop** button to end the memo. After the recording is complete, you may press the **Discard** button to delete, or **Save** to store the memo for future reference. The recorded memo can be sent as an MMS. Press the **Options** button to display the following features:

- **Send:** Send the voice memo via MMS message
- **Play:** Play the voice memo

Listen to a Voice Memo

To listen to a previously recorded voice memo, press the **Album** button located on the right soft key. A listing of audio clips will be displayed. Navigate to the desired entry and press the **Play** button to listen to the clip. For more information about managing a voice album, please reference to *Section9 Music & Media→MyStuff→MyTunes*.

The settings menu allows you to customize your phone's display, sound, and various other settings based on your preferences.

Various phone settings are available within the Settings menu. Highlight the desired selection and press **OK** to view or change the current settings.

Sound Setting

The sound setting menu allows you to change the sound properties of your phone.

Ringers

Many different ringers are available to help you identify incoming calls and messages. You can assign ringtones to individual contact entries and types of calls or messages.

- **Voice Calls:** Change the voice call options
 - Caller ID:** Edit the ringtone for calls with caller ID tags
 - Unknown Calls:** Set the ringtone from blocked or restricted phone numbers
- **Messages:**
 - Voice Mail:** Select the Voice Mail indicator sound
 - Messaging:** Set the tone for new text and multimedia messages
 - Web Alerts:** Choose the indicator for new web alerts
 - Reminder:** Set the reminder time for new messages

Keypad Tone

The keypad tone menu allows you to set the volume level of keypad tone or off the tone..

Volume

The Volume menu sets the mode and volume options for the ringer and earpiece.

- **Silent Mode:** Enable or disable silent mode
- **Master Volume:** Change the master volume level
- **Earpiece:** Set the volume level

Power On/Off Tone

The Power On/Off setting allows you to enable or disable the music played during power on/off of the handset.

Alerts

The alerts menu allows you to change the sound settings for various alerts on your phone. The following settings are available:

- **Minute Beep:** Enable or disable the beep played before the calling time is about to achieve one minute or multi-minutes
- **Call Connect:** Enable or disable the tone played when a call is connected successfully.
- **Call Lost:** Enable or disable the tone played when a call is lost

Display Setting

The display settings allow you to customize your mobile phone's display screen. The following settings can be changed via the display menu:

- **Banner:** Edit the banner name displayed on the standby screen
- **Wallpaper:** Select the background image from **Images** and **MyImages** for the standby screen
- **Backlight:** Set the screen and keypad backlight to be Always Off, 3 Seconds, 10 Seconds or 20 Seconds.
- **Clock Format:** Change the format of the clock between Digital and Large Digital
- **Menu Style:** Choose between Icon or List menu style
- **Dialing Font:** Change the size of dialing font between Normal and Large

Language

Your phone can display text in English or Spanish. To change the language settings, select

Menu→**Settings**→**Language** from standby mode. Changing the language settings changes all menus and message settings. Use the Up and Down keys to select between English and Spanish. Press **OK** to select the highlighted language.

Bluetooth

Your phone is capable of connecting to a variety of Bluetooth wireless accessories. You may create and store 20 pairings within the phone and connect to one device at a time. The approximate range for Bluetooth wireless technology is up to 30 feet (10 meters). Your phone has the following Bluetooth profiles:

Profile	Description	Feature	Connecting Devices
HSP	Headset Profile	The HSP profile allows you to use a Bluetooth wireless headset to make calls with your phone.	Bluetooth wireless headset
HFP	Hands-free Profile	HFP allows you to connect with a HFP enabled car-kit for hands-free conversations.	Bluetooth hands-free car kit or other HFP-capable devices
OPP	Object Push Profile	OPP allows you to send phonebook entries (in v-card format) to other OPP-capable devices.	Bluetooth capable handset

The Bluetooth menu allows you to search for Bluetooth wireless devices, and manage devices that have already been paired with your phone. To access the Bluetooth menu from standby mode, select **Menu**→**Settings**→**Bluetooth**.

Bluetooth Manager:

Manage the Bluetooth settings below:

- **Power:** Enable or disable the Bluetooth support
- **Discovery Mode:** Disable or enable discovery mode for 60 seconds. Turn discovery mode on for 60 seconds to allow other devices to find your handset.
- **Device Name:** Set the Bluetooth device name for your phone. This name will appear on other Bluetooth devices when your phone is located.
- **Address:** Identifies the address for your handset
- **Device Type:** Shows your Bluetooth device type
- **Support Profiles:** Allows you to view a listing of the Bluetooth profiles supported by the handset.

Bluetooth Device:

This menu allows you to manage the Bluetooth device that have been, or currently are paired to your handset.

Pairing with a new Bluetooth device

To pair with a new Bluetooth device from this menu:

1. Press **Search** to find a new compatible device
2. If Bluetooth power is set to off, you will be prompted to turn the power on. Select **OK** to enable Bluetooth.
3. The device will appear in the Bluetooth Device menu once it has been located. Highlight the desired device and press **OK**.
4. The phone will prompt you for the pass key. Consult the Bluetooth accessory instruction manual for the correct pass key. Enter the pass key and press the **OK** key.
5. Once connected, you will see the device listed in the paired Devices menu, and the Bluetooth icon will appear on the status bar.

GPS

Your phone's GPS features enable service providers to locate your position in emergencies, or for other services to request your position. You may choose between **Location on** or **E911 only**.

System

The System menu provides system settings.

Call Setup

The call setup menu allows you to change the answering features on your phone. The following settings are available:

- **Call Answer:** Select among pressing the send key to answer, any key to answer and answering when the flip is opened.
- **Auto Answer:** Set the auto-answer settings. This feature is intended for use when your phone is connected to an optional hands-free headset.
- **Auto Redial:** Enable or disable the auto-redial feature. This feature automatically redials a call after an unsuccessful call.

Memory Info

The Memory Info menu allows you to view information about the phones available and used memory.

Phone Info

- **My Number:** Display the phone's mobile number
- **SW Version:** View the software, hardware, PRL and Browser versions of the phone
- **Serving System:** Display the information about current CDMA channel, SID and NID
- **Icon Glossary:** A listing and description of all icons displayed on the phone's status bar

System Settings

- **Set Mode:** Select the mode of network..
- **Note:** Additional fees may apply when roaming on another network.
- **Set NAM:** Your phone has the capability of storing 2 different phone numbers. Use this setting to select the current Number Assignment Module (NAM). Contact your service provider for more information about the NAM.

TTY Mode

Your handset is a TTY compatible device. Simply connect the TTY equipment to the USB jack with the ZTE TTY-to-USB connector. To access the phone's TTY settings, select **Menu→Settings→System→TTY mode**. Use the Up and Down keys to choose between the following settings:

- **TTY Full:** Users who cannot talk or hear may use this setting to send and receive text messages through TTY equipment.
- **TTY+Talk:** Users who can talk, but cannot hear, may use this setting to speak through the phone and receive responses via text message
- **TTY+Hear:** Users who can hear, but cannot speak, may use this setting to listen to conversation of the other party, and respond via text message.
- **TTY Off:** Users who can hear and speak may use this setting to disable TTY support.

Connecting to TTY Equipment

1. Connect the cable from the TTY device into the ZTE TTY-to-USB connector.
2. Plug the USB connector into the jack on the right side of the phone.
3. Enter the TTY Mode menu and select the desired TTY Mode (shown above).
4. After setting the TTY mode, check the LCD screen on the phone for the TTY icon
5. Connect the TTY equipment to the power source and turn it on.

6. Make a phone connection to the desired number.
7. When a connection is made, use the TTY equipment to send a text message, or speak (for TTY+Talk mode).
8. The voice or text message from the other party will be heard or displayed on the TTY equipment, depending on the TTY mode selected.

Security

The security menu allows you to lock your phone electronically.

Note: You will need to enter the phone lock code to enter this menu. The default code is 1234.

The following options are available:

- **Lock Mode:** Choose between Unlock, Lock and On Power Up. In Lock mode, the phone is only able to receive calls or make emergency calls. The On Power-Up setting will automatically lock your phone when it is powered on.
- **Change Code:** This menu allows you to change the phone's lock pass code. To change your code:
 1. Select **Menu**→**Settings**→**Security**→**Change Code** from standby mode.
 2. When prompted, enter your old 4 digit lock code
 3. Input the new code
 4. Input the new code again to confirm.
- **Reset Defaults:** This selection restores the default security settings.

Airplane Mode ON/OFF

Airplane Mode allows you to use many of your phone's features, such as games, calculator, voice memos, and many others when you are in an airplane or other area where RF signals may cause interference. In airplane mode, you are prohibited from making or receiving voice/data calls, however you may still make calls to your local emergency number.

- **Enabling Airplane Mode**

To enable Airplane Mode, select **Menu**→**Settings** from standby mode. Highlight
- **Airplane Mode: ON** and press **Select**.
- **Disabling Airplane Mode**

To disable Airplane Mode, select **Menu**→**Settings** from standby mode. Highlight
- **Airplane Mode: OFF** and press **Select**.

Abbreviation	Description
AC	Alternating Current
CDMA	Code Division Multiple Access
DST	Daylight Savings Time
DTMF	Dual-Tone Multi-Frequency
HFP	Hands-free Profile
HSP	Headset Profile
GPS	Global Positioning System
MMS	Multimedia Message Service
NAM	Number Assignment Module
OPP	Object Push Profile
RF	Radio Frequency
SD	Secure Digital
SID	System Identifier
SMS	Short Message Service
SW	Software
TTY	Teletype
URL	Uniform Resource Locator
USB	Universal Serial Bus
VIP	Very Important Person

Any changes or modifications not expressly approved by the party responsible could void the user's authority to operate the device.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

The handset is designed to comply with safety requirements for exposure to radio waves

. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using a standardized method with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various ZTE phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

The SAR limit recommended is 1.6W/kg averaged over one(1) gramme of tissue.

The highest SAR value for this model phone tested by MORLAB for use at the head is 1.337 W/kg(1g)

The highest SAR value for this model phone tested by MORLAB for use at the body is 0.255W/kg(1g)

SAR compliance for body-worn operations is restricted to belt-clips, holsters, or similar accessories that have no metallic component in the assembly and which provide at least 1.5 cm separation between the device, including its antenna, and the users body