

**ZTE F350**

CDMA 1X Digital Mobile Phone

User Manual

## **Copyright © 2010 by ZTE Corporation**

### **All rights reserved**

No part of this publication may be excerpted, reproduced, translated, or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation operates a policy of continuous development. ZTE Corporation reserves the right to make changes and improvements to any of the products described in this document without prior notice.

**Release:** V1.0

**Manual number:**

2009.12.23

---

## Contents

<b>1. For Your Safety</b> .....	<b>11</b>
General Care .....	11
Aircraft Safety .....	14
Hospital Safety.....	14
General Guidelines .....	15
Road Safety .....	16
Vehicles Equipped with an Airbag .....	17
Third Party Equipment.....	17
Efficient Use.....	17
Radio Frequency (RF) Energy.....	17
Emergency Services .....	19
FCC Compliance.....	20
Use Your Phone with a Hearing Aid Device.....	21
Turn on the HAC Setting .....	22
Copyright Notice .....	23
<b>2. Introduction</b> .....	<b>24</b>
Overview.....	24
What's Included .....	24
F350 Technical Specifications.....	25

Phone at a Glance.....	25
Key Definitions .....	27
User Interface.....	30
Main Indicators and Icons.....	31
<b>3. Getting Started With Your Phone .....</b>	<b>32</b>
Battery.....	32
Install the Battery .....	32
Charge the Battery .....	33
Remove the Battery.....	35
Power On/Off Your Phone .....	36
Lock/Unlock the Keypad .....	36
Connect to the Network .....	37
Activate Your Phone.....	37
<b>4. Basic Operations.....</b>	<b>38</b>
Make Voice Calls.....	38
Use the Keypad.....	38
Use the Contacts List .....	38
Use the Last Number Dialed .....	39
Use the Number from the Call History .....	39
Use Speed Dials .....	40
Answer Voice Calls.....	40

---

In-Call Features .....	41
Three-Way Call .....	42
Call Waiting.....	43
<b>5. Entering Text .....</b>	<b>44</b>
Text Input Key Functions.....	44
Text Input Modes .....	45
<b>6. Contacts .....</b>	<b>48</b>
New Contact .....	48
Contact List.....	49
Backup Assistant.....	50
Groups.....	50
Speed Dials .....	51
In Case of Emergency.....	52
My Name Card.....	53
<b>7. Messaging.....</b>	<b>54</b>
New Message .....	54
How to Send a Text Message .....	54
How to Send a Picture Message.....	55
How to Send a Voice Message .....	58
Inbox.....	59
Sent.....	60

Drafts.....	60
Voicemail.....	61
Email.....	62
Chat.....	62
Changing Message Settings.....	62
Erasing Messages.....	64
<b>8. Recent Calls.....</b>	<b>66</b>
Missed.....	66
Received.....	66
Dialed.....	66
All.....	66
View Timers.....	67
<b>9. Search.....</b>	<b>69</b>
<b>10. Media Center.....</b>	<b>70</b>
Search.....	70
Tunes & Tones.....	70
Get New Ringtones.....	70
My Ringtones.....	71
My Sounds.....	71
Pictures.....	72
Get New Pictures.....	72

---

My Pictures.....	73
Take Picture .....	73
Online Album.....	74
Games.....	75
Mobile Web.....	75
Browser & Download.....	75
Extras .....	75
<b>11. My Pictures .....</b>	<b>77</b>
<b>12. VZ Navigator .....</b>	<b>78</b>
<b>13. Bluetooth.....</b>	<b>79</b>
Add New Device .....	79
Bluetooth Settings.....	80
<b>14. Settings &amp; Tools .....</b>	<b>81</b>
My Verizon.....	81
Master Volume.....	81
Tools.....	82
Voice Commands .....	82
Calulator.....	85
Ez Tip Calulator .....	86
Calendar.....	86
Alarm Clock.....	88

Stop Watch .....	89
World Clock.....	89
Notepad .....	90
Bluetooth Menu .....	90
Sounds Settings .....	90
Easy Set-up .....	90
Call Sounds.....	91
Alert Sounds .....	91
Keypad Volume.....	92
Digital Dial Readout.....	92
Service Alerts .....	92
Power On/Off .....	93
Display Settings.....	93
Easy Set-up .....	93
Banner .....	93
Backlight .....	94
Wallpaper.....	94
Display Themes .....	94
Main Menu Settings.....	95
Dial Fonts.....	96
Menu Font Type.....	96
Menu Font Size.....	96



---

Clock Format .....	96
Phone Settings.....	97
Airplane Mode .....	97
Set Shortcuts.....	97
Voice Commands Settings.....	98
Language .....	99
Location.....	99
Current Country .....	99
Security .....	99
System Select.....	100
NAM Select.....	100
Auto Key Lock .....	100
Call Settings.....	100
Answer Options .....	101
Auto Retry .....	101
TTY Mode.....	101
One Touch Dial.....	102
Voice Privacy.....	102
DTMF Tones.....	103
Assisted Dialing .....	103
HAC Mode.....	103
Phone Memory.....	103

Phone Info.....	103
Set-up Wizard.....	104
<b>15. Glossary .....</b>	<b>105</b>
<b>16. Troubleshooting .....</b>	<b>107</b>
<b>17. Index .....</b>	<b>109</b>

# 1. For Your Safety

## General Care

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse it in any liquid.
- Do not place the handset alongside computer disks, credit cards, travel cards or other magnetic media. The information contained on the disks or cards may be affected by the handset.
- Do not paint the handset.
- Do not leave the handset or battery in places where the temperature could exceed 140 °F, e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.
- Do not remove the handset battery while the handset is switched on.
- Take care not to allow metal objects, such as coins or key rings, to contact or short circuit the battery terminals.
- Do not dispose of batteries in fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point. Follow local requirements for recycling.
- Do not put the handset's battery in your mouth, as battery electrolytes may be toxic if swallowed.

- Do not disassemble or open crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.
- The phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not put a battery into a microwave oven, dryer or high-pressure container.

- Do not contact battery directly into an electric outlet or cigarette lighter charger. Use only authorized chargers.
- Do not puncture the battery with a sharp object such as a needle.
- When the battery is disposed, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.
- Do not drop, throw, or subject the handset to rough treatment.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge or storage.
- Do not use your handset with a damaged or deformed battery.
- Do not solder the battery directly.
- Remove the battery whose life cycle has expired from equipment immediately.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration may cause the handset to move.
- Be careful not to place the handset near heat sources (such as a heater).
- Use a damp or anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatic cloth. Do not use chemical or abrasive cleaners as these could damage the casing.
- Third party equipment: The use of third party equipment, cables, or accessories, not made or authorized by ZTE, may invalidate the warranty of your phone and also adversely affect the phone's safety and operation.

- Remember to make backup copies of all important data on your handset.
- Remember to recycle: The cardboard packing supplied with this handset is ideal for recycling.

**Warnings:** In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes and skin. If the leakage does come into contact with the eyes or skin, flush thoroughly with clean water and consult with a doctor.

### Aircraft Safety

- Switch off your phone or activate the airplane mode when inside or near an aircraft. Use of handsets in an aircraft may be dangerous to the operation of the aircraft and may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of phone service to the offender, or legal action, or both.
- Airplane mode allows you to use many of your phone's features, such as games, calculator, voice memos, and many others when you are in an airplane or other area where wireless signals may cause interference. In the airplane mode, you are prohibited from making or receiving calls.

### Hospital Safety

- Switch off your phone and remove its battery in areas where handset use is prohibited.
- Follow the instructions given by any respective medical facility regarding the use of cellular handsets on their premises.

## General Guidelines

- Many jurisdictions have laws and regulations about taking pictures in public or private areas regarding the processing and further use of such pictures. ZTE encourages its customers to obey all laws and to honor the personal rights of others.
- Check the roaming agreement availability with your network operator.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers, and airplanes. The user is responsible for powering-off the device. If there is any uncertainty, the battery should be removed.
- Observe any signs that indicate powering off your handset, such as those near gas stations or explosives.
- If you have a heart condition, be careful with the setting of call vibration or tone volume. This phone is capable of producing loud noises which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.
- Do not allow children to play with the handset, charger or batteries.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any caution signs and the manufacturer's recommendations.
- Take care not to put your phone in the back pocket of your pants and then sit on the phone. Also, do not put your phone at the bottom of a bag where it may be subject to excessive weight or pressure as this may damage the LCD and camera lens and cause them to malfunction.

- The phone contains metal and may cause a reaction for overly sensitive skin types.
- Do not leave the phone discharged or without a battery for a long period of time. Otherwise some data may be erased.

## Road Safety

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so. Check if local laws and/or regulations restrict the use of cellular phones while driving.
- You must not stop on the hard shoulder of a motorway to answer or make a call, except in emergency situations.
- Switch off your handset at a refueling point, such as a gas station, even if you are not refueling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as the handset.
- Electronic systems in a vehicle, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment may advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by the radio transmitter in



the handset, consult your dealer and do not switch on the handset until your handset has been checked by a qualified technician.

### **Vehicles Equipped with an Airbag**

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

### **Third Party Equipment**

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of the handset and also adversely affect the handset's operation. For example, use only the ZTE charger supplied with the handset.

### **Efficient Use**

For optimum performance with minimum power consumption, do not cover the antenna area (It's on the bottom of your phone.) with your hand. Covering the antenna affects the call quality, may cause the handset to operate at higher power levels than needed, and may shorten talk and standby times.

### **Radio Frequency (RF) Energy**

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.52 W/kg and when worn on the body, as described in this user guide, is 0.901 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be

found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: Q78-ZTECF350

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

## Emergency Services

To make an emergency call in any country:

1. Ensure your handset is **ON** and in service.
2. Press the **End Key** as many times as needed to clear the display and ready the device for calls.
3. Enter a local emergency number, i.e., 911.
4. Press the **Send Key** to dial the number. Follow instructions received and do not end the call until told to do so.

**Note:** Tell the operator which service you require: Police, Ambulance, Fire Engine, Coastguard or Mountain Rescue Service. Give your position, and if possible, remain stationary and maintain contact. Due to the nature of the cellular system, the connection

of emergency calls cannot be guaranteed. You should never rely on any wireless device for essential communication such as medical emergencies.

### **FCC Compliance**

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **Use Your Phone with a Hearing Aid Device**

Your F350 device is compliant with the FCC and IC Hearing Aid Compatibility (HAC) requirements.

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones to assist hearing-device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box. Your F350 has been tested for hearing aid device compatibility. Your F350 has been tested for hearing aid device compatibility and has an M4 and/or T3 rating.

These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings. T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T

Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.) The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to those of phones. Ask your hearing health-care professional for the rating of your hearing aid.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from wireless devices.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to [www.fcc.gov/cgb/dro](http://www.fcc.gov/cgb/dro).

### **Turn on the HAC Setting**

When the HAC setting is on, your F350 sends the audio from your phone calls to the telecoil rather than to the microphone of your hearing aid. You are likely to hear calls much better because volume is increased and background noise and feedback are diminished. The HAC setting improves only the calls you listen to through the earpiece. Turn off the Bluetooth function. It does not affect calls heard on the speakerphone or with a headset. HAC requires extra battery power, so watch your battery consumption when it's turned on.

**CAUTION:** Do not turn on the HAC setting unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.

### **Copyright Notice**

The video/audio recordings you make/download are protected by copyright laws. They are for personal use only and must not be otherwise used without the permission of the copyright owner.

# 2. Introduction

## Overview

Thank you for purchasing the ZTE F350 Mobile Phone. F350 is capable of making voice calls and data connections to CDMA 1x networks. This phone provides many functions which are practical for daily use, including a digital camera, Mobile Camera, Media Center and Voice Command, etc.

To guarantee this mobile phone is always in its best condition, read this manual carefully and keep it for future reference. To ensure your safety, read Section 1 - **For Your Safety** thoroughly before using this handset for the first time.

**Note:** The pictures and icons presented in this manual are meant for illustrative purposes only and may not accurately represent the actual pictures and icons found on the phone. Your phone contains the most up to date information.

## What's Included

Your ZTE F350 Mobile Phone package contains the following components. Check the box carefully to ensure all items are present.

- F350 Handset



 
- Battery
- User Manual and literature pack
- AC Travel Charger

We, ZTE Corporation, declare that the product is packaged with battery separate in the box. The FCC ID label is placed on the mobile phone clearly visible to all persons at the time of purchase.


## F350 Technical Specifications

Handset Type	F350
Dimensions (L x W x H)	102 x 51 x 14 mm (4.0 x 2.0 x 0.55 in.)
Weight	approximately 100 g (3.53 oz) including battery
Continuous Standby Time	220 hours (subject to the network)
Continuous Talk Time	240 minutes (subject to the network)


## Phone at a Glance

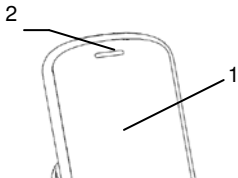

25

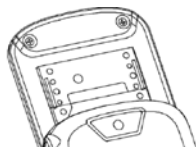 



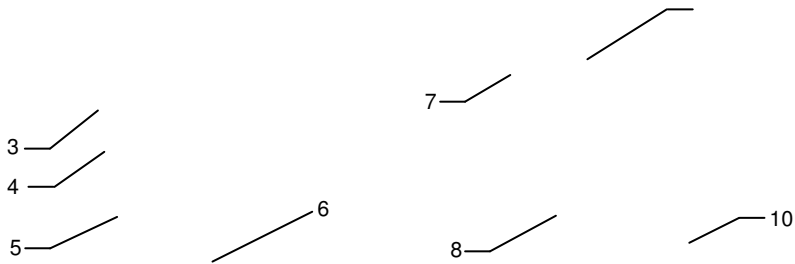 



9







- [1] Display Screen
- [2] Earpiece
- [3] Volume Keys
- [4] Speakerphone Key
- [5] USB Charger Port

- [6] Keypad
- [7] Earphone Jack
- [8] Camera Key
- [9] Camera
- [10] Speaker

## Key Definitions

	<b>Left Soft Key</b> – Execute prompts that appear in the lower-left corner of the screen, directly above the button. These prompts change according to the screen content. This key is also a short cut to “Message” from the idle screen.
	<b>Right Soft Key</b> – Execute prompts that appear in the lower-right corner of the screen, directly above the button. These prompts change according to the screen content. This key is also a short cut to “Contacts” from the idle screen.
	<b>Send Key</b> – Make and answer calls. This key is also a short cut to “All Calls” from the idle screen.
	<b>End Key</b> – End calls and close applications. Holding this key for a while in the idle screen will power off the handset.
	<b>Camera Key</b> – Press this key to launch the camera in standby mode.
	<b>Volume Up/Volume Down Keys</b> – Adjust the master volume in standby mode and the earpiece volume during a call.

 
	<p><b>Directional Keys(Up, Down, Left, Right)</b> – These keys (up, down, left and right) allow for navigation through menu options and quick access to some function menus in standby mode: Mobile Web(Up), My Verizon (Left), My Shortcuts (Right) and Calendar (Down). You can also change the quick access of the directional keys.</p>
	<p><b>OK Key</b> – Confirm actions and make selections. This key also executes prompts that appear on the lower-middle button on the screen, above the key. These prompts change according to screen content.</p>
	<p><b>Alphanumeric Keys</b> – These keys are used for entering numbers and letters, dialing a speed call, and selecting options while navigating through menus. Hold the 1 key for a while in standby mode to launch Voice Mail.</p>
	<p><b>* and # Keys</b> – These keys have different functions, depending on the mode or function menu. Hold the # key for a while in standby mode to turn on/off vibration mode. Hold the * key for a while in standby mode to add the international calling code '+’.</p>
	<p><b>CLR/Voice Commands Key</b> – Delete characters during text entry. Press the key to return to the previous page during menu navigation. Press and hold the key in standby mode to launch Voice Commands.</p>





 




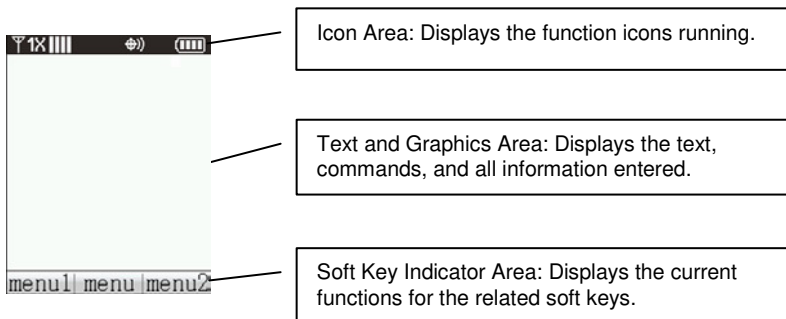





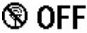










**Speakerphone Key** – Activate and de-activate the speakerphone function during voice calls.

## User Interface

The user interface is constituted of three parts. They are the icon area, the text and graphics area and the soft key indicator area.



## Main Indicators and Icons

	'D' signal strength		'1X' signal strength
	Airplane Mode Is Active		Alarm
	Battery Status		Call Connect
	No Battery		Roaming
	TTY Mode		Bluetooth
	No Service		Keypad Lock
	Calendar		Dialed Call
	Received Call		Missed Call
	New SMS Message		New MMS Message
	New Voice Mail		Priority
	All Sounds Off		Alarm Only
	Vibrate On		Speakerphone

**Note:** To see the icon glossary, please select **Menu**→**Settings & Tools**→**Phone Info**→**Icon Glossary**.

 
## 3. Getting Started With Your Phone

This chapter outlines the steps required to set up your phone, power-on and activate on your service provider's network. Follow the procedure below step-by-step to get started.

### Battery

Please switch off your phone and disconnect the charger with it before removing the battery. Avoid touching electronic components on the battery and battery compartment of the phone.

#### Install the Battery

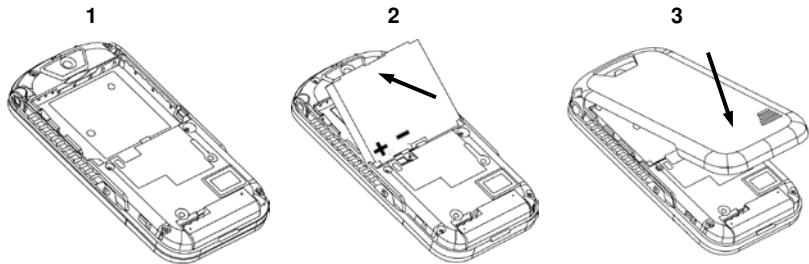




1. Make sure the + and – terminals on the battery be lined up with the metallic points in the battery compartment.
2. Insert battery to the plastic retainer clip and push down on the bottom section of the battery until it clicks into place. It should be aligned with the bottom of the phone.
3. Place the battery cover so that it covers the entire battery. Close the cover and lock it into position. Make sure the battery cover is secure.

### Charge the Battery

 Your phone is powered by a rechargeable battery. The battery is not fully charged when you purchase your phone, but there may be enough power in the battery to turn the phone on. Charge the battery with the procedure indicated below.

**Note:** For maximum battery performance, it is recommended that you completely charge the battery before using the phone for the first time. A new battery's full performance is achieved only after three complete charge and discharge cycles.

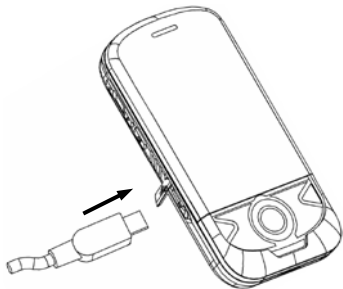


1. Pull the rubber USB cover out of the USB port and move it out of the way.
2. Insert the charger's USB adapter into the USB port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the USB port.

**Note:** Make sure you plug the AC charger into a standard AC outlet box when you begin charging the battery.

## Remove the Battery

 If you need to remove your phone's battery, please follow the procedure indicated below:

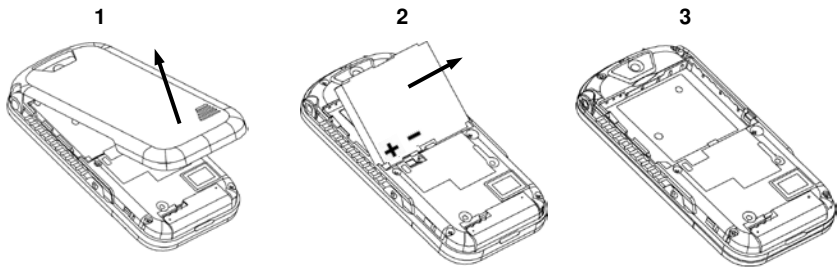

1. Press the button on the top of the phone and lift off the back cover.
2. Insert your fingernail into the slot on the bottom of the battery. Lift the bottom of the battery away from the handset.
3. Remove the battery from the battery compartment.

### Power On/Off Your Phone

To power on the phone, press and hold the **End key** for at least 3 seconds. If the handset lock code has been activated, the phone will prompt to enter the code. The default password for an inactivated phone is 0000. Once you have activated your handset, the default lock code will be the last 4 digits of your phone number.

It is also possible that the lock code has been updated by the user. If the updated lock code is lost or forgotten, please contact your service provider.

To power off the phone, press and hold the **End key** for at least 3 seconds from the idle screen.

**Warning:** Do not power the phone on when wireless phone use is prohibited, or when it may cause interference or danger.

### Lock/Unlock the Keypad

To prevent accidental pressing of keys, F350 is equipped with the key guard lock feature.

To lock the keypad, slide the phone closed.

To unlock the keypad, press the **Right Soft key [Unlock]** and then press the **OK key**; or slide the phone open.

When the phone is closed, Auto Key Lock feature can lock the keypad automatically when the backlight goes off.

To access Auto Key Lock feature, press **Menu**→**Settings & Tools**→**Phone Settings**→**Auto Key Lock**.

## Connect to the Network

After your phone is unlocked, it will automatically search for the network.

## Activate Your Phone

Before placing a call with your new phone, you must activate the phone on the network. To activate the phone, dial provisioning number from the idle screen and follow the step-by-step instructions. Once the display indicates that programming is successful, please restart the handset. You may then place a call with your handset.

## 4. Basic Operations

### Make Voice Calls

#### Use the Keypad

1. Enter a phone number including the full area code by using the numeric keypad. If an incorrect character is entered, use the **CLR key** to delete the digit. Pressing the **CLR key** for a while will erase all digits.
2. Press the **Send key** to make the voice call.
3. Press the **End key** to end the call, or to cancel the call attempt.

**Note:** To make an emergency call, enter the emergency number and press the **Send key**. If possible, remain stationary and keep the line connected.

#### Use the Contacts List

You can also make a call by choosing a record from your **Contacts**. To place a call from the contact list:

1. Choose **Menu**→**Contacts**→**Contact List** to display your contact list.
2. Scroll to the desired entry and press the **Send key** to make a call.

## Use the Last Number Dialed

Your phone can redial the last number dialed. To dial the last number:

1. Press the **Send key** from the standby mode.
2. Press the **Send key** again to dial the first entry.

## Use the Number from the Call History

Generally, all calls you have made or received are saved in a list on the phone.

You may use the **Send key** as a short cut key to “All Calls” from the idle screen.

All numbers are grouped into Missed Calls, Received Calls, and Dialed Calls. To dial a number from your call history:

1. Select **Menu**→**Recent Calls** from the standby mode.
2. Navigate through the menu and press the **OK key** to select Missed, Received or Dialed calls.
3. Select the phone number you want to dial from the list and press the **Send key** to place the call.

### Use Speed Dials

Your phone is capable of storing nine Speed Dial numbers that can be quickly dialed from standby mode. Among the nine digit buttons, the 1 is assigned to Voice Mail function. To use the Speed Dialing feature:

1. Press and hold the number key for the Speed Dial entry you would like to call.
2. The call will be connected automatically.
3. Press the **End key** to end the call, or to cancel the call attempt.

**Note:** If you have not already assigned a Speed Dial to the selected key, the phone will prompt that no Speed Dial has been assigned. You may select **Yes** to add a Speed Dial immediately. For more information on creating Speed Dials, please refer to the section **Contacts-Speed Dials** in this manual.

### Answer Voice Calls

When you receive a call, the ring tone, illumination, or vibration function will be activated, depending on your current settings. If you subscribe to call display and the Caller ID function has been activated by the caller, the caller's phone number/or name/or picture if applicable will be displayed. If the calling party use the service hiding their phone number, your phone will show that the phone number has been withheld.

To answer the call, press the **Send key**. You can disconnect the call by pressing the **End key**.



**Note:** You can also enable the phone to answer calls automatically, or by sliding the phone open, or by pressing any key on the keypad. The default setting can be changed in **Menu**→**Settings & Tools**→**Call Settings**→**Answer Options**.

If your phone is connected to a compatible Bluetooth headset, you can answer or end the call by pressing the **Send/End key** on the Bluetooth headset.

## In-Call Features

### Volume

During a call, you can adjust the earpiece volume by pressing the volume keys on the side of the phone.

### Mute

You can mute your voice during the call by pressing **Mute**, located on the right soft key. Pressing **Unmute** will allow the caller to hear your voice again.

### Speakerphone

Your phone has a speakerphone function that allows you to talk hands-free with the use of the phone's speaker. To use speakerphone, press the **Speaker key** after the call has been connected. Press the **Speaker key** again to return to the standard call mode.

### Advanced Features

To enter the advanced in-call features, press the **Options** during a call. The following will be available:

4. **Call The Third Party:** Call another number to activate three-way call feature.
5. **Messaging:** Switch to the message interface during the call.
6. **Contacts:** Switch to the contacts interface during the call.
7. **Switch to Phone/Bluetooth Headset:** Switch to Phone/Bluetooth headset to answer the call.

### Three-Way Call

Your phone has a three-way calling feature, which enables you to have conference calls with two parties. You can activate this function by following the procedure below:

1. Once a voice call has been established with Party A, press the **Options** and select **Call The Third Party**.
2. The dialing window will appear. Enter the phone number of Party B and press **Send key**.
3. When the Party B answers the call, you will be connected with Party B only. Party A will remain on hold.
4. To activate the three-way call, press the **Send key** again. You will be able to converse with both parties simultaneously.

5. Press the **Send key** again to end the call with the Party B. You may press the **End key** to end both calls.

## Call Waiting

Your phone can accept phone calls while another call is active. You can manage the phone's call waiting feature as follows:







1. If you receive a call during an active conversation, the phone will prompt that there is an incoming call and allow you to accept or reject the call.
2. Press the **Send key** to accept the call.
3. After accepting the call, you will be connected with the second caller, while the first party is put on hold. You may switch between callers by pressing the **Send key** again, or by selecting **Options**→**Swap**.
4. Press the **End key** to disconnect from the active caller.

**Note:** When the **End key** is pressed, both the active and holding user will be disconnected. If the holding user remains on the call, your phone will ring again. You may accept or reject the call.

**Note:** The three-way calling and call waiting feature requires network support and may result in additional charges. Contact your service provider for more information.

## 5. Entering Text

### Text Input Key Functions

Key	Function	Description
	Left soft Key	Press to select text input mode.
	Directional Keys	Move the cursor up and down, left and right during text editing.
	* Key	Switch between Lowercase Alphabetic mode, Standard input mode and Uppercase Alphabetic mode.
	# Key	Press once to insert a space.
	Alphanumeric Keys	Enter characters 0-9 and the letters from a-z. In text input mode, press '1' key to enter usual punctuation marks and symbols; press '0' key to change to other matching words when in ZiWord mode.
	CLR Key	Delete the previous character during text editing. Press and hold the key to erase all texts.

## Text Input Modes

During text entry, you can press the **Left Soft key** to select the input mode. The current mode is indicated on the **Left Soft key** menu.

Display Symbol	Text Entry Mode
ZiWord	Word predictive text mode
Abc	Standard input mode
ABC	Uppercase Alphabetic mode
abc	Lowercase Alphabetic mode
123	Number mode

### Word Mode

Word mode allows you to input messages or text quickly with the built-in predictive dictionary by using your keypad.

1. To write a desired word, begin entering letters with the keys 'a' to 'z'.
2. After the entire word or part of the word has been entered, you can press '0' key to change to other matching words in the predictive dictionary.

3. At any time, you may press the **# key** to complete a word and insert a space.

### **Alphabetic Mode**

In Alphabetic mode, the alphanumeric keys from 2 to 9 are used to enter letters and numbers. You can enter the letters among the letters displayed on the keypad by pressing the keypad once and once again, and wait for a while until the underline of the entering letter disappears, the letter will be entered successfully. Take the '2' key for example:

There are letters "abc" on the keypad.

So press the '2' key once to enter the letter "a", twice to enter the letter "b", three times to enter the letter "c" and four times to enter number "2", then continue pressing to start a new loop of "a" to "2".

**Note:** Standard input mode is just the same as Alphabetic mode. But when composing sentences, the first letter of the new sentence will be capitalized automatically in standard input mode.

### **Number Mode**

In Number mode, use alphanumeric keys from 0 to 9 to enter the number. You can only enter the number directly shown on the keypad. The letters can't be entered in this mode.

**Note:**

During text entry, you can press the **Left Soft key** and select **Symbols** to enter the symbols.

During TXT message entry, you can press the **Left Soft key** and select **Quick Text** to add pre-stored quick texts.

# 6. Contacts

This menu allows you to save and manage contact information containing phone number, E-mail address, ringtone, picture and many other fields. To enter the contact list from standby mode, select **Menu**→**Contacts**.

**Note:** To quickly access the contact list, press the **Right Soft key [Contacts]** in the standby mode.

## New Contact

The **New Contact** menu allows you to add a new contact record.

1. Select **New Contact**, enter the name and press the **Down key** to highlight other fields.
2. Enter the information and press the **OK key** to save.
3. Press the **CLR key** to delete the previous character during text editing or exit from the **New Contact** interface.

**Note:** You may enter any of the contact information above. However, the name and a phone number, an E-mail address, IM or address must be entered in order to save the contact.



## Contact List

Select **Contact List** to view the list of all contacts stored on your phone. You may use the **Up/Down key** to scroll up or down the list, and press the **OK key** to view the desired contact information. Press the **Left Soft key** to edit the highlighted contact. When a contact is highlighted, pressing **Options** will display the following pop-up menu:

1. **New Contact:** Add a new contact.
2. **Erase:** Erase the contact.
3. **New TXT Message:** Send a text message to the contact.
4. **New Picture Message:** Send a picture message to the contact.
5. **New Voice Message:** Send a voice message to the contact.
6. **Set As ICE Contact:** Set the contact as a ICE (In Case of Emergency) contact.
7. **Call:** Make a call to the contact. You can also press the **Send key** to make the call.
8. **Manage Contacts:** You can mark the contacts in the list to erase, lock and unlock them. The locked contacts cannot be erased.
9. **Send Via Bluetooth:** Send the contact record via Bluetooth to another Bluetooth compatible device.

**Tips:** You may also use the **Go To** field to search for a contact from the **Contact List**. Type the name of the desired contact in the Go To field. The phone will automatically scroll to the name that most closely matches your input.

## Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. You can also view, print, add, delete, and edit your contacts online.

If you lose, damage, or upgrade your phone, Backup Assistant will restore your contact list to a new or replacement phone.

**Note:** Additional fees may apply.

## Groups

The **Groups** menu allows you to add contacts to the groups. You can add, rename or delete the groups. You can also send a message to every contact in the selected group.

- To view a group, use the **Directional key** to highlight a group and press the **OK key**.
- To add a new group, press the **Left Soft key** and enter the new group name.

- To add contacts to a new group, select a group, press the **OK key** twice and you can mark the desired contacts, then press the **Left Soft key** to finish.
- Press the **Right Soft key** to display the pop-up options menu. You can send **New TXT message**, **New Picture Message** or **New Voice Message** to all members in the highlighted group, **Rename** or **Erase Group**, or **Add** contacts to the group.

**Tips:** You may also use the **Go To** field to search for a group in the group list. Type the name of the desired group in the Go To field. The phone will automatically scroll to the name that most closely matches your input.

## Speed Dials

The **Speed Dials** menu allows you to view the current list of speed dials and add new entries. Use the **Up/Down key** to navigate to a desired speed dial number.

For speed dial numbers that are already assigned, click **View** to see the contact information and the phone number. You may also select **Remove** to remove the contact from the speed dials list.

### ■ Adding a new speed dial:

1. Navigate to an unassigned speed dial number and press **SET**.

2. The contact list will be displayed. Navigate to the desired contact and press the **OK key** to add the contact to the speed dial list. Press the **OK key** again to confirm the setting.

### In Case of Emergency

This menu allows you to store names, phone numbers and other information, which may be very helpful in case of emergency. It also allows you to add, read, edit, or erase **Personal Info** (in the form of Notes) which may also be useful in cases of emergencies.

#### ■ Adding an ICE Contact:

1. Use the **Up/Down key** to select **Contact 1, 2, or 3**, and then press **ADD**.
2. Select **From Contacts** to add contacts from your contact list, or
3. Select **New Contact** to add a new contact as the ICE Contact.

Select an ICE Contact, press **Call** to make a voice call to the contact and press **Options**→**Re-assign/Unassign** to reassign or unassign the ICE Contact.

#### ■ Adding the ICE Personal Info:

1. Select **Personal Info** and press the **OK key**.
2. Choose the **Note** entry and press **ADD**.
3. Enter the helpful information for emergency and then press **SAVE**.

## My Name Card

This menu allows you to add your personal contact information including name, phone number, E-mail, etc. as a name card.

- Press **EDIT** to enter your personal contact information.
- Press **Options** to display the pop-up menu, and you can send your name card via **TXT Message**, **Picture Message**, **Bluetooth** or **Voice Message**.

## 7. Messaging

Your phone is able to send and receive text message, picture message and voice message. To enter the messaging interface from standby mode, select **Menu**→**Messaging**.

### New Message

#### How to Send a Text Message

1. Select **Menu**→**Messaging**→**New Message**→**TXT Message** to edit the message.
2. In the **To** field, you can enter the phone number or the email address of the recipient for an email message.
3. Press the **Down key**, and you can enter the message in the **Text** filed.
4. Press the **OK key** to send the message.

**Note:** Up to 10 recipient addresses can be entered for one message.

#### ■ Editing the To field

In the **To** field, press the **Right Soft key** to display the pop-up menu:

**From Contacts:** Add the recipient from the contact list.

**Recent Calls:** Add the recipient from the recent calls list.

**Groups:** Add the recipient from the group list.

**To Contacts:** Add the current phone number or address to a new contact, or update an existing contact with the current phone number or address.

### ■ Editing the Text field

In the **Text** field, press the **Right Soft key** to display the pop-up menu:

**Insert Quick Text:** Add the pre-stored quick text into the message.

**Save as Draft:** Save the current message into the **Drafts** folder.

**Add:** Add **Graphic**, **Animation**, **Sound** or **Name Card** into the message.

**Format Text:** Change the look of the text.

**Priority Level:** Set the priority level of the message.

**Cancel Message:** Cancel the message editing and go back to the previous menu.

## How to Send a Picture Message

1. Select **Menu**→**Messaging**→**New Message**→**Picture Message** to edit the message.

2. In the **To** field, you can enter the phone number or the email address of the recipient for an email message.
3. Press the **Down key**, and you can enter the message in the **Text** field.
4. Press the **Down key** to highlight **Picture** field, press the **Left Soft key** to select a picture from **My Pictures** folder, and then press the **OK key** to add a picture.
5. Press the **Down key** to highlight **Sound** field, press the **Left Soft key** to select a picture from **My Sounds** folder or record a new sound, and then press the **OK key** to add a sound record.
6. Press the **Down key** to highlight **Name Card** field, press the **Left Soft key** to select a name card from the contact list or select **My Name Card**, and then press the **OK key** to add a name card.
7. Press the **Down key** to highlight **Subject** field, and you can enter the subject.
8. Press the **OK key** to send the message.

**Note:** Up to 10 recipient addresses can be entered for one message.

### ■ Editing the To field

In the **To** field, press the **Right Soft key** to display the pop-up menu:

**From Contacts:** Add the recipient from the contact list.



**Recent Calls:** Add the recipient from the recent calls list.

**Groups:** Add the recipient from the group list.

**To Online Album:** Add the Online Album as the recipient.

**To Contacts:** Add the current phone number or address to a new contact, or update an existing contact with the current phone number or address.

#### ■ **Editing the Text field**

In the **Text** field, press the **Right Soft key** to display the pop-up menu:

**Preview:** Display the message before it is sent.

**Save As Draft:** Save the current message into the **Drafts** folder.

**Insert Quick Text:** Add the pre-stored quick text into the message.

**Add Slide:** Add a slide to the message.

**Add Signature:** Add the signature to the message.

**Priority Level:** Set the priority level of the message.

**Cancel Message:** Cancel the message editing and go back to the previous menu.

#### ■ **Editing the Picture field**

In the **Picture** field, press the **Right Soft key** to display the pop-up menu:

**Preview/Save As Draft/Add Slide/Priority Level/Remove Picture:** Remove the added picture. /**Cancel Message.**

### ■ Editing the Sound field

In the **Sound** field, press the **Right Soft key** to display the pop-up menu:

**Preview/Save As Draft/Add Slide/Priority Level/Remove Sound:** Remove the added sound. /**Cancel Message.**

### ■ Editing the Name Card field

In the **Name Card** field, press the **Right Soft key** to display the pop-up menu:

**Preview/Save As Draft/Add Slide/Priority Level/Remove Name Card:** Remove the added name card. /**Cancel Message.**

### ■ Editing the Subject field

In the **Subject** field, press the **Right Soft key** to display the pop-up menu:

**Preview/Save As Draft/Insert Quick Text/Add Slide/Add Signature/Priority Level/Cancel Message.**

## How to Send a Voice Message

1. Select **Menu**→**Messaging**→**New Message**→**Voice Message.**
2. Press the **OK key** to start the recording and press the **OK key** again to end it.

3. In the **To** field, you can enter the phone number or the email address of the recipient for an email message.
4. Press the **Down key** to highlight and edit the other fields: **Sound**, **Text**, **Name Card** and **Subject**.  
Please refer to the description in the section: **How to Send a Picture Message**.
5. Press the **OK key** to send the message.

## Inbox

The Inbox folder contains all of your received messages. From this folder you can review your received messages, reply or forward messages to another recipient. To access the inbox from the standby mode, select **Menu**→**Messaging**→**Inbox**.

### ■ Reading a Message

1. Use the **Up/Down keys** to select the desired message.
2. Press the **OK key** to open and view the message.
3. Press the **Right Soft key** to display the pop-up menu:

**Forward:** Forward the message to other recipient.

**Reply w. Copy:** Reply to other recipient with the copy of the original message.

**Save Quick Text:** Save the text in the message to the **Quick Text** list.

**Lock/Unlock:** Lock or unlock the message to prevent accidental deletion.

**Add to Contacts:** Save the contact number or email address of the received message to the contact list or add to an existing contact.

**Extract Addresses:** Extract all contact numbers, email addresses or URLs in the message.

## Sent

The Sent folder contains messages that have been successfully sent by your phone. To access the sent folder from the standby mode, select **Menu**→**Messaging**→**Sent**. Select the desired message, press the **OK key** to view it and press the **Right Soft key** to display the pop-up menu:

**Forward:** Forward the message to other recipient.

**Lock/Unlock:** Lock or unlock the message to prevent accidental deletion.

**Save Quick Text:** Save the text in the message to the **Quick Text** list.

**Add to Contacts:** Save the contact number or email address of the message to the contact list or add to an existing contact.

**Message Info:** Check the detailed message information.

## Drafts

The Drafts folder contains drafts and unfinished text and multimedia messages. From this folder you can complete and resend your messages. To access the drafts folder from the standby mode, select **Menu**→**Messaging**→**Drafts**.

Select the desired message, and press the **OK key** to continue editing it. You can send the message after editing.

In the drafts folder, press the **Left Soft key** to erase the selected message, and press the **Right Soft key** to display the pop-up menu:

**Send:** Send the selected message.

**Manage Drafts:** You can erase or lock the messages in the drafts folder.

## Voicemail

When the Voicemail function is available, all unanswered calls to your phone can be transferred to your voice mailbox, even if your phone is not being used or powered off. You should set up your voice mailbox and personal greeting as soon as your phone is activated. For more information, contact your service provider.

To access the voice mail from the standby mode, select **Menu**→**Messaging**→**Voicemail**.

To check your voice mailbox, press the **OK key** to call from the Voicemail interface. The phone will automatically place a voice call to the Voice Mail center.

**Shortcut:** To quickly access your voice mailbox from standby mode, press and hold the 1 key. Press the **OK key** and your phone will automatically place a voice call to the voicemail center.

### Email

Allows you to send and receive emails via Mobile Web. Before using the function, you should create the email account first.

To access Email from the standby mode, select **Menu**→**Messaging**→**Email**.

### Chat

Allows you to chat with the Internet messenger users. Before using the function, you should require a subscription to a Chat service provider first.

To access Chat from the standby mode, select **Menu**→**Messaging**→**Chat**.

### Changing Message Settings

This menu allows you to configure the settings of message.

From standby mode, select **Menu**→**Messaging** and press the Left Soft key to access the settings menu:

#### 1. Inbox View

Set to sort the messages in the inbox by time or contact.

Inbox view by time: The received and sent messages are separated into **Inbox** and **Sent** folders.

Inbox view by contact: All messages sent to or received from a contact are grouped in the combined **Messages** folder.

### **2. Entry Mode**

Set the default input mode (Ziword, Abc, ABC or 123).

### **3. Auto Save Sent**

The messages are automatically saved in the sent folder if the feature is set on.

### **4. Auto Erase Inbox**

The messages in the inbox folder are automatically deleted if the inbox is full when the feature is set on.

### **5. Messaging Font Size**

Set the message font size (Normal or Large).

### **6. TXT Auto View**

The content of message is automatically displayed when a message is received if the feature is set on.

### **7. Pic Auto Receive**

The picture of message is automatically downloaded when a picture message is received if the feature is set on.

### 8. Quick Text

You can view, edit, move, erase or add quick text phrases. You can add them when writing a text or picture message.

### 9. Voicemail #

Enter the voicemail phone number to be dialed (the default number is \*86).

### 0. Callback #

You can use or edit the number assigned to your handset. The callback number is automatically sent when you send a message if the feature is set on.

### \*. Signature

You can create and edit a signature to send with your message automatically.

### #. Delivery Receipt

You can receive a delivery receipt after sending a message if the feature is set on.

## Erasing Messages

You can delete the unlocked messages in Inbox, Sent and Drafts folders or delete the unlocked messages in all message folders at the same time.

1. Select **Menu**→**Messaging** from standby mode and press the **Right Soft key**.



2. The following options are available:

**Erase Inbox:** Erases unlocked messages in Inbox folder.

**Erase Sent:** Erases unlocked messages in Sent folder.

**Erase Drafts:** Erases unlocked messages in Drafts folder.

**Erase All:** Erases unlocked messages in all message folders.

## 8. Recent Calls

Your phone has a call history feature that automatically stores information about missed, received and dialed calls. You may use the **Send key** as a short cut key to **All Calls** from standby mode.

Select **Menu**→**Recent Calls** from standby mode to view the following menus:

### Missed

Displays recent calls received but not answered.

### Received

Displays recent calls received by the phone.

### Dialed

Displays recent calls made from the phone.

### All

Displays all missed, received and dialed calls made from the phone.

In the **Missed**, **Received**, **Dialed** and **All** call list,

- Press the **OK key** to open the entry in the list.

- Press the **Send key** to make a call to the highlighted number.
- Press the **Left Soft key** and select **New TXT Message/New Picture Message/New Voice Message**. You can send messages to the highlighted number.
- Press the **Right Soft key** and select:
  - Save to Contacts:** Add the highlighted entry to the contact list.
  - Details:** View the detailed information of the existing contact.
  - Erase:** Delete the highlighted entry.
  - Lock/Unlock:** Lock or unlock the highlighted entry.
  - Erase All:** Delete all unlocked entries in the list.
  - View Timers:** Enter the View Timers menu.

## View Timers

The **View Timers** feature allows you to view the approximate duration of your calls, data information, etc.

You can reset the highlighted entry by press the **Left Soft key** or reset all the information by pressing the **Right Soft key**.

Lifetime Calls and Lifetime Data Counter cannot be reset.

**Note:** The View Timers feature is not intended for billing purposes. The actual invoice for calls and service provider may vary depending on network features, rounding off for billing, rates and similar factors.

## 9. Search

The Search function allows you to get free maps and local business listings right on your phone when you need them. Quickly find nearby services. Local restaurants, movie theaters, businesses and directions to get there are at your fingertips with Bing™ for mobile.

Select **Menu**→**Search** from standby mode to access the Search function.

## 10. Media Center

Media Center function allows you to record and play sounds, take and view pictures and use Mobile Web to access news, sports, weather, etc. It also allows you to download ringtones, pictures, games and other various applications on your phone. Select **Menu**→**Media Center** from standby mode to access Media Center menu.

In the Media Center menu, press the **Right Soft key** to display **Info** menu. You can check the memory status, the file transfer activity log and help information about how to use Media Center.

### Search

Please refer to **Chapter 9 - Search** for detailed information.

### Tunes & Tones

#### Get New Ringtones

1. Select **Menu**→**Media Center**→**Tunes & Tones** from standby mode.
2. Press the **OK key [Get New Ringtones]**.
3. Press the **OK key [Get New Applications]** to connect to Media Center and download various ringtones.

## My Ringtones

How to play and use the ringtones:

1. Select **Menu**→ **Media Center**→**Tunes & Tones**→**My Ringtones** from standby mode.
2. Highlight a ringtone and press the **OK key** to play it.
3. Press the **Right Soft key** to view the detailed information of ringtone.
4. Press the **Left Soft key**, you can set the ringtone as **Ringtone**, **Contact ID** or **Alert Sounds** (for **All Messages**, **TXT Message**, **Multimedia Message** and **Voicemail**).

## My Sounds

How to record a new sound:

1. Select **Menu**→ **Media Center**→**Tunes & Tones**→**My Sounds** from standby mode.
2. Press the **OK key [Record New]**.
3. Press the **OK key** to start recording and press again to stop recording.

How to play and use the sound files:

1. Select **Menu**→ **Media Center**→**Tunes & Tones**→**My Sounds** from standby mode.
2. Highlight a sound file and press the **OK key** to play it.

- For the pre-loaded sound files, press the **Right Soft key** to view the detailed information of sound file.  
For the recorded sound files, press the **Right Soft key** to display **Options** menu:
  - **Send:** Send the sound file via picture message.
  - **To Online Album:** Send the sound file to Online Album.
  - **Rename:** Rename the sound file.
  - **Lock/Unlock:** Lock or unlock the sound file.
  - **Erase:** Delete the highlighted sound file.
  - **Erase All:** Delete all unlocked sound files.
  - **File Info:** View the detailed information of sound file.
- Press the **Left Soft key**, you can set the ringtone as **Ringtone**, **Contact ID** or **Alert Sounds** (for **All Messages**, **TXT Message**, **Multimedia Message** and **Voicemail**).

## Pictures

### Get New Pictures

- Select **Menu**→**Media Center**→**Pictures** from standby mode.
- Press the **OK key** [**Get New Pictures**].
- Press the **OK key** [**Get New Applications**] to connect to Media Center and download various images.



## My Pictures

How to view and manage the pictures:

1. Select **Menu**→**Media Center**→**Pictures**→**My Pictures** from standby mode.
2. Highlight a picture, press the **OK key** to view it and press **Options**→**Full View** to view it in full screen.
3. Highlight a picture, press the **Left Soft key** to erase it, and press the **Right Soft key** to display **Options** menu:
  - **Send:** Send the picture via picture message or Bluetooth, or to Online Album.
  - **Set As:** Set the picture as wallpaper or picture ID.
  - **Take picture:** Turn on the camera function.
  - **Get New Pictures:** Download various images on Media Center.
  - **Manage Pictures:** Erase, lock or unlock the picture.
  - **Rename:** Rename the picture.
  - **File Info:** View the detailed information of picture.

**Note:** You cannot send, erase or rename the preloaded/copywritten pictures stored in **My Pictures** folder.

## Take Picture

How to take and save a picture:

1. Select **Menu**→**Media Center**→**Pictures**→**Take Picture** from standby mode. Or you can press the **Camera key** from standby mode to turn on the camera.
2. Press the Up/Down key to adjust the brightness. Press the Right/Left key to zoom in and out when available.
3. Press the **Right Soft key** to display **Options** menu, and customize **White Balance**, **Color Effects**, **Self Timer**, **Shutter Sound** and **Resolution** for the picture.  
**Note:** Zoom is not available when the highest resolution is set.
4. Press the **OK key** to take a picture.
5. Press the **Left Soft key** to save the picture in **My Pictures** folder. Press the **Right Soft key** to erase it. And press the **OK key** to send it via picture message.

**Note:** Please hold the mobile phone sideways when you take pictures, so that the taken pictures saved in your phone are shown in the correct orientation.

### Online Album

You should first setup your account on the Verizon Wireless website: [www.verizonwireless.com](http://www.verizonwireless.com) before establishing a connection.

1. Select **Menu**→**Media Center**→**Pictures** from standby mode.
2. Highlight **Online Album**, and press the **OK key**.
3. Enter your mobile number and password to connect to Online Album.

## Games

You can download various games from Media Center.

1. Select **Menu**→**Media Center** from standby mode.
2. Highlight **Games**, and press the **OK key**.
3. Press the **OK key [Get New Applications]**.

## Mobile Web

Y

## Browser & Download

You can download applications that keep you in touch with the world, and help you find the places you need while you're on the go.

1. Select **Menu**→**Media Center** from standby mode.
2. Highlight **Browser & Download**, and press the **OK key**.
3. Press the **OK key [Get New Applications]**. If there're preloaded applications, highlight one application and press the **OK key** to begin the download process.

## Extras

1. Select **Menu**→**Media Center** from standby mode.
2. Highlight **Extras**, and press the **OK key**.

3. Press the **OK key [Get New Applications]**.

## 11. My Pictures

My Pictures function allows you to view, manage pictures on your phone, and use them as wallpaper or picture ID. You can also take and send pictures via picture message or Bluetooth.

Select **Menu**→**My Pictures** from standby mode to access My Pictures.

For detailed information, please refer to **Chapter 10 - Media Center - Pictures**.

## 12. VZ Navigator

The VZ Navigator allows you to get directions to locations when you're out and about. Using audible turn-by-turn directions, you can locate nearly fourteen million points of interest in the U.S.A. such as landmarks, restaurants and ATMs. VZ Navigator uses GPS positioning to tell you where you are, what's near you and to give you directions to places, quickly and easily.

Select **Menu**→**VZ Navigator** from standby mode to access VZ Navigator.

**Note:** To use VZ Navigator, you should turn location on by selecting **Menu**→**Settings & Tools**→**Phone Settings**→**Location**→**Location On**.

## 13. Bluetooth

Your phone is capable of connecting to a variety of Bluetooth wireless accessories. It allows you to transfer data between Bluetooth devices, talk with a Bluetooth wireless earphone, etc. You may create and store 20 pairings within the phone and connect to one device at a time. The approximate range for Bluetooth wireless technology is up to 30 feet (10 meters).

The Bluetooth menu allows you to search for Bluetooth wireless devices, and manage devices that have already been paired with your phone. To access the Bluetooth menu from standby mode, select **Menu**→**Bluetooth**.

### Add New Device

1. Follow the Bluetooth accessory instructions to set the device to pairing mode.
2. Select **Menu**→**Bluetooth**→**Add New Device** to find a new compatible device.
3. If Bluetooth power is set to off, you will be prompted to enable Bluetooth. Select **Yes** to enable Bluetooth.
4. The prompt: "PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE." is shown. Press the **OK key** to continue.
5. The phone will start to search for the device and the found Bluetooth devices will be displayed in a list. Highlight a Bluetooth device to be paired and press the **OK key**.

6. The phone will prompt you for the passkey. Consult the Bluetooth accessory instruction manual for the correct passkey. Enter the right passkey for the device you want to pair and press the **OK key**.
7. Once paired, you will see the device listed in the Bluetooth Devices menu.

## Bluetooth Settings

In the Bluetooth menu, press the **Left Soft key** to turn on or off Bluetooth.

When Bluetooth is turned on, the Bluetooth icon will appear on the status bar.

**Note:** By default, your device's Bluetooth functionality is turned off.

In the Bluetooth menu, press the **Right Soft key** to display the pop-up menu:

- **My phone Name:** Edit your phone name. This name will appear on other Bluetooth devices when your phone is located.
- **Discovery Mode:** Allow other users to see your accessibility. You can disable or enable discovery mode.

**Note:** After selecting On, other users have one minute to see your accessibility. After which Discovery Mode will automatically back to off.

- **Supported Profiles:** View profiles that you phone can support. Highlight a profile and press the **OK key** to view the description.



## 14. Settings & Tools

The Settings & Tools menu allows you to customize your phone's display, sound, and various other settings based on your preferences, and also provides helpful software applications to assist with daily tasks. In the standby mode, select **Menu**→**Settings & Tools** to access the menu.

### My Verizon

The My Verizon menu connects to the Verizon Wireless Mobile Web. You can check your subscription information ranging from your payment plan to your software upgrade or other available service.

Select **Menu**→**Settings & Tools**→**My Verizon** from standby mode to access the menu.

### Master Volume

Allows you to set master volume of the phone.

Select **Menu**→**Settings & Tools**→**Master Volume** from standby mode and adjust the volume by the directional key. Press the **OK key** to save the setting.

**Note:** You can also press the volume keys in standby mode to adjust master volume.

### Tools

Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Calendar, To Do List, Alarm Clock, Info Search, Stopwatch, World Clock, and Notepad.

### Voice Commands

Voice Commands is advanced speech recognition software that can be used to activate a wide variety of functions on your phone. Each function has its detailed information on the phone and you can press the **Left Soft key** to view it.

Select **Menu**→**Settings & Tools**→**Tools**→**Voice Commands** from standby mode to access the function.

You can also press and hold **CLR/Voice Commands Key** in standby mode to access the function.

#### **Call <Name or #>**

To make a call, say "Call" and the command system will prompt you for the name or phone number. You can state the name and number type of the contact (for example, "Call John Work") to access the contact's phone number directly.

When using the Call command, speak clearly and say the name exactly as it is entered in our contact list.

#### **Send <MSG Type >**

To create a message, say "Send" and the command system will prompt you for the type of message. After choosing the message type, you will be prompted for the contact name, number or group. You can say a full-sentence command, which states the message type and the name or number of the contact (for example, "Send Text Message to Bob Smith"), and the voice command system will automatically start a text

message. If the name has more than one number, the system will prompt you for the number type.

When using the Send command, speak clearly and say the name, number, or group exactly as it is entered in your contact list.

### **Go to <Shortcut >**

To access a menu within the phone, say "Go to" command. For example, "Go to Calendar". If no menu option is stated, a list of options will be provided.

### **Check <Item>**

The "Check" command allows you to check out device information including Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, Balance, Minutes, Payment and My Number.

### **Contact <Name>**

Say "Contact" and the command system will allow you to look up a contact. For example, stating "Contact Bob Smith" will display all the detailed information of that contact. You will also be prompted to call, modify, erase the contact or create a new one.

When using the Contact command, speak clearly and say the name exactly as it is entered in your contact list.

### **Search**

The "Search" command starts an application that allows you to search for information over the internet.

### **Redial**

To make a call to the last number that you called, say "Redial".

### **My Verizon**

The “My Verizon” command allows you to check out the detailed information about your Verizon Wireless account.

### **Help**

The “Help” command allows you to view a general guideline about using Voice Commands.

### **Note:**

If you are frequently prompted to repeat a command, select **Settings**→**Adaptation**, and adapt the system to your voice.

## **Set the Voice Commands**

In the voice commands menu, press **Right Soft key** to access the setting options.

### **Confirm Choices**

The Confirm Choices setting option will allow you to choose if the Command System prompts you with a list of potential matches.

- **Automatic:** the voice command system will display a list only when there are alternative matches.
- **Always Confirm:** the voice command system will always present you with a best match list of names or numbers. When multiple matches are found, the system will prompt you to choose from a list of matches.
- **Never Confirm:** the voice command system will select the best match.

### **Sensitivity**

The Sensitivity setting controls how the system filters for matches.

- **More Sensitive:** the voice command system will increase the sensitivity and displays more potential matches.
- **Less Sensitive:** the voice command system will decrease the sensitivity to filter out

more potential matches. If you are frequently asked to try again, select **More Sensitive**.

- **Automatic:** the voice command system will control the sensitivity automatically.

### **Adaptation**

Adaptation is the process of optimizing the voice recognition software to your voice. Adaptation requires recording your voice, which is then used to customize the voice recognition system.

**Note:** Adaptation will take a few minutes, and you should be in a quiet environment.

### **Prompts**

The Prompts setting allows you control the audio guidance mode and audio playback. Use the **Mode** setting to control how you are notified by the voice command system. Use the **Audio Playback** setting to control if audio is played out from the speakerphone or earpiece.

### **About**

Check the information about Voice Command system.

## **Calulator**

Your mobile phone has a built-in calculator capable of performing simple mathematical calculations. To access the calculator from the standby mode, select **Menu**→**Settings & Tools**→**Tools**→**Calculator**.

1. Enter a number with the keypad.
2. If necessary, press the right soft key to insert operators.
3. Use the directional keys to select a mathematical function (add, subtract, multiply

or divide).

4. Enter the next number with the keypad.
5. Press the **OK key** to view the result. Press the **Left Soft key** to clear the inputs or result.

**Note:** Press **\* key** to insert a decimal. Press **# key** to insert  $\pm$ .

### Ez Tip Calculator

The Ez tip calculator function allows you to quickly and easily calculate the tip amount based on the tip rate and bill. You can access the tip calculator from the standby mode by selecting **Menu**→**Settings & Tools**→**Tools**→**Ez Tip Calculator**. To calculate a tip:

1. Enter the Total bill, Tip and Split, and the corresponding calculation fields (tip and total for each person) appear.
2. Press the **Left Soft key** to reset the inputs and result.
3. Press the **Right Soft key** to close the tip calculator.

### Calendar

The Calendar allows you to conveniently access and modify your agenda. You can access the calendar from the standby mode by selecting **Menu**→**Settings & Tools**→**Tools**→**Calendar**.

#### To Add a New Calendar Event

1. Select **Menu**→**Settings & Tools**→**Tools**→**Calendar** from standby mode.
2. Use the directional keys to highlight a scheduled day.
3. Press the **Left Soft key** to add a new event.
4. Enter the subject, scroll down and press the **Left Soft key** to set other event settings.
5. Press the **OK key** to save the new event.

### **To View a Calendar Event**

1. Select **Menu**→**Settings & Tools**→**Tools**→**Calendar** from standby mode.
2. Use the directional keys to highlight a scheduled day.
3. Press the **OK key** to view the event of the highlighted day. Press the left and right keys to view the events before or after the highlighted day.
4. Press the **OK key** again to view the detailed information of the event.

### **Calendar Options**

Press the **Left Soft key** to access the calendar options.

1. **Weekly View/Monthly View:** Choose to display the calendar in weekly view or monthly view.
2. **Go To Date:** Select a date and press the **OK key** to jump to the specified date.
3. **Erase All:** Delete all events. Press the **OK key** to confirm the deletion.
4. **Erase All Old:** Delete all past events. Press the **OK key** to confirm the deletion.

5. **Search:** Enter the subject in the Go To field to search for the matched events.

### Alarm Clock

The alarm clock allows you to set up multiple separate alarms. To access the alarm clock function, select **Menu**→**Settings & Tools**→**Tools**→**Alarm Clock** from the standby mode.

#### To Add a new Alarm Clock

1. Select **Menu**→**Settings & Tools**→**Tools**→**Alarm Clock** from standby mode.
2. Press the **OK key** to add a new alarm or use the directional keys to highlight an alarm, and then press the **OK key**.
3. Use the directional keys to highlight the items, and then press the **Left Soft key** to set the alarm settings.
4. Press the **OK key** to save the alarm clock.

#### Alarm Clock Options

After highlighting an existing alarm, you can press the **Left Soft key** to view the alarm clock information, and press the **OK key** to edit the alarm clock.

Press the **Right Soft key**, and the following options are available:

1. **Off/On:** Turn off or turn on the alarm clock.
2. **Reset:** Delete the alarm clock.
3. **Reset All:** Delete all alarm clocks.



## Stop Watch

This feature allows you to use a stopwatch. To access the stop watch, select **Menu**→**Settings & Tools**→**Tools**→**Stop Watch** from standby mode.

1. Press the **OK key** to start the stopwatch.
2. Press the **Left Soft key** to save lap times. Up to 20 lap times can be saved.
3. Press the **OK key** to stop the stopwatch.
4. After you've stopped the stopwatch, press the **Right Soft key** to reset the records.

## World Clock

The world clock displays the time in different time zones around the world, together with one or more cities, states, regions or countries in each time zone. To access the World Clock, select **Menu**→**Settings & Tools**→**Tools**→**World Clock** from the standby mode.

1. Press the **Right Soft key** to enter a list of available cities.
2. Choose a city from the list, or search the desired city in the Go To field, and press the **OK key**.
3. The city will be set for the default city and time zone of the phone.

4. Press the left and right keys to display different time zones. Press the **Left Soft key** to enable or disable daylight savings time(DST).

### Notepad

This feature allows you to create, store and edit notes. To access the Notepad, select **Menu**→**Settings & Tools**→**Tools**→**Notepad** from the standby mode.

1. Press the **Left Soft key** to add a new note.
2. Enter the note using the keypad.
3. When the note is finished, press the **OK key** to save it.
4. After highlighting a note in the notepad list, you can press the **OK key** to view it, press **Options**→**Erase** to delete it, and press **Options**→**Erase All** to delete all notes.

### Bluetooth Menu

Please refer to **Chapter 13 - Bluetooth** for detailed information.

### Sounds Settings

Sounds Settings allow you to customize the sound properties of your phone.

### Easy Set-up

This option allows you to set the Sounds Settings easily. Follow the prompt information on the screen, press the **OK key** to set each sound

option or press the **Right Soft key** to skip setting the option. Press the **CLR key** to go to the previous options and change the settings.

## Call Sounds

This option allows you to set how the phone alerts you for the incoming calls.

1. **Call Ringtone:** Choose the ringtone in the list for the incoming calls, or press **Get New Ringtones** to download new ringtones from Media Center.
2. **Call Vibrate:** Turn on or off the vibration for the incoming calls.
3. **Caller ID Readout:** Set the call alert to Ring Only, Caller ID + Ring or Name Repeat.

## Alert Sounds

This option allows you to select the alert type for different notifications.

You can select the alert ringtone, set the vibration on or off, and set the reminder for **TXT Message**, **Multimedia Message**, **Voicemail** and **Missed Call**.

For **Emergency Tone**, you can set the following options:

- **Alert:** The phone will play the emergency tone except when the master volume setting is Vibrate or All Sounds Off.
- **Vibrate:** The phone will vibrate instead of playing the emergency tone.
- **Off:** The phone will disable the emergency tone and vibration.

### Keypad Volume

This option allows you to set the keypad volume.

Use the directional keys to adjust the volume, and then press the **OK key** to save the setting.

### Digital Dial Readout

This option allows you to turn on or off the digital dial readout function.

If the function is turned on, the phone will call out the numbers when you dial each digit.

### Service Alerts

This option allows you to set the service alerts. You can turn the alerts for the following options on or off:

**ERI:** The phone will sound an alert when you go into and out of the service coverage areas if this option is set on.

**Minute Beep:** The phone will alert you before the end of every minute during a call if this option is set on.

**Call Connect:** The phone will alert you when the call is connected if this option is set on.

**Software Update:** The phone will alert you when software update is completed if this option is set on.

## Power On/Off

This option allows you to set the sound on or off when the phone is powered on or off.

## Display Settings

Display Settings allows you to customize the menu style, wall paper, backlight, menu font, etc.

## Easy Set-up

This option allows you to set the Display Settings easily.

Follow the prompt information on the screen, press the **OK key** to set each display option or press the **Right Soft key** to skip setting the option. Press the **CLR key** to go to the previous options and change the settings.

## Banner

This option allows you to add your personalized greeting that displays in standby screen, or select to shown ERI banner in standby screen.

- **Personal Banner:** Enter the text and choose the text color for the personal banner displayed in standby screen.
- **ERI Banner:** Set to display the ERI banner in standby screen or not.

### Backlight

This option allows you to set the backlight duration for the display screen and keypad.

- **Display:** Set the backlight duration for the main screen as 7 seconds, 15 seconds, 30 seconds, Always On or Power Save Mode.
- **Keypad:** Set the back light duration for the keypad as 7 seconds, 15 seconds, 30 seconds, Always On or Always Off.

### Wallpaper

This option allows you to choose the background image displayed in standby screen.

1. Enter the wallpaper list.
2. Highlight the desired image and you can press the **Left Soft key** to view it.
3. Press the **OK key** to set it as wallpaper.
4. You can also press the **Right Soft key** and select **Get New Applications** to download more images from Media Center.

### Display Themes

This option allows you to choose different themes for the phone's menus.

1. Enter the display theme list.
2. Press the **Left Soft Key** to preview the highlighted display theme. Press the left and right directional keys to preview the themes.
3. Press the **Left Soft Key** to back to the theme list.

4. Choose one theme, and press the **OK key** to save the setting.

## Main Menu Settings

This option allows you to set the main menu display.

### Menu Layout

Set menu layout to **Tab**, **List** or **Grid**. You can press the **Left Soft key** to preview the menu layout.

**Note:** When the menu layout is set to **Tab**, **Replace Menu Items** and **Position Menu Items** are not available.

### Replace Menu Items

1. Select the item you want to replace and press the **OK key [EDIT]**.
2. Then select the item in the list you want to replace it with, and then press the **OK key [SET]**.
3. Press the **Left Soft key** to complete the setting.

### Position Menu Items

1. Select the item you want to move and press the **OK key [MOVE]**.
2. Highlight the desired position by pressing the directional keys and press the **OK key [SWAP]**.
3. Press the **Left Soft key** to complete the setting.

### Reset Menu Settings

You can reset to the default main menu display by choosing from **Menu Layout**, **Menu Items**, **Item Positions** or **All**.

### Dial Fonts

This option allows you to set the dial font size. Select Normal, Large or Small and press the **OK key** to confirm.

### Menu Font Type

This option allows you to set the menu font type. Select the font type and press the **OK key** to confirm.

### Menu Font Size

This option allows you to set the menu font size. Select Normal or Large and press the **OK key** to confirm.

### Clock Format

This option allows you to choose the clock format displayed in the standby screen. Press the **Left Soft Key** to preview the clock format. Press the **OK key** to confirm the setting.



## Phone Settings

You can edit phone settings to customize how to use your phone.

### Airplane Mode

This option allows you to turn on or off the airplane mode.

When Airplane Mode is turned on, all wireless communications are disabled. You cannot use your phone to place or receive calls including emergency calls.

### Set Shortcuts

#### Set My Shortcuts

This option allows you to assign applications to **MY SHORTCUTS** menu.

- To personalize **MY SHORTCUTS** menu:
  1. Enter **Set My Shortcuts** menu.
  2. Select the shortcut you want to change, and press the **OK key** to enter the available applications list.
  3. Use the directional keys to select one application for replacement and press the **OK key** to confirm.
- To reset **MY SHORTCUTS** menu:
  1. Enter **Set My Shortcuts** menu.
  2. Highlight the shortcut you want to reset, press the **Right Soft key** and select **Reset Shortcut1/Shortcut2/Shortcut3/Shortcut4** to reset.

3. Press the **Right Soft key** and select **Reset My Shortcuts** to reset all the shortcuts to default.
  - To use **MY SHORTCUTS** menu:
    1. Press the right directional key in standby mode to open **MY SHORTCUTS** menu.
    2. Highlight the desired shortcut and press the **OK key** to access the application quickly.
    3. Press the **Right Soft key** and use the directional keys to move the shortcuts. Press the **Left Soft key** to enter **Set My Shortcuts** menu.

### Set Directional Keys

Allows you to set shortcuts to phone menus using the down, up, left and right Directional Key.

### Voice Commands Settings

**Confirm Choices:** Automatic/Always Confirm/Never Confirm

**Sensitivity:** Control the sensitivity as More Sensitive/ Automatic/Less Sensitive

**Adapt Voice:** If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns.

**Prompts:** Mode/ Audio Playback/Timeout

- For Mode: set Prompts/Readout +Alerts/Readout/Tones Only.

- For Audio Playback: set Speakerphone or Earpiece.

- For Timeout: set 5 seconds or 10 seconds.

**CLR Key Activation:** If set to On, this setting allows you to activate the Voice Commands feature with the Clear key from Main Screen.

## Language

Allows you to use the bilingual (English or Spanish) feature according to your preference.

## Location

Allows you to set the GPS (Global Positioning System: Satellite assisted location information system) mode (**Location On/ E911 Only**).

## Current Country

The Current Country menu allows you to select your current location.

**Note:** To assure that your phone works properly while you travel, please verify the country of your current location, so the correct Country Code can be applied.

## Security

The Security menu allows you to secure the phone electronically.

### Edit Codes

Allows you to enter a new four digit lock code.

### Restrictions

Allows you to set separate restrictions for Location Setting, Calls and Messages.

### Phone Lock

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit Codes submenu within the Security menu.

### **Lock Phone Now**

Allows you to lock the phone now.

### **Reset Default**

Allows you to reset your phone to the factory default settings.

### **Restore Phone**

Allows you to erase all user data and Contact information you've entered in the phone's memory so it's as if it just left the factory.

## **System Select**

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

## **NAM Select**

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

## **Auto Key Lock**

Allows you to turn on or off the auto key lock function. When the phone is close, this feature will lock the keys automatically when the backlight goes off.

## **Call Settings**

The Call Settings Menu allows you to designate how the phone handles both incoming and outgoing calls.

## Answer Options

Allows you to determine how the phone will answer an incoming call.

**Note: Auto with Handsfree** is available when any external device is connected to your phone or speaker is set to on.

## Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

## TTY Mode

Your handset is a TTY compatible device. Simply connect the TTY equipment to the USB jack with the ZTE TTY-to-USB connector. To access the phone's TTY settings, select **Menu**→**Settings & Tools**→**Call Settings**→**TTY Mode**. Use **Up** and **Down keys** to choose among the following settings:

6. **TTY Full:** Users who cannot talk or hear may use this setting to send and receive text messages through TTY equipment.
7. **TTY+Talk:** Users who can talk, but cannot hear, may use this setting to speak through the phone and receive responses via text messages.
8. **TTY+Hear:** Users who can hear, but cannot speak, may use this setting to listen to conversation of the other party, and respond via text messages.
9. **TTY Off:** Users who can hear and speak may use this setting to disable TTY

support.

### **Connecting to TTY Equipment**

10. Connect the cable from the TTY device into the ZTE TTY-to-USB connector.
11. Plug the USB connector into the jack on the side of the phone.
12. Enter the TTY Mode menu and select the desired TTY Mode (shown above).
13. After setting the TTY mode, check the LCD screen on the phone for the TTY icon.
14. Connect the TTY equipment to the power source and turn it on.
15. Make a phone connection to the desired number.
16. When a connection is made, use the TTY equipment to send a text message, or speak (for TTY+Talk mode).
17. The voice or text message from the other party will be heard or displayed on the TTY equipment, depending on the TTY mode selected.

### **One Touch Dial**

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

### **Voice Privacy**

Allows you to set additional voice privacy for CDMA calls. By default, CDMA already offers inherent voice privacy. Check with your service provider for availability.

## **DTMF Tones**

Allows you to set the DTMF tone length.

## **Assisted Dialing**

Allows easy dialing of international calls while roaming in another country. If Set to On, Assisted Dialing is displayed in calling screen.

## **HAC Mode**

This phone supports HAC (Hearing Aid Compatibility) function. You can turn on and off the function by this menu. When you turn on the HAC mode and use a hearing aid with a Telecoil to answer the phone, it will help you hear more clearly while speaking on the phone.

For more detailed information of HAC, please refer to the section For Your Safety – Turn on the HAC Setting.

## **Phone Memory**

Allows you to check your internal phone memory. Select the menu to show the memory information in your phone.

## **Phone Info**

Allows you to view the information specific to your phone and software including **My Number**, **SW/HW Version**, **Icon Glossary** and **Software Update**.

### **Set-up Wizard**

This Wizard will guide you through the most commonly used personalization options. You can set your phone up quickly and easily.



## 15. Glossary

<b>Abbreviation</b>	<b>Description</b>
A2DP	Advanced Audio Distribution Profile
AC	Alternating Current
AVRCP	Audio/Video Remote Control Profile
CDMA	Code Division Multiple Access
DST	Daylight Saving Time
HAC	Hearing Aid Compatibility
HFP	Hands-free Profile
HSP	Headset Profile
GPS	Global Positioning System
NAM	Number Assignment Module
OPP	Object Push Profile
PC	Personal Computer
RF	Radio Frequency
SD	Secure Digital

Abbreviation	Description
SID	System Identifier
SMS	Short Messaging Service
TTY	Teletype
USB	Universal Serial Bus
VIP	Very Important Person

## 16. Troubleshooting

### **Fail to power on the phone**

Check whether the battery has adequate capacity to power on.

### **The phone has powered off automatically**

The battery capacity is quite low, please charge the battery.

### **No key tone when pressing the keys**

Check whether the keypad tone has been disabled. You can set key tone settings via **Menu→Settings & Tools→Sounds Settings→Keypad Volume**.

### **No incoming ringtone when receiving a call**

Check whether the phone is set to Silent Mode or the phone volume is turned off by the Volume key.

### **Can not send a message**

Check the status of the network.

### **Can not answer an incoming call by the headset automatically**

Check whether Auto Answer function is on in the call setup settings, via **Menu→Settings & Tools→Call Settings→Answer Options**.

### **To dial an emergency call**

You can still dial an emergency call, even if the keypad is locked. Please enter the call number directly and press the **Send Key**.

### **Can not connect to the network**

Check whether the phone is in the CDMA network service area or move other places to try again.

### **Can not receive a new message**

Check whether the network condition is OK, and then check whether the Inbox is full. If you turn off the **Auto Delete Inbox** function, you may not receive new messages when the inbox is in full status. You should delete some messages and change the settings.

### **Can not establish Three-Way Call**

Check the network condition and whether you have applied this service from your network provider.

**17.**

Activate Your Phone.....	34
Aircraft Safety.....	12
Airplane Mode On/Off.....	82
Alarm Clock	
Alarm Options .....	59
Edit an Alarm .....	58
All Calls .....	49
Answer Voice Calls .....	37
Basic Operations.....	35
Battery	
Charge the Battery .....	30
Install the Battery .....	29
Remove the Battery .....	32
Bluetooth	
Bluetooth Device.....	77
Bluetooth Manager.....	76
Pair with a New Bluetooth Device	
.....	77
F350 Technical Specifications .....	23
Calculator.....	68

**Index**

Calendar	
Add an Appointment.....	69
Calendar Options .....	70
View an Appointment .....	69
Call Timers.....	50
Call Waiting.....	40
Calls.....	35, 49
Camera .....	60, 62
Connect to the Network.....	34
Contact List.....	46
Contacts.....	45
Display Settings .....	75
Drafts .....	54
Efficient Use.....	16
Email.....	47
Emergency Services .....	17
Entering Text.....	41
FCC Notice .....	18
For Your Safety.....	10, 22
Games .....	67

## F350 User Manual

---

General Care .....	10	MyImages .....	64
General Guidelines .....	13	MyTunes.....	62
Glossary .....	83	New Contact .....	46, 47
GPS.....	78	Outbox.....	54
Groups.....	46, 48	Outgoing Calls .....	50
Hospital Safety.....	13	Overview .....	22
Images.....	65	Play Your Tunes .....	63
Inbox.....	53	Power On/Off Your Phone .....	33
In-Call Features .....	38	Quick Text Settings.....	57
Incoming Calls .....	50	Radio Frequency (RF) Energy .....	16
Introduction.....	22	Read a Message.....	53
Key Definitions.....	25	Reply to a Message .....	54
Key Functions.....	41	Road Safety.....	14
Keyguard Mode .....	33	Saved .....	55
Language .....	75	Send New .....	51
Manage Your Images.....	64	Sent.....	55
Manage Your Tunes .....	63	Set up Your Phone .....	29
Media.....	62	Sound Settings	
Memory Info.....	57, 66, 70, 79	Alerts.....	74
Message Settings .....	56	Keypad Tone .....	73
Messaging .....	51	Power On/Off Tone.....	74
Missed Calls .....	49	Ringers.....	72

Systems Switch Tone.....	74	Troubleshooting .....	85
Volume.....	38, 73	Tunes.....	65
Speed Dials.....	48	Turn on the HAC Setting .....	21
System		Use Speed Dials to make calls .....	37
Automatic Keyguard.....	78	Use the Call History to make calls ..	36
Call Setup .....	78	Use the Contacts List to make calls	35
HAC Mode .....	82	Use the Keypad to make calls .....	35
Memory Info .....	79	Use the Last Number Dialed to make	
Phone Info .....	79	calls .....	36
Security.....	81	Use Your Phone with a Hearing Aid	
System Settings .....	79	Device.....	20
TTY Mode .....	79	User Interface.....	27
Take Pictures .....	60	Vehicles Equipped with an Airbag ..	15
Text Input Modes.....	42	View Your Image.....	64
Third Party Equipment.....	15	View Your Photos.....	61
Three-Way Call .....	39	Voice Mail .....	55
Tip Calc.....	70	What's Included.....	23
Tools .....	68	World Clock.....	71

### **Consumer Limited Warranty**

ZTE ("Seller") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from a supplier authorized by the Seller. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States.

Seller will, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by Seller to be defective in material or workmanship, or if Seller determines that it is unable to repair or replace such Product, Seller will refund the purchase price for such Product, provided that the subject Product (i) is returned to a Seller authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period. After the one year warranty period, you must pay all shipping, parts and labor charges. In the event that the product is deemed unrepairable or has been removed from the list of products supported by the Seller, you will only be liable for shipping and labor charges.



This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by Seller), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire or liquid; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of Seller and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than Seller or a Seller authorized service center.

USE ONLY SELLER APPROVED ACCESSORIES WITH SELLER PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

SELLER SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED,

INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". SELLER MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number: or return to the point of sale for the products.