

ZTE-C R200

CDMA 2000 Digital Mobile Phone

User Manual

ZTE CORPORATION
NO. 55, Hi-tech Road South, ShenZhen, P.R.China
Postcode: 518057
Tel: (86) 755 26779999
URL: <http://www.zte.com.cn>
E-mail: mobile@zte.com.cn

LEGAL INFORMATION

Copyright © 2010 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time :

Manual No. :

Contents

Getting started.....	1
Phone overview.....	1
Keys and parts.....	1
Indicators and icons.....	3
Starting up.....	4
Inserting UIM card.....	4
Removing UIM card.....	4
Installing battery.....	5
Removing battery.....	5
Inserting memory card.....	5
Removing memory card.....	6
Connecting accessories.....	6
Power on/off.....	7
Charging.....	7
Keypad lock.....	8
Basic operation.....	8
Menu.....	8
Navigating your phone.....	9
Getting help.....	10
Text input.....	11
Text mode.....	11
Multitap mode.....	11
Numbers mode.....	11
eHiText mode.....	11
Symbols mode.....	12
Calls.....	13
Voice calls.....	13
Making a call.....	13
Making a call from Contacts.....	13
Making a call from call history.....	13
Making a one-key-call.....	13
Setting one-key-call.....	13
Receiving calls.....	13
Setting ring for coming call.....	14
Call options.....	14
Call history.....	14
Viewing recent call history.....	14
Deleting call history.....	14
Call time.....	15
Messages.....	16
Setting message.....	16

Editing template	16
Editing SMS on Call Reject	16
Text messages	16
Sending a new SMS	16
Receiving SMS	17
Replying SMS	17
Calling back	17
Use number	17
Deleting SMS	17
Message management	18
Message boxes	18
Contacts.....	19
Adding a contact	19
Editing contact	19
Deleting contact	19
Finding contact.....	19
Adding a group.....	19
Editing group.....	20
Deleting group.....	20
Others about contacts	20
Viewing memory info	20
Photos and videos.....	22
Camera	22
Setting Camera mode	22
Taking a photo	22
Viewing photos	22
Video.....	22
Setting video mode.....	22
Recording a video	23
Playing a video.....	23
Recorder	23
Recording	23
Playing a sound file.....	23
Internet	24
Surfing Internet	24
Options for browser	24
Entertainment.....	25
Pictures.....	25
Viewing pictures	25
Music.....	25
Setting music mode.....	25
Managing playlist.....	25
Playing a music	26
Video.....	26
Playing videos	26
Radio	26
Starting Radio	27
Channels.....	27









Other Radio options	27
Games.....	27
Tools	28
Alarm	28
Scheduler.....	28
U-Disk.....	28
Calculator.....	28
World time	29
Personalize your phone	30
Display Settings	30
Phone Settings.....	30
Call settings.....	30
Starting call forwarding	30
Starting call waiting	30
Starting fire proof.....	31
Other call settings	31
Profiles	31
Selecting current profile.....	31
Editing a profile	31
Connect settings	32
Phone Security	33
Phone password.....	33
PIN code.....	33
Restoring factory settings.....	33
Delete All Contacts	34
File manager.....	35
Viewing a file.....	35
Deleting a file.....	35
Managing file	35
Space management.....	35
General information	36
Security	36
Safety Warnings.....	36
Limit Warranty.....	38
Limitation of Liability.....	38
Troubleshooting	40
Specifications	41



Getting started

Phone overview



















Keys and parts










Serial Number	Key	Description
1		Earpiece
2		LCD screen
3		<p>Navigation Keys (Up/Down/Left/Right Key)</p> <ul style="list-style-type: none"> • In standby mode: Used as hot keys to enter the designated functions. Press Up Key to enter Messages menu. Press Down Key to view recent All Calls list. Press Left Key to enter Settings. Press Right Key to enter UTK. • To designate the functions accessed by the navigation keys. • In lists, messages and menus: scroll up, down, left and right.
4		<p>Left Soft Key</p> <ul style="list-style-type: none"> • The current function of the key is shown in the bottom line of the display. • Press to enter main menu in standby mode.
5		Camera Key - Press to make a shot.
6		<p>Call Key</p> <ul style="list-style-type: none"> • Press to send or answer calls. • In standby mode: Press to show all outgoing calls.
7		<p>Number Keys</p> <ul style="list-style-type: none"> • Press to enter numbers. • Press and hold the number key to start speed dial.
8		Microphone
9		<p>* Key</p> <ul style="list-style-type: none"> • Press to enter "*". • In an editing screen: Press to input punctuation and symbols. • Hold to lock the keypad in standby mode.
10		<p>OK Key</p> <ul style="list-style-type: none"> • In standby mode: Press to open MobileShop. • In list and menu: Start an application/function.
11		<p>Right Soft Key</p> <ul style="list-style-type: none"> • The current function of the key is shown in the bottom line of the display. • In standby mode: Press to enter Contacts.
12		<p>Clear/Music Key</p> <ul style="list-style-type: none"> • In an editing screen: Press to erase character. • In standby mode: Press to open the Music Player.

13		<p>End Key</p> <ul style="list-style-type: none"> • Press and hold to turn the phone on/off. • Press to end a call. • Press to reject an incoming call. • Press to cancel dialing. • Press to return to standby mode.
14		<p># Key</p> <ul style="list-style-type: none"> • Press to enter "#". • In an editing screen: Press to change the input method. • In standby mode: Press and hold to activate/deactivate vibration mode.
15		Camera
16		Speaker
17		Handset charm slot
18		Charger/USB connection jack/Headset port
19		Volume keys
20		Camera

Indicators and icons

	CDMA 2000 1X Signal		CDMA 2000 1X Service
	EVDO Signal		EVDO
	SMS		Roam
	MMS & SMS		Alarm
	MMS		Call Connect
	Ringer On		Bluetooth
	Vibrate On		Bluetooth Headset
	Silent mode		Earphone
	Airplane mode		Battery indicator

	External Memory		Web Security
	Schedule		Web Message
	Voice Mail		Voice Privacy
	Voice+Web Message		



Note:

The indicators or icons on the information bar may appear according to network situation or need support by the service provider.

Starting up

Inserting UIM card

 
You can obtain an UIM card from your service provider when you sign on as a subscriber.



Caution:

- Do not bend or scratch your UIM card. Keep the card away from electricity and magnetism.
- Don't touch the metal surface of the UIM card in case that information in the card may be lost or destroyed.
- Make sure to disconnect the charger and other accessories from your phone and remove the battery before inserting and removing your UIM card.

1. Press and hold the **End Key** to power off the phone.
2. Slide down the battery cover and remove the battery.
3. Insert the UIM card into the card holder, with the metal contacts facing downward and the cut corner in right direction. Make sure it is pushed all the way to the end as shown below.

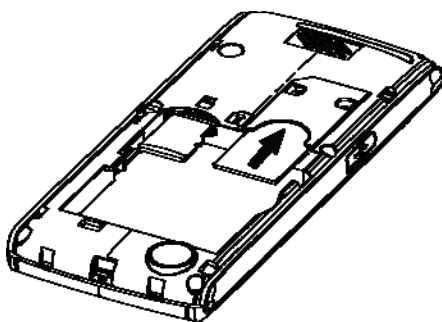

4. Push the battery until it clicks into position.
5. Place the battery cover onto the back of your phone.



Notes:

- ▶ The charger and other accessories should be disconnected from your phone before you insert or remove the UIM card.

Removing UIM card

1. Press and hold the **End Key** to power off the phone.

2. Remove the cover.
3. Remove the battery. See **Removing battery**.
4. Remove UIM card gently from the card holder.

 
Installing battery



Notes:

- The phone automatically switches off if the battery voltage is too low.
- When not using the battery for a long period, remove it from the phone and store it in a cool dry place.

1. Press and hold **End Key** to turn off the phone.
2. Remove the cover.

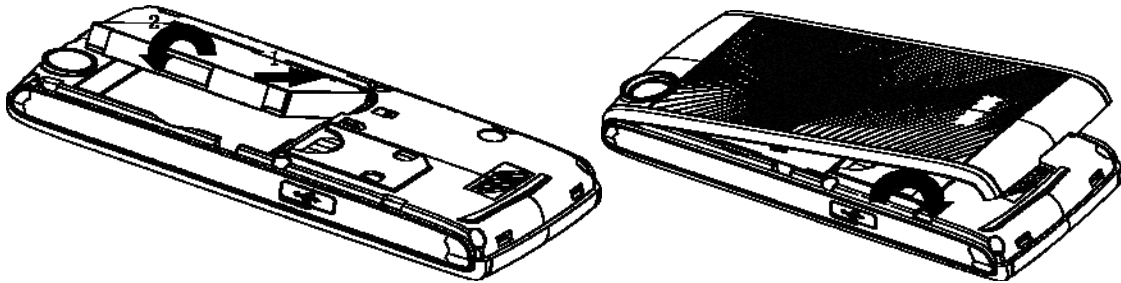

3. Insert the battery carefully with the contacts located against the gold springs.
4. Push down the battery until it clicks into place.
5. Place the battery cover onto the back of your phone.

 


Caution:

Do NOT force the cover down by pressing on it. This will damage the cover.

Removing battery

1. Power off your phone.
2. Remove the cover.
3. Lift the battery away from the phone.

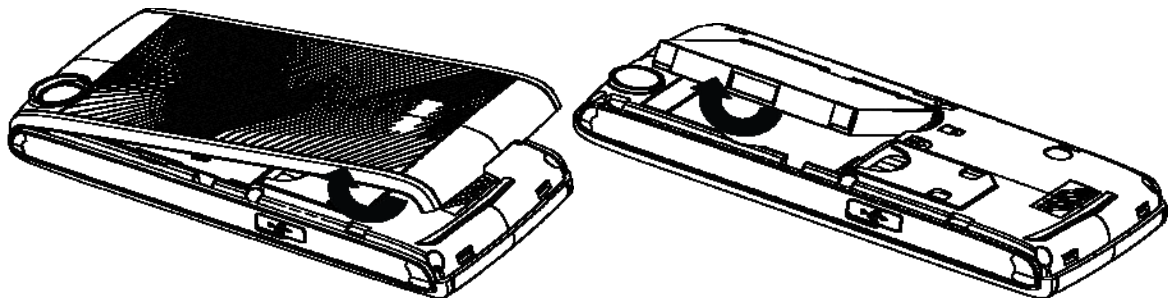

Inserting memory card

The external memory card gives your phone a very large memory capacity. This allows you to save multimedia data, including images, photos, MP3 audio files, and ring tones. You can also use this memory

 
card to store any other files.



Tips:

Your phone can support a memory card with capacity up to 16GB.

1. Open the memory card slot rubber.
2. Firmly insert the memory card into the slot until it clicks into place.
3. Close the memory card slot rubber.

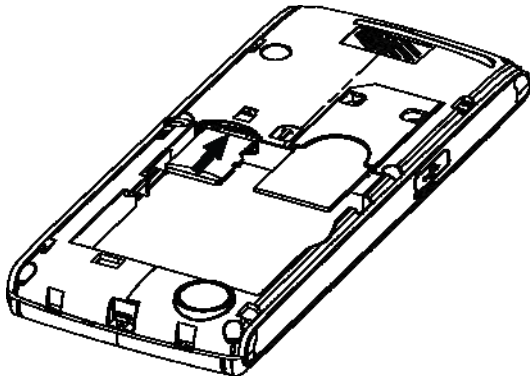

Caution:

Only use ZTE approved memory cards for this device. Any use of unapproved memory cards may cause loss of data or damage to your phone.

Removing memory card

1. Open the memory card slot rubber.
2. Push the memory card to release it from the slot.
3. Pull the memory card completely out of the memory slot on the phone.
4. Close the memory card slot rubber.



Tips:

- Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or phone. If possible, insert and remove the memory card while the phone is powered off.
- You'd better use your phone to format your memory card. If you want to format it on your PC, please select FAT Formatting type. Otherwise it might cause the memory card not identified by your phone.

Connecting accessories

You can connect your headset to your phone to answer the call and listen to the music. You can also strap handset charm on your phone.

Connect the headset to your phone

Insert the headset to the **Headset port**.

Connect the data cable to your phone

Plug the smaller end of the cable into the **USB connection jack** at one side of the phone, and the bigger

end into the USB port of the computer.

Strap handset charm on your phone

Thread a strap and tighten it.

Power on/off



Notes:

Do not power on your phone if wireless phone use is unapproved, or when it may cause interference or danger.

1. Press and hold **End Key** to turn the phone on.



Tips:

 
- ▶ When being asked, enter your PIN (Personal Identification Number) code or phone code.
- ▶ The PIN code is the password provided by your network service provider. You need this password to use the UIM card.
- ▶ When the entered PIN code or phone code is accepted, the phone will automatically search for the designated network. After a few seconds, your phone will show the standby mode.

2. To power off the phone, press and hold the **End Key** from the standby mode.

Charging

Your phone is powered by a rechargeable battery. The battery is not fully charged when first unpacked, but there may be enough power to power your phone on. You should use it up completely before charging the battery for the first time. Charge the battery with the procedure indicated below.

1. Open the USB port cover.
2. Insert the charger's USB adapter into the USB port.
3. Connect the charger to a standard AC wall outlet.

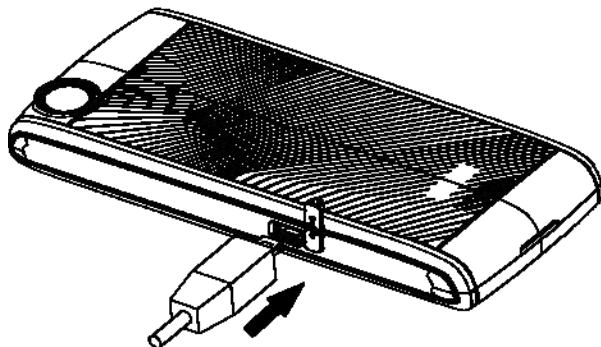

4. Remove the charger from both the wall outlet and the phone once the charging completed.



Notes:

- Make sure that the adapter is inserted into the correct position. Do not force the connector into the port.
- The battery will be fully charged for 3~4 hours.
- Use the charger provided by the original provider. Using unapproved charger may cause danger and violate the authorization and warranty rules of the phone.
- If the phone is over-used in shortage of battery or not used for a long time, the screen may not display the charge indicator until it is continues charged for 10 to 40 minutes.
- For maximum battery performance, it is recommended that you completely charge the battery before using the phone for the first time. A new battery's full performance is achieved only after three complete charge and discharge cycles.
- Once the charging is complete, remove the charger from both the power outlet and the phone.
- To charge the battery, you can use the provided charger or the USB data cable.
- Charging is only possible within a temperature range of -5°C to +45°C.

Keypad lock

Use the keypad lock to prevent the keys from being accidentally pressed.

In standby mode, hold * **Key** to lock the keypad.

Also you can select **Left Soft key [Menu] > Settings > Others > Keypad Lock Set** and set the keypad locking automatically. Or cancel the keypad locking automatically.

If you want to unlock the keypad, press **Right Soft Key [Unlock]** firstly and then press * **Key** to unlock.



Tips:

- When the keypad is locked, **Unlock** is shown in the bottom right hand of the screen.
- If the call is coming when the keypad is locked, you can press **Call Key** to answer. After ending or rejecting the call, the keypad will be locked automatically.
- When the keypad lock is on, calls may be possible to the official emergency number programmed into your device.

Basic operation

Menu

In standby mode, press **Left soft key [Menu]** to enter main menu.

Tools

The **Tools** includes **Calculator, Alarm Clock, Scheduler, U-DISK, World Clock** and so on.

Messages

SMS (Short Messaging Service) allows you to send text messages and manage the messages that you sent and received.

You can also send and receive MMS (Multimedia Message Service) messages. MMS enables you to send messages with images, sounds and texts. Consult your service provider whether this service is available. You may need to register separately for this service.

Call History (Call Log)

You can check the phone numbers of missed, received, and dialed voice calls.

Web (UTK)

You can get the latest information from the Internet through your phone.

Internet access may require registration with the service provider.

The browser is activated with the preset option as soon as you call up the function. Browser settings may be specified/pre-assigned by the service provider.

Surfing (TATA ZONE)

This function allows you to browse, purchase and download applications online. You can consult your service provider for more information about this function.

Contacts

You can store contacts with a variety of phone and fax numbers as well as additional address details.

The phone can store up to 500 entries. The capacity of a phone book on your UIM card depends on the type of UIM card provided by your network operator.

Settings

You can set or personalize your phone.

Multimedia (Music & Media)

You can take photos or videos through camera, record audios, and so on.

Games

You can play games.

Navigating your phone

The phone features, various functions and settings organized in menus and submenus. To select a function from menus:

1. In standby mode, press **Left soft key [Menu]** to open main menu.
2. Use **Navigation keys** to scroll up, down, right or left to select menu.
For example, scroll to **Settings**.
3. Press **OK key** to enter the menu.
4. Press **Up key** or **Down key** to scroll to a submenu, for example **Display/Keypad**.
5. Press **OK key [Select]** to confirm selection.
6. Press **Up key** or **Down key** to scroll to the desired option, for example, **Backlight Time**.
7. Press **Left key** or **Right key** to scroll to the desired option, for example, **30 seconds**.

8. Press **OK key [Save]** to confirm selection.



Tips:

- If a number is shown before an option in menu list, you can access the option quickly by pressing the corresponding number key.
- In this user manual, the steps needed to reach a menu are shown in a condensed form, for example: **Settings > Display/Keypad > Backlight Time > 30 seconds.**

Getting help

When you use your phone, you can obtain the help information from the following options.

Obtain the help from the user manual

Please read the user manual for keys and parts information and instructions for setting up the device for use.

Obtain the help from ZTE web site

If you want to obtain more help information, please visit <http://www.zte.com.cn/main/mobile>.

Text input

Text mode

Your phone offers text input modes: Multitap mode (**abc/ABC**), Numbers mode (**123**), eHiText mode (**En**). Text mode includes capital letter and lowercase mode.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.

You can key in letters, digits, characters and symbols when writing text or editing contact record information, following the common instruction in hereinafter table.

Operation	Method
Input Letters	Multitap mode —“ abc/ABC ”, press corresponding letter key till the letter appears.
Input Words	eHiText mode — “ En ”, press any key once to key in any word.
Input Digits	Numbers mode — “ 123 ”, press digit key once. Or press Call key to switch between current mode and numbers mode.
Input Symbols	Symbols mode — Press * key to enter the symbols mode and press corresponding digit key. Or press 1 key till the symbol (common symbols) appears except for numbers mode.
Input Space	Press 0 key , except for being in numbers mode.
Erase Character	Press Clear key .
Move cursor	Press Navigation keys .
Change input mode	Press # key to select another text mode.

Multitap mode

1. Press a number key (**2 ~ 9**) repeatedly until the desired character appears on the screen. Press once to input the first letter on the keypad, press twice quickly to input the second letter, and so on.
2. Press **0 key** to add a space.

Numbers mode

When the input method icon is shown as "**123**", input numbers directly with number keys.



Tips:

While using numbers mode, you need to switch to other text input mode in order to insert a space by pressing **0 key**.

eHiText mode

The eHiText mode is based on a built-in dictionary and generates words from the combination of letters pressed.

1. Press each key associated with the letter you want to enter only once. The letters you have entered appear on the display. The candidate words change with each key you press.
2. When the candidate word is displayed, press **Up key** or **Down key** to highlight the desired candidate words and press **OK key [OK]** to confirm.

3. Press number key **0** to insert space.
4. Press **Clear key** to delete the letter left of the cursor. Press and hold **Clear key** to delete all entered text.

Symbols mode

1. Press *** key**.
2. Use **Navigation keys** to select corresponding symbol.



Notes:

Press **1 key** to input till the symbol appears except for numbers mode. Most common punctuation marks and special characters are available.

Calls

Voice calls

You can call the numbers of the other party directly or you can make a voice call through contacts, calls log, speed dial numbers.

Making a call

1. If required press and hold **0 key** for the international prefix “+”.
2. Enter the number, and press **Call key** to make a call.
3. When the call is connected, you can press **OK key** for **handfree** mode.
4. Press **End key** to end the call.

Making a call from Contacts

1. In standby mode, Select **Left soft key [Menu] > Contacts > List Entries**.
Or press **Right soft key [Contacts]** directly in standby mode.
2. Press **Navigation keys** to select a contact.
3. Press **Call key** to make a voice call.
4. Press **End key** to end the call.

Making a call from call history

1. Press **Call key** in standby mode to display outgoing calls.
2. Press **Up key** or **Down key** to select a number.
3. Press **Call key** for a voice call.
4. Press **End key** to end the call.

Making a one-key-call

In standby mode, press and hold the corresponding number key (**1 ~ 9**) in the speed dial list to make the call.

Press **End key** to end the call.

Setting one-key-call

1. In standby mode, Select **Left soft key [Menu] > Contacts > Speed Dials**.
2. Press **Up key** or **Down key** to select a **Empty** slot, and select **List > All Entries**.
3. Press **Navigation keys** to select a contact in the phone and press **OK key [Select]**.
4. Press **Up key** or **Down key** to select a number, and press **Left soft key** to view the speed dial information.

Receiving calls

When a voice call is coming, your phone will ring or vibrate (Please see **Personalize your phone > Sound**).

1. Press **Call key** to answer the call, or press **End key** to reject the call.



Tips:

You can press the button on the headset to answer the call when you connect the headset to your phone.

2. Press **End key** to end the call.

Setting ring for coming call

1. In standby mode, press **Left soft key [Menu]** and select **Sound >Ringers >Voice Calls**.
2. Press **Up key** or **Down key** to select the profile.
3. Select **Right soft key [Edit]** to edit the selected profile.
4. Select ring tone or audio and press **OK key [Select]** to save the setting.

Call options

1. Before you answer the call:
 - ▶ Press **Right soft key [Mute]** to block the current ring tone of the call.
2. After you answer the call:
 - ▶ Press **Right soft key [Mute]** to block your voice.
 - ▶ Press **OK key** to activate **handfree** mode.
 - ▶ Press **Volume keys** or **Up/Down key** to adjust the volume of earpiece.
 - ▶ Press the **Left soft key [Options]** during a voice call for more options.
 - **Call The Third Party**: Call the third party to enjoy triple-party conversation.
 - **Messages**: Switch to Messages interface during a call.
 - **Contacts**: Switch to phonebook interface during a call.
 - **DTMF Off/On**: Activate/deactivate DTMF.

Call history

In standby mode, select **Left soft key [Menu] > Call History** to check the calls log and calls duration.

Viewing recent call history

1. Select **All Calls** to view all calls' log.
2. Select **Missed Calls** to view the missed calls' log.
3. Select **Incoming Calls** to view the incoming calls' log.
4. Select **Outgoing Calls** to view the dialed calls' log.

Deleting call history

1. Press **Up key** or **Down key** to select the type of calls log.
2. Press **Up key** or **Down key** to select the call log you want to delete.
3. Select **Options > Delete/Delete All** to delete.
4. Press **Left soft key [Yes]** to confirm to delete.

Call time

You can check the call duration.

1. Select **Call History > Call Duration**.
2. Press **OK key** to check the call duration.
 - ▶ **Last Call**: Indicate the talk time of the last call.
 - ▶ **Outgoing Calls**: Indicate the talk time of all dialed calls.
 - ▶ **Incoming Calls**: Indicate the talk time of all incoming calls.
 - ▶ **All Calls**: Indicate the talk time of all dialed and received calls.
3. Press **Right soft key** to reset the time.

Messages

Setting message

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Messages > Settings > Messages**, and press **OK key [Select]**.
3. Press **Up key** or **Down key** to select options:
 - ▶ **Default store position:** Set the save position of messages: Phone, or UIM card.
 - ▶ **Save to Sent Box:** Save automatically the sent message.
 - ▶ **Auto Delete Inbox:** Set erasing the read message in Inbox automatically when Inbox is full.
 - ▶ **Message Priority:** The priority of sending message.
 - ▶ **Delivery Report:** Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether you have sent message successfully.
 - ▶ **Callback:** Set callback number.
 - ▶ **Signature:** Input character to write your signature.
4. Press **OK key** to save.

Editing template



Notes:

The predefined template in your phone will be replaced after you modify the template.

1. Select **Messages > Settings > Quick Text**.
2. Press **Up key** or **Down key** to select desired template.
3. Press **OK key [Edit]** to edit the selected template.
4. Press **OK key [OK]** to save.

Editing SMS on Call Reject

1. Select **Messages > Settings > Edit SMS on Call Reject**.
2. Press **OK key** and edit desired template for rejecting message.

Text messages

SMS (Short Messaging Service) allows you to send text messages and manage the messages that you sent and received.

Sending a new SMS

1. Select **Left soft key [Menu] > Messages > New SMS**.
2. In the number field, enter the recipient(s) party's number or select **Left soft key [Options] > Contacts** to choose the recipient(s).
3. Press **Down key** to the text field.
4. Edit the message, press **Left soft key [Options]**:
 - ▶ Select **Save to Drafts** to save message in Drafts.
 - ▶ Select **Quick Text** to insert templates.

- ▶ Select **Signature** to insert signature.
 - ▶ Select **Network Symbol** to insert network symbol.
 - ▶ Select **Send Name** to insert contact's information.
5. Press **OK key [Send]** to send your message.

Receiving SMS

1. The envelope icon will appear on the information bar to indicate new incoming SMS. The message alert tone and vibrate activate depending on the current profile (Sound) setting.
2. For the old messages:
 - i. Select **Messages > Inbox**.
 - ii. Press **Up key** or **Down key** to select the desired SMS to view.
 - iii. Press **OK key** to view the message.

Replying SMS

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Select **Right soft key [Reply]** to reply to the selected message sender.
Or in the message list interface, select desired message:
 - i. Press **OK key** to view the message.
 - ii. Select **Right soft key [Reply]** to reply to the selected message sender.

Calling back

1. Select **Left soft key [Menu] > Messages > SMS and MMS > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Press **OK key** to view the message.
4. Select **Left Soft key [Options] > Use Callback > Voice Call** to call the message sender.
Or select **Left Soft key [Options] > Use Highlight Object > Voice Call** to call the message sender.

Use number

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Press **OK key** to view the message.
4. Select **Left Soft key [Options] > Use Callback > New Contact** to save the message sender.
Or select **Left Soft key [Options] > Use Highlight Object > New Contact** to save the message sender.

Deleting SMS

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.

3. Select **Left soft key [Options] > Delete/Delete all** to delete the selected message or all list messages.

Message management

In standby mode, select **Left soft key [Menu] > Messages** to enter message interface. It includes **New SMS, Inbox, Outbox, Drafts, Sent, Check Voice Mail, User Folder, UIM Card, Templates, Settings Memory Info,** and **Voice SMS.**

Message boxes

The **Inbox** folder contains all of your received messages. From this folder you can view your received messages, reply or forward messages to another recipient.

The **Outbox** folder contains all messages that were unsuccessfully sent during the last attempt. From this folder you can edit or resend your messages.

The **Drafts** folder contains drafts and unfinished messages. From this folder you can complete or resend your messages.

The **Sent** folder contains messages that were sent successfully. From this folder you can edit or forward messages to another recipient.

Select **Check Voice Mail** to view the list and listen to voice mail.

Select **User Folder** to create your own folder for download file.

Select **UIM Card** to check the messages saved in UIM card.

Select **Templates** to add new words and sentences for Quick Text of message.

Select **Quick Text** to view all templates words and sentences.

Select **Voice SMS** to send voice SMS.

You can check the amount of memory available for messages through **Memory Info** folder.



Notes:

- You can not receive new messages if memory for messages is full.
- Total amount of messages decided by the space of phone and UIM card.

Contacts

Adding a contact

You can store contacts with a variety of phone and fax numbers as well as additional address details.

The phone can store up to 1000 items. The capacity of a phone book in your UIM card depends on the type of UIM card provided by your service provider. The saved location can be identified by the icon before the contacts.

1. Select **Left soft key [Menu] > Contacts > New Entry > Save to Phone/UIM**.
2. Select save location.
3. Enter the information of contact, such as name, number, and so on.
4. Press **OK key [Save]** to save the new contact.

Editing contact

1. Select **Left soft key [Menu] > Contacts > List Entries**.
2. Press **Up key** or **Down key** to select the desired contact.
3. Press **OK key** to view and **Edit** the contact.
4. Press **OK key [Save]** to save.

Deleting contact

You can delete one contact or all contacts from your phone or UIM card.

1. Select **Left soft key [Menu] > Contacts > List Entries**.
2. Select the desired contact.
3. Select **Left soft key [Options] > Delete/ Delete All** to delete one contact or all contacts.

Finding contact

1. Select **Left soft key [Menu] > Contacts**.
2. Input the name or number you want to find in the text field.
3. Press **Up key** or **Down key** to scroll through the corresponding name(s) and record(s) in the list. Scroll to the name you want, and press **OK key** to view the details.



Notes:

All the Names will be list by the letter of the name.

Adding a group

Assign group for the contacts.

1. Select **Left soft key [Menu] > Contacts > Groups**.
2. **Select** the desired group.
3. Select **Left Soft Key [Options] > New Entry**.
4. Add the entry information.
5. Press **OK key [Save]** to save the settings.

Editing group

Set incoming ringtone and image for your contacts group.

1. Select **Left soft key [Menu] > Contacts > Groups**.
2. Select desired group from the default group list.
3. Select **Left Soft Key [Options]** to edit.

Deleting group

You can only edit the groups and can not delete them.

Others about contacts

1. Select **Left soft key [Menu] > Contacts > List Entries**.
2. Press **Left soft key [Options]** or **OK key** to enter the submenu list, and you can do following operations:

Options	Function
New Entry	Add a new contact.
View	View the contact information.
Edit	Edit the contact information.
Send SMS	Send SMS to the contact's default number.
Delete	Delete current selected contact.
Delete All	Delete all contacts.
Send Bus. Card	Send the information of this contact via SMS.
Send Voice SMS	Send voice mail to the contact's default number.
Make Fun Call	Send voice call to specific number to have a fun.
Make Music Call	Send voice call to specific number to enjoy music.
Groups	View contacts in groups.
Edit Before Dial	Edit number before dial the default number.
Set Speed Dial	Assign the number to speed dial.
Copy To Phone	Copy a contact in UIM card to the phone's memory.
Copy All to Phone	Copy all contacts of UIM card to the phone's memory.
Copy To UIM Card	Copy a contact of the phone's memory to UIM card.
Copy All To UIM Card	Copy all contacts of the phone's memory to UIM card.
Memory Info.	Check the amount of memory available for contacts.

Viewing memory info

You can check the total amount of contacts that has already been stored and the space which is available

in UIM card and phone.

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Contacts > List Entries > Options > Memory Info**, and press **OK key [Select]**. The capacity used and the total capacity of the phonebook in the phone and the UIM card will be showed.

Photos and videos

This phone provides following functions for you: camera, video camera, voice recorder and so on. You can take photos, shoot video clips, record a voice memo and so on.

Camera

There is an integrated digital camera in your phone, and this function enables you to take a still picture.

Setting Camera mode

1. Select **Left soft key [Menu] > Camera**.
2. In camera mode, select **Left soft key [Options]** for more options.
 - **Self Timer:** Set the self-timer.
 - **Image Size:** Select the size of your photo.
 - **Image Quality:** Set the quality standard of your photo.
 - **White Balance:** White balance effect of your photo.
 - **Shutter Sound:** Select the sound when the shutter is pressed.
 - **Save To:** You can select memory card or phone memory for photos to store.
 - **Video Camera:** Change to video recording mode.
 - **Change to Front Camera:** Take photo via front camera.

Taking a photo

1. Select **Left soft key [Menu] > Camera**.
2. Press **Left key** or **Right key** to set the video parameters.
3. Aim the camera lens at the place/object.
4. Press the **OK key [Capture]** or press the camera shot key on the phone to take a photo.
5. Press the **OK key [Save]** to save the photo just taken in Photo **Album**. The file will be in *.jpg format.
6. Press the **Right soft key [Discard]** to discard the photo just taken.

Viewing photos

1. Select **Left soft key [Menu] > Music & Media > My Albums**.
2. Select press **OK key** to view your desired album and photo. Press **Right soft key [Full Scr.]** to full-screen display.

Video

You can active **Camera >Options >Video Camera** to record a video clip.

Setting video mode

While in video mode, press the **Left soft key [Options]** for more options.

- **Self Timer:** Set the self-timer.
- **Image Quality:** Set the quality standard of video.
- **Image Size:** Set the recording time. The length of the video recording is restricted by the available

memory space.

- **White Balance:** White balance of video.
- **Shutter Sound:** Select the sound when the shutter is pressed.
- **Save To:** You can select memory card or phone memory for photos to store.
- **Audio Mute:** Mute the sound while recording.
- **Camera:** Switch to the camera mode.
- **Change to Front/Back Camera:** Take video via front/back camera.

Recording a video

1. Select **Left soft key [Menu] > Camera > Options > Video Camera**.
2. Press **Left key** or **Right key** to set the video parameters.
3. Press **OK key [Start]** to record.
4. Press **Right soft key [Stop]** to stop recording, press **OK key** to save the video.
 - ▶ The file will be in *.mp4 format.
 - ▶ Press **OK key [Play]** to play the video just taken.
 - ▶ Select **Videos** to view the video, select **Options** to edit the video.

Playing a video

1. Select **Left soft key [Menu] > Camera > Options > Video Camera > Videos**.
2. Select your desired video and press **OK key** to play.

Additional features when playing videos.

Key	Function
Left soft key	Play Mode, File Info, Full Screen
Volume keys	Volume up and down

Recorder

Recording

1. Select **Left soft key [Menu] > Music & Media > Recorder**.
2. Press **OK key [Record]** to start recording your voice memo.
3. Press **OK key [Pause]** to pause, press **OK key [Contin.]** to resume recording, and press **Right soft key [Stop]** to stop recording.
3. Press **OK key [Save]** to save in Sound Album.

Playing a sound file

1. Select **Left soft key [Menu] > Music & Media > Recorder > List**.
2. Or select **Left soft key [Menu] > Music & Media > My Albums > Sound Album**.
3. Open the folder and select your desired audio file and press **OK key** to play.

Internet

Surfing Internet

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **WAP** or press **Ok key** to access the preset home page.
Or press **Right soft key [Reload]** to refresh the website.

Options for browser

In standby mode, select **Menu > WAP > Options** to do more operations.

- **Home:** Access the home page.
- **Go To URL:** Enter a new URL address manually, and press **OK key** to link.
- **Bookmark:** Open bookmarks, or add a new bookmark.
- **History:** View the history links.
- **Snapshots:** Save the website page.
- **Use URL:** Make use of the website.
- **Search:** Login google search.
- **Advanced:** Set the browser.
- **About:** View Website details and the browser version.
- **Exit:** Exit the browser.

Entertainment

Pictures

Your phone has picture management function. The operation for pictures in phone memory or storage card includes: browsing, transmitting, setting as wall paper, adding to slide, move, rename, copy, delete, and so on.



Caution:

The preset pictures in phone can not be transmitted or deleted.

Viewing pictures

You can use following two methods to view the pictures.

- Open **Music & Media** to view the photos.
 - i. In standby mode, select **Menu > Music & Media > My Albums > Photo Album**.
 - ii. Select your desired pictures, press **OK key** to view the picture.
- Also you can activate **Camera > Album** to view the picture, detailed please refer to the chapter: *Photos and videos > Camera > Viewing photos*.

Music

When you have some audio files stored in your phone, you can create a playlist to play your audio files in the preferred order.

Setting music mode

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Music & Media > Music Player > Options**.
 - ▶ **Play Lists**: Show and edit play list.
 - ▶ **Media Library**: Audio and video files and information saved.
 - ▶ **Play Mode**: Set play mode.
 - ▶ **File Info**: Show the file's information in details.

Managing playlist

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Music & Media > Music Player > Options**.
3. If there is no playlist, press **Left soft key [Yes]** to create a new playlist.
 - i. Select an audio file folder in phone or memory card.
 - ii. Press **OK key** to mark it, press **Left soft key [OK]** to save the audio files to the playlist.
 - iii. Press **Right soft key [EditList]** to edit the playlist.
 - iv. Press **Clear key** to exit.

When you create a playlist, press **Left soft key [Options]** for more options.

Playing a music

1. Open **Music & Media** to enjoy the music.
2. You can use following three methods to enjoy the music.

- Album

- i. In standby mode, select **Menu > Music & Media > My Albums > Sound Album**.
- ii. Select your desired music, press **OK key** to listen to the music.

- Recorder

You can activate **Music & Media > Recorder > List** to view the sound file, detailed please refer to the chapter: *Photos and videos > Recorder > Playing a sound file*.

- Music player

- i. In standby mode, press **Left soft key [Menu] > Music & Media > Music Player**.
- ii. Select your desired music, press **OK key** to listen to the music.

Video

Your phone support video file recording, storage and play functions.

Playing videos

You can use following three methods to play a video.

1. Open **Music & Media** to play a video.
 - i. In standby mode, select **Menu > Music & Media > My Albums > Video Album**.
 - ii. Select your desired videos, press **OK key** to play the video.
2. Active **Menu > Camera > Video Camera > Video** to play a video, detailed please refer to the chapter: *Photos and videos > Video > Playing a video*.
3. Active **Music & Media > Music Player** to play the video.
 - i. In standby mode, select **Menu > Music & Media > Music Player** to active media player.
 - ii. Select **Left Soft key [Options]** to select playlist and play video files.
 - iii. If there is no playlist, press **Left soft key [Yes]** to create a new playlist.
 - iv. Select an audio file folder in phone or memory card.
 - v. Press **OK key** to mark it, press **Left soft key [OK]** to save the audio files to the playslit.
 - vi. Press **Right soft key [EditList]** to edit the playlist.
 - vii. Press **Clear key** to exit.

When you create a playlist, press **Left soft key [Options]** for more options.

Radio

You can listen to radio by the phone.

The radio has auto-search and locking channel function.

Compatible earphone or component is necessary for the radio usage.



Tips:

Please select suitable volume in listening.

Continuous high volume may be harmful for your ears.

Starting Radio

1. Insert the ear phone compatible with your phone.
2. In standby mode, select **Menu > Music & Media > Radio**, the radio will be started.

Channels

You can search channels automatically or manually.

1. In standby mode, select **Menu > Music & Media > Radio**.
2. Press **Left/Right/Up/Down/OK key** to choose channel manually.
3. Press **Left soft key [Menu] > Save Channel** to save the current frequency.
4. Select **Auto Search** to search channels automatically.

Other Radio options

In standby mode, select playing radio program, press **Left soft key [Options]** to display more options as below:

Backplay, Channel List, Clear channel list, etc.

Games

Your phone offers Java games. You can follow the help or settings to enjoy the games.

Tools

Alarm

You can set the alarm to ring if required.

- In standby mode, select **Left soft key [Menu] > Tools > Alarm Clock**.
- Select **No alarm set** to add a new alarm, and press **OK key [Save]** to save it.
- Select **Options >Edit Alarm** to view the alarm settings.
- Select ring mode, such as type, time and tone, etc.
- Select **Set Rest Days** to avoid alarm ring.
- Select **Delete All** to disable all alarms.



Notes:

If you turn the alarm on, the alarm icon will be displayed in standby mode. The alarm will ring at the set time, even when the phone is powered off.

Scheduler

You can conveniently access and modify your agenda:

- In standby mode, select **Left soft key [Menu] > Tools > Scheduler**.
- Press **Navigation keys** to scroll to different date.
- Select **Right soft key [Add]** to add Meeting, Memo, Anniversary and set the elements. Press **OK key [Save]** to save.
- Press **Left soft key [Options]** to display more options.
 - ▶ **Go To Date:** Input the date, your phone go to the calendar window indicating the date you input.
 - ▶ **Settings:** Set the schedule.
 - ▶ **Memory Info:** Memory status of schedule items.

U-Disk

You can read text saved in the memory card (T-Flash card).

- In standby mode, select **Left soft key [Menu] > Tools >U-DISK**.
- Select **Udisk Function On** to enjoy files in the memory card via computer.
- Select **Format** to format your memory card.

Calculator

The phone provides simple calculating functions, such as addition, subtraction, multiplication and division.

- In standby mode, select **Left soft key [Menu] > Tools > Calculator**.
- Press key “0 ~ 9” to enter numbers.
- Press **Right soft key** to enter the decimal point.

- Press **Up key**, **Down key**, **Left key**, or **Right key** to choose +, -, ×, /.
- Press **Clear key** to clear the last digit you input or the results.
- Press **OK key** to view the result.

World time

You can check the current local time and date for major cities around the world.

- In standby mode, Select **Left soft key [Menu] > Tools > World Clock**.
- Press **Navigation keys** on the navigation screen of world time to view the time of desired city.
- Select **Right soft key [Cities]** to select the local city and check the aim city time.



Notes:

Time and date should be set to ensure the world time function work correctly.

Personalize your phone

Display Settings

In standby mode, select **Left soft key [Menu] > Settings > Display/Keypad**.

- ▶ Select **Banner** to input the idle greet words.
- ▶ Select **Wallpaper**, use the picture saved as wallpaper, displayed in standby mode.
- ▶ Select **Backlight Time** to adjust backlight duration time.
- ▶ Select **Backlight Intense** to adjust backlight brightness.
- ▶ Select **Keypad Brightness** to select keypad light mode.

Phone Settings

In standby mode, select **Left soft key [Menu] > Settings > System**.

1. Phone Info.

- ▶ Select **My Number** to set your own number.
- ▶ Select **SW Version** to view the present PRL (Preferred Roaming List) version, software and hardware version of phone.
- ▶ Select **Icon Glossory** to view the phone icon and description.

2. Network Mode Selection

- ▶ Select the network connect mode as **CDMA Only** or **Hybrid Mode**.

Call settings

Starting call forwarding

Call Forwarding allows you to divert your incoming calls to another phone number. For details, contact your service provider.

1. In standby mode, press **Left soft key [Menu]** to enter main menu.

2. Select **Settings > Others > Supplement Operation > Call forwarding** for more options.

- ▶ **Immediate**: All is diverted immediately in all conditions.
- ▶ **Busy**: Divert incoming calls when the line is busy.
- ▶ **No Answer**: Divert incoming calls when there is no answer.

3. Select one option, activate to register the corresponding service and enter phone number you want to divert.

Starting call waiting

If there is an incoming call while you are on another call, the phone notifies you with a call waiting tone. It shows the number/name of the waiting call. For details, contact your service provider.

1. In standby mode, select **Left soft key [Menu] > Settings > Others > Supplement Operation > Call waiting**.

2. Select **Enable/Disable** and press **OK key** to register the corresponding service.

Starting fire proof

You can set Incoming calls bar in **Call Restriction**.

1. In standby mode, select **Settings > Others > Call Restriction** for following options:

- ▶ **Current Setting:** Set the incoming call bar.
- ▶ **Friend List:** Build the friend list.
- ▶ **Black List:** Build the back list.

Other call settings

Settings > Others > Call Set

- **Call Answer:** Select specific key to answer a call.
- **Auto Answer:** An incoming call can be answered via headset in specific seconds.
- **Auto Redial:** The phone can redial out for not succeed dial.
- **CNIR:** The number of sender can be identified.

Settings > Others

- **International Dial:** Activate automatic/manual international prefix “+” function instead of keying in international prefix. This function needs network support.
- **Language:** Select the language available.
- **Keypad Lock Set:** Set phone keypad auto lock time or disable keypad auto lock.
- **Shortcut:** Assign the navigation key as shortcuts to important functions.
- **Net Parameter:** Set WAP, MMS or BREW Parameter.
- **PC Connection:** Activate or deactivate USB connection.
- **Voice Privacy:** Set voice encryption.
- **Call Timer:** Show the time duration while calling.
- **Memory Info:** Show the memory status of the phone.



Notes:

Anykey answer means an incoming call can be answered by pressing any key except for End key, Left soft key and Right soft key.

Profiles

Selecting current profile

1. In standby mode, select **Left soft key [Menu] > Sound > Ringers/Keypad/Volume/Power On/Off/Alerts** according to your current surrounding.
2. Press **OK key [Select]** and **Navigation keys** to select option.
3. Press **Right soft key** to edit the mode.

Editing a profile

Sound >Ringer

Your phone can offer various Ringers for your selection.

Select preloaded, recorded, other rings for:

- ▶ **Voice Calls:** Select ring for voice call.
- ▶ **Messages Calls:** Select ring for voice mail/MMS/SMS/push message and reminder.

Sound >Keypad

Set phone beep sound or not when you press keys.

- Select an option:
- ▶ **Tone:** Select the utter tone level.
- ▶ **DTMF Length:** Select the fixed- length when press keys.

Sound >Volume

You can adjust the volume of ringer, earpiece and key beep.

- Select Ringer Volume (When earphone is inserted, it is the volume of earphone Ringer), Earpiece Volume or Key Beep Volume.
- Press **Left/ Right key** to adjust volume. Press **OK key** to confirm.

Sound >Power On/Off

- ▶ **On:** Set the phone in silence or ring when you power on the phone.
- ▶ **Off:** Set the phone in silence or ring when you power off the phone.

Sound >Alerts

You can select alert type for an incoming call, earpiece and message.

- Select an option in lists:
- ▶ **Service Change:** Alert when the network service changes.
- ▶ **Minute Beep:** Alert every minute during conversation.
- ▶ **Call Connect:** Alert when call is connected successfully.
- ▶ **Call Lost:** Alert when miss a call.
- ▶ **No Service:** Alert when there is no service.
- ▶ **Low Battery:** Alert when the phone is in state of low battery.

Connect settings

In standby mode, select **Left soft key [Menu] > Settings**.

- ▶ Select **Bluetooth** to activate and set Bluetooth function.
- ▶ Select **GPS** to activate and set GPS function.
- ▶ Select **Airplane Mode On/OFF** to deactivate/activate airplane mode.

Phone Security

Phone password

Phone password can protect your phone efficiently and avoid illegal usage. If phone password protection is activated, you should input the correct password in phone start-up.

- For a new bought phone, the protection function is not activated and the default password is 0000.
- In standby mode, select **Menu > Settings > System > Security > Phone Lock** to activate or deactivate password protection.
- In standby mode, select **Menu > Settings > System > Security > Change Code** to change phone password. It is suggested to change the password according to your requirement.



Notes:

Please remember the password you set, otherwise your phone can not be used normally, need to contact ZTE after-sale service center.

PIN code

PIN code is the personal identification code of UIM card, used to avoid illegal usage for your UIM card. Once PIN code is started, the correct PIN code should be inputted in phone start up, otherwise the phone can only execute emergency call.

- For a new bought card, the default code is supplied by the service provider.
- In standby mode, select **Menu > Settings > System > Security > PIN Code** to activate or deactivate PIN code.
- In standby mode, select **Menu > Settings > System > Security > PIN Code > Change PIN Code** to change PIN code.
- If input wrong PIN code continuously for three times, the phone will lock the UIM card and prompt you to input PUK code to unlock.



Notes:

If you change PIN code, please remember it clearly.

PUK code is the specified unlock code for UIM card, when UIM card is locked, input the correct PUK code and then input the new set PIN code, UIM card then can be used normally.

- PUK code may be supplied with the new bought card, the detail can refer to the service provider.
- PUK code can only be inputted continuously for 10 times, if input wrong PIN code for 10 times, UIM card will be locked indefinitely.



Notes:

If PUK code is supplied with the new bought card, please keep it safely.

Restoring factory settings

Restoring factory settings can recover all the items in **Settings** menu to the default values.

1. In standby mode, Select **Left soft key [Menu] > Settings > System > Default Reset**.
2. Press **Left soft key [Yes]** to restore factory settings.



Notes:

Restoring the phone does not influence PIN code.

Or press **Right soft key [No]** to cancel restore.

Delete All Contacts

1. In standby mode, Select **Left soft key [Menu] > Settings > System > Delete All Contacts**.

2. Press **Left soft key [Yes]** to restore the default values.



Notes:

Restoring the phone does not influence PIN code.

Or press **Right soft key [No]** to cancel restore.

File manager

Viewing a file

1. In standby mode, select **Left soft key [Menu] > Music & Media > My Albums**.
2. Press **Up key** or **Down key** to select your desired file directory and file.
3. Press **OK key** to view the file.

Deleting a file

Deleting no useful files can save memory space.

1. In standby mode, select **Left soft key [Menu] > Music & Media > My Albums**.
2. Press **Up key** or **Down key** to select your desired file directory and file.
3. Select **Left soft key [Options] > Delete**.
5. Press **Left soft key [Yes]** to delete unnecessary file, or press **Right soft key [No]** to give up.

Managing file

1. In standby mode, select **Left soft key [Menu] > Music & Media > My Albums**.
2. Select your desired folder and file.
3. Select **Left soft key [Options] > Send/Set As/Copy/Move/Rename/File Info/Mark All Files**.
4. You can send, copy, move, rename file and check file information. Also you can set the file as ringtone or wallpaper, etc.

Space management

1. In standby mode, select **Left soft key [Menu] > Music & Media > Memory Info**.
2. Press **OK key [Select]** to check the space information.

General information

Security

If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost phone, which will protect you from economic losses resulted from unauthorized use. You need to provide the phone's MEID number labeled. You can see MEID number after removing the battery. Please keep MEID number for future use.

- To protect your mobile phone from illegal use, please take the phone with you as you can.

Safety Warnings

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.
- Operating of mobile phone may interfere with medical devices like hearing aid and pacemaker. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer of the medical device before using the phone.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Store the phone out of the reach of little children. The phone may cause injury if used as a toy.

Mobile Phone

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.
- Do not charge the mobile phone without battery.
- On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press **Call key** to make

a phone call.

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20cm or as far as you can from TV set, radio and other automated office equipment so as to avoid interference.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.

Battery Using

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.



Warning:

If the battery is broken, keep away from content. If it taints your skin, wash your skin with abundant fresh water and ask doctor help if necessary.

Radio Frequency (RF) Energy

This device meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for left hand, cheek, as described in this user guide, is 1.05W/kg for CDMA 850 band.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-ZTECR200.

For body operation, this device has been tested and meets the FCC RF exposure guidelines for use the positions the device a minimum of 1.5cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

Safety and General Using in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

In Aircraft

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

1. Reasonable abrasion.
2. Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
3. Water or any other liquid damage.
4. Any unauthorized repair or modification.
5. Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
6. Use of the product with any unauthorized third party products such as generic chargers.
7. Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been

advised, knew or should have known the possibility of such damages.

Troubleshooting

If your phone appears following phenomenon in the process of application, please read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
No key beep on pressing keys.	Please check the setting of keypad beep in Sound .
When there is an incoming call, the prompt ringer not rings.	Please check the setting of sound Alert Type and ringer Volume in Settings .
No prompt tone at alarm time.	Please check relative sound setting (see setting in Set alarm in Alarm clock in Tools).
Messages cannot be sent.	Please check the signal of network.

Specifications

Phone specifications are shown in the following table. display:

Phone Standards	CDMA 800MHz Cellular (UL824~849, DL869~894)
Dimensions (H×W×D)	111mm×49mm×13mm
Weight	About 89g (with 900 mAh battery)
Display	176*220 pixels, 262 K TFT, Color QCIF+ Screen, 2.0 inch 176*220 pixels, 262 K TFT, Color LCD, 2.0 inch
Camera	2.0 M pixel camera 2.0 M + 300K pixel camera
Extended memory	4G microSD card upto 16G microSD card
Battery	900 mAh Lithium ion (Li-ion)
Performance	GIF/JPEG/PNG/BMP image; 3GP/MP4 video; MP3/AMR/WAV/MIDI audio; Capture Image: up to 1200x1600, 24b; Capture Video: up to 144 x 176 ; USB 2.0; JAVA MIDP 2.0; MMS Video and Picture, Calendar, Speakerphone, Voice Recorder, FM
Continuous idle time *	220 ~ 240 hours
Continuous talk time *	About 300 minutes
Charge time	Approximately 3 hours

* The phone's talk and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.