



BAYN S1001
CDMA 1X Digital Mobile Phone
Quick Guide

LEGAL INFORMATION

Copyright © 2011BAYN CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of BAYN Corporation.

The manual is published by BAYN Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : **R1.2**

Edition Time : Jan 2011

Manual No. : 07958450




 
Contents






Know Your Phone.....	4
Key Instruction.....	4
Interface Icons.....	5
Insert and Extract UIM Card.....	6
Remove and Install the Battery.....	6
Remove the Battery.....	6
Install the Battery.....	7
Charge the Battery.....	8
Power on/off Your Phone.....	8
Make and Answer a Call.....	9
Menu Tree.....	9
Voice Mail.....	10
Text Input.....	10
Send a New Message.....	10
Menu Functions.....	11
Phone Code.....	14
PIN Code and PUK Code.....	14
Warning and Maintenance.....	14
Warranty Terms.....	15
Limitation of Liability.....	15

Know Your Phone











Key Instruction

Key	Function Description
	<ul style="list-style-type: none"> • Make or answer a call. • Press Send Key in standby mode to enter All Calls list. • Press Send Key twice directly to redial the last number.
	<ul style="list-style-type: none"> • End an active call or reject a call. • Long press to Power on/off. • Exit from any interface to standby mode.
	<ul style="list-style-type: none"> • Enter main Menu in standby mode. • Switch to the options of left bottom submenu.
	<ul style="list-style-type: none"> • Enter Contacts in standby mode. • Switch to the options of right bottom submenu.

Key	Function Description
	<ul style="list-style-type: none"> • Erase character(s) while editing. • Cancel operation, exit to previous pop-up window.
	<ul style="list-style-type: none"> • Confirm the commands and options selected. • Confirm the character chosen while character inputting. • In standby mode, press OK Key to enter main Menu.
	<p>Up/Down Key</p> <ul style="list-style-type: none"> • Scroll the cursor up and down. • Used as selection key up and down for keying in commands and selecting options shown on the display. • In standby mode, press Up Key to enter Profile menu. • In standby mode, press Down Key to enter new message interface. • Used as direction key in games.
	<p>Left/Right Key</p> <ul style="list-style-type: none"> • Scroll the cursor left and right. • Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display. • In standby mode, press Left Key to enter Games menu, press Right Key to enter Services menu. • Press Left Key/Right Key to adjust volume in conversation. • Used as direction key in games.
	<ul style="list-style-type: none"> • Key in numbers or characters. • Make a Speed Dial call (1–9). • Long press 0 Key to input + in standby mode.
	<p># Key:</p> <ul style="list-style-type: none"> • Long press # Key in standby mode to activate/deactivate vibration. • Press # Key to select text mode when edit text. <p>* Key:</p> <ul style="list-style-type: none"> • Long press * Key in standby mode to lock phone’s keypad. • Press * Key once to enter Symbols mode in text input mode.


Interface Icons

Icon	Indication
	Signal strength
	Earphone in use
	New message

Icon	Indication
	Ring + Vibration
	Vibration
	Silence all
	Alarm
	Power indicator

Insert and Extract UIM Card

 1. Power off the phone, remove the battery and other external power.
2. Insert UIM card into UIM card slot in the phone, or remove UIM card out of slot, as shown in picture hereinafter.

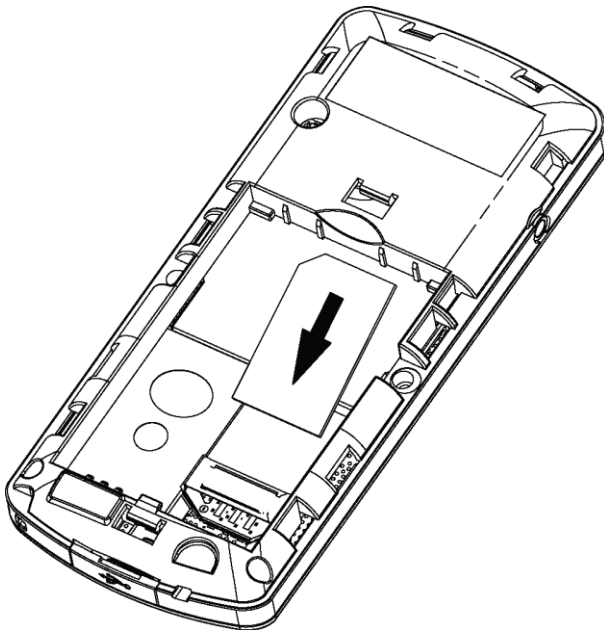


Remove and Install the Battery


The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

Remove the Battery

 1. Put finger on the bottom finger grip, **then** lift the back-cover of the phone up to release and remove.

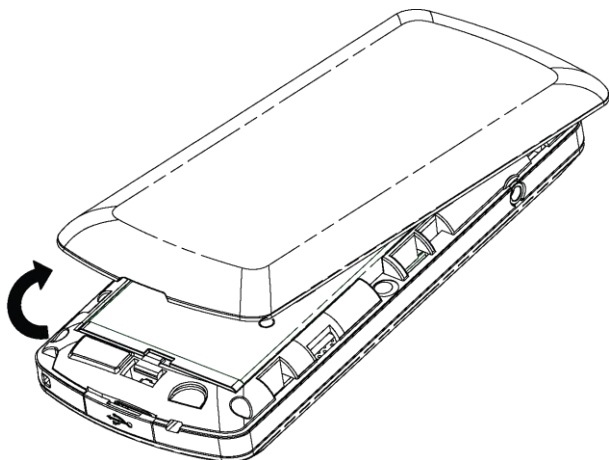

 2. Put finger on the top finger grip, **then lift up to** remove the battery.

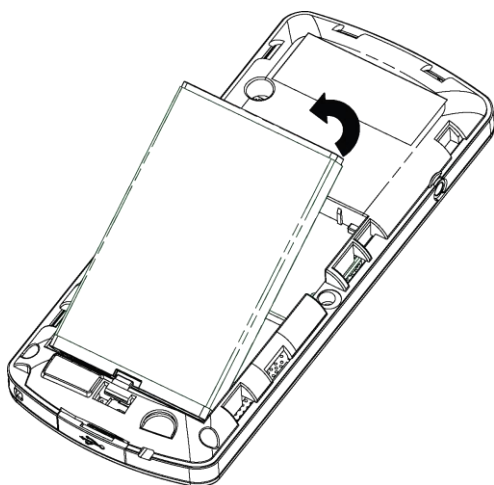


Install the Battery

1. Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted.




 2. Put the back-cover of the phone flatly upon the body of phone. **Then** direct the back-cover towards the locking catches on the top/sides of the phone and push the back-cover of the phone to lock the cover into its place.

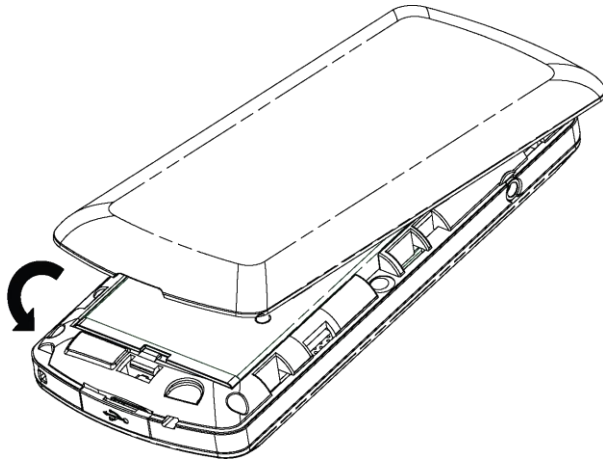

Charge the Battery

 1. Plug out rubber away from the jack on the bottom of the handset and connect the lead from the charger to the socket on the bottom of the phone.

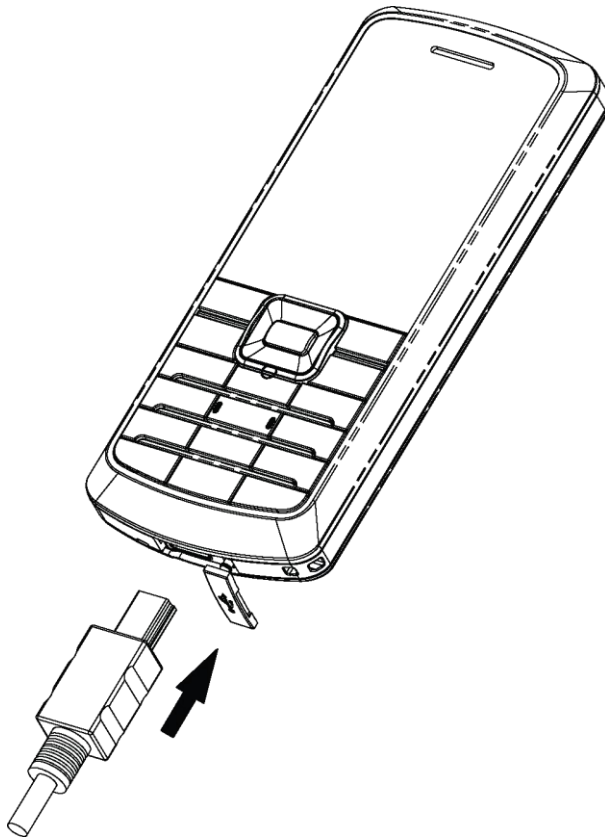

2. Connect the charger to a standard wall AC socket.
3. When the charging animation on the screen stops, the charging is completed. The charging takes usually up to 2~3 hours. During charging, it is a normal phenomenon that the battery, phone and charger may get hot.
4. After the completion of charging, disconnect the charger from the phone and AC socket.

Power on/off Your Phone

1. Please hold **End key** to power on/off the phone. The phone will automatically search for the network.

2. Besides sending and receiving calls in standby mode, you can also do:

- ▶ Press **Left Select Key/OK Key** to enter main **Menu**.
- ▶ Press **Right Select Key** to enter **Contacts** menu.
- ▶ Press **Up Key** to enter **Profile** menu.
- ▶ Press **Down Key** to enter new message interface.
- ▶ Press **Left Key** to enter **Games** menu.
- ▶ Press **Right Key** to enter **Services** menu.
- ▶ Press **Send Key** to enter **All Calls** list.
- ▶ Long press *** Key** to lock the keypad.
- ▶ Long press **# Key** to activate/deactivate vibration.

Make and Answer a Call

Make a call

1. Enter the phone number, and press **Send Key** to make the call.
2. Press **End Key** to end the call.

Answer a call

1. Press **Send Key** to answer the call.
2. Press **End Key** to end the call.

Make a Pause Call

Make use of pause call to dial an extension or voice service call.

1. Key in phone number, press *** Key** twice to input “**P**” or press *** Key** three times to input “**T**”, and then key in number afterwards.
2. Press **Send Key** to dial the first number. When connected, if you select “**P**”, press **Send Key** again to dial the second number. If you select “**T**”, the phone will dial the second number automatically. “**P**” and “**T**” can be used for not only once.

Menu Tree

1. Messages 1.1 New Message 1.2 Inbox 1.3 Voice Mail 1.4 Drafts 1.5 Outbox 1.6 Sent 1.7 Message Settings 1.8 Message Template 1.9 Delete Message 1.0 Memory Status	5. Services 6. My Record 7. Profile 7.1 Silent 7.2 Vibrate 7.3 General 7.4 Outdoor 7.5 Meeting 7.6 Flight
2. Contacts 2.1 Add Name	8. Games 8.1 Hit the moles 8.2 Pop the ice cubes 9 Magic Box

2.2 All List	9.1 Alarm
2.3 Groups	9.2 Calendar
2.4 Speed Dials	9.3 Calculator
2.5 Memory Status	9.4 Voice Recorder
3. Call History	9.5 Stopwatch
3.1 Call History	9.6 Notepad
3.2 Call Duration	
4. Settings	
4.1 Display Settings	
4.2 Phone Settings	
4.3 Call Settings	
4.4 Time & Date Settings	
4.5 Security Settings	

Voice Mail

Before using **Voice Mail** box, please consult with service provider to confirm that the voice mailbox has been activated.

The system automatically sends a message to your phone informing a new voice message. Read the message and then dial voice mail box number to listen to your voice message.

Text Input

Your phone offers text input modes: Multitap Input (**abc/Abc/ABC**), Numbers Input (**123**), eHiText Input (**eZi**), and Symbol Input (**Symbols**).

Operation	Method
Input Letters	Multitap Input—"abc/Abc/ABC" press corresponding letter key till the letter appears.
Input Words	eHiText Input—"eZi", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input—Press * Key to enter the symbols mode and press corresponding digit key. Or press 1 Key till the symbol (common symbols) appears except for Numbers Input mode.
Input Space	Press 0 Key , except for being in numbers mode.
Erase Character	Press Right Select Key .
Move cursor	Press Left/Right Key or Up/Down Key .
Change input mode	Press # Key to select another text mode.

Send a New Message

1. Select **Menu > Messages > New Message** or press **Down Key** in standby mode to send a new message.
2. Input receiver's phone number in number field. Press **Right Key** to input the multi-receivers' phone number, or press **OK Key** to select phone number directly from Contacts. The numbers displayed can be reedited. The maximum of receivers not exceed 100 persons.
3. Press **Down Key** to write the message. Press **OK Key** to send the message or select **Option** to **Send** the message or **Save** the message to **Drafts**.

Menu Functions

Herein after are brief instructions on menu functions of the phone.

Function	Selection	Description
Write and send new message	Menu > Messages > New Message	Write and send new SMS to other mobile phones. The message could be sent to multi-receivers.
Read message	Menu > Messages > Inbox/Outbox/Drafts/Sent	Read and do more options of the messages.
Voice mail	Menu > Messages > Voice Mail	Read the voice mail information. In standby mode, long press 1 Key to dial the voice mail number directly.
Message settings	Menu > Messages > Message Settings	SMS settings options (SMS delivery ACK, priority, validity period, send failed indication, save location, call back settings and edit call back number) and General settings options (auto delete, auto save, auto add signature and edit my signature).
Templates message	Menu > Messages > Message Template	View, delete, and edit the common used messages preformatted in phone, or create new message.
Delete message	Menu > Messages > Delete Message	Delete all messages in Inbox, Drafts, Sent, Outbox or delete all messages.
Message memory status	Menu > Messages > Memory Status	View used and unused capacity of Inbox, otherbox and UIM.
View all records	Menu > Contacts > All List	View the corresponding records in all lists. Press Left/Right Key to view different group.
Find contact	Menu > Contacts > All List	Input first character(s) to search for a phonebook entry.
Add contact	Menu > Contacts > Add Name	Add a new entry in the contacts.
Edit	Menu > Contacts > All List > Option > Edit	Modify the contents of record.
Delete	Menu > Contacts > All List > Option > Delete	Delete a record in Contacts.
Delete all	Menu > Contacts > All List > Option > Delete All	Delete all records in phone (no group, family, friend, and colleague, etc.).
Send name-card	Menu > Contacts > All List > Option > Send Message	Send name-card information of the record.
Make a call to specific number	Menu > Contacts > All List > Option > Call	Make a call to the number of the record.
Send name card	Menu > Contacts > All List > Option > Send Name Card	Send name card information of the record.

Function	Selection	Description
Delete the selected entries	Menu > Contacts > All List > Option > Multiple Select	Delete the records you select.
Batch operation	Menu > Contacts > All List > Option > Copy/Move to Phone/UIM	Copy or move the contacts between UIM card and Phone.
Edit group	Menu > Contacts > Groups	View, edit and select the ringer for the group.
Speed dial list	Menu > Contacts > Speed Dials	View the speed dial list. In standby mode, long press the number key to dial the corresponding call.
Memory status	Menu > Contacts > Memory Status	Number of entries saved and maximum number of entries capacity in phone.
Call history	Menu > Call History > Call History > All Calls/Dialed Calls/Answered Calls/Missed Calls	View and dial recent calls.
Call timer	Menu > Call History > Call Duration	View and reset call duration of dialed calls, answered calls and all calls.
Wall paper set	Menu > Settings > Display Settings > Screen Settings > Wallpaper Settings	Set wall papers as background in idle state.
Backlight	Menu > Settings > Display Settings > Screen Settings > Backlight Time	Set backlight duration.
Brightness	Menu > Settings > Display Settings > Screen Settings > Brightness	Adjust brightness.
Contrast	Menu > Settings > Display Settings > Screen Settings > Contrast	Adjust contrast.
Idle display content	Menu > Settings > Display Settings > Screen Settings > Idle Display Content	Set idle display content.
Banner	Menu > Settings > Display Settings > Banner	Set greeting banner.
Roaming Reminder	Menu > Settings > Display Settings > Roaming Reminder	Open roaming reminder or not.
Keypad light	Menu > Settings > Display Settings > Keypad Light Settings	Set keypad and time.
Language	Menu > Settings > Phone Settings > Language	Select the language.
Auto key guard	Menu > Settings > Phone Settings > Auto Keypad Lock	Set phone's auto key lock and time.
Power save	Menu > Settings > Phone Settings > Power Save	Set the power save on/off.
Auto power on/off	Menu > Settings > Phone	Set auto power on/off.

Function	Selection	Description
	Settings > Auto Power On/Off	
Version	Menu > Settings > Phone Settings > Version Info.	View present preferred roaming list, software and hardware version.
Call forwarding	Menu > Settings > Call Settings > Call Settings > Call Forwarding	Forward an incoming call to a designated number.
Call waiting	Menu > Settings > Call Settings > Call Settings > Call Waiting	Answer the second call, hold the first call.
Call connect alert	Menu > Settings > Call Settings > Call Settings > Connection Reminder	The phone alert when a call is connected.
Any key answer	Menu > Settings > Call Settings > Answer Settings > Any Key Answer	Press any key to answer a call except End Key, Left/Right Select Key.
Auto answer	Menu > Settings > Call Settings > Answer Settings > Headset Auto Answer	Auto answer via earpiece. Answer incoming call automatically when connecting with an earphone.
Voice privacy	Menu > Settings > Call Settings > Voice Privacy	Set voice encryption.
Remind alert	Menu > Settings > Call Settings > Call Information Reminder	Set if the phone alert for reminding minute, missed call.
International Dial	Menu > Settings > Call Settings > International Dial	Set to make international dial manual or automatic.
Time format	Menu > Settings > Time & Date Settings > Time Format	Set format of time.
Date format	Menu > Settings > Time & Date Settings > Date Format	Set format of date.
PIN lock	Menu > Settings > Security Settings > Use/Change PIN Code	Set or change the PIN lock.
Handset lock	Menu > Settings > Security Settings > Use/Change Phone Code	Set or change the handset lock.
Restore settings	Menu > Settings > Security Settings > Restore Factory Settings	Restore factory default (ring tone, backlight, language, settings, etc. except for SMS, Contacts , call history).
Clear data	Menu > Settings > Security Settings > Clear User Data	Restore factory default and delete all the records of user data.
Services	Menu > Services	Enjoy services which are available to the subscribers.
My Recorder	Menu > My Record	Record files.
Games	Menu > Games	Play games.
Tone/volume	Menu > Profile > Vibrate/Silent/General/Outdoor/M	Set phone's ring/SMS/earpiece/key beep/alert etc. tone and volume or set the

Function	Selection	Description
	eeting/Flight	phone in Flight mode.
Alarm clock	Menu > Magic Box > Alarm	Set alarm alert time.
Calendar	Menu > Magic Box > Calendar	View calendar.
Calculator	Menu > Magic Box > Calculator	Execute basic math calculation.
Voice memo	Menu > Magic Box > Voice Recorder	Make a voice record.
Stopwatch	Menu > Magic Box > Stopwatch	Stopwatch timing.
Notepad	Menu > Magic Box > Notepad	Write and edit note.

Phone Code

Phone code could prevent your phone from illegal use. The default **phone code** is 0000. Please change it to your own **phone code** as soon as possible.

PIN Code and PUK Code

PIN Code

PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when opening the handset again. The network provider offers you PIN code (four to eight digits). You should change PIN code as soon as possible for security.

PUK Code

Consecutive inputting wrong PIN code for three times can cause locking of UIM card. To unlock, you need PUK code.



Notes:

[PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator. Please change default PIN code to your own as soon as possible.](#)

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Please use original accessories or accessories that are authorized by the manufacturer.
- Please keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments. Do not attempt to disassemble the mobile phone and battery by yourself.

- Power off your phone before you clean the phone. Please use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

1. Reasonable abrasion.
2. Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
3. Water or any other liquid damage.
4. Any unauthorized repair or modification.
5. Power surges, lightning damage, fire, flood or other events outside BAYN's reasonable control.
6. Use of the product with any unauthorized third party products such as generic chargers.
7. Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from BAYN under the above-mentioned situations.

This warranty is end user's sole remedy and BAYN's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

BAYN shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not BAYN had been advised, knew or should have known the possibility of such damages.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

RF Exposure

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

FCC: The SAR limit for mobile devices is 1.6 W/kg and the highest SAR value for this device when tested at the ear was 1.220 W/kg and at the body worn was 0.627 W/kg

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body Worn Operation

Important safety information regarding radio frequency(RF) radiation exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.